ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *OMRON E5CS-RKJU-W* at our website: *Click HERE*

Temperature Controllers
E5CS

CSM_E5CS_DS_E_5_3

Simple Functions in DIN 48 × 48 mm-size Plug-in Temperature Controllers

- Easy setting using DIP switch.
- Models with two alarms added to Series, ideal for applications requiring alarms.
- Universal-input (thermocouple/platinum resistance thermometer) models also available.
- Clearly visible digital display with character height of 13.5 mm.
- RoHS compliant.

⚠ Refer to *Safety Precautions for All Temperature Controllers.*



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Refer to *E5CS/E5CSV Operation* for operating procedures.

Model Number Structure

■ Model Number Legend

Plug-in Models

E5CS-□□□□U-W
1 2 3 4 5 6

1. Control Outputs
R: Relay
Q: Voltage for driving SSR

2. Alarm Outputs
Blank: No alarm
1: 1 alarm
2: 2 alarms

3. Input
KJ: Thermocouple
P: Platinum resistance thermometer
G: Thermistor
T: Thermocouple/platinum resistance thermometer (universal-input)

4. Power Supply Voltage
Blank: 100 to 240 VAC
D: 24 VAC/VDC

5. Terminal Shape
U: Plug-in

6. Case Color
W: Light gray

Note: A functional explanation is provided here for illustration, but models are not necessarily available for all possible combinations. Refer to *Ordering Information* when ordering.

Examples

- Relay control output, without alarm, thermocouple input, plug-in construction, light gray case: E5CS-RKJU-W
- Relay control output, one alarm output, platinum resistance thermometer input, plug-in construction, light gray case: E5CS-R1PU-W

Ordering Information

■ List of Models

Case Color: Light Gray, Thermocouple or Platinum Resistance Thermometer, Power Supply Voltage: 100 to 240 VAC

Size	Type	Control modes	Alarms	Outputs	Model with thermocouple	Model with platinum resistance thermometer
E5CS-U 48 × 48 mm	Plug-in	ON/OFF or PID	0	Relay	E5CS-RKJU-W	E5CS-RPU-W
				Voltage (for driving SSR)	E5CS-QKJU-W	E5CS-QPU-W
			1	Relay	E5CS-R1KJU-W	E5CS-R1PU-W
				Voltage (for driving SSR)	E5CS-Q1KJU-W	E5CS-Q1PU-W

Case Color: Light Gray, Thermocouple or Platinum Resistance Thermometer, Power Supply Voltage: 24 VAC/VDC

Size	Type	Control modes	Alarms	Outputs	Model with thermocouple	Model with platinum resistance thermometer
E5CS-U 48 × 48 mm	Plug-in	ON/OFF or PID	0	Relay	E5CS-RKJDU-W	E5CS-RPDU-W
				Voltage (for driving SSR)	E5CS-QKJDU-W	---
			1	Relay	E5CS-R1KJDU-W	E5CS-R1PDU-W
				Voltage (for driving SSR)	E5CS-Q1KJDU-W	---

Case Color: Light Gray, Thermistor or Universal-input, Power Supply Voltage: 100 to 240 VAC

Size	Type	Control modes	Alarms	Outputs	Model with thermistor	Model with universal-input (thermocouple and platinum resistance thermometer)
E5CS-U 48 × 48 mm	Plug-in	ON/OFF or PID	0	Relay	E5CS-RGU-W	E5CS-RTU-W
				Voltage (for driving SSR)	E5CS-QGU-W	E5CS-QTU-W
			1	Relay	E5CS-R1GU-W	E5CS-R1TU-W
				Voltage (for driving SSR)	E5CS-Q1GU-W	E5CS-Q1TU-W
			2 (See note.)	Relay	---	E5CS-R2TU-W
				Voltage (for driving SSR)		E5CS-Q2TU-W

Note: There is no alarm output 2 mode switch. The default setting for alarm output 2 is for the upper limit alarm mode. To change the setting, change the alarm type for alarm output 2 in initial setting level 5. For details, refer to the *"E5CSV/E5CS-U Digital Temperature Controller User's Manual"* (Cat. No. H140-E1-01).

Case Color: Light Gray, Thermistor, Power Supply Voltage: 24 VAC/VDC

Size	Type	Control modes	Alarms	Outputs	Model with thermistor
E5CS-U 48 × 48 mm	Plug-in	ON/OFF or PID	0	Relay	E5CS-RGDU-W
			1		E5CS-R1GDU-W

■ Accessories (Order Separately)

Socket without Alarm (8 Pins)

Type	Model
Front Connecting Socket	P2CF-08
Back Connecting Socket (flush mounting)	P3G-08
Front Connecting Socket (with finger protection)	P2CF-08-E
Finger Safe Terminal Cover for P3G	Y92A-48G

Socket with Alarm (11 Pins)

Type	Model
Front Connecting Socket	P2CF-11
Back Connecting Socket (flush mounting)	P3GA-11
Front Connecting Socket (with finger protection)	P2CF-11-E
Finger Safe Terminal Cover for P3G	Y92A-48G

Protective Cover

Type	Model
Hard Protective Cover	Y92A-48B

Specifications

■ Ratings

Supply voltage		100 to 240 VAC, 50/60 Hz 24 VAC, 50/60 Hz; 24 VDC
Operating voltage range		85% to 110% of rated supply voltage
Power consumption		100 to 240 VAC: 5 VA 24 VAC: 3 VA, 24 VDC: 2 W
Sensor input		Thermocouple: K, J, L Platinum resistance thermometer: Pt100, JPt100 Thermistor: E52-THE□□ Universal-input (thermocouple/platinum resistance thermometer): K, J, L, T, U, N, R, Pt100, JPt100
Control output	**Relay output**	SPDT, 250 VAC, 3 A (resistive load)
	Voltage output (for driving the SSR)	12 VDC, 21 mA (with short-circuit protection circuit)
Control method		ON/OFF or 2-PID (with automatic PID parameter setting function)
Alarm output		SPST-NO, 250 VAC, 1A (resistive load)
Setting method		Digital setting using front panel keys
Indication method		7-segment digital display (character height: 13.5 mm) and deviation indicators
Other functions		• Setting change prohibit (key protection) • Input shift • Temperature unit change (°C/°F) • Direct/reverse operation • Temperature range, Sensor switching (K/J/L, Pt100/JPt100) • Switching is performed between a thermocouple and platinum resistance thermometer for universal-input models. • Control period switching • 8-mode alarm output • Sensor error detection (excluding thermistor models)
Ambient operating temperature		−10 to 55°C (with no condensation or icing); with 3-year guarantee: −10 to 50°C
Ambient operating humidity		25% to 85%
Storage temperature		−25 to 65°C (with no condensation or icing)

Note: Do not use an inverter output as the power supply. (Refer to *Safety Precautions for All Temperature Controllers*.)

■ Characteristics

Setting accuracy		Thermocouple (See note 1.): (±1% of indication value or ±2°C, whichever is greater) ±1 digit max. Platinum resistance thermometer (See note 2.): (±0.5% of indication value or ±1°C, whichever is greater) ±1 digit max. Thermistor (See note 3.): (1% FS of indication value) ±1 digit max.
Indication accuracy (ambient temperature of 23°C)		
Influence of temperature		R thermocouple inputs: (±2% of PV or ±10°C, whichever is greater) ±1 digit max. Other thermocouple inputs: (±2% of PV or ±4°C, whichever is greater) ±1 digit max. Platinum resistance thermometer inputs: (±1% of PV or ±2°C, whichever is greater) ±1 digit max. Thermistor: (±2% FS) ±1 digit max.
Influence of voltage		
Influence of EMS. (at EN 61326-1)		
Hysteresis (for ON/OFF control)		0.2% FS (0.1% FS for universal-input (thermocouple/platinum resistance thermometer) models)
Proportional band (P)		1 to 999°C (automatic adjustment using auto-tuning/self-tuning)
Integral time (I)		1 to 1,999 s (automatic adjustment using auto-tuning/self-tuning)
Derivative time (D)		1 to 1,999 s (automatic adjustment using auto-tuning/self-tuning)
Alarm output range		Absolute-value alarm: Same as the control range Other: 0 to input setting range full scale (°C or °F) Alarm hysteresis: 0.2°C or °F (fixed)
Control period		2/20 s
Sampling period		500 ms
Insulation resistance		20 MΩ min. (at 500 VDC)
Dielectric strength		2,000 VAC, 50/60 Hz for 1 min between current-carrying terminals of different polarity
Vibration resistance	**Malfunction**	10 to 55 Hz, 20 m/s^2 for 10 min each in X, Y, and Z directions
	Destruction	10 to 55 Hz, 0.75-mm single amplitude for 2 hr each in X, Y, and Z directions
Shock resistance	**Malfunction**	100 m/s^2 min., 3 times each in six directions
	Destruction	300 m/s^2 min., 3 times each in six directions
Life expectancy	**Electrical**	100,000 operations min. (relay output models)
Weight		Approx. 110 g (Controller only)
Degree of protection		Front panel: Equivalent to IP50, Enclosure Category 2 (IEC 60529), Rear case: IP20; Terminals: IP00
Memory protection		EEPROM (non-volatile memory) (number of writes: 1,000,000)
EMC		EMI Radiated: EN 55011 Group 1 Class A EMI Conducted: EN 55011 Group 1 Class A Radiated Electromagnetic Field Immunity: EN 61000-4-2: 4 kV contact discharge (level 2), 8 kV air discharge (level 3) RF-interference Immunity: EN 61000-4-3: 10 V/m (80-1000 MHz, 1.4-2.0 GHz amplitude modulated) (level 3), 10 V/m (900 MHz pulse modulated) Conducted Disturbance Immunity: EN 61000-4-6: 3 V (0.15 to 80 MHz) (level 2) Noise Immunity (First Transient Burst Noise): EN 61000-4-4 Burst Immunity: 2 kV power-line (level 3), 1 kV I/O signal-line (level 3) Surge Immunity: EN 61000-4-5: Power line: Normal mode 1 kV; Common mode 2 kV Output line (relay output): Normal mode 1 kV; Common mode 2 kV Voltage Dip/Interrupting Immunity: EN 61000-4-11 0.5 cycle, 100% (rated voltage)
Approved standards		UL 61010-1 (listing) CSA C22.2 No.1010-1
Conformed standards		EN 61326-1 (See note 4.), EN 61010-1, IEC 61010-1

Note: 1. The following exceptions apply to thermocouples.
- U, L: ±2°C ±1 digit max.
- R: ±3°C ±1 digit max. at 200°C or less


2. The following exception applies to platinum resistance thermometers.
- Input set values 1 for E5CS-U: 1% FS ±1 digit max.

3. The following exceptions apply to thermistors.
- When the unit setting is °C, temperature indication ranges exceeding the set temperature range ±10% FS may not be accurate.
- When the unit setting is °F, the temperature range for the input setting numbers 4 and 9 (609 to 630°F) and temperature indication ranges exceeding the set temperature range −5% FS to +10% FS may not be accurate.

4. Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

■ Temperature Range

Thermocouple Input Models




(Default setting: 2)

Input	K						J/L			
Temperature range (selected using switch)	200	300	400	500	600	999	200	300	400	500
Setting number	0	1	2	3	4	5	6	7	8	9
Minimum setting unit	1°C						1°C			

The shaded value indicates the default setting status.

Platinum Resistance Thermometer Input Models

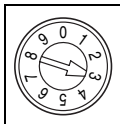


(Default setting: 3)

Input	JPt100/Pt100									
Temperature range (selected using switch)	50	50.0	80	99.9	200	300	400	300	400	199.9
	–50	0.0	–20	0.0	0	0	0	0	0	0.0
Setting number	0	1	2	3	4	5	6	7	8	9
Minimum setting unit	1°C	0.1°C	1°C	0.1°C	1°C					0.1°C

The shaded value indicates the default setting status.

Thermistor Input Models (For details on Sensors, refer to *E52*.)




(Default setting: 1)

Input	G									
	6 kΩ (0°C)	6 kΩ (0°C)	30 kΩ (0°C)	550 Ω (200°C)	4 kΩ (200°C)	6 kΩ (0°C)	6 kΩ (0°C)	30 kΩ (0°C)	550 Ω (200°C)	4 kΩ (200°C)
Temperature range (selected using switch)	50	100	150	200	300	50	100	150	200	300
	–50	0	50	100	150	–50	0	50	100	150
Setting number	0	1	2	3	4	5	6	7	8	9
Minimum setting unit	1°C									

The shaded value indicates the default setting status.

Universal-input (Thermocouple/Platinum Resistance Thermometer) Models

• Using Thermocouple Sensors, Control Mode Switch 5: OFF




(Default setting: 0)

Input	K		J		L	T		U	N	R
Temperature range (selected using switch)	1,300	199.9	850	199.9	850	400	199.9	400	1,300	1,700
	–99	0.0	–99	0.0	–99	–99	0.0	–99	–99	0
Setting number	0	1	2	3	4	5	6	7	8	9
Minimum setting unit	1°C	0.1°C	1°C	0.1°C	1°C		0.1°C	1°C		

The shaded value indicates the default setting status.

• Using Platinum Resistance Thermometers, Control Mode Switch 5: ON















(Default setting: 0)

Input	Pt100					JPt100				
Temperature range (selected using switch)	850	199.9	99	200	400	500	199.9	99	200	400
	–99	0.0	–99	0	0	–99	0.0	–99	0	0
Setting number	0	1	2	3	4	5	6	7	8	9
Minimum setting unit	1°C	0.1°C	1°C				0.1°C	1°C		

The shaded value indicates the default setting status.

External Connection Diagram

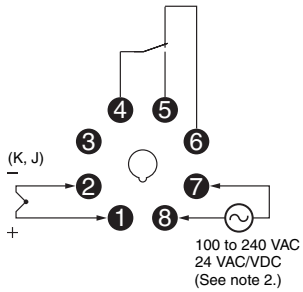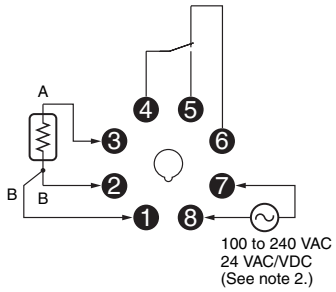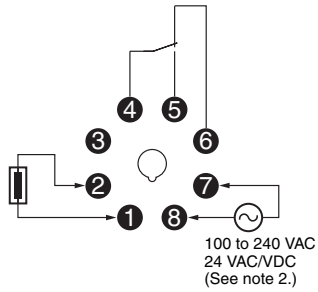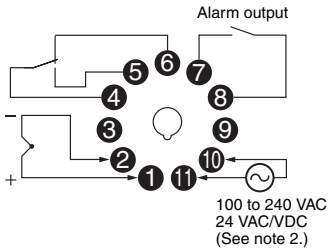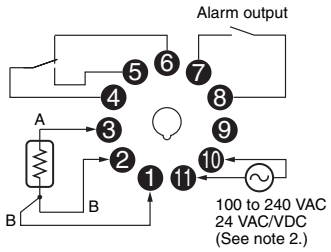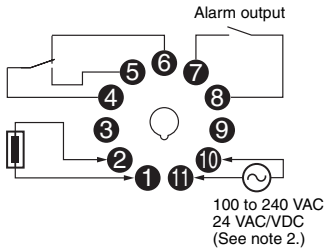Sensor		Thermocouple (See note 3.)	Platinum resistance thermometer (See note 3.)	Thermistor
Plug-in models	**Without alarms**	Voltage output models (See note 1.)  Relay output models 	Voltage output models (See note 1.)  Relay output models 	Voltage output models (See note 1.)  Relay output models 
	With alarms	Voltage output models (See note 1.) Two alarm points  Relay output models 	Voltage output models (See note 1.) Two alarm points  Relay output models 	Voltage output models (See note 1.)  Relay output models 


Note: 1. The voltage output (12 VDC, 21 mA) is not electrically isolated from the internal circuits. When using a grounding thermocouple, do not connect output terminals 4 or 5 to ground. Otherwise, unwanted current paths will cause measurement errors.

2. Models with 100 to 240 VAC and 24 VAC/VDC are separate. Models using 24 VDC have no polarity.

3. Be sure to check the sensor type before using multi-output (thermocouple/platinum resistance thermometer) models.

Nomenclature

E5CS-U Plug-in Models

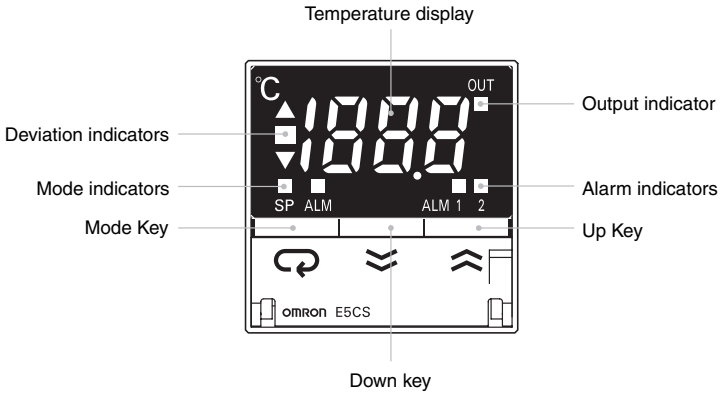



Dimensions


Note: All units are in millimeters unless otherwise indicated.

■ Controller


E5CS-U

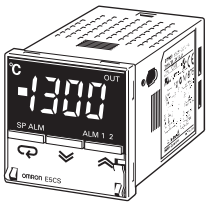


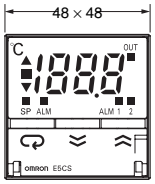

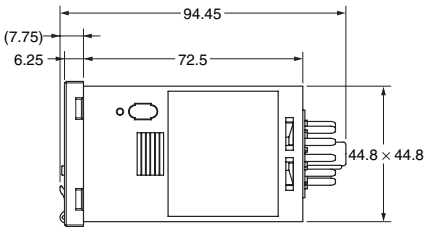


Terminal Arrangement
(Bottom View)

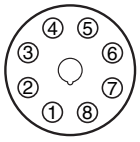

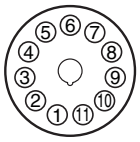



Note: The external dimensions are the same for both models with and without alarms.


Panel Cutout Dimensions

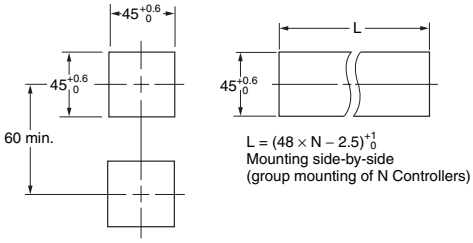


E5CS-U + Adapter for Flush Mounting (Enclosed) + Back Connecting Socket (Order Separately) (Without Alarms)

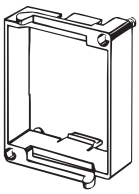


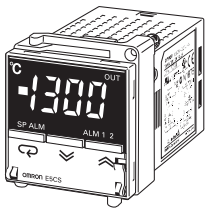


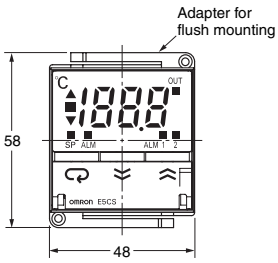


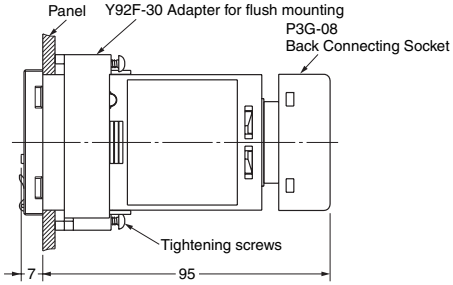


E5CS-U + Adapter for Flush Mounting (Enclosed) + Back Connecting Socket (Order Separately) (With Alarms)

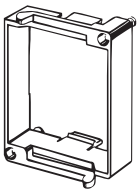

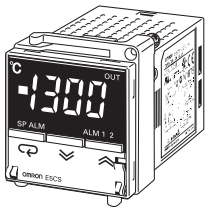

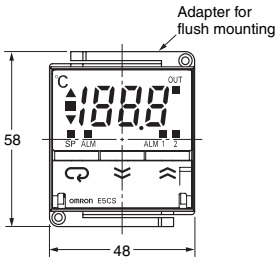

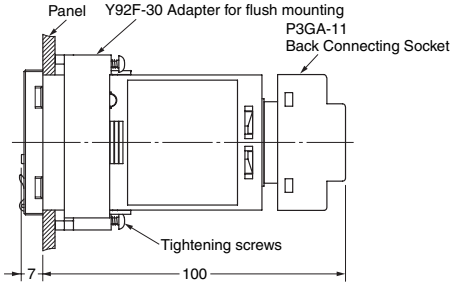



Note: Use the P2CF-08 and P3G-08 Sockets for models without alarms, and use the P2CF-11 and P3GA-11 Sockets for models with alarms.

■ Accessories (Order Separately)


8-pin Sockets without Alarms

P2CF-08 Front Connecting Socket

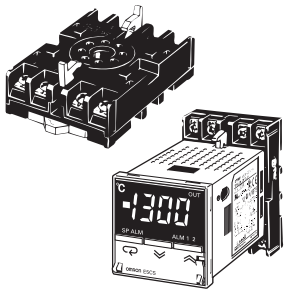


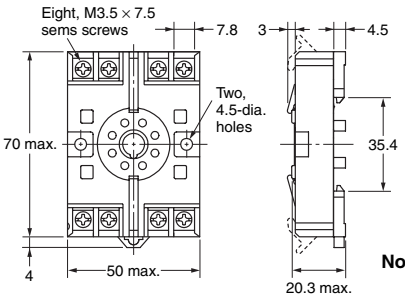

Terminal Arrangement/
Internal Connections
(Top View)

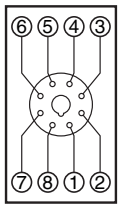


Mounting Hole Dimensions




Note: DIN Track mounting is also possible.


Note: The P2CF-08-E Socket with finger protection is also available.

P3G-08 Back Connecting Socket

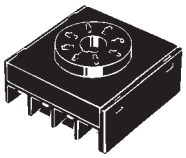

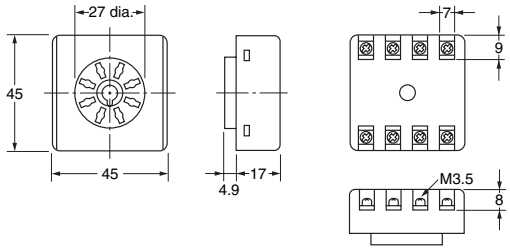


Terminal Arrangement
(Bottom View)

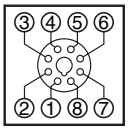


Note: The Y92A-48G Finger Safe Terminal Cover is also available.


11-pin Sockets with Alarms

P2CF-11 Front Connecting Socket

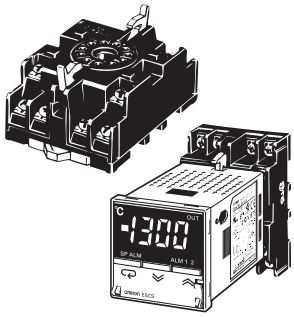


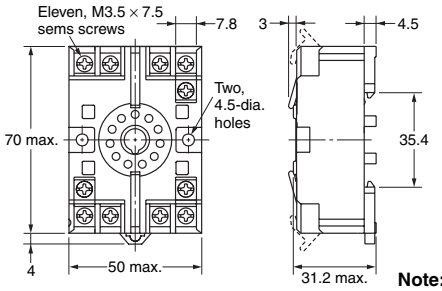

Terminal Arrangement/
Internal Connections
(Top View)

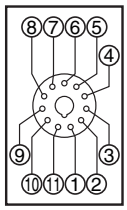


Mounting Hole Dimensions




Note: DIN Track mounting is also possible.


Note: The P2CF-11-E Socket with finger protection is also available.

P3GA-11 Back Connecting Socket

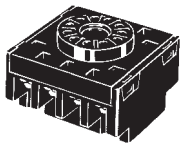

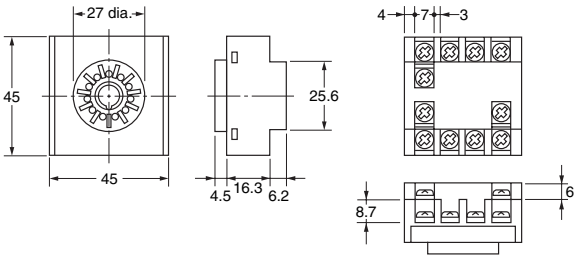

Terminal Arrangement
(Bottom View)

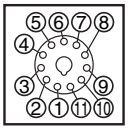

Note: The Y92A-48G Finger Safe Terminal Cover is also available.

Note: Do not use any other types of Sockets. Doing so will adversely affect the accuracy.


Applicable Thermistors

Use Element Interchangeable Thermistors (E52-THE5A, E52-THE6D, and E52-THE6F) to connect to the E5CS-□GU. For details on Sensors, refer to *E52*.

Hard Protective Cover

The Y92A-48B Hard Protective Cover is available for the following applications.

- To protect the set from dust and dirt.
- To prevent the panel from being accidentally touched causing displacement of set values.
- To provide effective protection against water droplets.

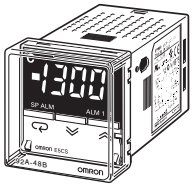

Safety Precautions

Refer to *Safety Precautions for All Temperature Controllers*. Refer to *E5CS/E5CSV Operation* for operating procedures.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.
To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

Terms and Conditions Agreement

Read and understand this catalog.
Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.
(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE
PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.
Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.
See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.
OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.
Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.
Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.
NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.
Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.
Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.
Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.
Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2015.8

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation
Industrial Automation Company

http://www.ia.omron.com/

(c)Copyright OMRON Corporation 2015 All Right Reserved.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron:
E5CS-QGU-W AC100-240 E5CS-RKJU-W AC100-240 E5CS-Q1KJU-W AC100-240 E5CS-QKJU-W AC100-240 E5CS-QPU-W AC100-240 E5CS-R1KJU-W AC100-240 E5CS-RPU-W AC100-240 E5CS-R1P E5CS-RKJDU-WAC/DC24

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP