

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Particle Measuring Systems LAN-Node 200* at our website: *Click HERE*

LAN Node 200
Technical Service Manual

Particle Measuring Systems
1855 South 57th Court
Boulder, Colorado 80301
(303) 443-7100

P/N 10186-3

© October 1992
by Particle Measuring Systems, Inc.
All rights reserved

Chapter 1. Theory of Operation

Interpretation of Analog Data 1-1
PCB 1212 Circuit Description 1-3
PCB 1208 Circuit Description 1-4

Chapter 2. Troubleshooting

Chapter 3. Specifications

Appendix A. Internal Wiring Diagrams

Appendix B. Schematics and CVSs

Table 1-1. Settings Enabling LAN Node 200 Extension Feature . . . 1-2

Theory of Operation

The LAN Node 200 uses a universal input power supply and manifold transfomer so the voltage can be changed by changing the power entry module voltage setting and installing the correct fuse(s). A voltage regulator LM340-15 is mounted on the case and is used to provide +15 VDC or + 24 VDC for the analog sensors. The solid state relay is used to drive the stepper on a manifold. Refer to WD-990 in Internal Wiring Diagrams, Appendix A.

Interpretation of Analog Data

The analog values are measured by the LAN Node 200 with a 12-bit analog-to-digital converter. This converter can make a single conversion in about 20 milliseconds, so each of the 16 analog channels will be sampled approximately 3 to 4 times per second. The value reported by the LAN Node 200 is the average of all the samples taken during the sampling interval. The absolute accuracy of the analog acquisition system is 0.5 % of full scale, and the resolution is 0.1 % of full scale.

Each analog channel can be driven either by a 0-5 volt signal, or by a 4-20 milliamp signal. This is determined by jumpers on the PMS 1208 Board and is set to 4-20 mA unless specified otherwise. When a 4-20 milliamp source is used, a current-to-voltage converter changes the 4-20 mA signal to 0-5 volts. In either case, the LAN Node 200 will scale the analog data without regard to the type of sensor connected, and in a way which depends on if the LAN Node 200 extension feature has been enabled via switch SW1 on the PMS 1212 Board (refer to Table 1).

Table 1-1. Settings Enabling LAN Node 200 Extension Feature

SW1	Network Baud	Local Baud	Uses Extensions
0	9600	9600	No
1	9600	1200	No
2	4800	9600	No
3	4800	1200	No (default LAN Node (-3))
4	9600	9600	Yes (default LAN Node 200)
5	9600	1200	Yes
6	4800	9600	Yes
7	4800	1200	Yes

SW2 is currently unused but should be left at 0. Node addressing from 1 to 99: SW3 is the most significant digit of the address. SW4 is the least significant digit.

If the LAN Node extensions are turned off, the values reported by the LAN Node 200 will emulate those of the original LAN Node. The LAN Node uses an analog-to-digital converter with a 0 to 2 volt input range, whereas the LAN Node 200 uses a converter with a 0 to 5 volt range. Also, the original LAN Node converts the 4-20 mA signal into a voltage with a simple 100 ohm resistor. This method produces .4 volts for 4 mA and 2 volts for 20 mA. The LAN Node 200 uses an integrated circuit to convert the current signal into a voltage. This IC produces 0 volts for 4 mA and 5 volts for 20 mA. These differences in circuitry require that the 0 to 5 volt signal from the LAN Node 200 A/D converter be scaled by the following formula to emulate the LAN Node: Vout = Vin *0.32 + 0.4. This mode is intended as an interim solution where new LAN Node 200's are to be used in a system with existing LAN Nodes. This emulation mode will complicate the use of voltage mode sensors, therefore the LAN Node 200 should be operated with extensions turned on when these types of sensors are used.

When extensions are turned on, the LAN Node 200 will report the values for the analog signals as 4.0 to 20.0 mA. When 4-20 mA sensors are connected, 0 volts corresponds to 4 mA and 5 volts corresponds to 20 mA. When voltage mode sensors are used, the value reported will be correctly scaled.

PCB 1212 Circuit Description

The PCB 1212 is a Z80 microprocessor data acquisition system designed for use with Particle Measuring Systems LPS particle sensors and 4-20 milliamp environmental sensors. Particle sensors, environmental sensors and communication interfaces are connected to the LAN Node through the PCB 1208 connector board.

A Watchdog (U23) will reset the Z80 if the control program locks up or if the +5 VDC drops below 4.5 VDC. An EEPROM (U21) contains the software for controlling the LAN Node 200 and a battery-backed RAM (U20) stores data. These two devices are controlled by a GAL (U19). The GAL (U18) controls the PIOs, CTCs and the Analog circuitry.

PIO (U10) is used to read in the switch positions that determine the LAN Node 200 address, baud rate and analog function.

Particle sensor signals are interfaced to the PCB 1212 using differential drivers and receivers. After the differential receivers U1 and U2, the signals are sent to Z80 counter/timer chips (CTC) to be accumulated. Each time these CTCs count 256 pulses, they interrupt the Z80 processor. Laser reference status information is also transmitted using differential techniques, but then the signal is routed to U8, a PIO, for interfacing to the microprocessor.

Analog signals from the environmental sensors are multiplexed by U12 and U13 and then are processed by the MAX 163 (U11) analog to digital converter. This converter can make a single conversion in about 20 milliseconds, so each of the 16 analog channels will be sampled approximately three to four times a second. The value reported by the LAN Node 200 is the average of all the samples taken during the sample interval. The absolute accuracy of the analog acquisition system is 0.5% of full scale, and a resolution of 0.1 % of full scale.

Timing signals for the LAN Node 200 are generated by U16, a Z80 counter/timer chip. This chip provides the transmit and receive clocks for the SIO.

Serial communication for the LAN Node 200 is handled by U7, a serial input/output controller (SIO). Channel A of this IC interfaces to the RS-485 multi-drop channel. Channel B is used as a general purpose RS-232 interface and as the primary communication channel if the LAN Node 200 is used as a stand-alone device.

Manifold control is provided by port B of U8, a PIO controller. B0 of this port is used to control a solid state relay to produce step signals. B1 through B6 are configured as inputs to sense the position of the manifold encoder disk.

PCB 1208 Circuit Description

The PCB 1208 provides mechanical support and signal distribution for the input/output connectors of the LAN Node 200 system. It has sixteen DA15 connectors for analog input, two DB-25 connectors for frequency input, one DB-25 for the auxillary RS-232 interface and two DE-9 connectors for the RS-485 interface.

The frequency input connectors have the same pin definitions as the Laser Particle Sensors (LPS-A) so a simple "straight through" cable can be used to connect the LPS-A's to the LAN Node 200.

The analog input channels are connected in pairs. Connectors 1 and 2, 3 and 4, etc. are electrically connected together to facilitate connection to sensors that have two outputs rather than one (e.g., temperature/relative humidity sensors). The pairs of connectors are wired such that the channel connected to the even numbered connectors is also made available as a secondary channel on the associated odd numbered connector. When both channels of an odd connector are used, the associated even connector **MUST** be left empty.

The PCB 1208 board uses RCV420s to convert 4-20 mA inputs to 0-5 VDC inputs required by the PCB 1212 board. These converters are protected by 31 mA fuses. If 0-5 VDC inputs are used, the corresponding jumper must be removed and the input is passed directly to the PCB 1212 board.

The PCB 1208 analog connectors provide +15 VDC and +24 VDC for environmental sensors. The +15 VDC is regulated by the LM340-15 regulator and D1.

Troubleshooting

Refer to the following troubleshooting checklist to solve minor problems which may occur.

Problem	Solutions
No power LED	Check LAN Node 200 fuse.
	Check power supply fuse (5A).
	Make sure all cables are connected.
	Measure + 5 VDC on PCB-1208 board.
	LED may be bad.
LAN Node does not communicate with FMS or RS-485	Check switch settings on PCB-1212 board for correct baud rate and address.
	Check all cabling and power. If the LAN Node 200 is used as an RS-232 device, make sure the DSR line is connected and working.
	PCB-1212 board is probably bad.
LAN Node does not communicate with LOCAL port	Check switch settings on PCB-1212 board for correct baud rate and address.
	Check all cabling and power.
	PCB-1212 board is probably bad.


Problem	Solutions
Incorrect data from analog sensors	Check Local port report for correctness. (There might be an error in FMS or other setup.) Check PCB-1208 for correct jumpers (An input is 4 to 20 mA if jumper is installed). Check PCB-1212 switch settings. Check sensor and all cabling. PCB-1208 or PCB-1212 is probably bad; trace signals if possible.
Incorrect data from particle counter	Check Local port report for correctness. (There might be an error in FMS or other setup.) Check operation of counter and all cabling. PCB-1208 or PCB-1212 is probably bad; trace signals if possible.

Specifications

Frequency Inputs (LPS)	Eight channels of pulse input with a maximum rate of 5 kHz. Signals must be differential. (RS-422 compatible)
Analog Environmental Sensors Inputs	Sixteen channels of analog input having a maximum of 5 V, in voltage mode, or a maximum of 20 mA when in current mode. When used in current mode the source must be capable of driving a load of 75 ohms.
Status Inputs	4 channels of differential status inputs. These inputs are typically used for laser reference information. (RS-422 compatible)
Analog Conversion Accuracy	Resolution - 0.1% full scale Absolute Accuracy including non-linearity, hysteresis and repeatability - 0.5% full scale
Manifold Control	Control for either a PMS AM-12 or an AM-24 manifold.
Serial Communication	One channel of RS-232 One channel of RS-485 with multi-drop capability
Sample Interval	Selectable by commands sent across the RS-232 or RS-485 communication interfaces Minimum sample interval is 18 seconds plus 2 second delay


Power	100/115 VAC, 2 A 220/240 VAC, 1 A
Dimensions	14 in. x 6 in. x 7 in.
Weight	13.5 lbs

Internal Wiring Diagrams

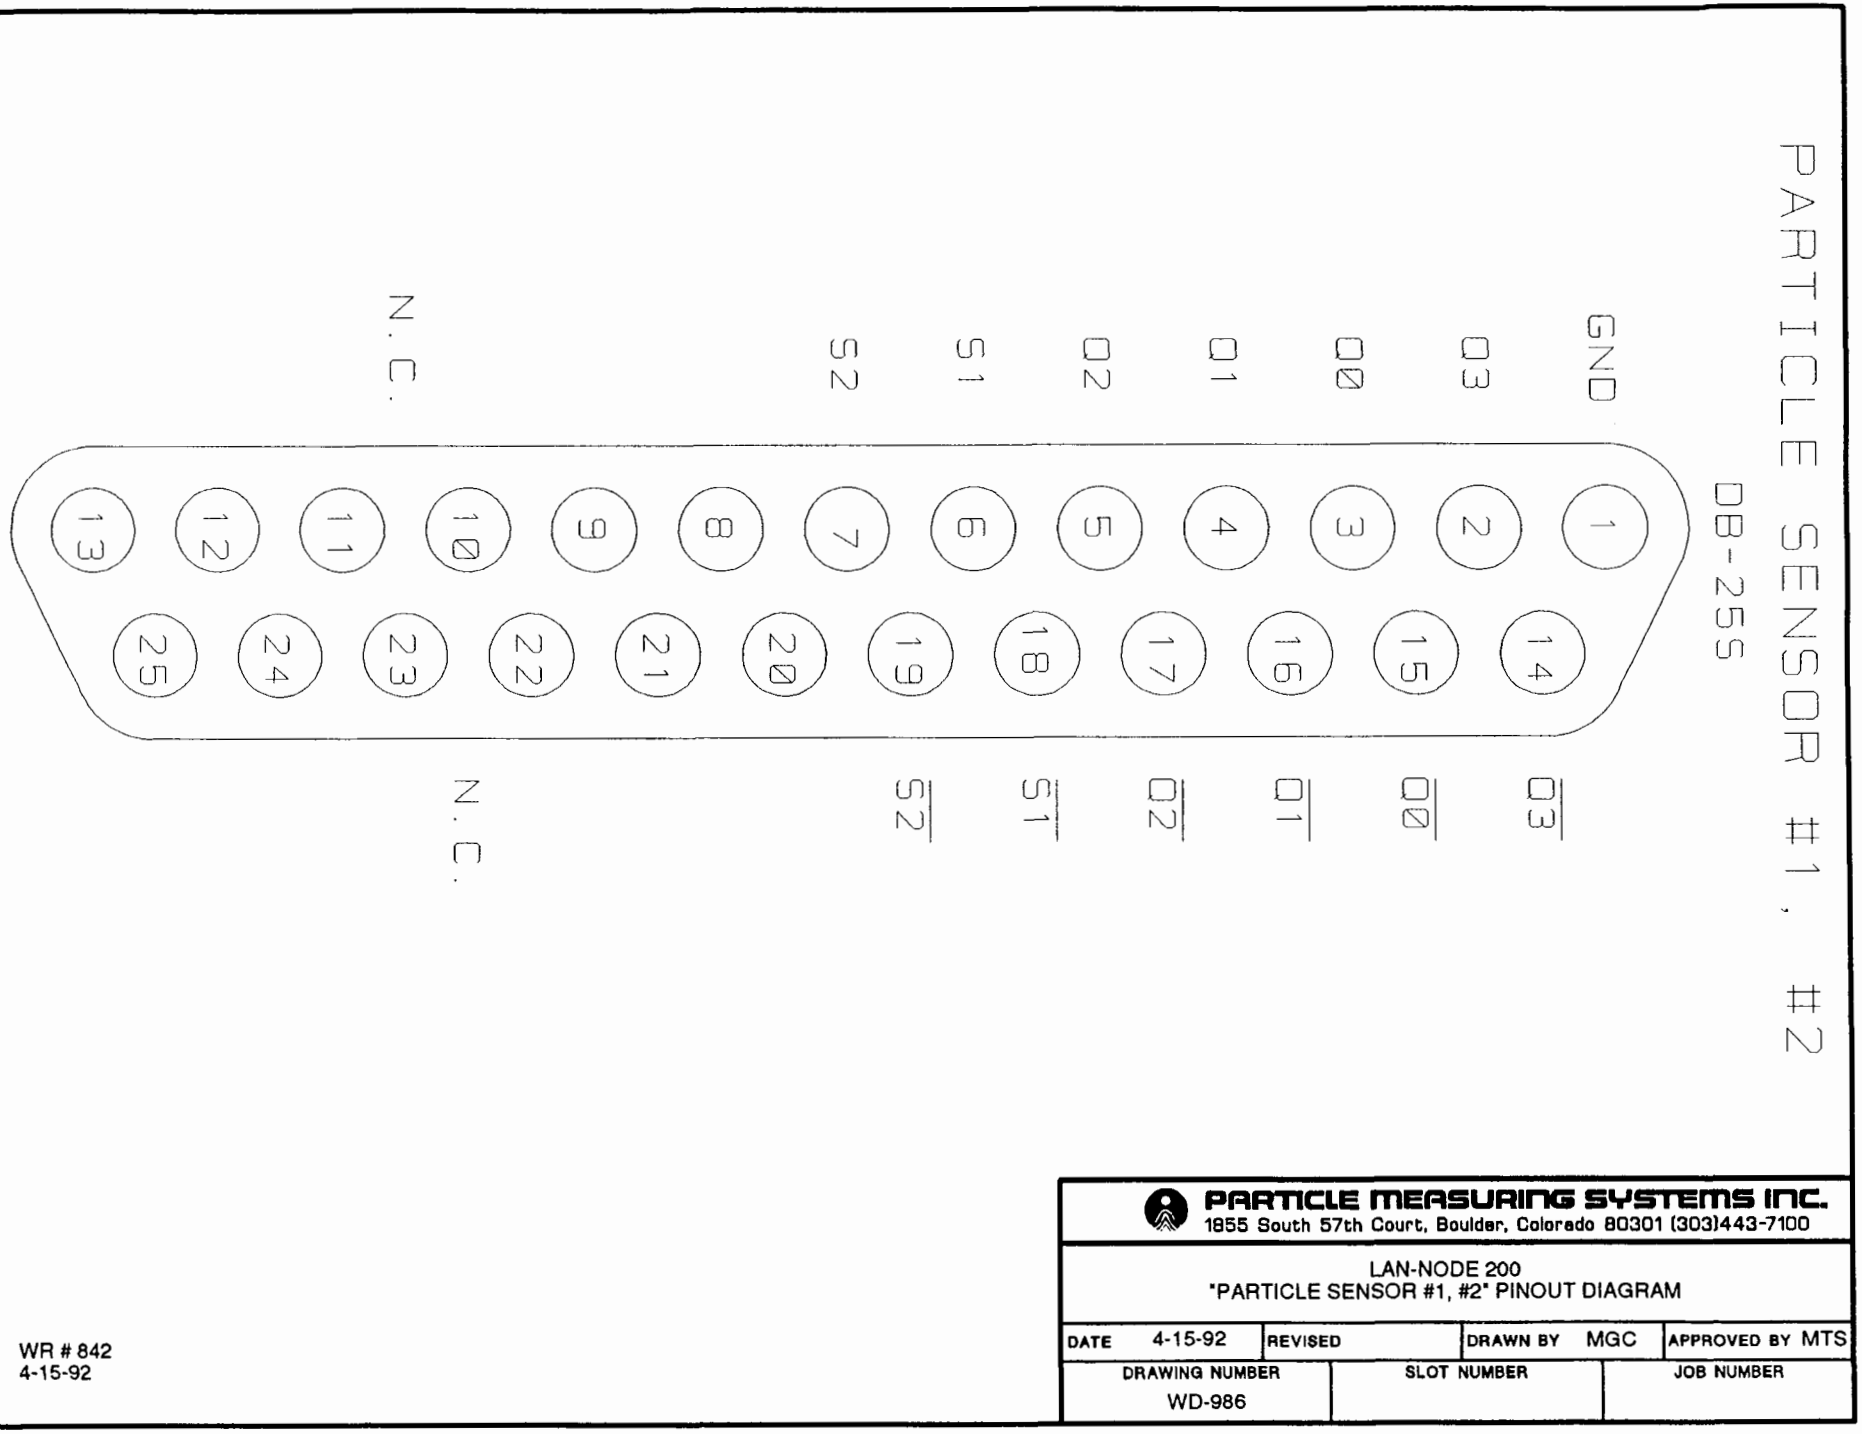


PARTICLE MEASURING SYSTEMS INC. 1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100			
LAN-NODE 200 "PARTICLE SENSOR #1, #2" PINOUT DIAGRAM			
DATE 4-15-92	REVISED	DRAWN BY MGC	APPROVED BY MTS
DRAWING NUMBER WD-986	SLOT NUMBER	JOB NUMBER	

WR # 842
4-15-92

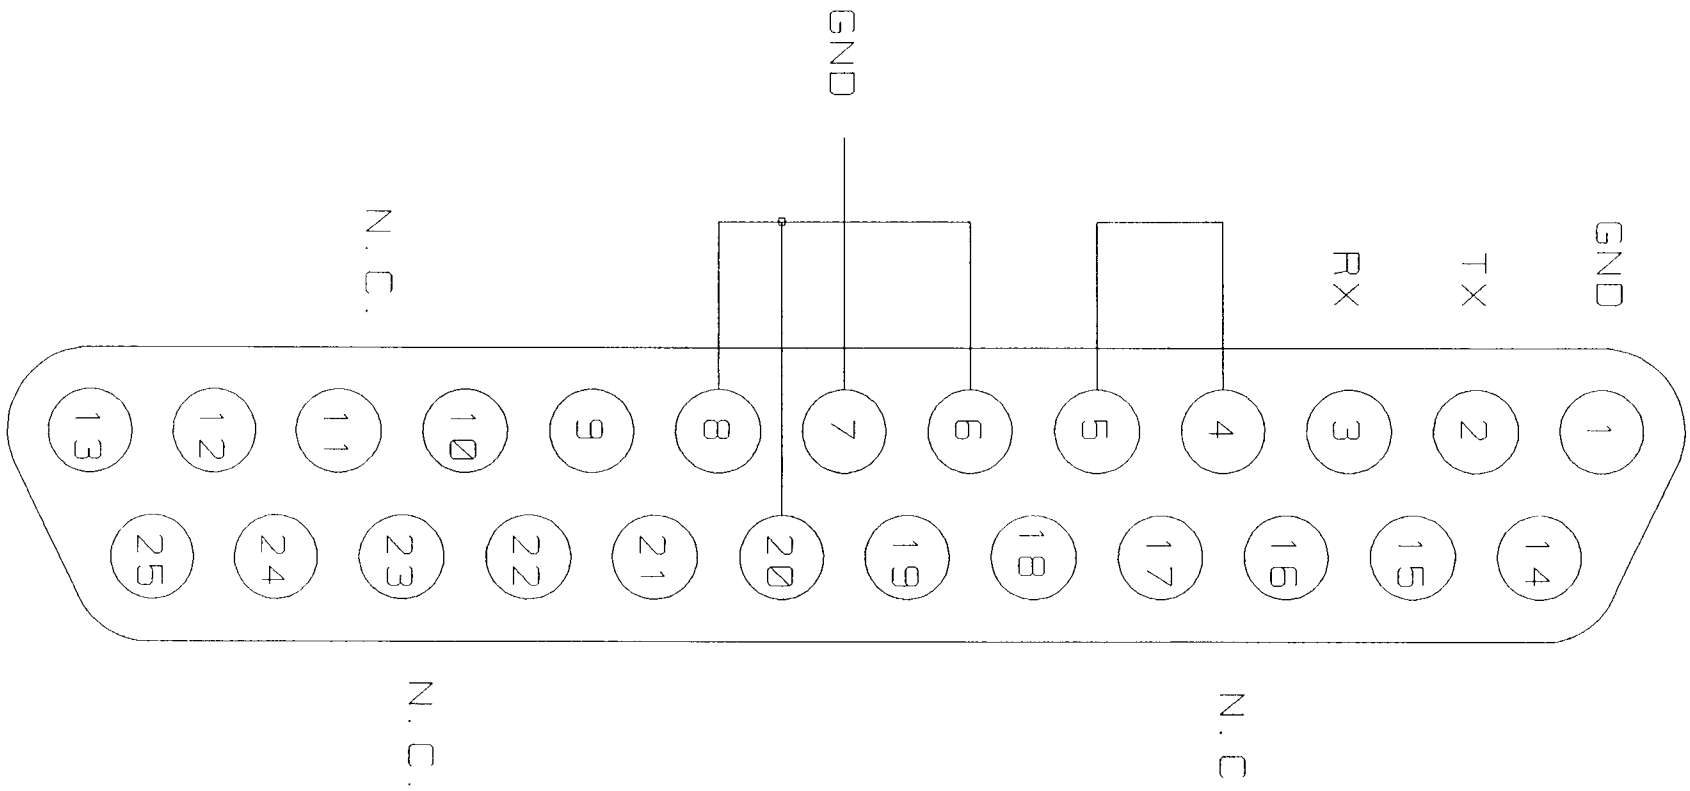

WR # 842
4-15-92

PARTICLE MEASURING SYSTEMS INC. 1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100			
LAN-NODE 200 "LOCAL RS-232" PINOUT DIAGRAM			
DATE 4-15-92	REVISED	DRAWN BY MGC	APPROVED BY MTS
DRAWING NUMBER WD-987	SLOT NUMBER	JOB NUMBER	

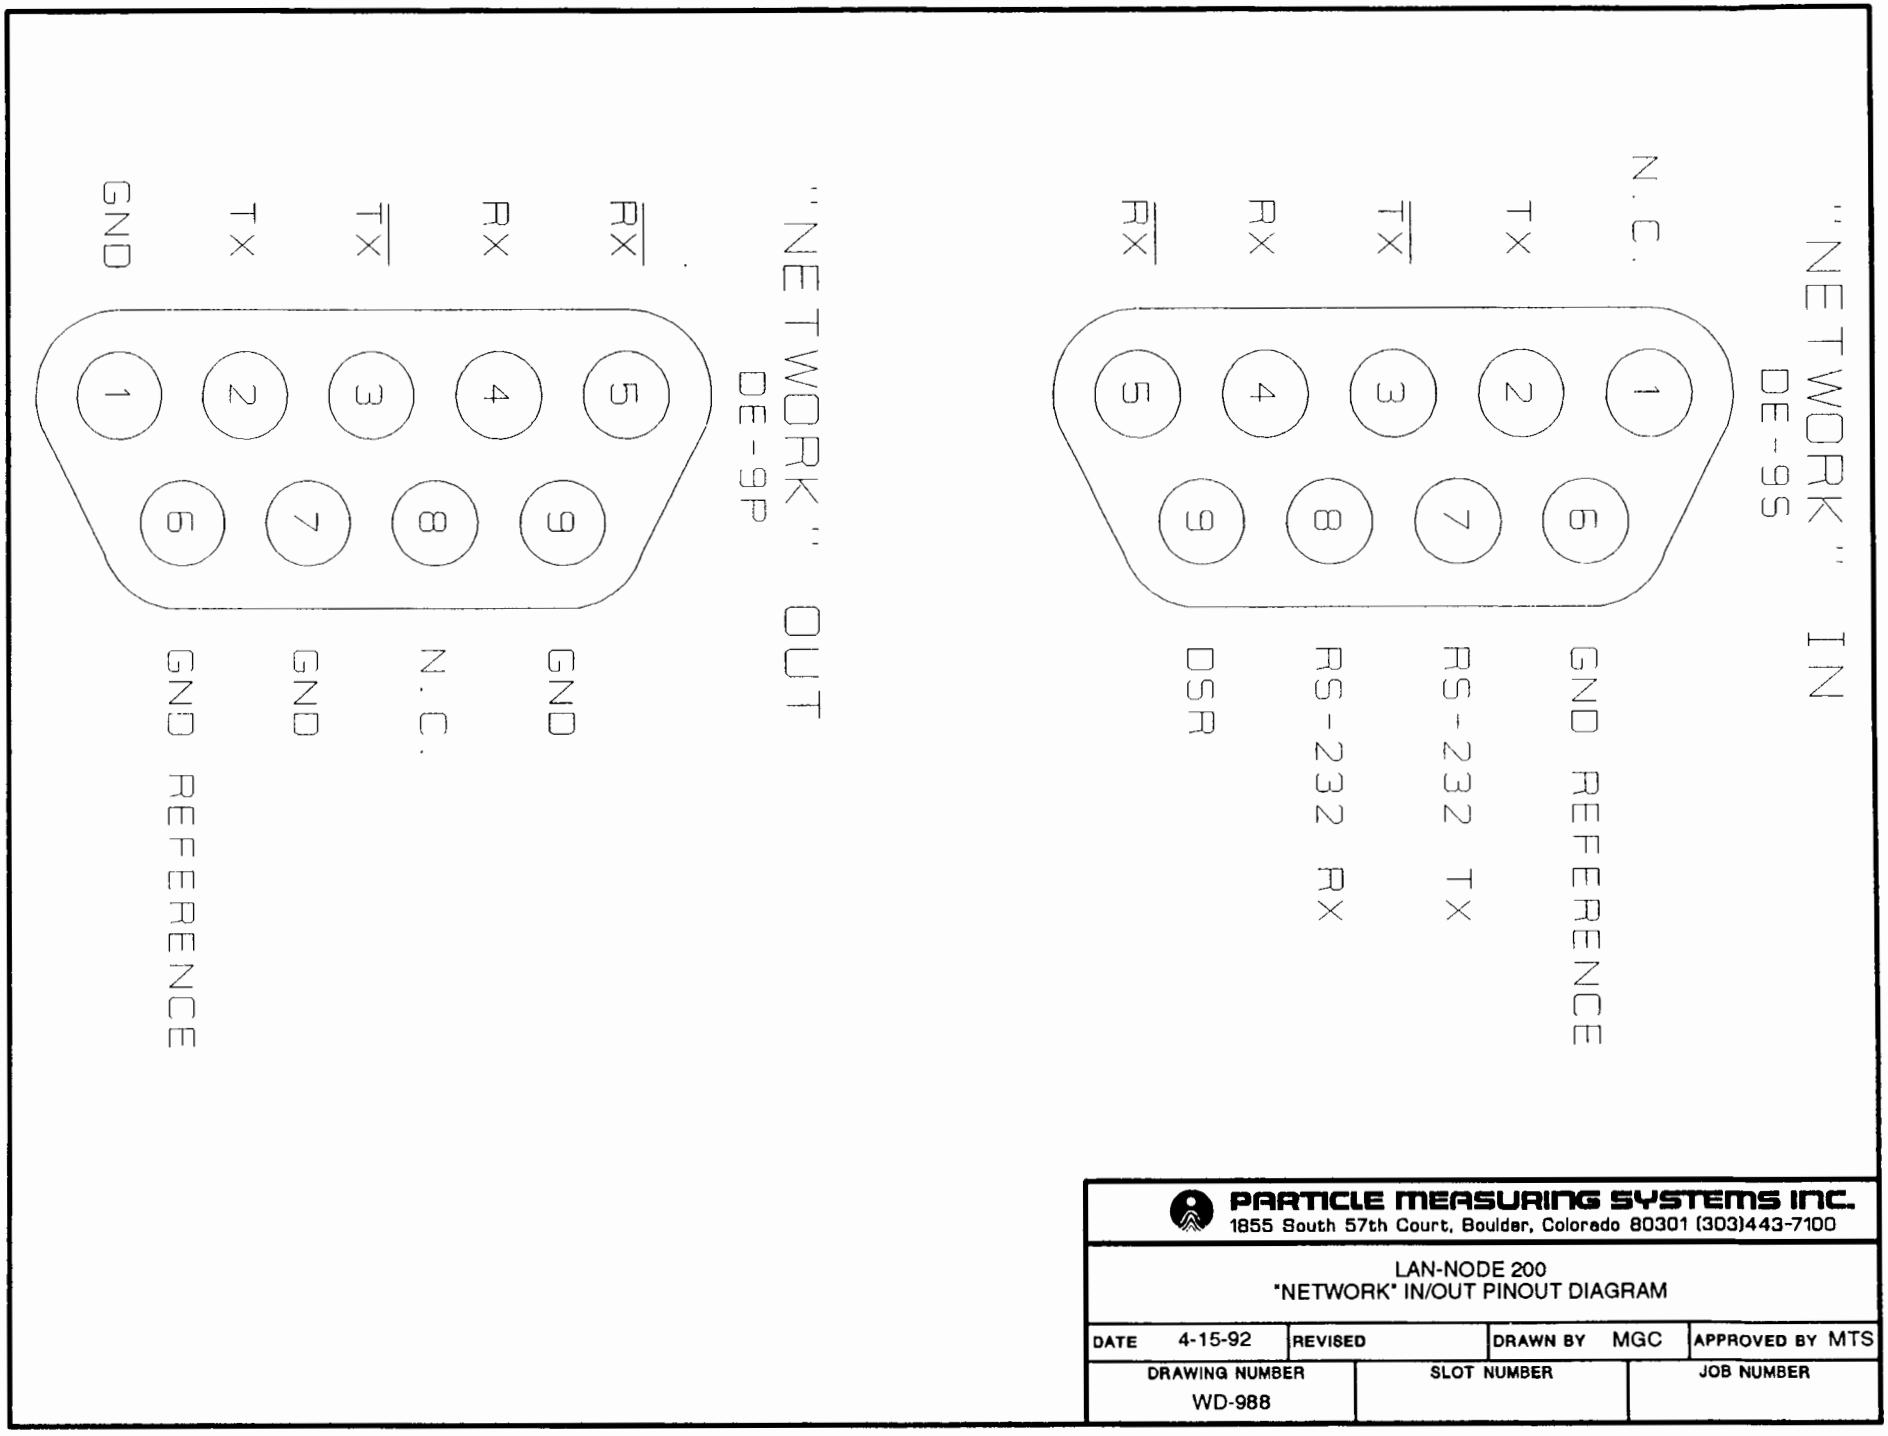

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100


LAN-NODE 200
"NETWORK" IN/OUT PINOUT DIAGRAM

DATE	REVISED	DRAWN BY	APPROVED BY
4-15-92		MGC	MTS

DRAWING NUMBER	SLOT NUMBER	JOB NUMBER
WD-988		


"ANALOG (ODD NUMBERS)"

DA-15S

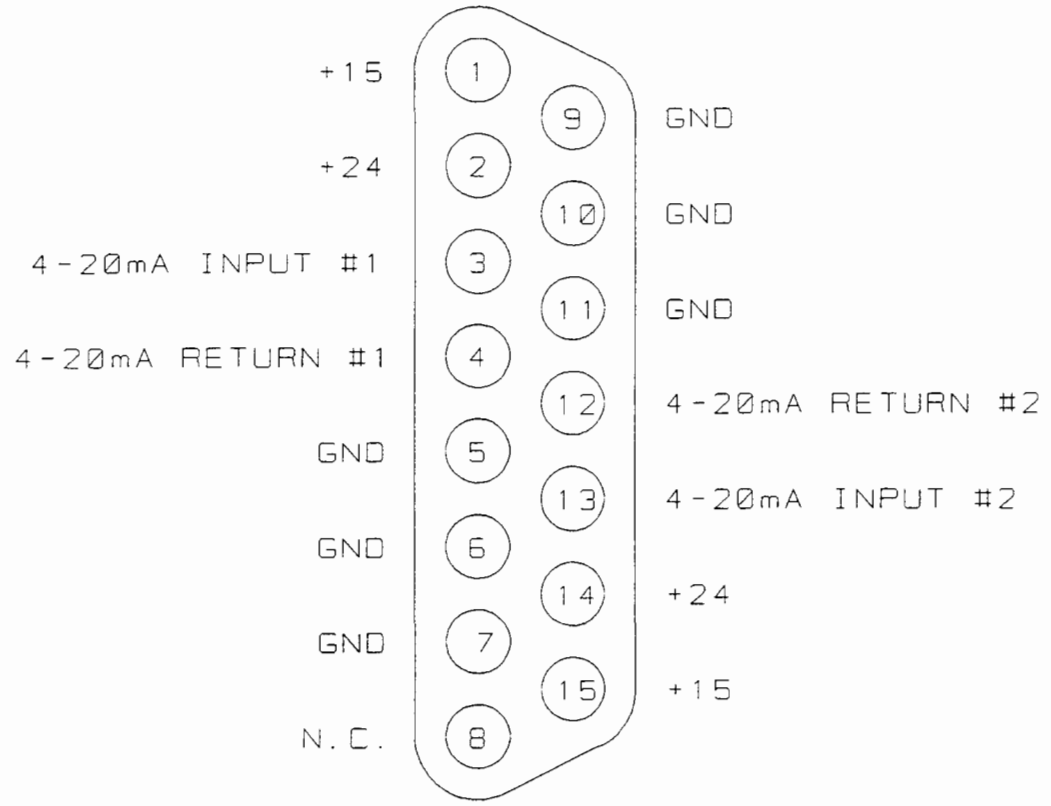

"ANALOG (EVEN NUMBERS)"

DA-15S

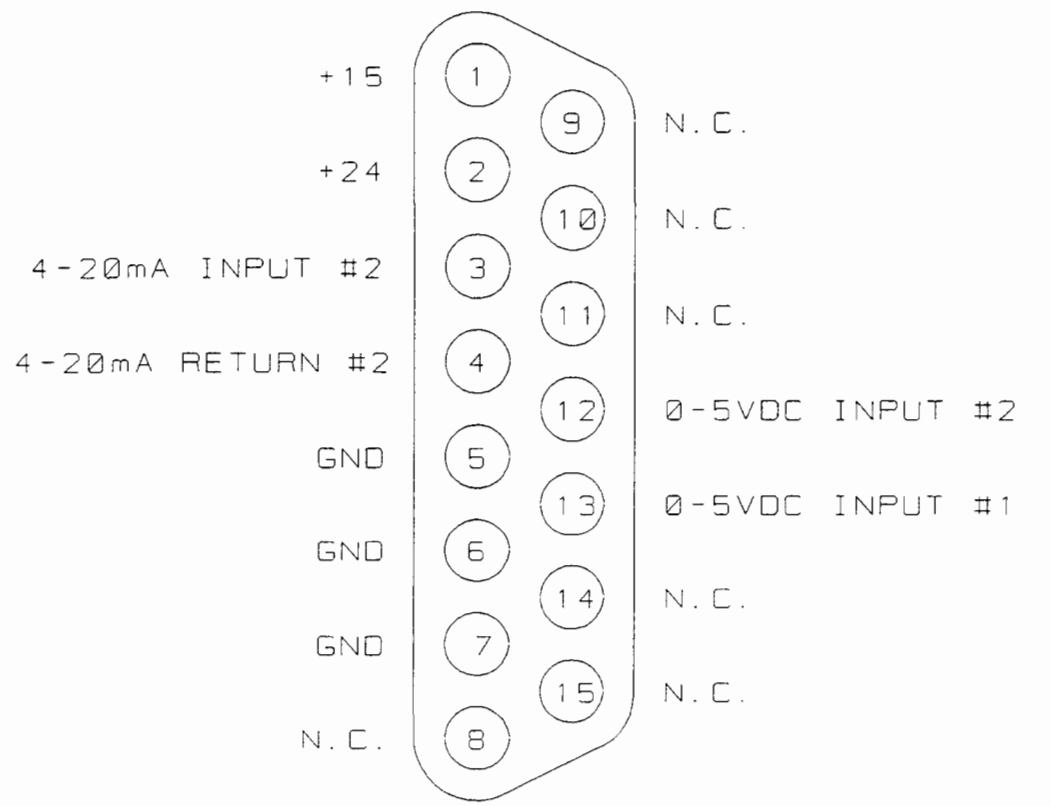


PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN-NODE 200
"ANALOG xx" PINOUT DIAGRAM

DATE	4-15-92	REVISED	6-5-92	DRAWN BY	MGC	APPROVED BY	MTS
DRAWING NUMBER	WD-989			SLOT NUMBER		JOB NUMBER	

WR # 842
4-15-92

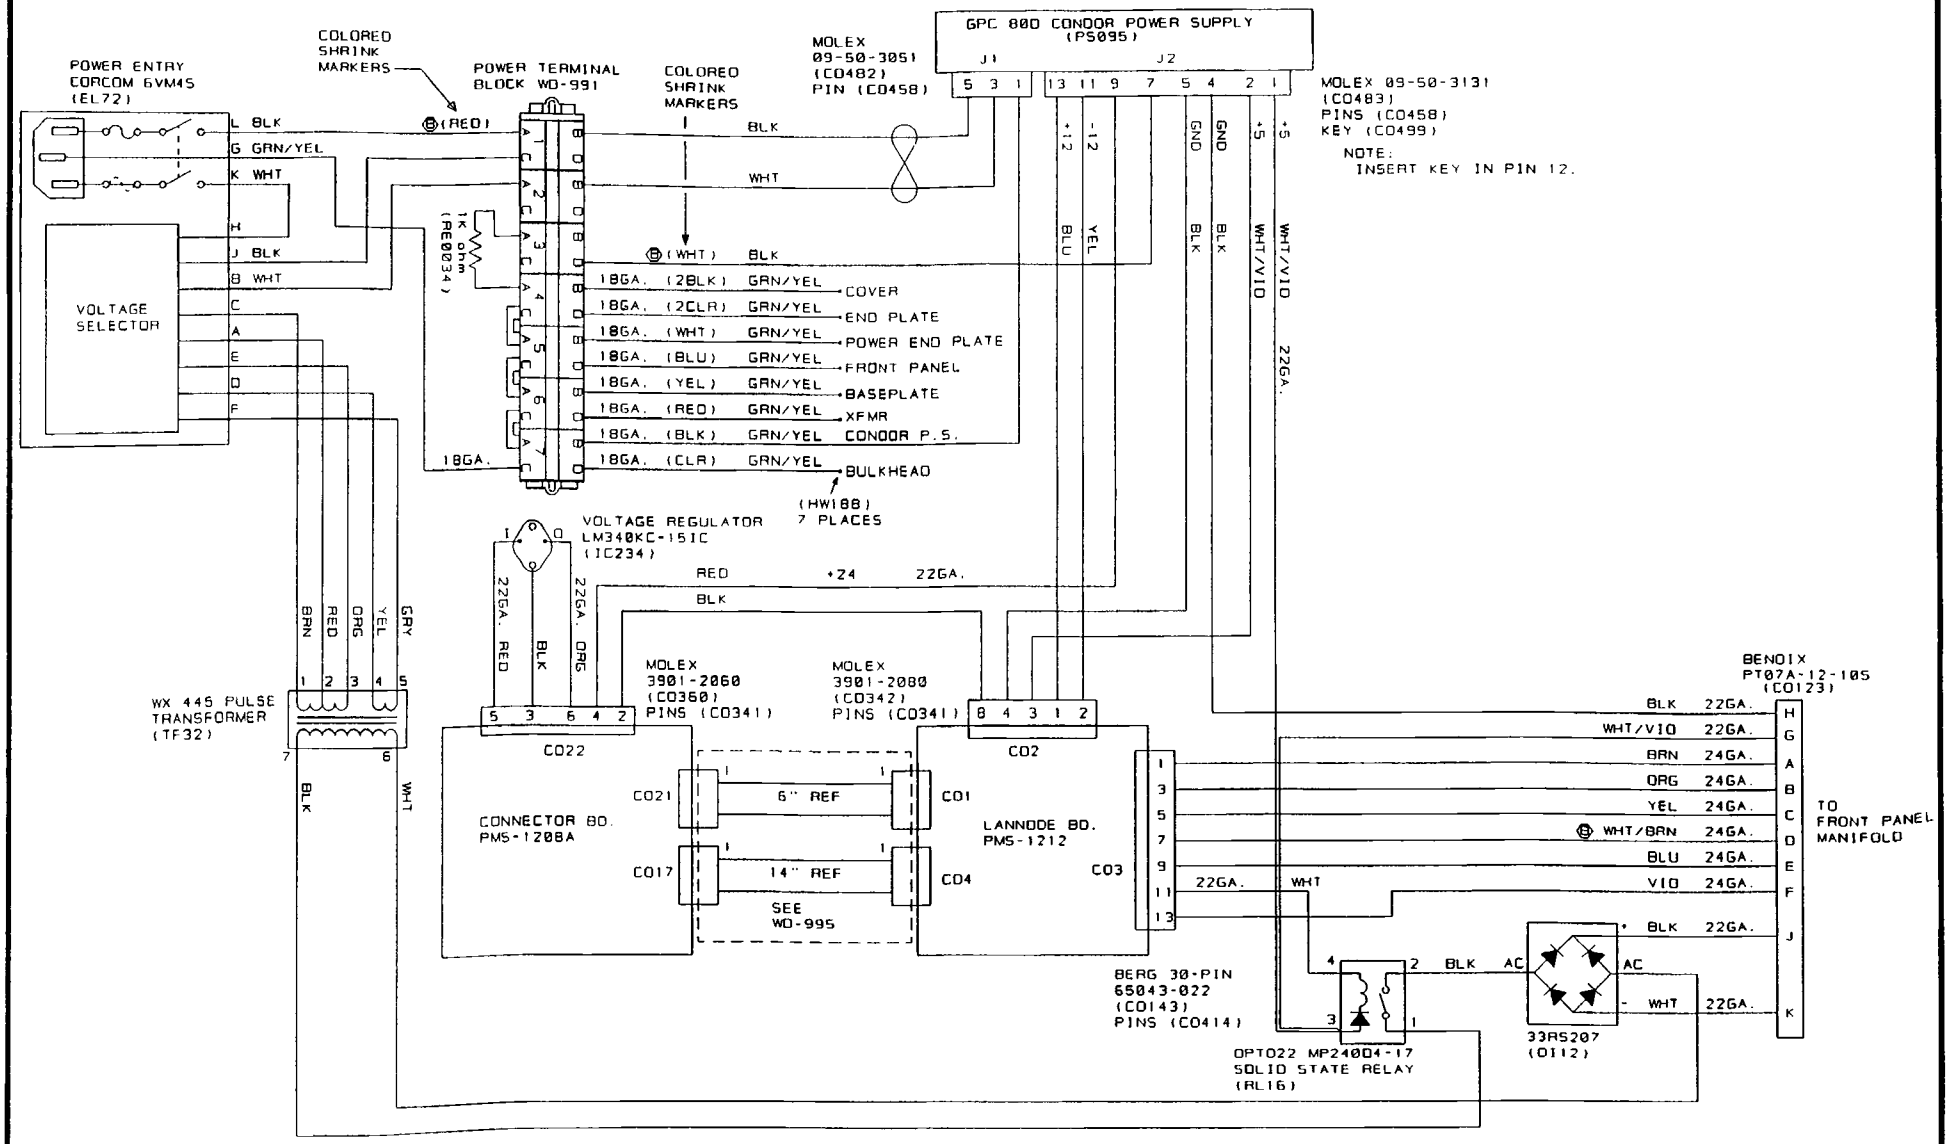

NOTE:
ALL WIRES ARE 20GA. UNLESS NOTED.

REV.	ECO/WR	DATE	REMARKS
A	WR#818	2-28-92	Created form WD-1000
B	WR#841	6-18-92	Universal AC Input
	DISC.	2-22-93	Wht/Brn was Grn, added Red shrink marker. (Wht) was (Red)
	DISC.	11-22-93	Per. M. Suzuki


PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN - NODE 200
INTERNAL WIRING DIAGRAM

DATE	REVISED	DRAWN BY	APPROVED BY
2-28-92	11-22-93	MGC	MTS

DRAWING NUMBER	REV.	JOB NUMBER	PART NUMBER
WD-990	B		AE-990

SHEET 1 OF 1

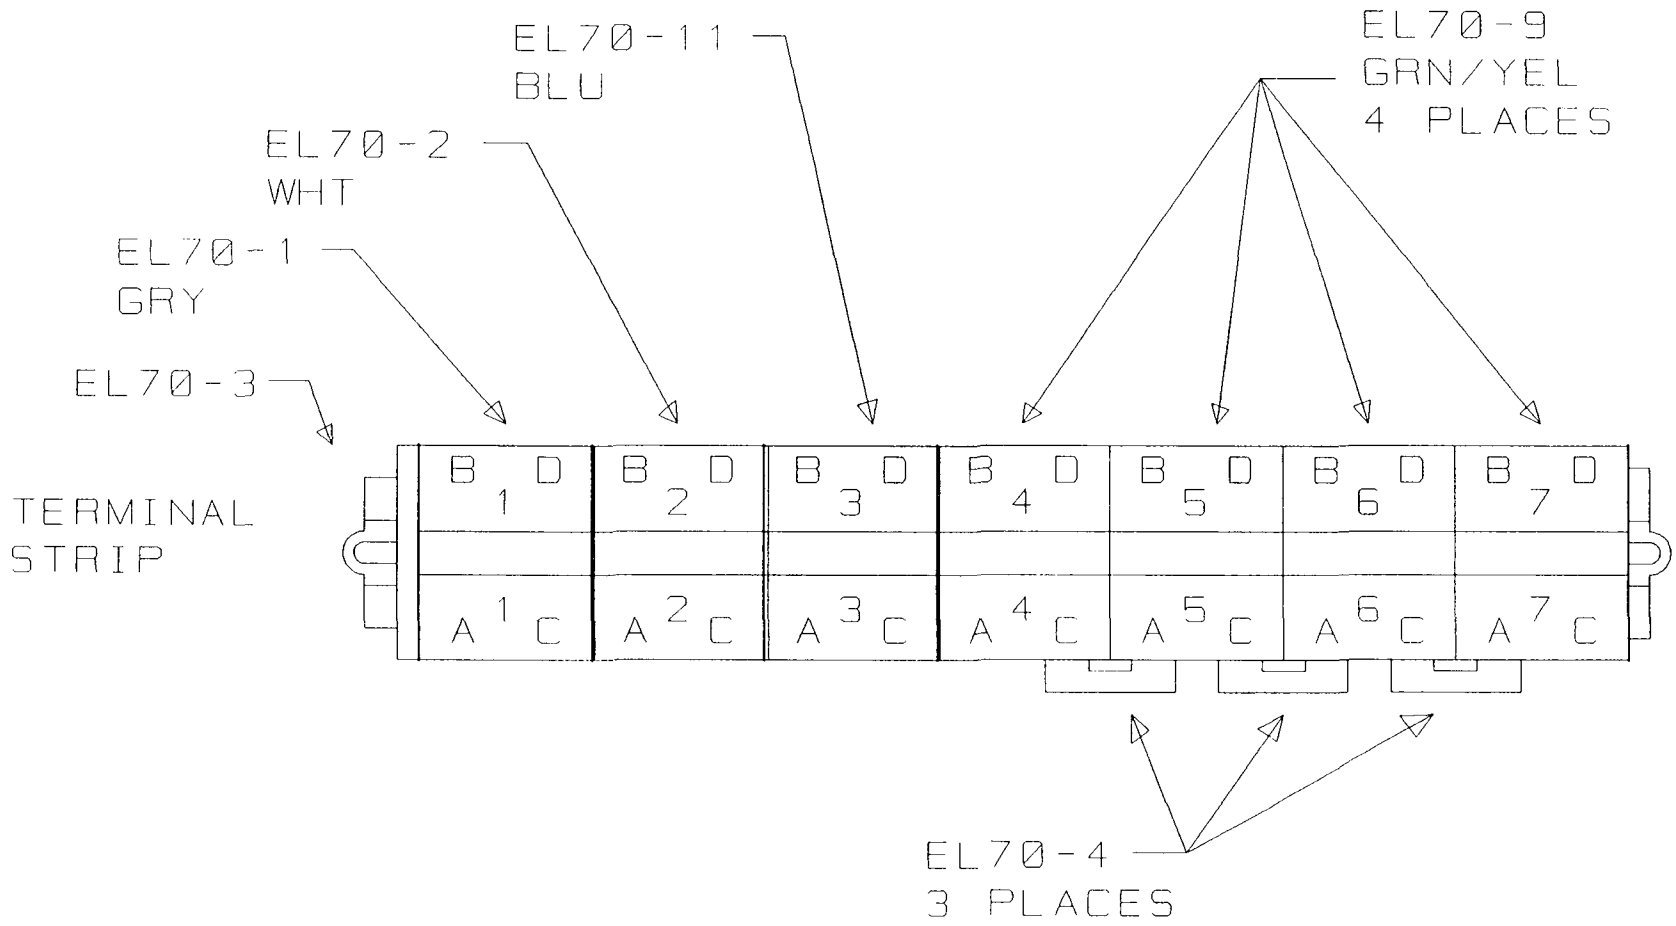

USE LB186-10 NUMBERING STRIPS.
(CUT OFF 8 THRU 10)


REV.	ECO/WR	DATE	REMARKS
	WR#818	2-13-92	

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN-NODE 200
POWER STRIP ASSEMBLY

DATE	REVISED	DRAWN BY	APPROVED BY
3-5-92		MGC	MTS

DRAWING NUMBER	REV.	JOB NUMBER	PART NUMBER
WD-991	SHEET 1 OF 1		AE-991

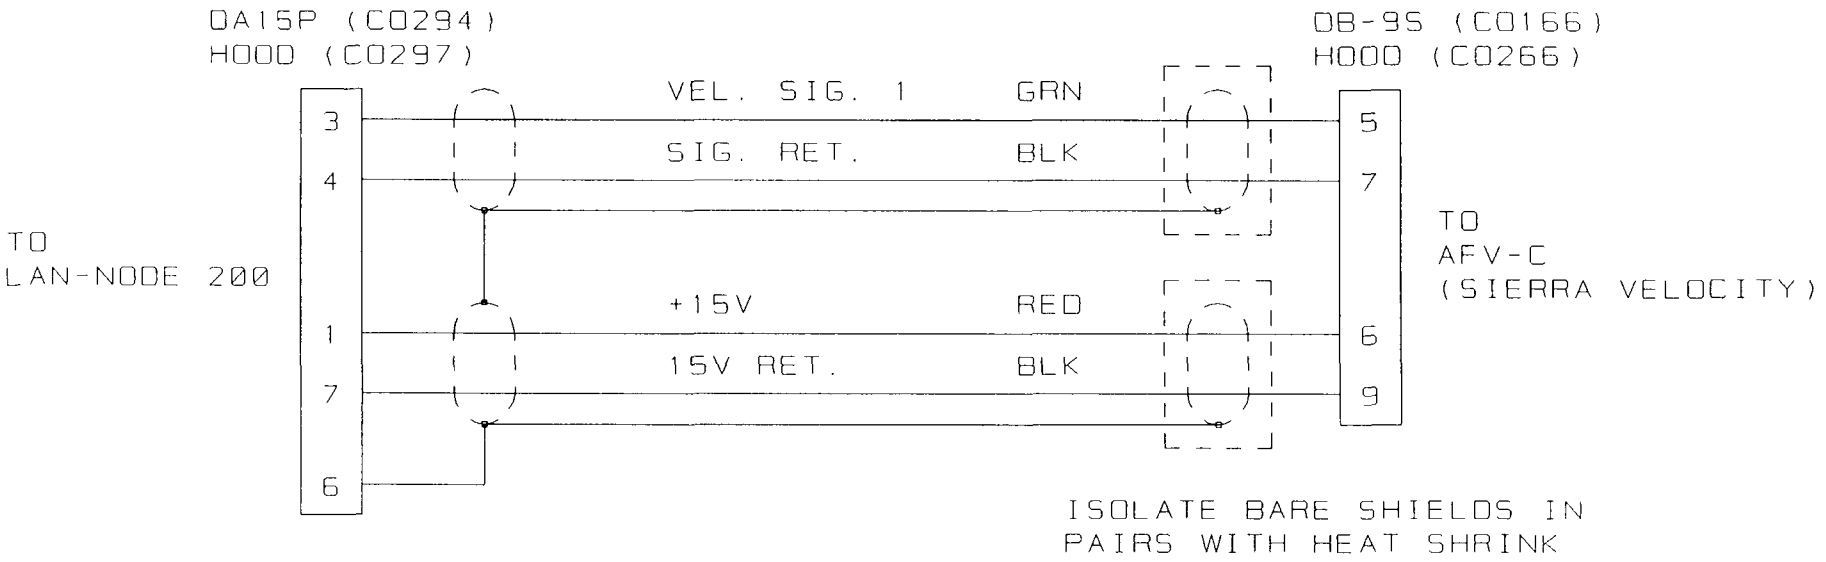


PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN-NODE 200
TO AFV-C CABLE

DATE	REVISED	DRAWN BY	APPROVED BY
2-28-92		MGC	MTS

DRAWING NUMBER	SLOT NUMBER	JOB NUMBER
WD-992		

WR # 822
2-29-92

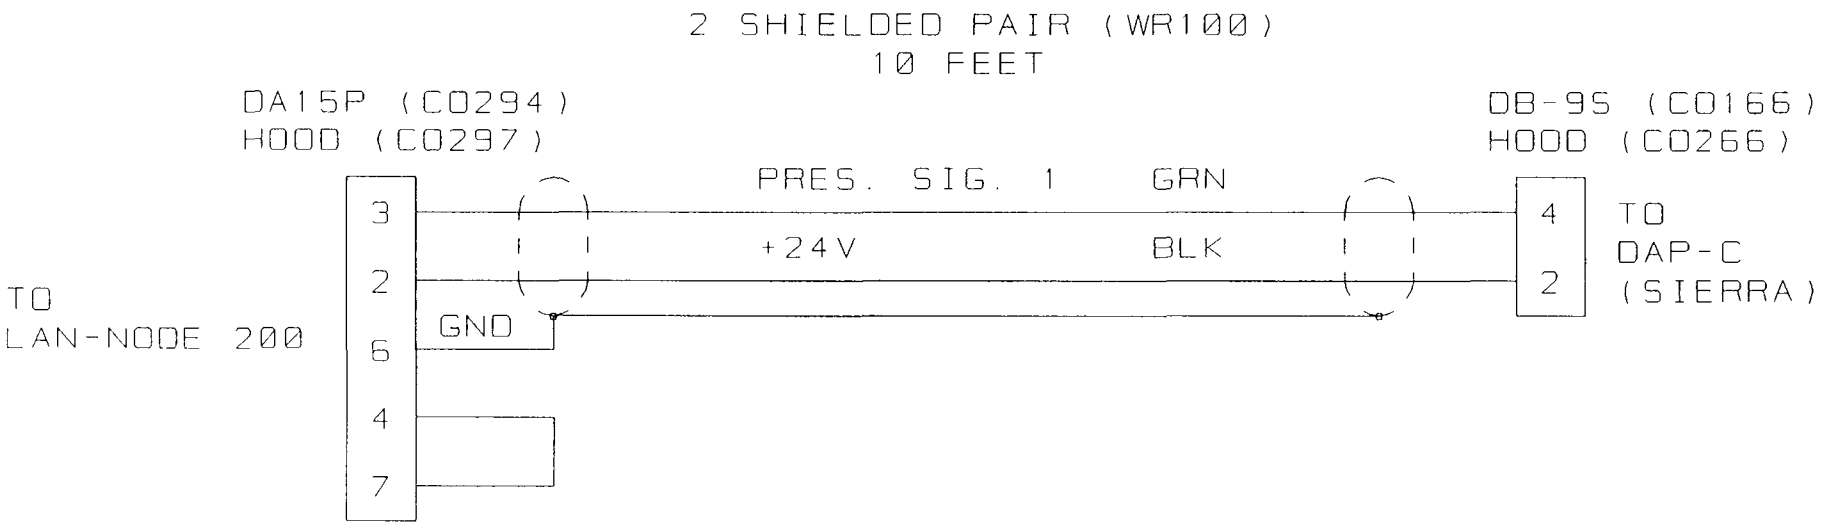

WR # 822
2-29-92


CLERICAL
5-20-92

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN-NODE 200
TO DAP-C CABLE

DATE	2-28-92	REVISED	5-20-92	DRAWN BY	MGC	APPROVED BY	MTS

DRAWING NUMBER	SLOT NUMBER	JOB NUMBER
WD-993		

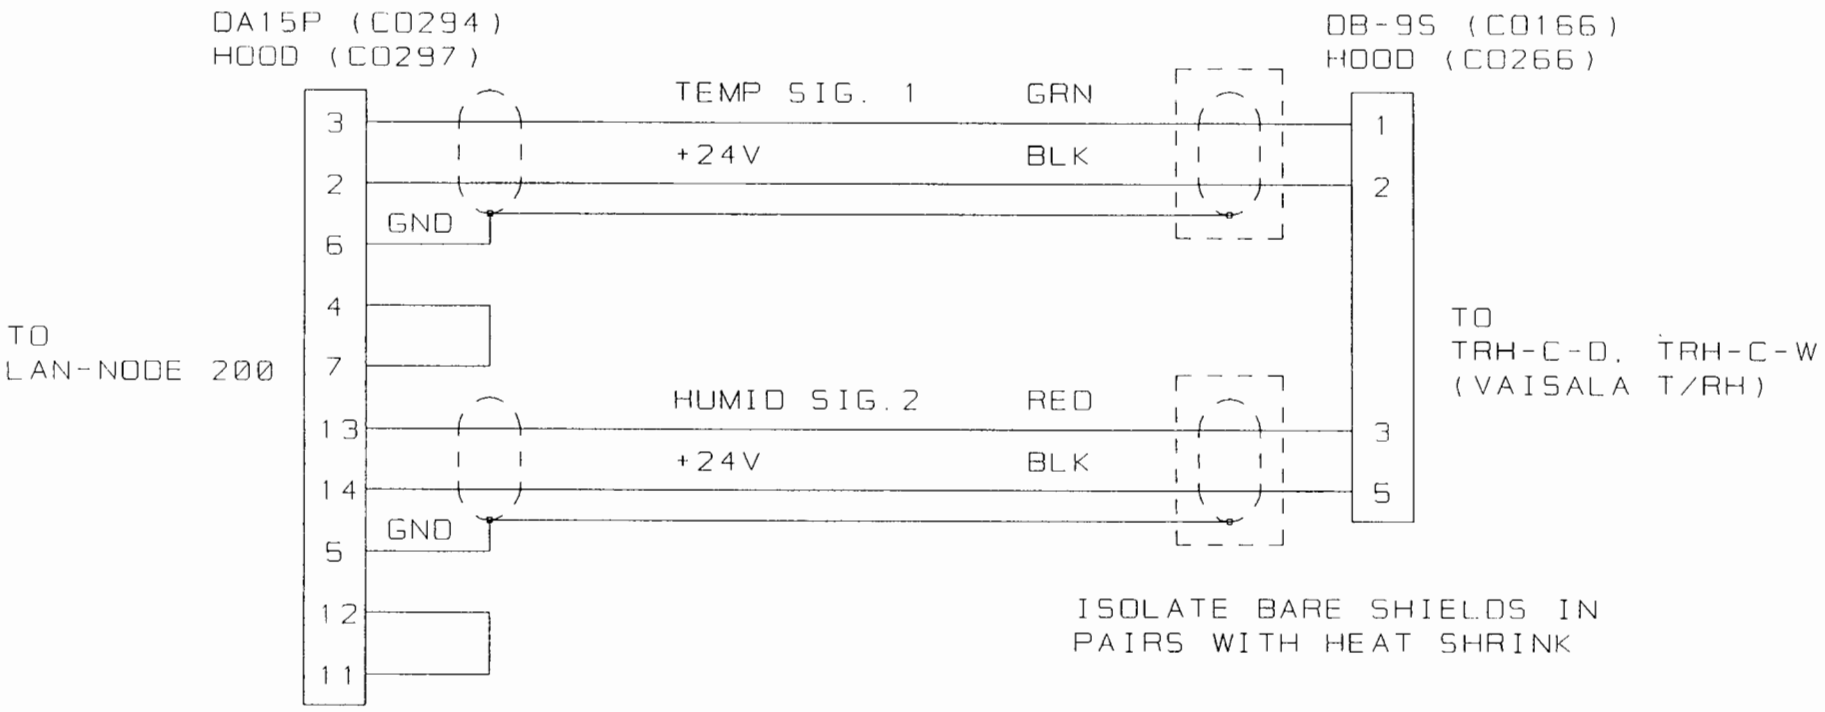


WR # 822
2-29-92

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

LAN-NODE 200
TO TRH-C-D, TRH-C-W CABLE

DATE	REVISED	DRAWN BY	APPROVED BY
2-28-92		MGC	MTS

DRAWING NUMBER	SLOT NUMBER	JOB NUMBER
WD-994		

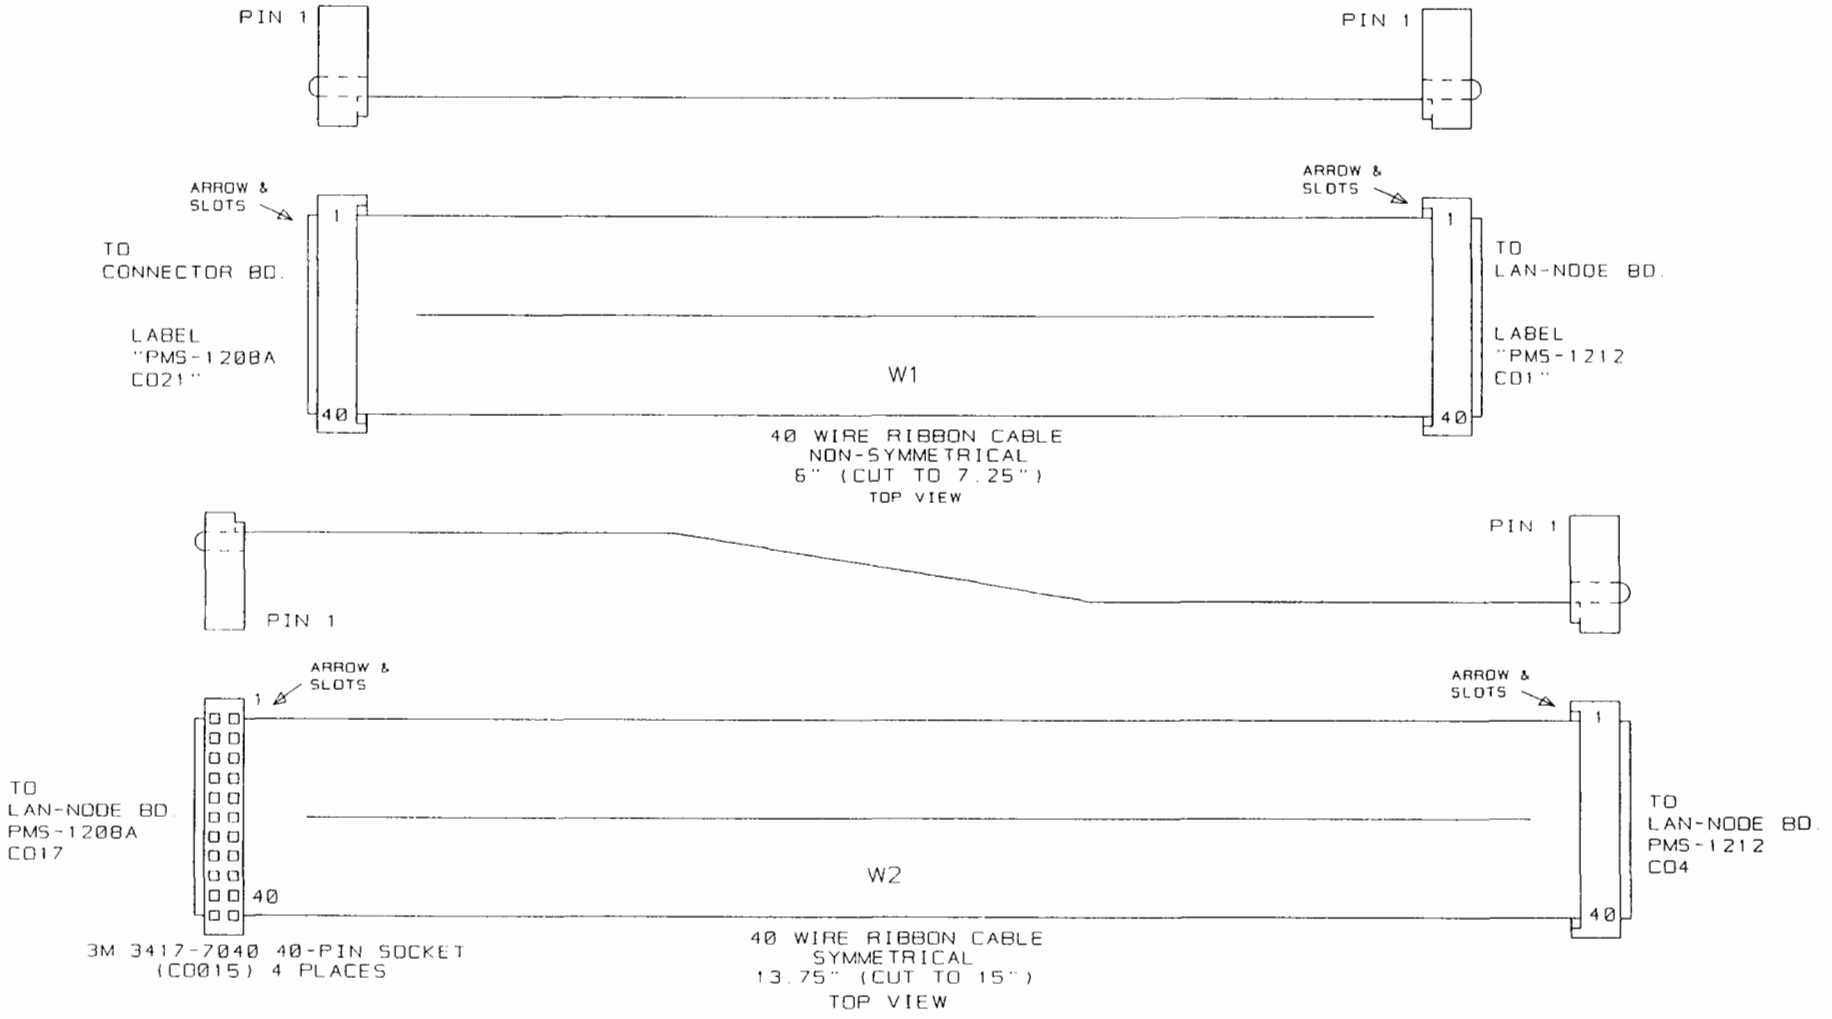

REV.	ECO/WR	DATE	REMARKS
	WR#818	2-13-92	


PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder, Colorado 80301 (303)443-7100

CONNECTOR BOARD TO LAN-NODE BOARD RIBBON CABLES

DATE	REVISED	DRAWN BY	APPROVED BY
3-5--92		MGC	MTS

DRAWING NUMBER	REV.	JOB NUMBER	PART NUMBER
WD-995	SHEET 1 OF 1		AE-995

Schematics and CVSs

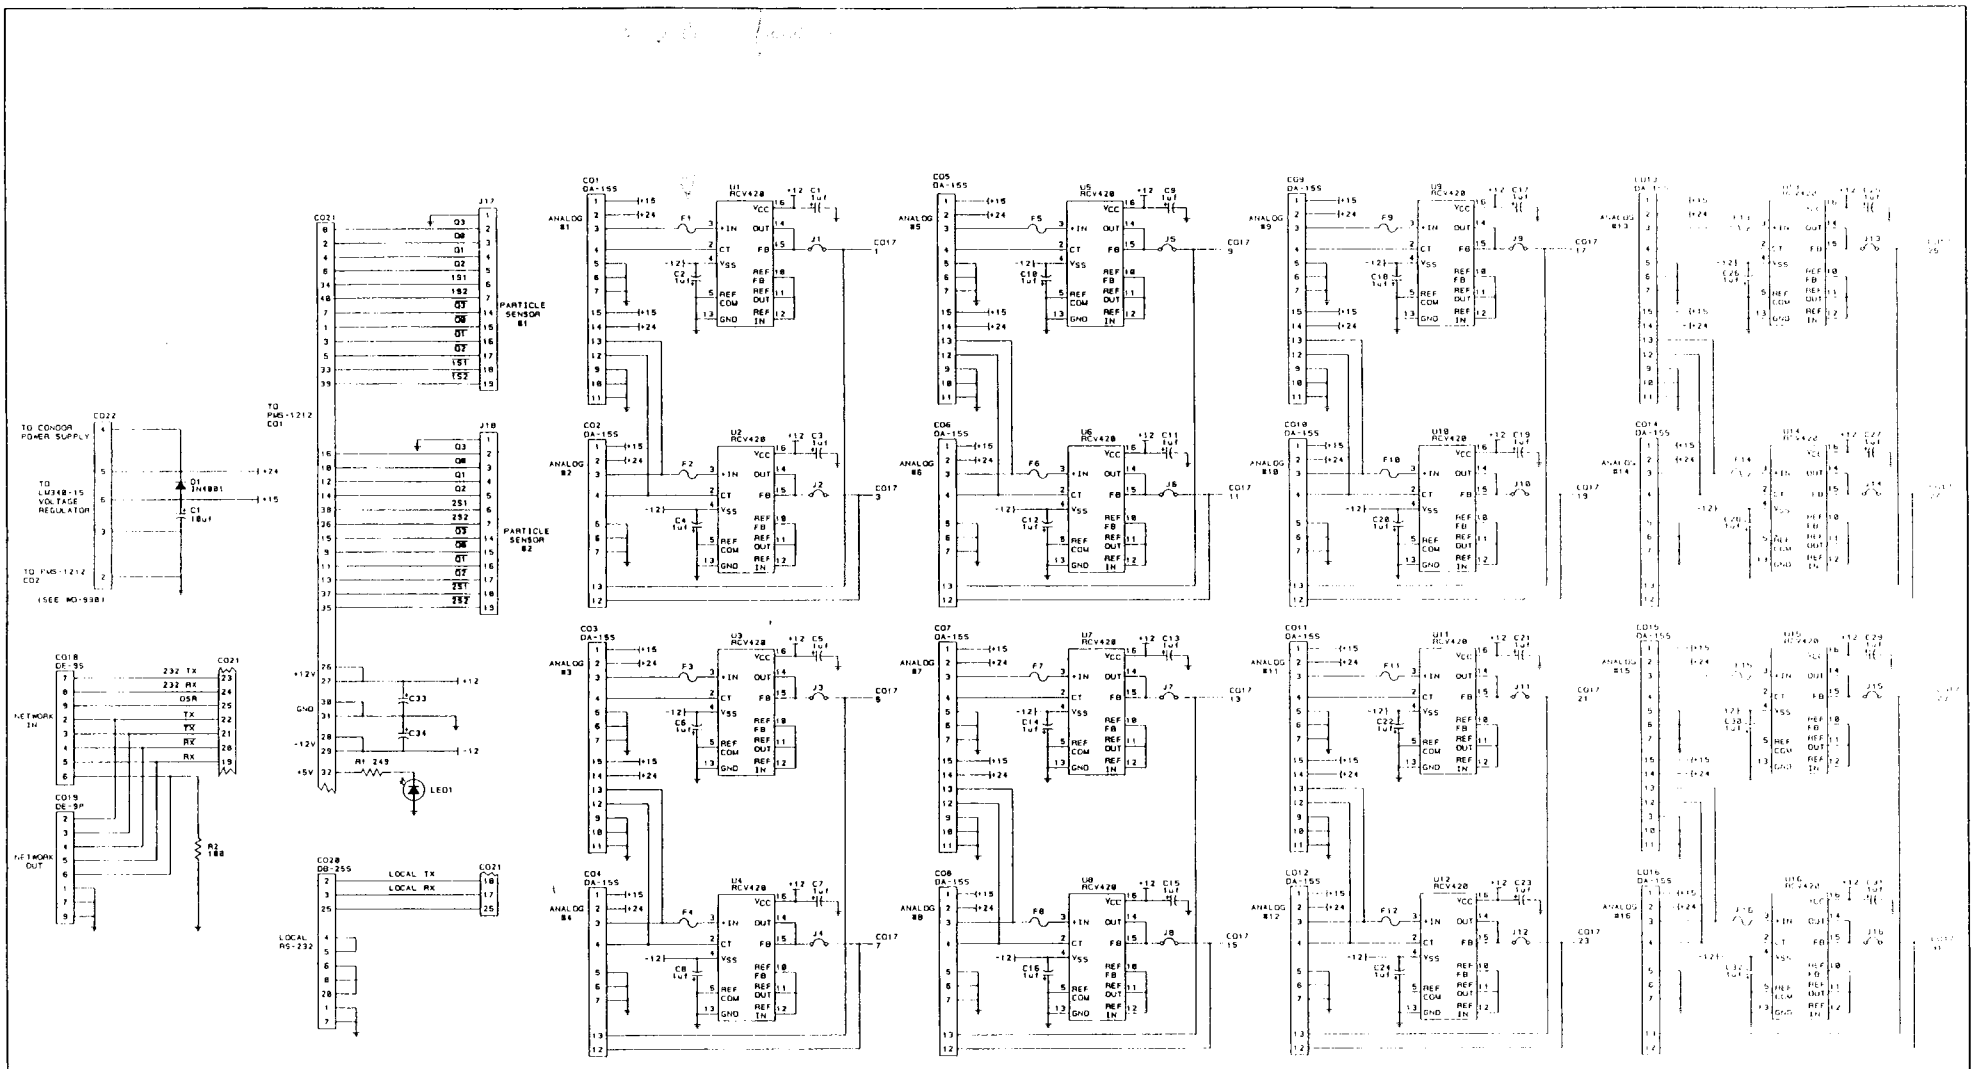

NOTES:
1. CO17, 40 PIN IDC, TO PMS-1212 CO4
2. F1-F16 IN SOCKETS
3. J1-J16 NORMALLY INSTALLED FOR 4-20mA
   REMOVE FOR 0-5VDC INPUT

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder Colorado 80301 (303) 443-7100

LAN-NODE 200
CONNECTOR BOARD

DATE	SCALE	DRAWN BY	APPROVED BY
2-11-92		MGC	

DRAWING NUMBER	SLOT NUMBER	JOB NUMBER
PMS 1208A		

BOARD # - PMS 1208A
NAME - CONNECTOR BOARD FOR LANNODE 200
SLOT # -
ENTRY DATE - 25 FEB 92
REVISION DATE - 03 APR 92
INSTRUMENT TYPE - LANNODE 200

[1] Backside of board.
[2] FS46 is socket for FS45.


Change#: *WR799*,1545

PCB1208A


C001	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C002	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C003	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C004	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C005	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C006	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C007	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C008	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C009	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C010	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C011	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C012	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C013	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C014	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C015	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C016	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C017	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C018	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C019	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C020	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C021	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C022	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C023	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C024	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C025	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C026	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C027	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C028	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C029	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C030	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C031	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V	C032	010	CA072	C062C105K5X5CA KEMET 1.0UF,50V
C033	010	CA043	41KS475B025MIA	C034	010	CA043	41KS475B025MIA
C035	010	CA042	SPRAGUE 199D106X0020CE2 10UF	1 CO001	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO002	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO003	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO004	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO005	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO006	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO007	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO008	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO009	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO010	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO011	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO012	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO013	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO014	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	1 CO015	010	CO422	AMP 745077-4 DB-15S STRGHT PCB
1 CO016	010	CO422	AMP 745077-4 DB-15S STRGHT PCB	CO017	010	CO286	3M 3432-2302 40PIN IDC HDR ST
1 CO018	010	CO424	AMP 745076-4 DB-9S STRGHT PCB	1 CO019	010	CO447	AMP 745071-2 PC MT D9 PLUG W/SCRW
1 CO020	010	CO423	AMP 745078-4 DB-25S STRGHT PCB	CO021	010	CO286	3M 3432-2302 40PIN IDC HDR ST
CO022	010	CO363	MOL 3928-1063 6 PIN STR HEADER	D001	010	DI04	1N4001 R-S: 600 PRV, 1A DIODE
2 F001	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F001	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F002	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F002	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F003	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F003	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F004	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F004	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F005	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F005	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F006	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F006	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F007	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F007	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F008	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F008	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F009	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F009	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F010	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F010	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F011	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F011	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F012	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F012	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F013	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F013	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F014	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F014	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F015	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F015	010	FS46	281005 VERTICAL PCB FUSE HOLDER
2 F016	010	FS45	273.031 1/32AMP FAST BLO LITTLEFUSE	2 F016	010	FS46	281005 VERTICAL PCB FUSE HOLDER
J001	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J002	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J003	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J004	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J005	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J006	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J007	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J008	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J009	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J010	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J011	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J012	010	26-GA-BUSS	26 GAUGE BUSS WIRE
J013	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J014	010	26-GA-BUSS	26 GAUGE BUSS WIRE

PCB1208A

	J015	010	26-GA-BUSS	26 GAUGE BUSS WIRE	J016	010	26-GA-BUSS	26 GAUGE BUSS WIRE
1	J017	010	CO423	AMP 745078-4 DB-25S STRGHT PCB	1 J018	010	CO423	AMP 745078-4 DB-25S STRGHT PCB
1	LED01	010	LED07	HLMP-3301, HP, T-1 3/4 RED	PC001	010	PC1208A	PMS 1208A, LAN-NODE 200 CONN BOAR
	R001	010	RE0240	RN55D2490F 249 OHM	R002	010	RE0010	RN55D1000F 100 OHM
	U001	010	OA42	RCV420KP 4-20 MA RECEIVER	U002	010	OA42	RCV420KP 4-20 MA RECEIVER
	U003	010	OA42	RCV420KP 4-20 MA RECEIVER	U004	010	OA42	RCV420KP 4-20 MA RECEIVER
	U005	010	OA42	RCV420KP 4-20 MA RECEIVER	U006	010	OA42	RCV420KP 4-20 MA RECEIVER
	U007	010	OA42	RCV420KP 4-20 MA RECEIVER	U008	010	OA42	RCV420KP 4-20 MA RECEIVER
	U009	010	OA42	RCV420KP 4-20 MA RECEIVER	U010	010	OA42	RCV420KP 4-20 MA RECEIVER
	U011	010	OA42	RCV420KP 4-20 MA RECEIVER	U012	010	OA42	RCV420KP 4-20 MA RECEIVER
	U013	010	OA42	RCV420KP 4-20 MA RECEIVER	U014	010	OA42	RCV420KP 4-20 MA RECEIVER
	U015	010	OA42	RCV420KP 4-20 MA RECEIVER	U016	010	OA42	RCV420KP 4-20 MA RECEIVER

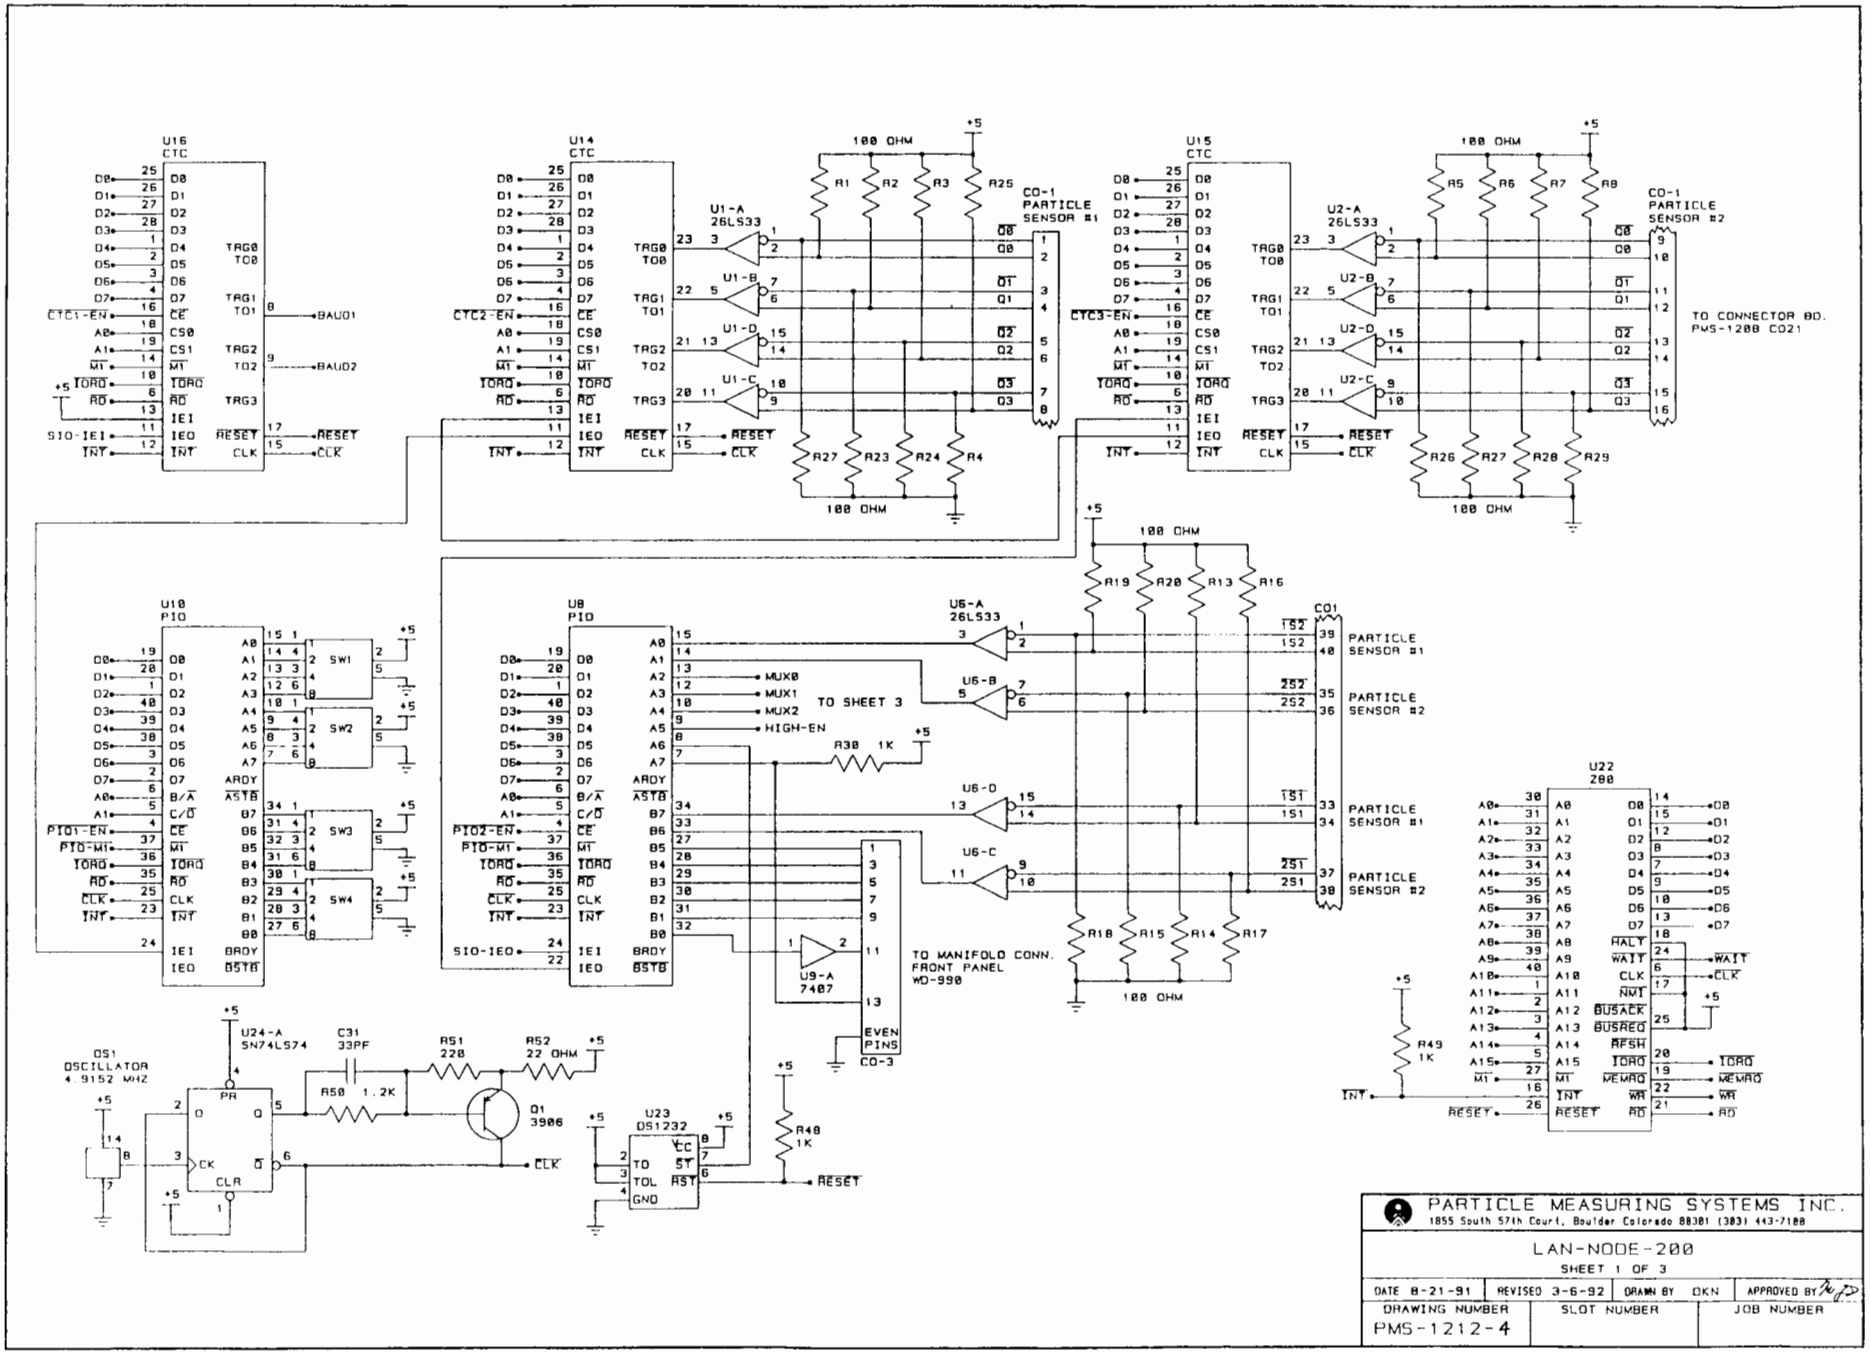
U16
CTC
U14
CTC
U15
CTC
U1-A
26LS33
U1-B
U1-D
U1-C
U2-A
26LS33
U2-B
U2-D
U2-C
100 OHM
R1
R2
R3
R25
R27
R23
R24
R4
R5
R6
R7
R8
R26
R28
R29
CO-1
PARTICLE
SENSOR #1
CO-1
PARTICLE
SENSOR #2
TO CONNECTOR BD.
PMS-1200 CO21
U10
PIO
U8
PIO
SW1
SW2
SW3
SW4
TO SHEET 3
MUX0
MUX1
MUX2
HIGH-EN
R30 1K
U6-A
26LS33
U6-B
U6-D
U6-C
CO1
PARTICLE
SENSOR #1
PARTICLE
SENSOR #2
PARTICLE
SENSOR #1
PARTICLE
SENSOR #2
R19
R20
R13
R16
R18
R15
R14
R17
U9-A
7407
EVEN
PINS
CO-3
TO MANIFOLD CONN.
FRONT PANEL
WD-990
U22
Z80
R49
1K
OS1
OSCILLATOR
4.9152 MHZ
U24-A
SN74LS74
C31
33PF
R51
220
R52
22 OHM
R50 1.2K
Q1
3906
U23
DS1232
R48
1K
PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder Colorado 80301 (303) 443-7100
LAN-NODE-200
SHEET 1 OF 3
DATE 8-21-91
REVISED 3-6-92
DRAWN BY DKN
APPROVED BY
DRAWING NUMBER
PMS-1212-4
SLOT NUMBER
JOB NUMBER

IC	REF DES	+5	DGND	+12	-12	AGND
26LS33	U1	16	8			
26LS33	U2	16	8			
96174	U3	16	8			
1489	U4	14	7			
96173	U5	16	8			
26LS33	U6	16	8			
SIO	U7	9	31			
PIO	U8	26	11			
7407	U9	14	7			
PIO	U10	26	11			
MAX183	U11	24	12		23	3
MAX368	U12			13	3	14
MAX368	U13			13	3	14
CTC	U14	24	5			
CTC	U15	24	5			
CTC	U16	24	5			
1489	U17	14	7			
GAL16V8	U18	20	10			
GAL16V8	U19	20	10			
1225	U20	28	14			
27C256	U21	28	14			
Z80	U22	11	29			
DS1232	U23	8	4			
74LS74	U24	14	7			

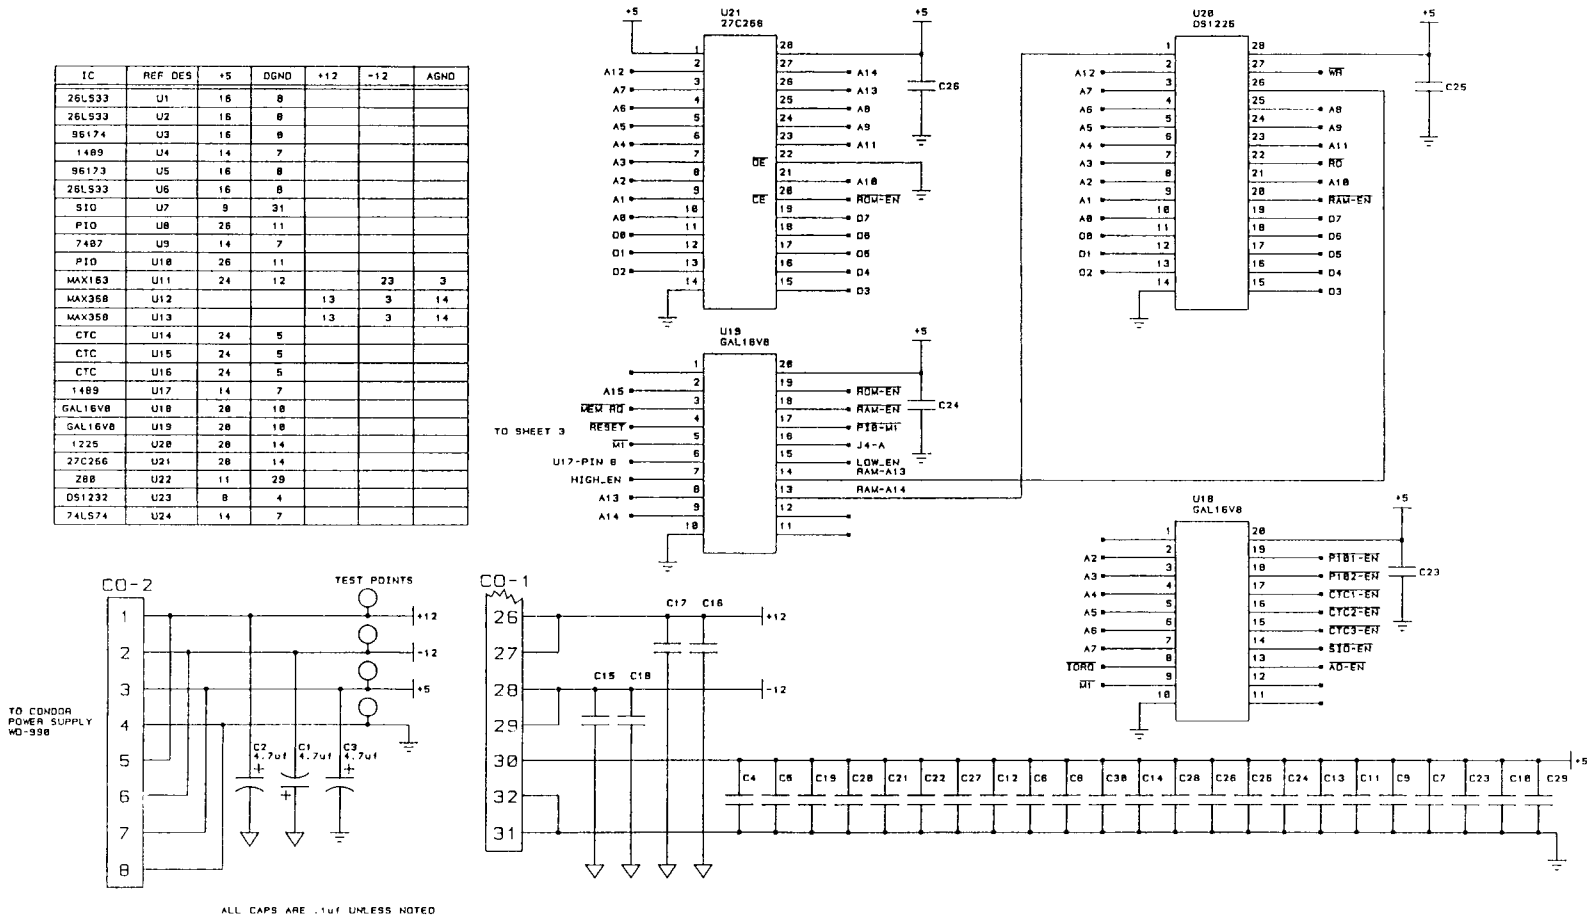


ALL CAPS ARE .1uf UNLESS NOTED

PARTICLE MEASURING SYSTEMS INC.
1855 South 57th Court, Boulder Colorado 80301 (303) 443-7100

LAN-NODE 200
SHEET 2 OF 3

DATE 8-21-91	REVISED 3-3-92	DRAWN BY DKN	APPROVED BY
DRAWING NUMBER PMS-1212-4	SLOT NUMBER	JOB NUMBER	

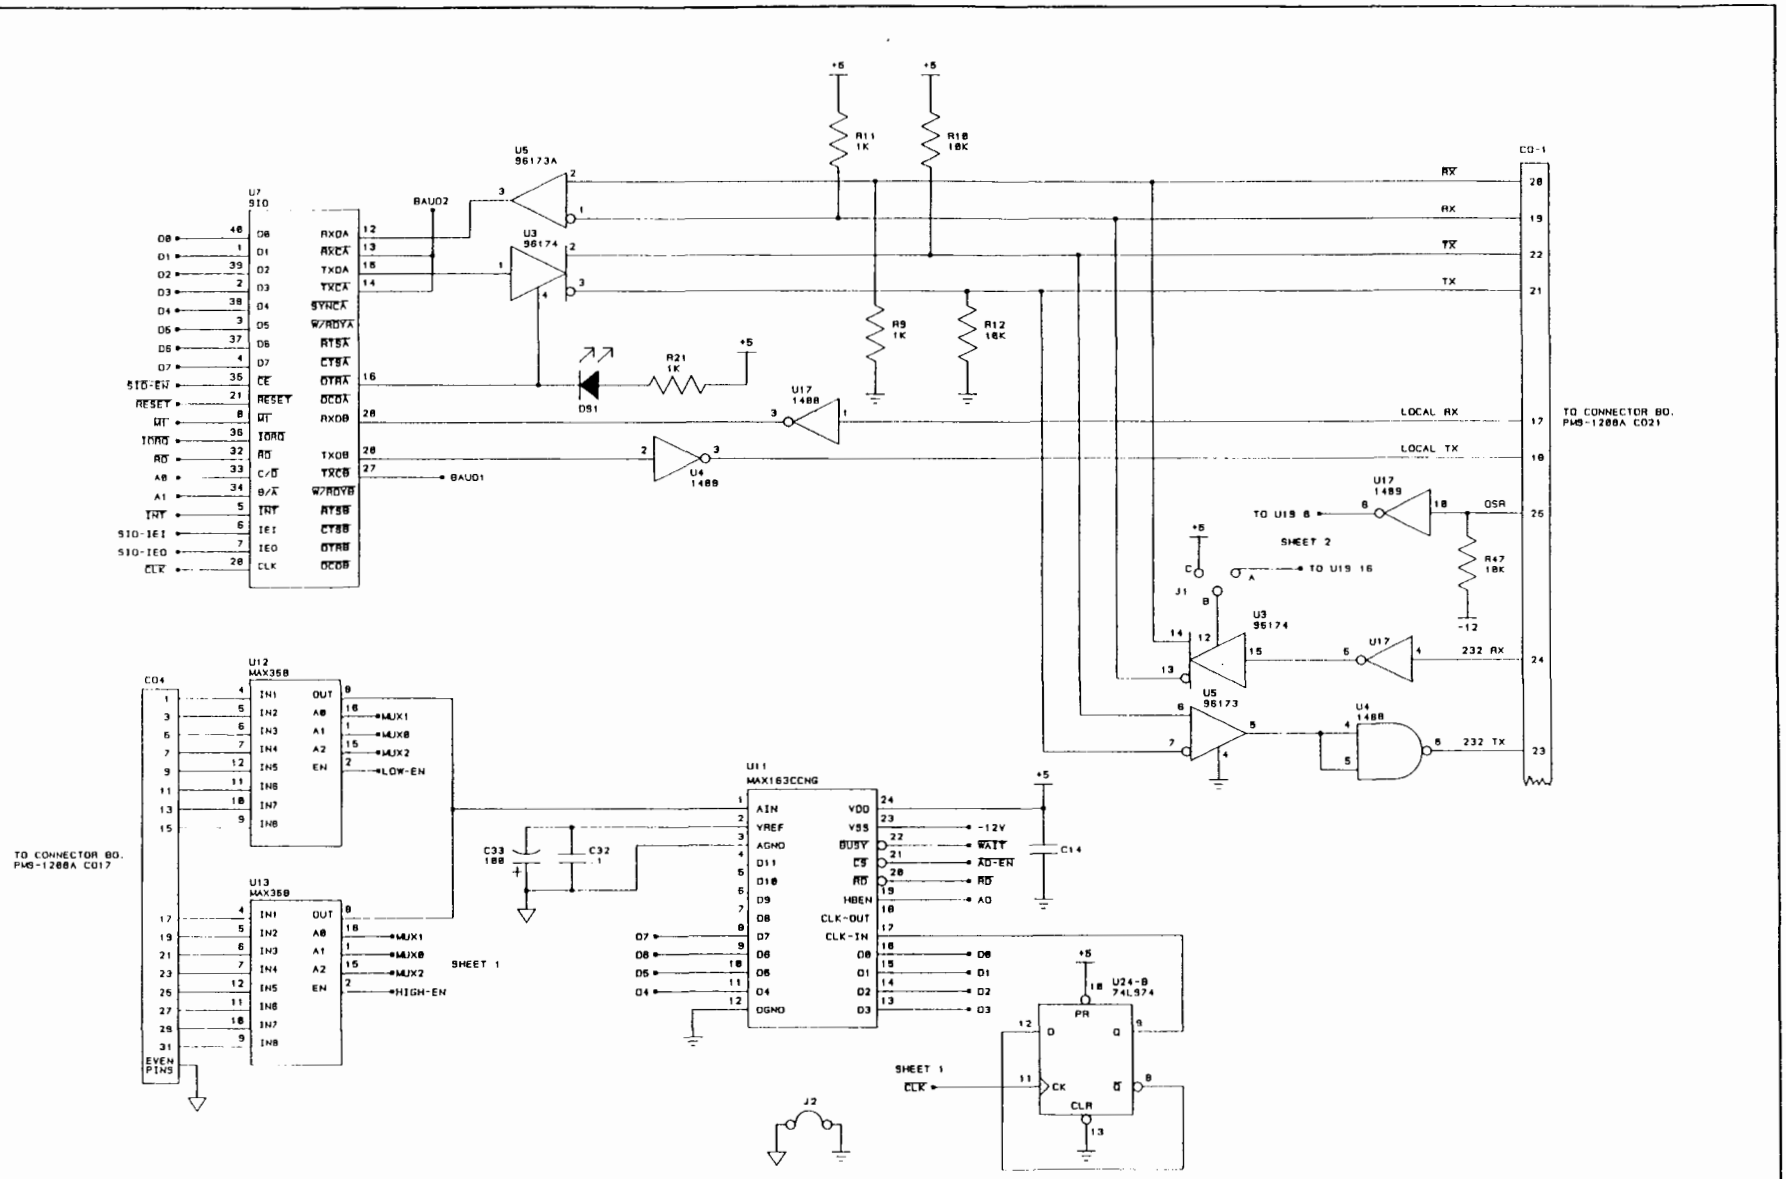

PARTICLE MEASURING SYSTEMS INC.			
1855 South 57th Court, Boulder Colorado 80301 (303) 443-7100			
LAN-NODE 200			
SHEET 3 OF 3			
DATE 8-21-91	REVISED 8-31-93	DRAWN BY DKN	APPROVED BY
DRAWING NUMBER	SLOT NUMBER	JOB NUMBER	
PMS-1212-4			

BOARD # - PMS 1212-4
NAME - MOTHERBOARD
SLOT # -
ENTRY DATE - 21 APR 93
REVISION DATE - 24 AUG 93
INSTRUMENT TYPE - LAN-NODE-200

ASSEMBLY DRAWING [YES] AD 1212-4
SCHEMATIC [YES] PMS 1212-4

NOTE: Ground, -12V, +12V, and +5 must remain open.

[1] 20 pin 0.3" socket SKT05.
[2] 28 pin 0.6" socket SKT07.
[3] 40 pin 0.6" socket SKT08.
[4] Do not install in Lannode 200.
[5] Install U24 with pin 13 not installed (out of board),
then jumper pin 13 to pin 14 on IC.
[6] Attach per assembly drawign.
[7] Install after wash.
[8] Install at A-B.

Change#: WR830,
1593,1732,2054,3071,3134,3165,
ECO 1555,3167

PCB1212-4

	C001	010	CA043	4.7UF,25VDC,+/-20%,R,.2Cx.34H,PT	C002	010	CA043	4.7UF,25VDC,+/-20%,R,.2Cx.34H,PT
	C003	010	CA043	4.7UF,25VDC,+/-20%,R,.2Cx.34H,PT	C004	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C005	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C006	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C007	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C008	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C009	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C010	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C011	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C012	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C013	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C014	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C015	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C016	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C017	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C018	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C019	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C020	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C021	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C022	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C023	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C024	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C025	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C026	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C027	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C028	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C029	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM	C030	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C031	010	CA034	33PF,300VDC,+- 5%,R,.12Cx.27H,UPDMI	C032	010	CA010	.1UF,50VDC,+/-10%,R,.2Cx.24H,UPDM
	C033	010	CA082	100UF,6.3VDC,+/-20%,R,.1Cx.4H,PT	C0001	010	C0286	3M 3432-2302 40PIN IDC HDR ST
	C0002	010	C0340	MOL 39-28-1083 8 PIN SQ STR HEADER	C0003	010	C0023	26P,M,ST HDR,LONG EL,3W,.062,U/C
	C0004	010	C0286	3M 3432-2302 40PIN IDC HDR ST	8	J001	010	26-GA-BUSS	26 GAUGE BUSS WIRE
	J002	010	26-GA-BUSS	26 GAUGE BUSS WIRE		LABOR	900	WC[C]PICK	!WORK CENTER-PICK COMPLETION
	LED01	010	LED07	HLMP-3301, HP, T-1 3/4 RED		OS1	010	OS06	SG51K 4.9152MHZ EPSON (DIP)
	PC001	010	PC1212	PMS 1212, LAN-NODE/LPS-SA MAIN BD		Q001	010	TR03	2N 3906
	R001	010	RE0010	RN55D1000F 100 OHM		R002	010	RE0010	RN55D1000F 100 OHM
	R003	010	RE0010	RN55D1000F 100 OHM		R004	010	RE0010	RN55D1000F 100 OHM
	R005	010	RE0010	RN55D1000F 100 OHM		R006	010	RE0010	RN55D1000F 100 OHM
	R007	010	RE0010	RN55D1000F 100 OHM		R008	010	RE0010	RN55D1000F 100 OHM
	R009	010	RE0034	RN55D1001F 1K	6	R010	010	RE0013	RN55D1002F 10K
	R011	010	RE0034	RN55D1001F 1K	6	R012	010	RE0013	RN55D1002F 10K
	R013	010	RE0010	RN55D1000F 100 OHM		R014	010	RE0010	RN55D1000F 100 OHM
	R015	010	RE0010	RN55D1000F 100 OHM		R016	010	RE0010	RN55D1000F 100 OHM
	R017	010	RE0010	RN55D1000F 100 OHM		R018	010	RE0010	RN55D1000F 100 OHM
	R019	010	RE0010	RN55D1000F 100 OHM		R020	010	RE0010	RN55D1000F 100 OHM
	R021	010	RE0034	RN55D1001F 1K		R022	010	RE0010	RN55D1000F 100 OHM
	R023	010	RE0010	RN55D1000F 100 OHM		R024	010	RE0010	RN55D1000F 100 OHM
	R025	010	RE0010	RN55D1000F 100 OHM		R026	010	RE0010	RN55D1000F 100 OHM
	R027	010	RE0010	RN55D1000F 100 OHM		R028	010	RE0010	RN55D1000F 100 OHM
	R029	010	RE0010	RN55D1000F 100 OHM		R030	010	RE0034	RN55D1001F 1K
	R032	010	---	UNFILLED LOCATION ON PCB		R033	010	---	UNFILLED LOCATION ON PCB
	R034	010	---	UNFILLED LOCATION ON PCB		R035	010	---	UNFILLED LOCATION ON PCB
	R036	010	---	UNFILLED LOCATION ON PCB		R037	010	---	UNFILLED LOCATION ON PCB
	R038	010	---	UNFILLED LOCATION ON PCB		R039	010	---	UNFILLED LOCATION ON PCB
	R040	010	---	UNFILLED LOCATION ON PCB		R041	010	---	UNFILLED LOCATION ON PCB
	R042	010	---	UNFILLED LOCATION ON PCB		R043	010	---	UNFILLED LOCATION ON PCB
	R044	010	---	UNFILLED LOCATION ON PCB		R045	010	---	UNFILLED LOCATION ON PCB
	R046	010	---	UNFILLED LOCATION ON PCB		R047	010	RE0013	RN55D1002F 10K
	R048	010	RE0034	RN55D1001F 1K		R049	010	RE0034	RN55D1001F 1K
	R050	010	RE0120	RC07GF122J 1/4W 1.2K		R051	010	RE0142	RC07GF221J 1/4W 220 OHM
	R052	010	RE0141	RC07GF220J 1/4W 22 OHM	7	SW001	010	SW159	EECO 230056 GB DIP SWITCH BCD 2PO
7	SW002	101	SW159	EECO 230056 GB DIP SWITCH BCD 2POLE	7	SW003	010	SW159	EECO 230056 GB DIP SWITCH BCD 2PO
7	SW004	010	SW159	EECO 230056 GB DIP SWITCH BCD 2POLE		U001	010	IC005	26LS33 QUAD DIFF LINE RECEIVER
	U002	010	IC005	26LS33 QUAD DIFF LINE RECEIVER		U003	010	IC242	96174 DRIVER (75174)
	U004	010	IC202	MC1488L QUAD EIA-232C DRIVER		U005	010	IC241	UA96173PC RECEIVER (FAIRCHILD)

PCB1212-4

	U006	010 IC005	26LS33 QUAD DIFF LINE RECEIVER		U007	010 IC209	Z8440BBIN (REPLACES MK3884)
	U008	010 IC207	Z84C20AB6 (REPL MK3881N/Z8420AB1)		U009	010 IC071	7407 HEX BUFFER/DRIVER OC
	U010	010 IC207	Z84C20AB6 (REPL MK3881N/Z8420AB1)		U011	010 OA43	MAX163BCNG A/D CONVERTER
	U012	010 IC277	MAX358CPE MAXIM MUX CHIP		U013	010 IC277	MAX358CPE MAXIM MUX CHIP
	U014	010 IC208	Z84C30AB6 Z80-CTC (MK3882N)		U015	010 IC208	Z84C30AB6 Z80-CTC (MK3882N)
	U016	010 IC208	Z84C30AB6 Z80-CTC (MK3882N)		U017	010 IC203	MC1489L QUAD EIA-232C RECEIVER
	U018	010 PL000070	IC272 GAL16V8A-15	1	U018	010 SKT05	RN ICL-203-S6G
	U019	010 PL000068	IC272 GAL16V8A-15	1	U019	010 SKT05	RN ICL-203-S6G
2	U020	010 IC257	DS1230Y DALLAS 256K STATIC RAM	2	U020	010 SKT07	RN ICL-286-S7G
2	U021	010 IC063	TMS27C256-200JO EPROM (200 NS)	2	U021	010 SKT07	RN ICL-286-S7G
3	U022	010 IC206	Z84C00BB6 OR Z8400BB1 Z80 CPU 6MHZ	3	U022	010 SKT08	RN ICL-406-S7G
	U023	010 IC253	DS1232 DALLAS	5	U024	010 IC156	74LS74 D-FLIP-FLOP

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP