

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction


All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

USER MANUAL

PXI

GENERAL PURPOSE REED RELAY MODULES
(MODEL No. 40-110 / 115)

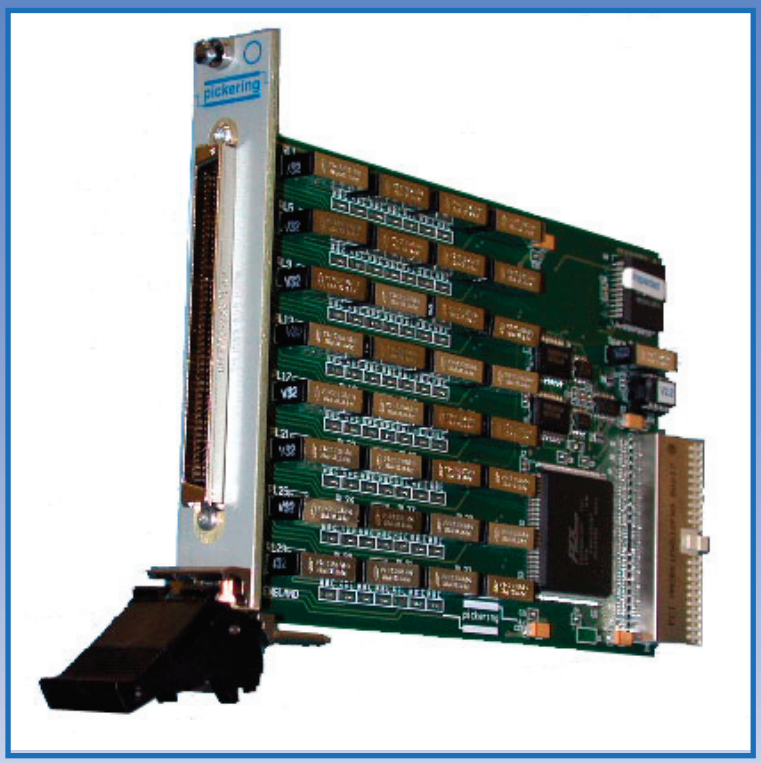

Issue 2.1 July 2007

pickering

www.pickeringtest.com

BSI REGISTERED FIRM
ISO 9002
Reg No. FM38792

© COPYRIGHT (2007) PICKERING INTERFACES. ALL RIGHTS RESERVED.

No part of this publication may be reproduced, transmitted, transcribed, translated or stored in any form, or by any means without the written permission of Pickering Interfaces.

Technical details contained within this publication are subject to change without notice.

TECHNICAL SUPPORT

For Technical Support please contact Pickering Interfaces either by phone, fax, the website or via e-mail.

WARRANTY

All products manufactured by Pickering Interfaces are warranted against defective materials and workmanship for a period of two years, excluding PXI chassis, from the date of delivery to the original purchaser. Any product found to be defective within this period will, at the discretion of Pickering Interfaces be repaired or replaced.

Products serviced and repaired outside of the warranty period are warranted for ninety days.

Extended warranty and service are available. Please contact Pickering Interfaces by phone, fax, the website or via e-mail.

ENVIRONMENTAL POLICY

Pickering Interfaces operates under an environmental management system similar to ISO 14001.

Pickering Interfaces strives to fulfil all relevant environmental laws and regulations and reduce wastes and releases to the environment. Pickering Interfaces aims to design and operate products in a way that protects the environment and the health and safety of its employees, customers and the public. Pickering Interfaces endeavours to develop and manufacture products that can be produced, distributed, used and recycled, or disposed of, in a safe and environmentally friendly manner.



Observe the Electrical Hazard Warning detailed in Section 9.



Observe the Electrostatic Sensitive Device Caution detailed in Section 9.

Worldwide Technical Support and Product Information
http://www.pickeringtest.com

Pickering Interfaces Headquarters
Stephenson Road Clacton-on-Sea CO15 4NL United Kingdom
Tel: +44 (0)1255-687900
Fax: +44 (0)1255-475058
E-Mail: sales@pickeringtest.com

Pickering Interfaces Inc.
2900 Northwest Vine Street
Grants Pass
Oregon 97526
USA

Tel: +1 541 471 0700
Fax: +1 541 471 8828
E-Mail: ussales@pickeringtest.com

Pickering Interfaces Inc.
(East Coast Regional Office)
12 Alfred Street Suite 300-3
Woburn Massachusetts 01801
USA

Tel: +1 781 897 1710
Fax: +1 781 897 1701
E-mail: useastsales@pickeringtest.com

Pickering Interfaces GmbH
Buchenstrasse 15
D-77880
Sasbach
Germany

Tel: +49 7841 66 49 10
Fax: +49 7841 66 49 12
E-Mail: desales@pickeringtest.com

Pickering Interfaces GmbH
(Office Munich)
Feringastrasse 6
D-85774 München
Germany

Tel: +49 8999 216 160
Fax: +49 8999 216 200
E-mail: desales@pickeringtest.com

Pickering Interfaces SARL
6 Rue De La Mare Blanche
77186 Noisiel
Marne Le Vallee
France

Tel +33 1 60 53 55 50
Fax +33 1 60 53 55 99
email frsales@pickeringtest.com

Pickering Interfaces AB
Karl Nordströmsväg 31
432 53
Varberg
Sweden

Tel: +46 340-69 06 69
Fax: +46 340-69 06 68
E-Mail: ndsales@pickeringtest.com

Pickering Interfaces s.r.o.
Smetanova 525
Třinec
739 61
Czech Republic

Tel: +42 0558 339 168
Fax: +42 0558 339 168
E-mail: cesales@pickeringtest.com

THIS PAGE INTENTIONALLY BLANK

CONTENTS

Copyright Statement ii

Technical Support and Warranty iii

Contents (this page) v

Section 1
Introduction 1.1

Section 2
Technical Specification 2.1

Section 3
Installation 3.1

Section 4
Programming 4.1

Section 5
Connector Pin Outs 5.1

Section 6
Troubleshooting 6.1

Section 7
Functional Description 7.1

Section 8
Parts List 8.1

Section 9
Warnings and Cautions 9.1

THIS PAGE INTENTIONALLY BLANK

SECTION 1 - INTRODUCTION


GENERAL

The 40-11* range of Reed Relay Modules form part of the System 40 PXI Programmable Switching system. The functionality of each module in the range is the same, the part number being derived from the number, and type of relays (e.g. single or two pole, etc). This module is used for construction of small switching networks, for slaving up to larger switches, or for operating external devices.



The Relay Module is provided in the following configurations:

- 16 x SPDT Reed Relay (Part Number 40-110-021)
- 32 x SPDT Reed Relay (Part Number 40-110-121)
- 16 x SPST Reed Relay (Part Number 40-115-021)
- 32 x SPST Reed Relay (Part Number 40-115-121)
- 16 x DPST Reed Relay (Part Number 40-115-022)
- 24 x DPST Reed Relay (Part Number 40-115-122)

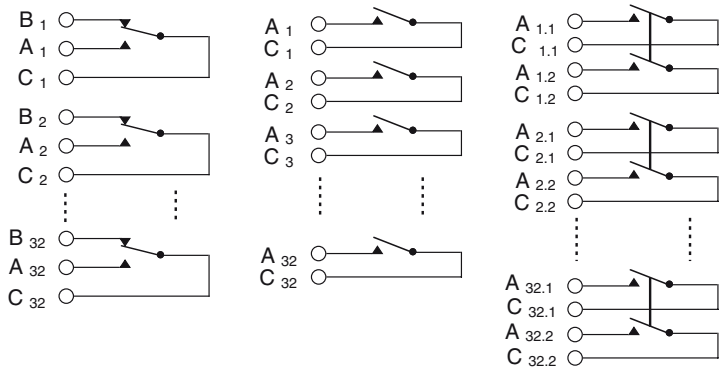

40-110-021/121 40-115-021/121 40-115-022/122


NOTE

Contact positions are:

C for common, A for normally open, B for normally closed

THIS PAGE INTENTIONALLY BLANK

SECTION 2 - SPECIFICATION

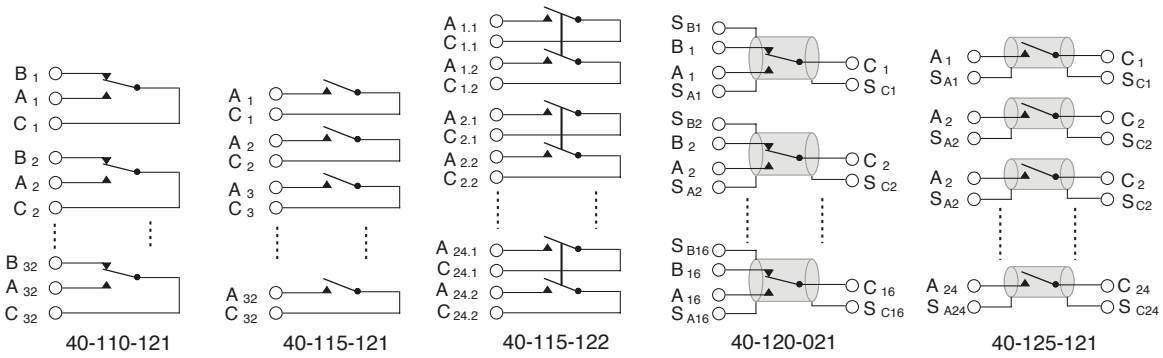

Switching Diagrams for the 40-110/115/120/125 Reed Relay Module

Switching Specification

Switch Type:	Ruthenium Reed
Max Switch Voltage:	150V DC/100V AC
Max Power: Max Switch Current: Max Carry Current:	20W (3W for SPDT) 1A (0.25A for SPDT) 1.2A (1A for SPDT)
On Path Resistance Off Path Resistance Differential Thermal Offset:	<500mΩ $>10^9$Ω <10µV
Crosstalk (100Ω balanced): Isolation (100Ω balanced):	80dB (1MHz), 72dB (10MHz) 62dB (25MHz) 75dB (1MHz), 60dB (10MHz) 55dB (25MHz)
Bandwidth (-3dB): (measured on 40-120)	70MHz (typical)
Operate Time: Release Time:	<0.5ms, 0.25ms typ. <0.5ms, 0.25ms typ.
Expected Life, low power: Expected Life, high power:	$1x10^9$ operations $>1x10^6$ operations

Programming

Pickering provide kernel, VISA and IVI drivers which are compatible with Windows 2000/NT/XP operating systems, the VISA driver is also compatible with the LabVIEW RT operating system.

These drivers may be used with a variety of programming environments and applications including :-

National Instruments products (LabVIEW/LabWindows/CVI/ Switch Executive/MAX/TestStand etc.)

Microsoft Visual Studio products (Visual Basic/Visual C+)

Agilent VEE

Mathworks Matlab

Other environments are also supported, please contact Pickering with specific enquiries.

Power Requirements

+3.3V	+5V	+12V	-12V
0	360mA (typ 280mA)	0	0

Width and Dimensions

Single slot 3U PXI (CompactPCI card).

PXI & CompactPCI Compliance

All Pickering Interfaces PXI modules comply with the PXI Specification. Local Bus, Interrupts, Trigger Bus and Star Trigger are not implemented.

Safety & CE Compliance

All modules are fully CE compliant and meet applicable EU directives: Low-voltage safety EN61010-1:2001, EMC Immunity EN61000-6-1:2001, Emissions EN55011:1998.

Connectors

PXI bus via 32-bit P1/J1 backplane connector.
Signals via front panel 96 Way male SCSI connector, for pin outs please refer to the operating manual.

Product Order Codes

16 x SPDT, Ruthenium Reed Relays	**40-110-021**
32 x SPDT, Ruthenium Reed Relays	**40-110-121**
16 x SPST, Ruthenium Reed Relays	**40-115-021**
32 x SPST, Ruthenium Reed Relays	**40-115-121**
16 x DPST, Ruthenium Reed Relays	**40-115-022**
24 x DPST, Ruthenium Reed Relays	**40-115-122**
16 x Shielded SPDT Reed Relays	**40-120-021**
16 x Shielded SPST Reed Relays	**40-125-021**
24 x Shielded SPST Reed Relays	**40-125-121**

Mating Connectors & Cabling

Examples of connectors and cabling for the 40-110 series are:

40-961-096	96 way SCSI style ribbon cable connector
40-970-096-1M	Cableform, 96 way SCSI Style, Female to Female, 1A, 1m Length
40-965-096	Connector Block, Shielded, 96 way SCSI Style, Module Mounted

Please refer to the Pickering Interfaces "**Interconnection Solutions**" catalog for the full list of connector/cabling options, including drawings, photos and specifications. This is available in either print or as a download. Alternatively our web site has dynamically linked connector/cabling options, including pricing, for all Pickering PXI modules.

Latest Details

Please refer to our Web Site for Latest Product Details.

www.pickeringtest.com

Operating/Storage Conditions

Operating Conditions

Operating Temperature:	0°C to 55°C
Humidity:	Up to 95% non-condensing
Altitude:	5000m

Storage and Transport Conditions

Storage Temperature:	-20°C to +75°C
Humidity:	Up to 95% non-condensing
Altitude:	15000m

THIS PAGE INTENTIONALLY BLANK

SECTION 3 - INSTALLATION

SOFTWARE INSTALLATION

First install the appropriate Pickering PXI switch card drivers by running the installer program Setup.exe, either from the CD-ROM supplied, or by downloading the latest version from our website http://www.pickeringtest.com - the recommended method. There are different versions of the Setup program to suit different Windows versions and software environments. Setup is accompanied by a ReadMe file containing additional installation information.

A single installation covers all cards in the System 40, System 45 and System 50 ranges.

When installation completes, the installed drivers' ReadMe file is offered for display. It can also be displayed later using a shortcut on the Programs>>Pickering menu.

If you are not a LabVIEW user you should choose the "full" version, and once that has been installed run the LabVIEW Runtime Engine installer via the shortcut on the Programs>>Pickering menu. In the absence of LabVIEW the Runtime Engine is required to support the Pickering Test Panels application.

HARDWARE INSTALLATION

CAUTION

Electrostatic discharge can damage the components on the module. To avoid such damage in handling the board, touch the anti-static bag to a metal part of the chassis before removing the board from the bag.

Ensure that there is adequate ventilation in accordance with the PXI Specification

The module should be installed in accordance with the following procedure:

1. Ensure that the system is turned OFF but still connected to mains so that it remains grounded.

2. Choose an appropriate slot in the rack.

3. Remove the blanking plate for the chosen slot.

4. Ensure that the injector/ejector handle is in its downward position. Align the module with the card guides on the top and bottom of the slot.

CAUTION

Do not raise the injector/ejector handle whilst inserting the module. The module will not insert properly unless the handle is in its downward position.

5. Hold the handle whilst slowly sliding the module into the card guides until the handle catches on the injector/ejector rail (refer to Figure 3.1).

6. Raise the injector/ejector handle until the module firmly seats into the backplane. The front panel of the module should be flush with the front panel of the chassis.

7. Screw the front panel of the module to the front panel mounting rail.

8. In a system employing MXI-3 to connect a desktop PC to a PXI chassis or to link multiple chassis, power-up the system as follows:

a. For a system comprising a PC and one chassis, power up the chassis before powering up the PC.

b. For a system comprising more than one chassis, turn ON the last chassis in the system followed by the penultimate, etc, and finally turn ON the PC or chassis containing the system controller.

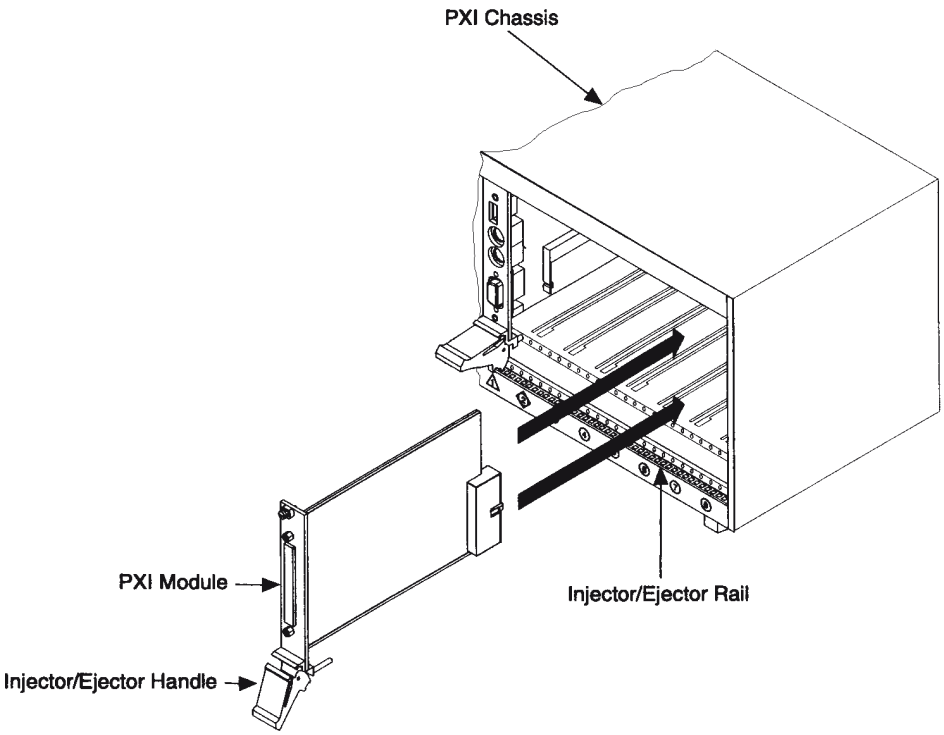


Figure 3.1 - Installing the module into a PXI/Compact PCI Chassis

TESTING OPERATION

Start the Test Panels application from the Programs>>Pickering>>PXI Utilities menu. If you are a LabVIEW user, run "Test Panels (LabVIEW VI)"; if not, run "Test Panels (EXE)". A selector panel will appear, listing all installed Pickering PXI switch cards. Click on the card you wish to control, and a graphical control panel is presented allowing operation of the card. Panels can be opened simultaneously for all the installed cards.

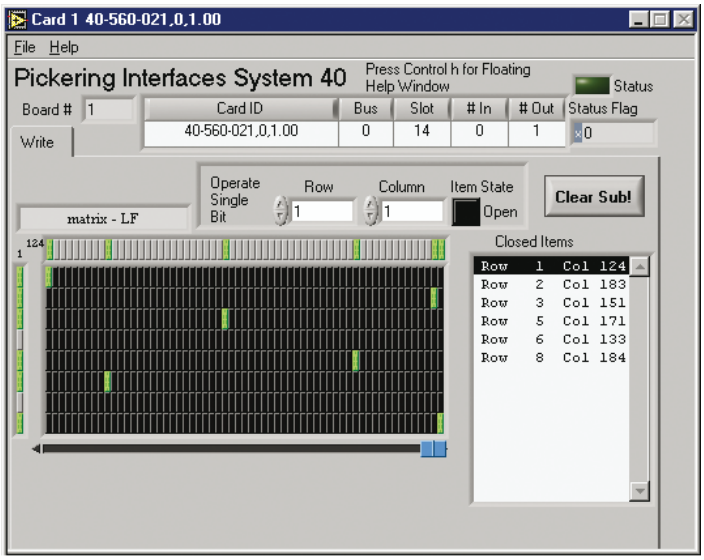


Figure 3.2 - Typical Test Panel Display

As an alternative to the Test Panels, the simple Terminal Monitor program PILMon (again on the Programs>>Pickering>>PXI Utilities menu) allows access to all functions of Pickering switch cards through a command-line interface. In PILMon, enter “HE” for help on it’s commands.

Please note that both the Test Panels and Terminal Monitor gain exclusive access to the cards, and so only one of them can be operational at any time.

THIS PAGE INTENTIONALLY BLANK

SECTION 4 - PROGRAMMING

System 40, System 45 and System 50 cards are supported by comprehensive Windows software drivers and can also be programmed at register-level.

There are two separate Windows drivers, one accessing cards by Direct I/O and the other through VISA (Virtual Instrument Software Architecture). Both are fully documented by ReadMe and HTML help files, accessible through shortcuts on the Programs>>Pickering menu.

The following programming environments are supported for both drivers:

- Microsoft Visual Basic
- Microsoft Visual C++
- Borland C++
- National Instruments LabWindows/CVI
- National Instruments LabVIEW

Support for all these environments is included in the standard installation.

Please refer to the PXI Switching Programming Manual for complete programming information. This manual is available on the Pickering Interfaces website at http://www.pickeringtest.com.

THIS PAGE INTENTIONALLY BLANK

SECTION 5 - CONNECTOR PIN OUTS

Figures 5.1 to 5.3 provide pin outs for the Matrix Modules in the 40-110/115 model range.

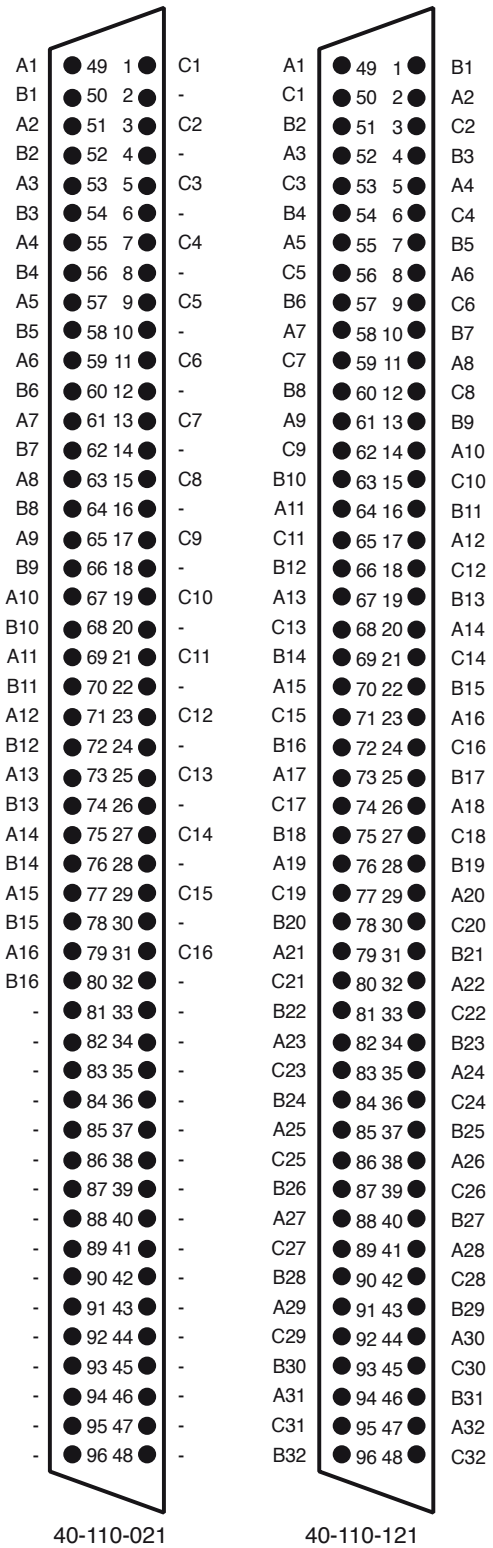


Figure 5.1 - Reed Relay Module 40-110: Pin Outs

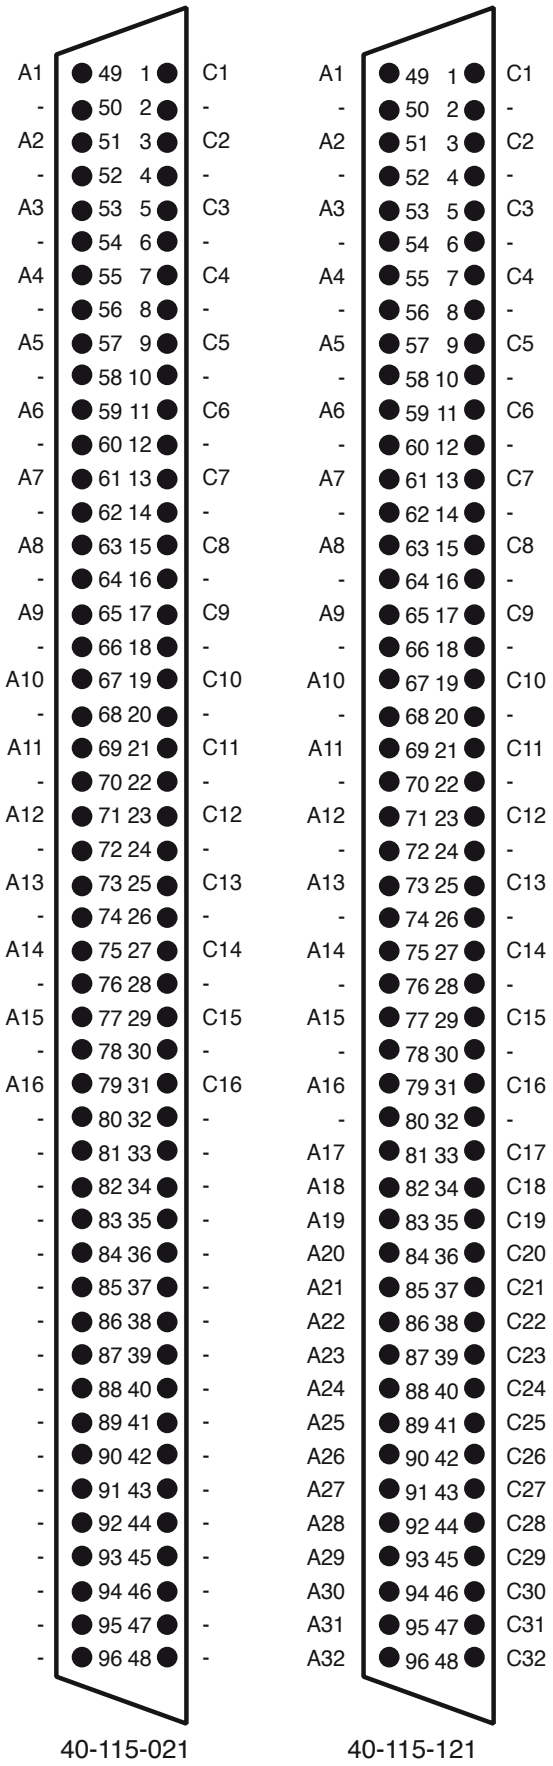


Figure 5.2 - Reed Relay Module 40-115-021/121: Pin Outs

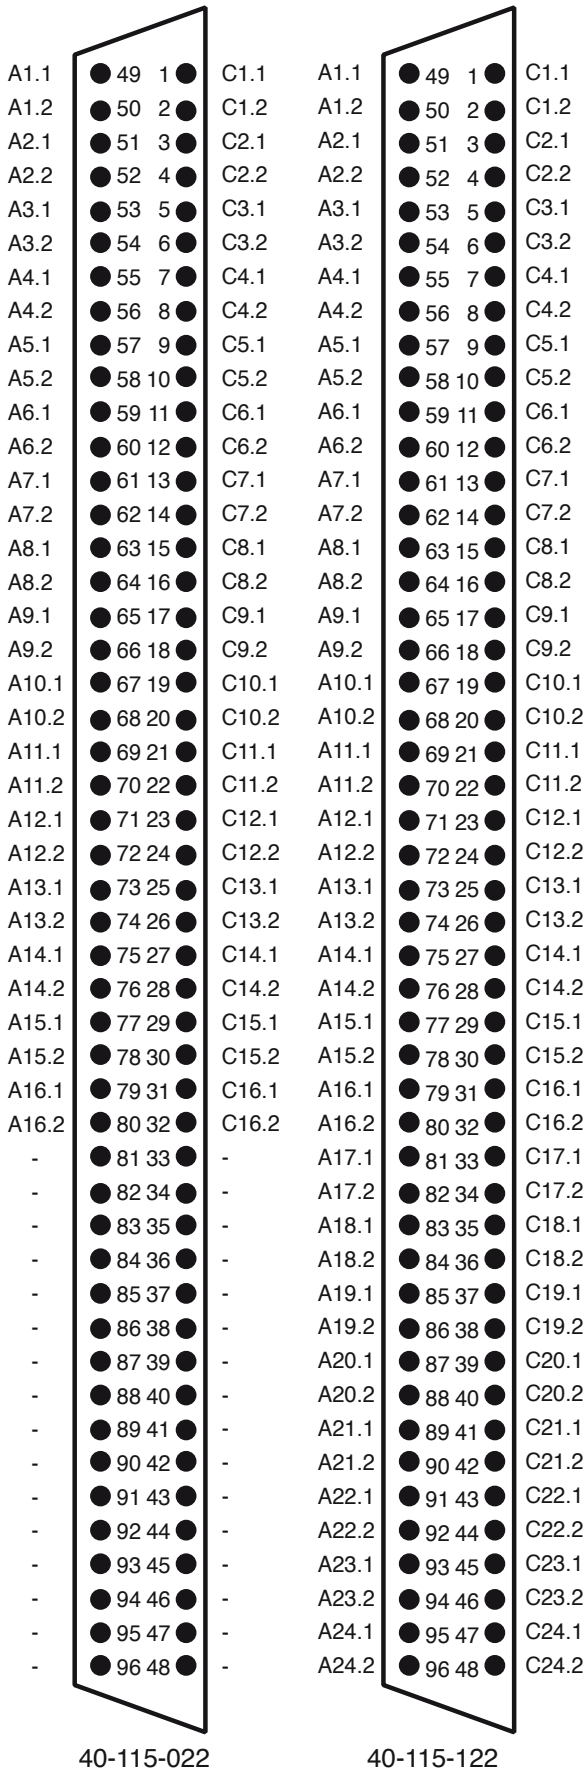


Figure 5.3 - Reed Relay Module 40-115-022/122: Pin Outs

THIS PAGE INTENTIONALLY BLANK

SECTION 6 - TROUBLESHOOTING

INSTALLATION PROBLEMS

The Plug & Play functionality of Pickering switch cards generally ensures trouble-free installation.

If you do experience any installation problems you should first ensure that all cards are properly seated in their slots. Improperly mated cards may go undetected by the operating system, or may be detected as a card of an unknown type. They can also cause the computer to freeze at various stages in the boot sequence.

If your system employs MXI-3 you should check the integrity of all MXI-3 links. When the system is powered up, and during Windows start-up, you should expect to see periodic activity on the MXI-3 RX/TX (yellow) indicators, clearing to leave only the PWR/LNK (green) LEDs illuminated. The RX/TX indicators should show activity when you attempt to access a card.

DIAGNOSTIC UTILITY

The Pickering Diagnostic Utility (accessible through the Programs>>Pickering>>PXI Utilities menu) generates a diagnostic report of the system's PCI configuration, highlighting any potential configuration problems. Specific details of all installed Pickering switch cards are included. All the installed Pickering switch cards should be listed in the "Pilpxi information" section - if one or more cards is missing it may be possible to determine the reason by referring to the PCI configuration dump contained in the report, but interpretation of this information is far from straightforward, and the best course is to contact Pickering support: support@pickeringtest.com, if possible including a copy of the diagnostic report.

In the "VISA information" section, if VISA is not installed it's absence will be reported. This does not affect operation using the Direct I/O driver, and is not a problem unless you wish to use VISA. VISA is a component of National Instruments LabWindows/CVI and LabVIEW, or is available as a standalone environment.

If VISA is present and is of a sufficiently recent version, the section "Pipx40 information" should present a listing similar to "Pilpxi information".

Please note that the Diagnostic Utility cannot access cards if they are currently opened by some other application, such as the Test Panels or Terminal Monitor.

THIS PAGE INTENTIONALLY BLANK


SECTION 7 - FUNCTIONAL DESCRIPTION

MECHANICAL DESCRIPTION

The 40-11* range of Matrix Modules conform to the 3U height (128mm) Eurocard standard. Each module comprises the following:

- CPCI Ejector Handle
- Front Panel mounted 96-way SCSI 2 Type connector
- 16, 24 or 32 Ruthenium Reed Switches
- Two spare Reed Switches
- Compact PCI backplane connector
- PCI Bridge (U1)
- Control Logic

The front panel is secured to the PCB by two M2.5 x 6mm pan-head posi-drive screws.

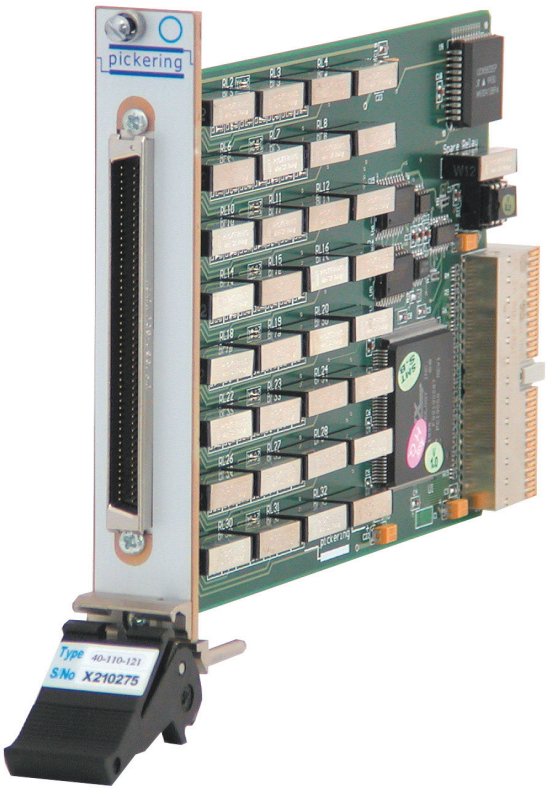

FUNCTIONAL DESCRIPTION

A functional block diagram is provided in Figure 7.1. The Reed Relay Module is powered by a +5V input via Compact PCI connector J2. The interface to the user test equipment is via the front panel mounted 96-way SCSI type connector, J1. The module comprises a PCB populated with single pole, or two pole relays, depending on the module type. The relays are energised via control signals from relay driver U8. The relay driver is addressed by PCI bridge U1 to output the required signal. Module configuration is determined by hardwired links and data stored in EEPROM U7. PCI Bridge U1 is configured by EEPROM U2.

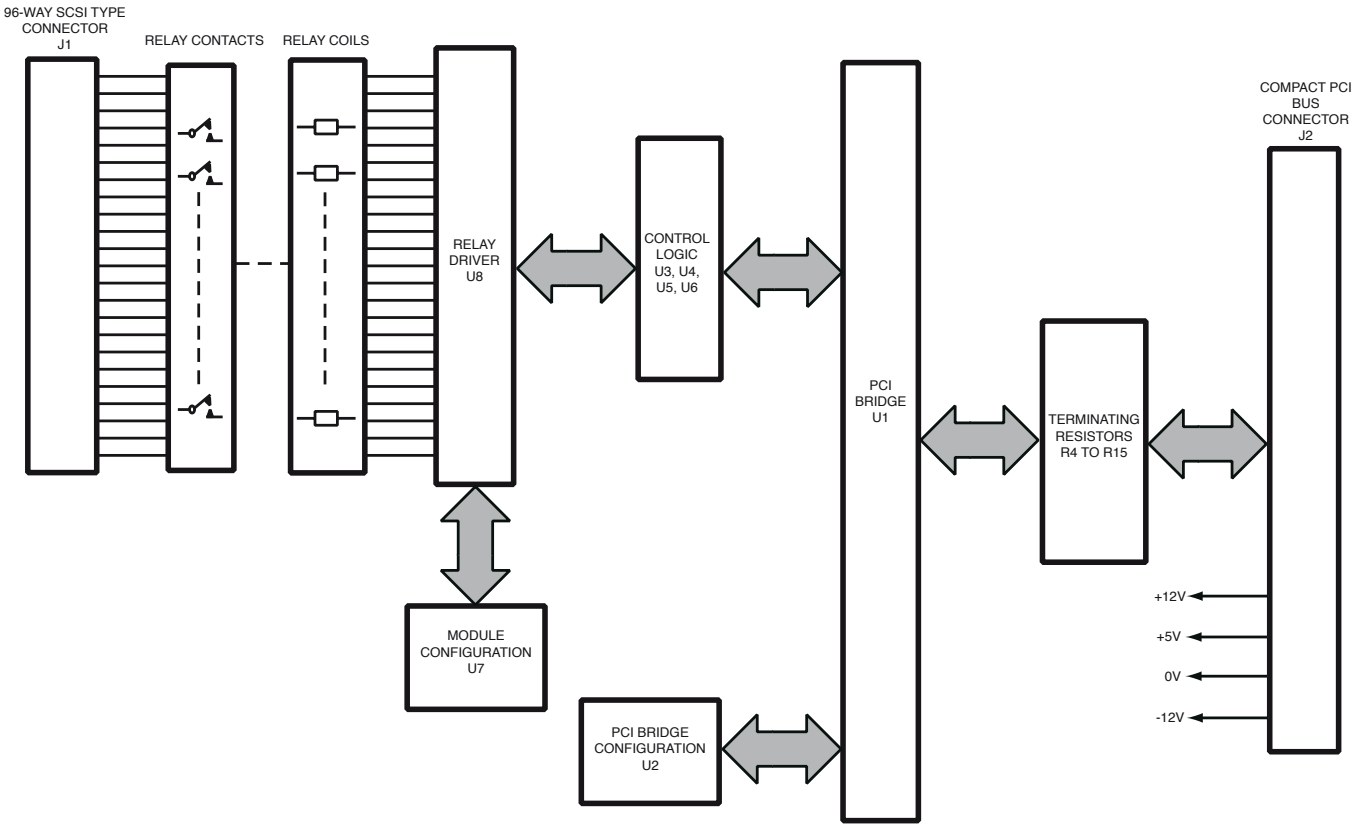


Figure 7.1 - Reed Relay Module (40-110/115): Functional Block Diagram

SECTION 8 - PARTS LIST

The following pages provide a parts list and component layout diagram for General Purpose Reed Relay Modules 40-110/115.

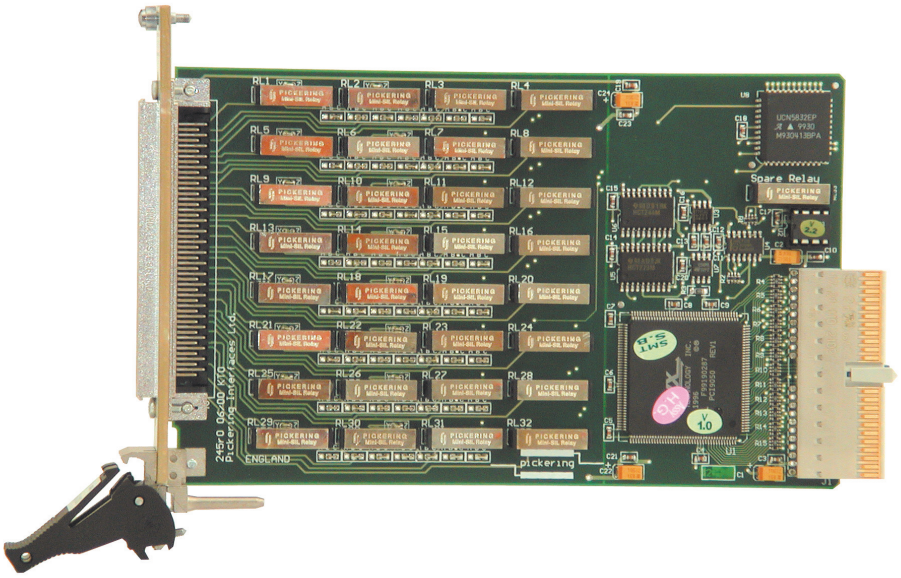


Table 8.1 provides a parts list and Figure 8.1 a component layout diagram for the 40-110/115 General Purpose Reed Relay Module.

TABLE 8.1 - Reed Relay Module 40-110/115 Parts List

PCB Location	Pickering Interfaces Part Number	Part Description	Quantity
R1, R2	C/RS/079	RESISTOR N/W 4 x 10k 1206	2
R3	C/RS/085	RESISTOR 10k 0805	1
R4 to R15	C/RS/102	RESISTOR N/W 4 x 10R 1206	12
(40-110-021) RL1 to 16, Spare	C/RL/057	107-1-C-12	16
(40-115-021) RL1 to 16, Spare	C/RL/015	108-1-A-12/1D	16
(40-115-121) RL1 to 32, Spare	C/RL/015	108-1-A-12/1D	32
(40-115-022) RL1 to 16, Spare	C/RL/053	108-2-A-12	16
(40-115-122) RL1 to 24, Spare	C/RL/053	108-2-A-12	24
C3 to C21, C23	C/CP/034	CAPACITOR 100nF 0603	18
C1, C2, C20+, C22	C/CP/024	CAPACITOR 10uF TANT SMD	4
J2	C/CN/355	cPCI CONNECTOR	1
	C/MS/071	FEMALE CODING KEY, BRILLIANT BLUE, V	1
J1	C/CP/379	SCSI3 68 PIN	1
U1	C/IC/098	PCI9050 PQFP	1
U2	C/IC/099	93CS46 DIP	1
	C/IC/035	8 PIN DIP SKT	1
U3	C/IC/056	7705 SOP	1
U4	C/IC/087	74HCT32 SOP	1
U5	C/IC/100	74HCT273 SOP	1
U6	C/IC/101	74HCT244 SOP	1
U7	C/IC/090	93C56 SOP	1
U8	C/IC/081	UCN5832EP	1


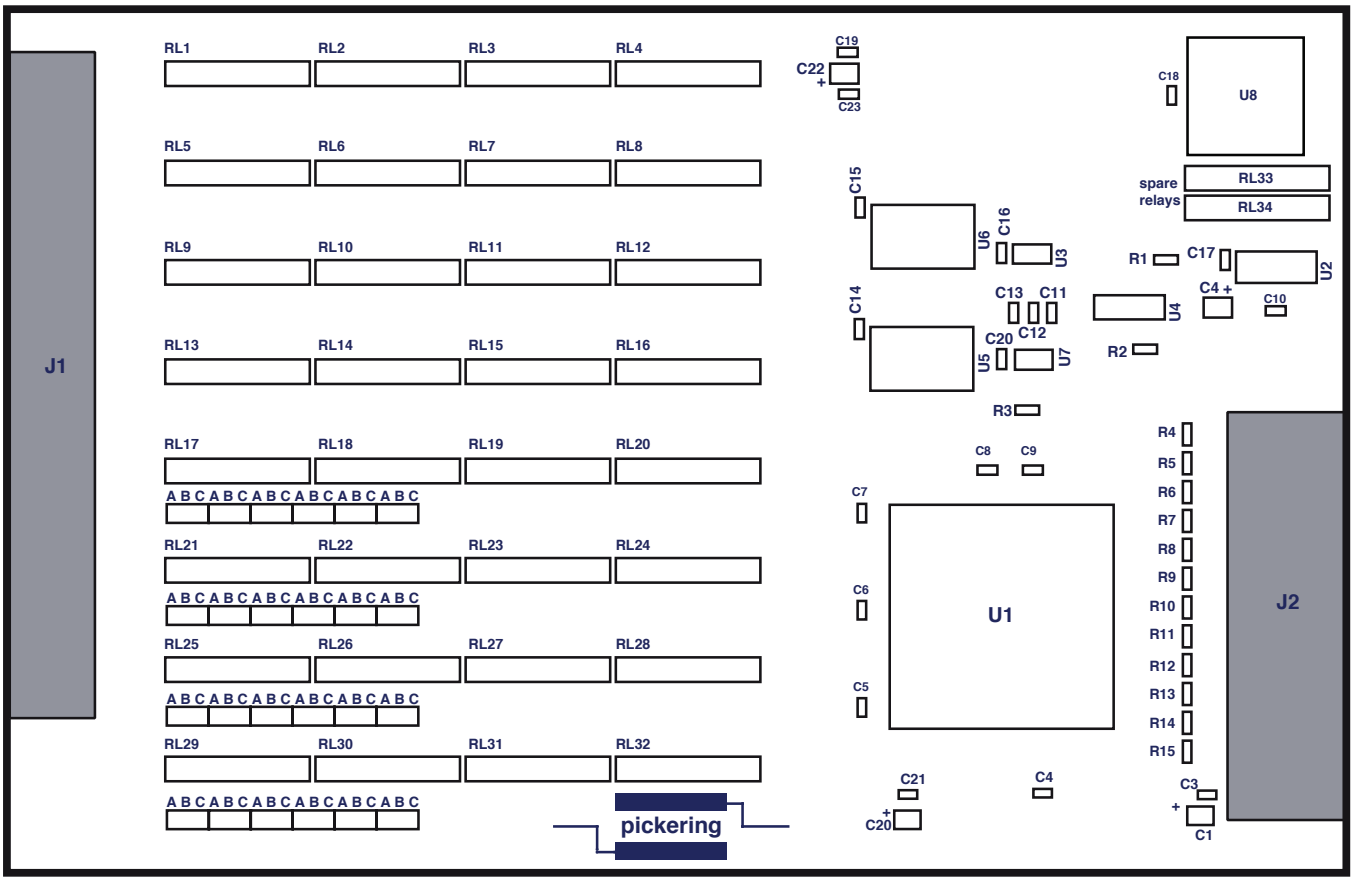


Figure 8.1 - Reed Relay Module 40-110/115: Component Layout

THIS PAGE INTENTIONALLY BLANK

SECTION 9 - WARNINGS AND CAUTIONS

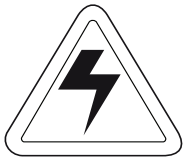

WARNING - DANGER OF ELECTRIC SHOCK

THIS MODULE MAY CONTAIN HAZARDOUS VOLTAGES. BEFORE REMOVING THE MODULE FROM THE RACK REMOVE ALL SUPPLIES.



CAUTION
Handling of Electrostatic-Sensitive Semiconductor Devices

Certain semiconductor devices used in the equipment are liable to damage due to static voltage. Observe the following precautions when handling these devices in their unterminated state, or sub-units containing these devices:

(1) Persons removing sub-units from an equipment using these devices must be earthed by a wrist strap and a resistor at the point provided on the equipment.

(2) Soldering irons used during the repair operations must be low voltage types with earthed tips and isolated from the mains voltage by a double insulated transformer.

(3) Outer clothing worn must be unable to generate static charges.

(4) Printed Circuit Boards (PCBs) fitted with these devices must be stored and transported in anti-static bags.

THIS PAGE INTENTIONALLY BLANK

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP