

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions


Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

VIPAC Array™

Power Systems
Configuration Guide

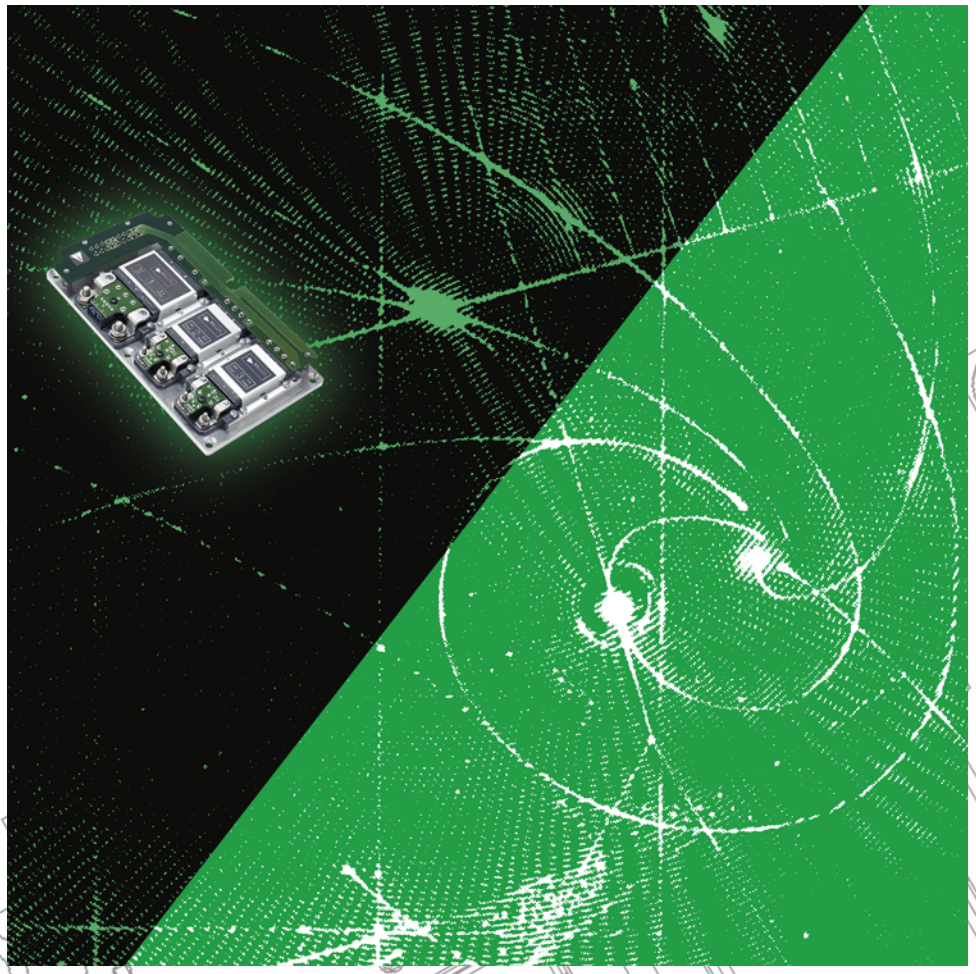

Contents

2-3 Product Overview

4-6 Input and Output Connections

7 Mounting Options

8-11 Mechanical Drawings

12 Technical Support Contacts

Product Overview


The VIPAC Array is a highly flexible system of DC input, power building-blocks that can be configured with as many as four user definable outputs on a low profile, coldplate chassis. VIPAC Array offers the convenience of a prepackaged, chassis mount solution with the performance and power density of Vicor's Maxi, Mini, Micro Series modules, DC-DC converters.

Using Vicor's VCAD configuration tool, (vicorpower.com/vcad), designers are able to quickly specify VIPAC Arrays with standard inputs of 24, 28, 48, 72, 110, 150, 300 or 375 Vdc and standard outputs from 2 to 48 Vdc at power levels up to 600 Watts per output. A total of 8 standard chassis configurations offers the user a choice of power and mechanical options to fit most designs. Short cycle time and rapid delivery make VIPAC Array a valuable tool for power system prototyping and development efforts as well.

For technical information refer to 'Design Guide & Applications Manual for Maxi, Mini, Micro Family DC-DC Converters and Accessory Modules"


VIPAC Arrays are ideal for use in distributed and modular power systems where power density and reliable operation are critical. A current share option is available on single output models enabling them to be used in applications requiring either redundant operation or kilowatts of power. The 300 and 375 Vdc input versions can be coupled to a bulk AC Front-end to create a modular, scaleable power supply serving a variety of power architectures from centralized to distributed. VIPAC Arrays include internal fusing, a global enable / disable function and connectorized input and output terminations to speed system installation while a versatile coldplate chassis simplifies thermal management and mounting.

Vicor's VCAD configuration tool provides expedited part configuration, part number, price and delivery information by selecting standard Maxi, Mini, and Micro modules for use within the VIPAC Array based on the application requirements. The modules are chosen based on the input and output requirements and the closest, but higher power level that is available to that specified. Specifications for these can be found on their respective data sheets.

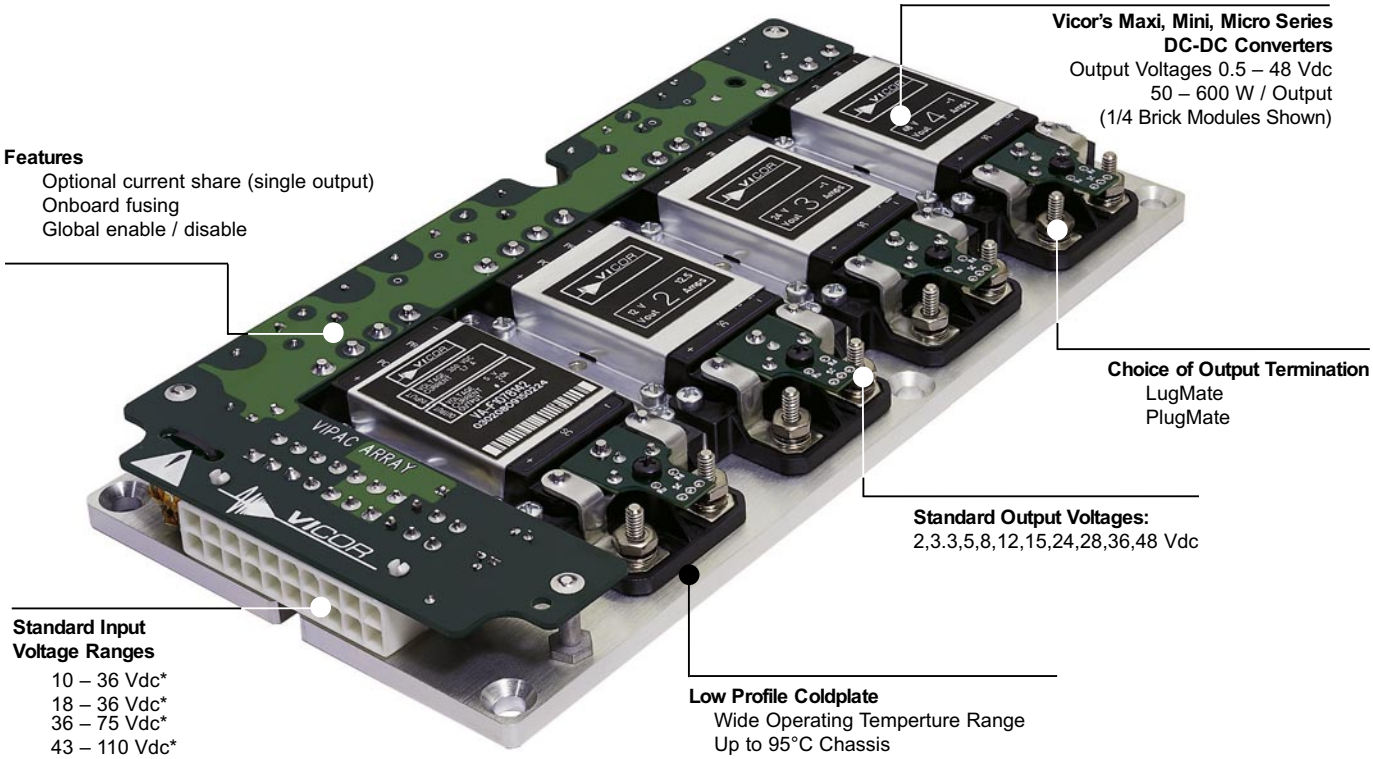

*** Note: 24, 28, 48, 72, 110, and 150 V input VIPAC Arrays are designed primarily for military COTS and industrial applications and do not carry safety agency approvals.**


Product Overview

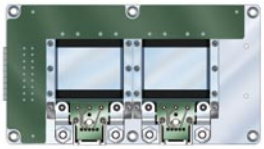

VA-A

2 MINIS

- 3.62" x 6.69" x 0.78"[a] (92,0 x 170,0 x 19,8 mm)
- 1.3 lb (590 g)
- Single or dual output
- Up to 600 W

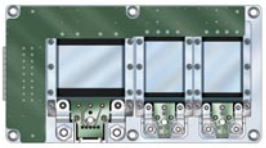

VA-B

1 MINI, 2 MICROS


- 3.62" x 6.69" x 0.78"[a] (92,0 x 170,0 x 19,8 mm)
- 1.3 lb (590 g)
- Single, dual or triple outputs
- Up to 600 W total



VA-C

3 MICROS

- 3.62" x 6.69" x 0.76"[a] (92,0 x 170,0 x 19,3 mm)
- 1.1 lb (499 g)
- Dual or triple outputs
- Up to 450 W total

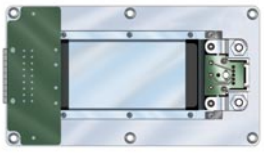

VA-D/J

1 MAXI


- 3.62" x 6.69" x 0.78"[a] (92,0 x 170,0 x 19,8 mm)
- 1.1 lb (499 g)
- Single output
- Up to 600 W
- Current share option



VA-E

I MICRO, 2 MINIS

- 3.62" x 7.52" x 0.78"[a] (92,0 x 191,0 x 19,8 mm)
- 1.4 lb (635 g)
- Dual or triple outputs
- Up to 750 W total

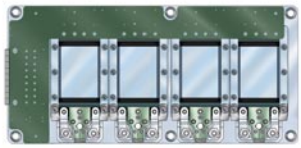

VA-F

4 MICROS


- 3.62" x 7.52" x 0.76"[a] (92,0 x 191,0 x 19,3 mm)
- 1.3 lb (608 g)
- Dual, triple or quad outputs
- Up to 600 W total



VA-G/K

1 MINI

- 3.62" x 4.39" x 0.78"[a] (92,0 x 112,0 x 19,8 mm)
- 0.7 lb (318 g)
- Single output
- Up to 300 W
- Current share option

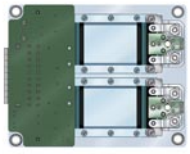

VA-H

2 MICROS

- 3.62" x 4.39" x 0.78"[a] (92,0 x 112,0 x 19,8 mm)
- 0.7 lb (318 g)
- Single or dual outputs
- Up to 300 W


[a] PlugMate version is 0.81" (20,5 mm) in height

Note: Output numbering convention left to right facing output connections.

Model #'s and total output power capabilities are determined using VCAD and are application specific.

Input / Output Connections

J1 Input Connector
(View looking into J1)



Pin#	Funct.
1-4	–Vin
5-7	+Vin
8	NC / PR bus
9	PE protective earth
10	Neg. enable
11-13	–Vin
14-17	+Vin
18	NC / PR bus
19	PE protective earth
20	Pos. enable

VA-J and VA-K configurations only
(300 and 375 Vin single Maxi or single Mini)


Pin#	Funct.
1-3	–Vin
4-6	+Vin
7	NC
8	NC / PR bus
9	PE protective earth
10	Neg. enable
11-13	–Vin
14-16	+Vin
17	NC
18	NC / PR bus
19	PE protective earth
20	Pos. enable

To disable output(s) apply +5 Vdc between pins 10 and 20 in the polarity indicated

Mating Connector


	Vicor part #	TE Connectivity part #
Housing		2-794657-0
Contacts		1-106529-2
Kit	24828	

J1

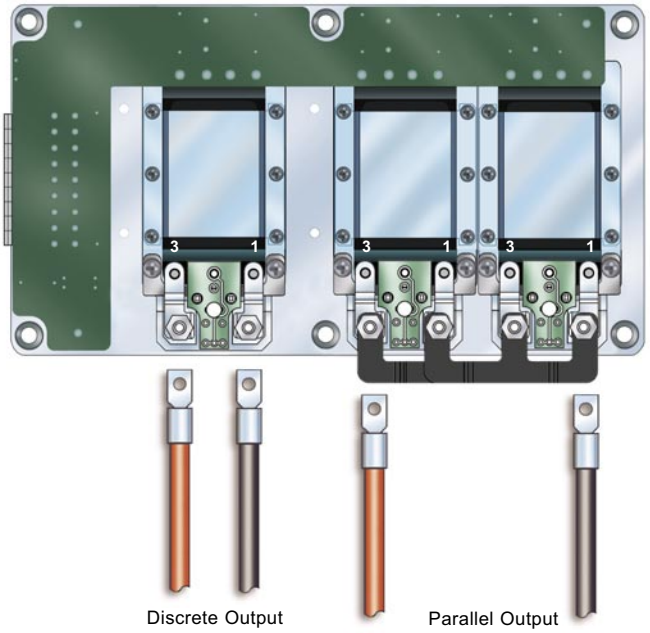

Shown with the output(s) of two modules connected in parallel using factory installed bus bar.**


Factory installed Micro LugMate

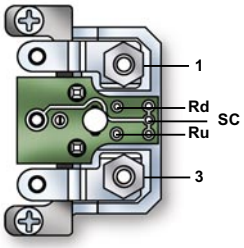

Pin #	Solder Pad	Function
1		– Vout
	Rd	Trim Down
	SC	Secondary Control
	Ru	Trim Up
3		+ Vout

Consult design calculator for Rd/Ru trim resistor values located at vicorpower.com

Factory installed Mini/Maxi LugMate

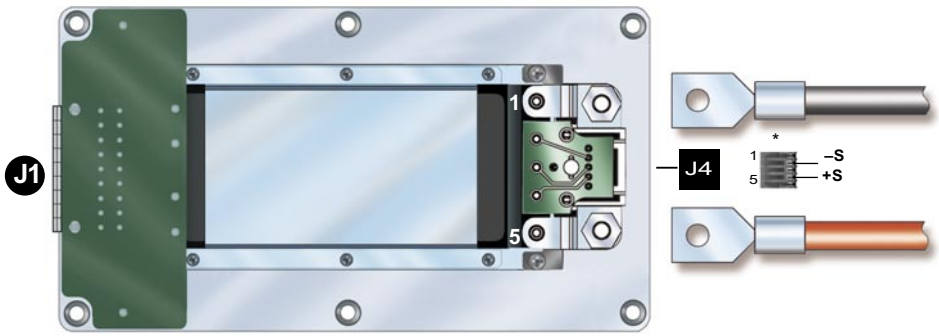


Pin #	Conn.	Function	Mating Conn.
1		– Vout	
	J4-1	– Vout	*Removable Jumper
	J4-2	– Sense	
	J4-3	Secondary Control	TE Connectivity 644083-5
	J4-4	+ Sense	*Removable Jumper
	J4-5	+ Vout	
5		+ Vout	

*Removable jumpers in J4 are factory installed for local sensing. For remote sensing the +Sense pins should be tied to the same point on the +Out power bus; the -Sense pins should be tied to the same point the -Out power bus.

Parallel*** / Redundant Connections*

J1 Input Connector
(View looking into J1)



Pin#	Funct.
1-4	–Vin
5-7	+Vin
8	NC / PR bus
9	PE protective earth
10	Neg. enable
11-13	–Vin
14-17	+Vin
18	NC / PR bus
19	PE protective earth
20	Pos. enable


VA-J and VA-K configurations only
(300 and 375 Vin single Maxi or single Mini)

Pin#	Funct.
1-3	–Vin
4-6	+Vin
7	NC
8	NC / PR bus
9	PE protective earth
10	Neg. enable
11-13	–Vin
14-16	+Vin
17	NC
18	NC / PR bus
19	PE protective earth
20	Pos. enable


To disable output(s) apply +5 Vdc between pins 10 and 20 in the polarity indicated

Mating Connector

	Vicor part #	TE Connectivity part #
Housing		2-794657-0
Contacts		1-106529-2
Kit	24828	

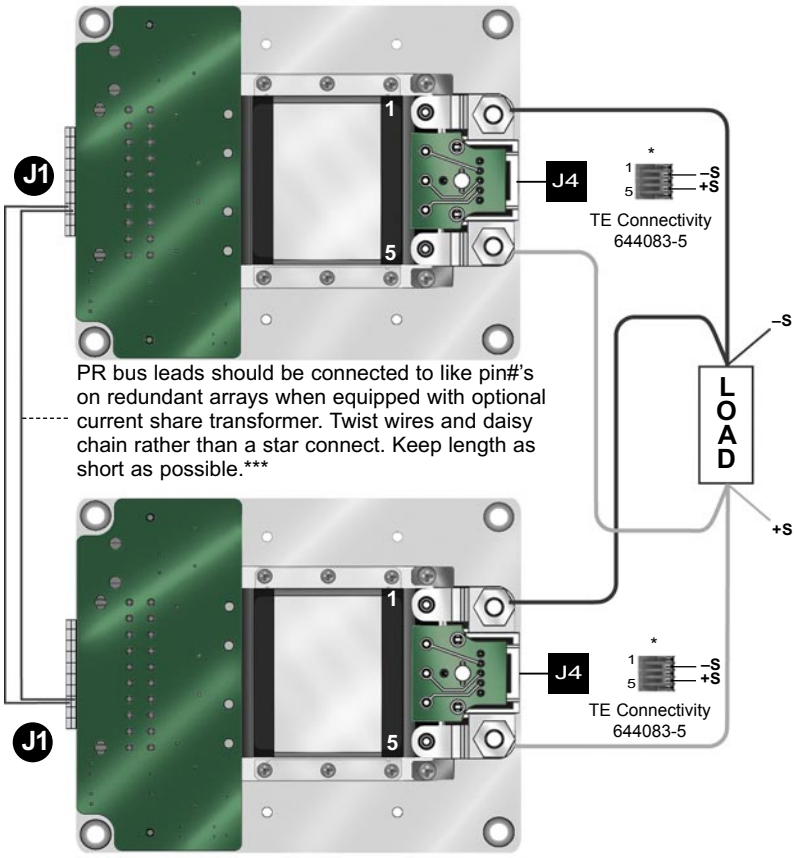

Factory installed Mini/Maxi LugMate

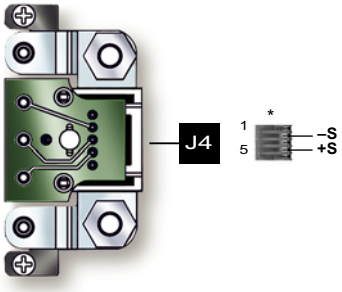

Pin #	Conn.	Function	Mating Conn.
1		– Vout	
	J4-1	– Vout	*Removable Jumper
	J4-2	– Sense	
	J4-3	Secondary Control	TE Connectivity 644083-5
	J4-4	+ Sense	* Removable Jumper
	J4-5	+ Vout	
5		+ Vout	

* Removable jumpers in J4 are factory installed for local sensing. For remote sensing and redundant parallel arrays as illustrated above the +Sense pins should be tied to the same point on the +Out power bus; the -Sense pins should be tied to the same point the -Out power bus.

** There should be one parent module, this is realized by choosing one module to be the parent and shorting the SC to –S on the other module. Units configured from the factory as paralled will already have this configured. This should be verified by direct inspection prior to system integration.


*** There should be one parent module, this is realized by choosing one module to be the parent and shorting the SC to –S on the other module. This is done by installing a 0Ω resistor in the space provided on the lugmate / plugmate.

Output Connection Options

PlugMate
(Factory Installed Option)


Mating Connector Kits

Micro PlugMate

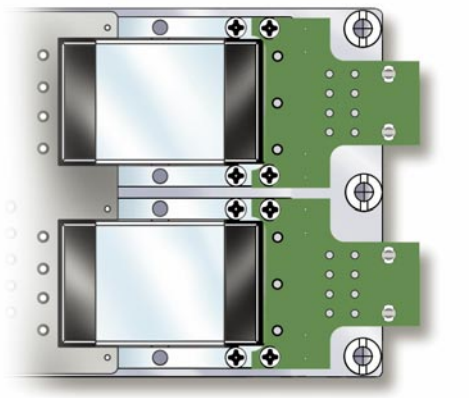

Vicor kit P/N 25073






Pin #	Function	Pin #	Function
1	+Vout	5	+Vout
2	+Vout	6	N/C
3	–Vout	7	SC
4	–Vout	8	–Vout


Mating Connector	TE Connectivity P/N	Vicor P/N
Housing	TYC-794657-8	
Pin	1-106529-2	
Kit		25073

Mini PlugMate

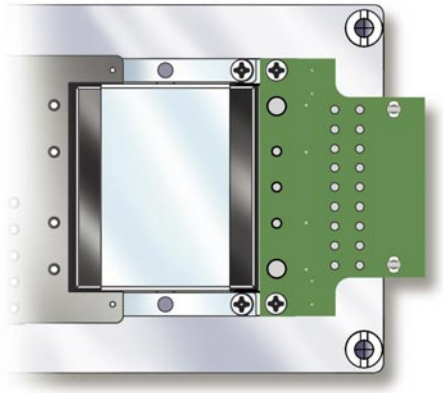

Vicor kit P/N 25067






Pin #	Function	Pin #	Function
1	+Vout	10	+Vout
2	+Vout	11	+Vout
3	+Vout	12	+Vout
4	N/C	13	+S
5	N/C	14	SC
6	N/C	15	–S
7	–Vout	16	–Vout
8	–Vout	17	–Vout
9	–Vout	18	–Vout


Mating Connector	TE Connectivity P/N	Vicor P/N
Housing	TYC1-794657-8	
Pin	1-106529-2	
Kit		25067

Maxi PlugMate

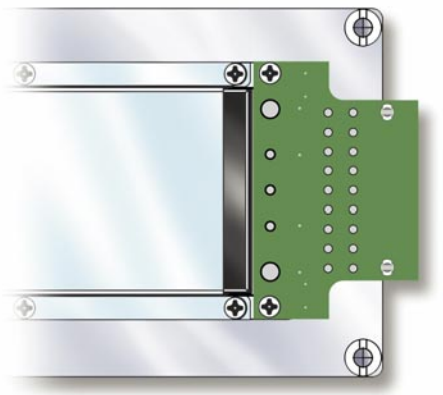

Vicor kit P/N 25061





Pin #	Function	Pin #	Function
1	+Vout	13	+Vout
2	+Vout	14	+Vout
3	+Vout	15	+Vout
4	+Vout	16	+Vout
5	+Vout	17	+Vout
6	N/C	18	+S
7	SC	19	–S
8	–Vout	20	–Vout
9	–Vout	21	–Vout
10	–Vout	22	–Vout
11	–Vout	23	–Vout
12	–Vout	24	–Vout


Mating Connector	TE Connectivity P/N	Vicor P/N
Housing	TYC2-794657-4	
Pin	1-106529-2	
Kit		25061

Please Note:
VIPACs that contain multiple modules configured as a single output (paralleled for power or redundancy) MUST have their Outputs and Sense connected to each other at the load. **DO NOT OPERATE A PARALLEL CONFIGURATION WITH ONLY ONE MODULE CONNECTED.** *Additionally one module must be designated as "parent" by having all other modules configured as "Boosters". Boosters are created by shorting the SC pin to –S.*


Mounting Options



VIPAC Array with external,
user supplied heat sink.

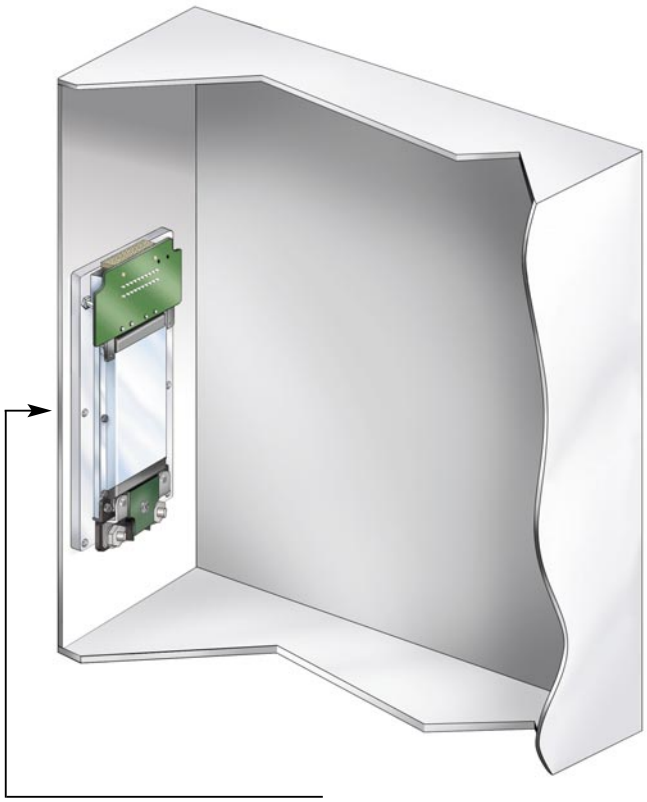


VIPAC Array mounted to cabinet wall with thermal
compound between VIPAC Array and cabinet wall.

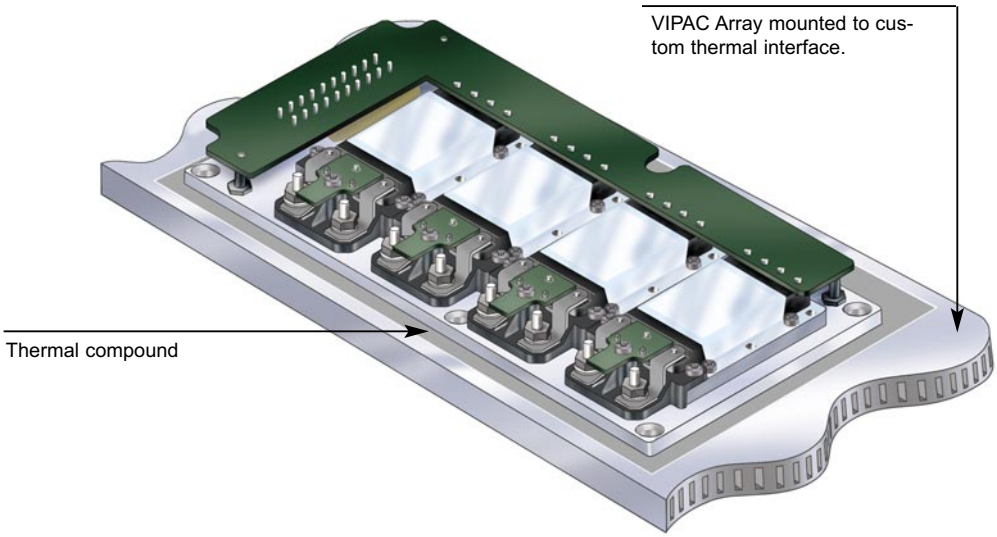


MECHANICAL DRAWINGS Coldplate thickness is 0.19" ref for all configurations.

Configuration A


LugMates

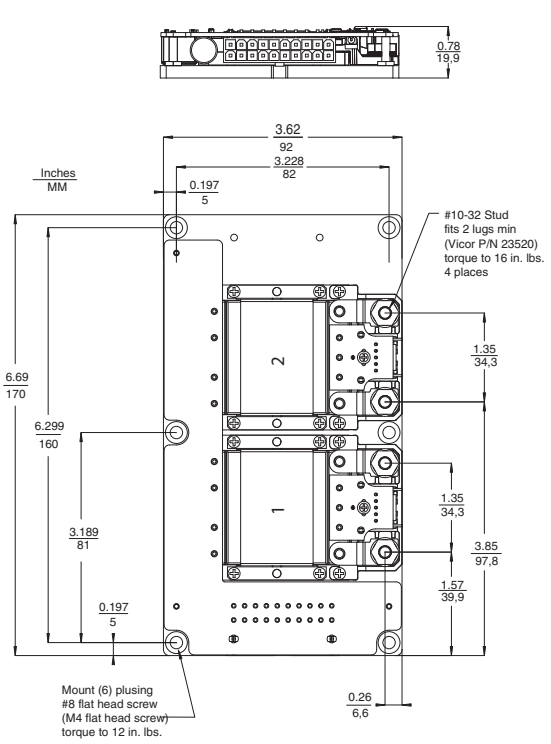

LugMates/Bus Bars

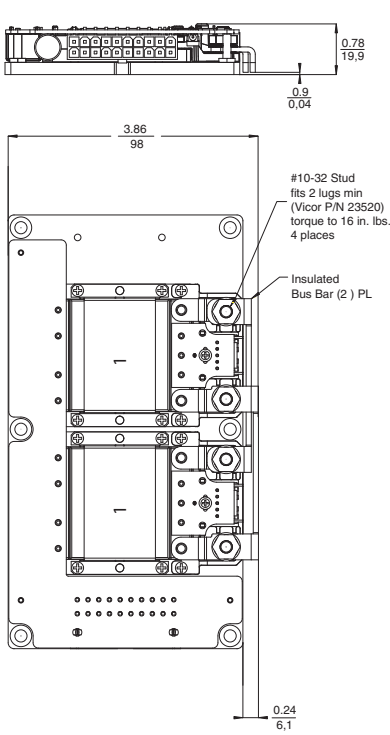


PlugMates

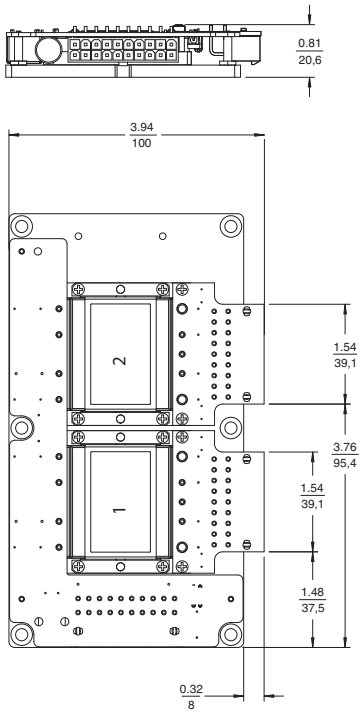


Configuration B


LugMates

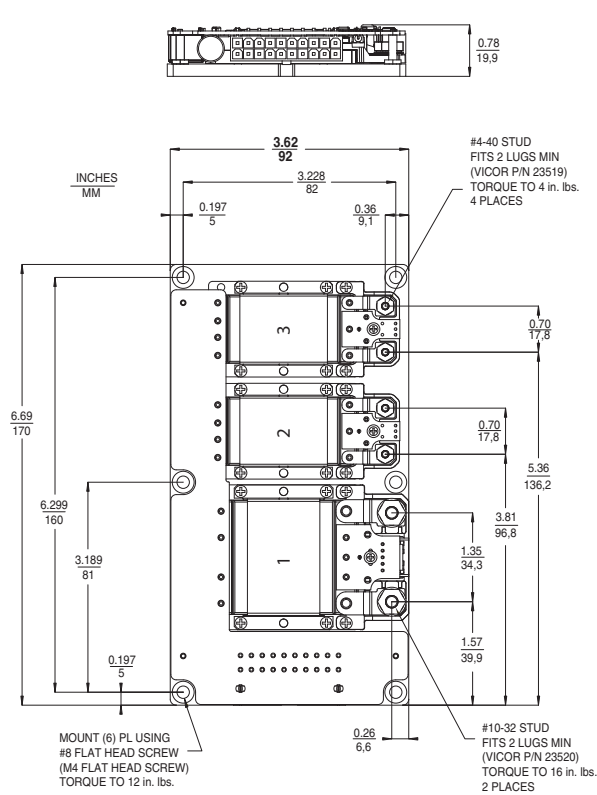

LugMates/Bus Bars

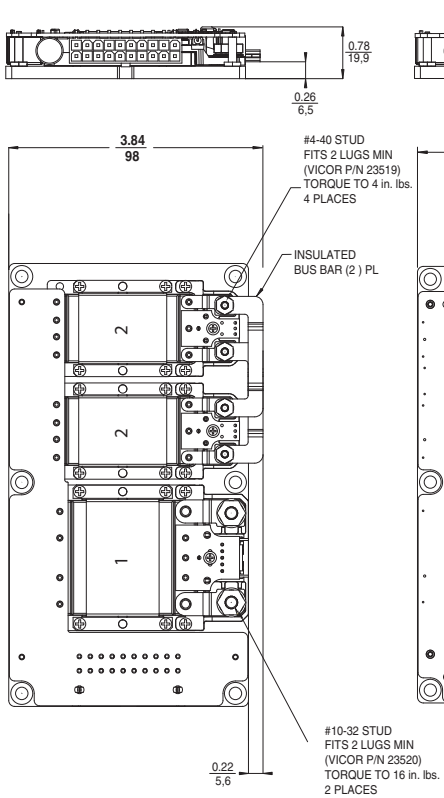


PlugMates

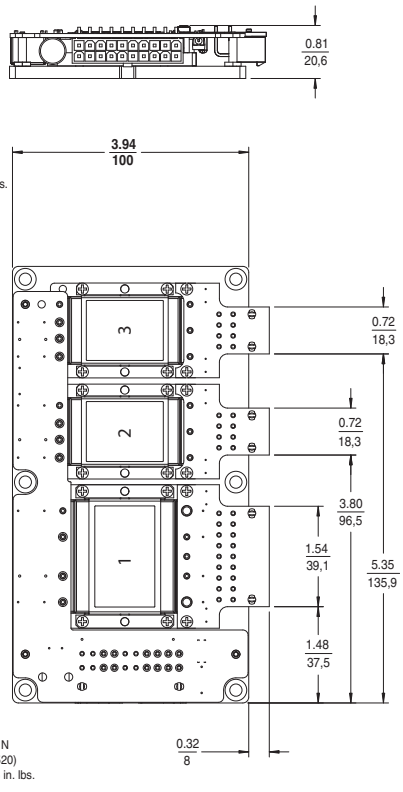


MECHANICAL DRAWINGS

Configuration C


LugMates

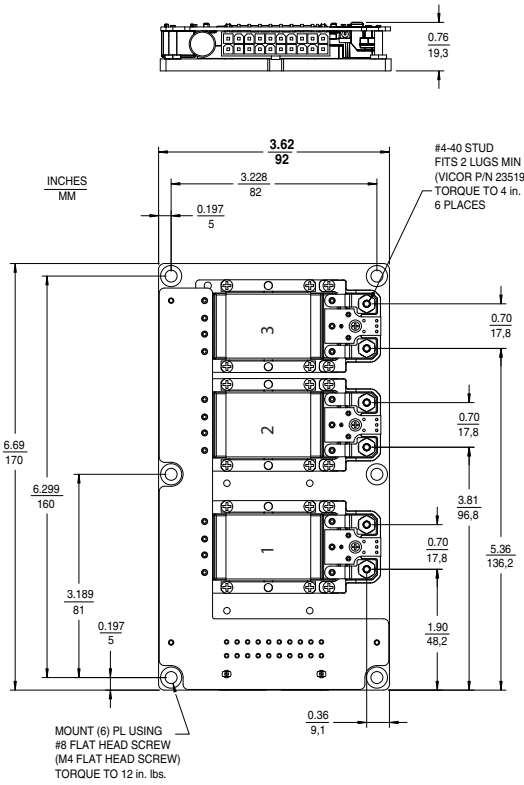

LugMates/Bus Bars

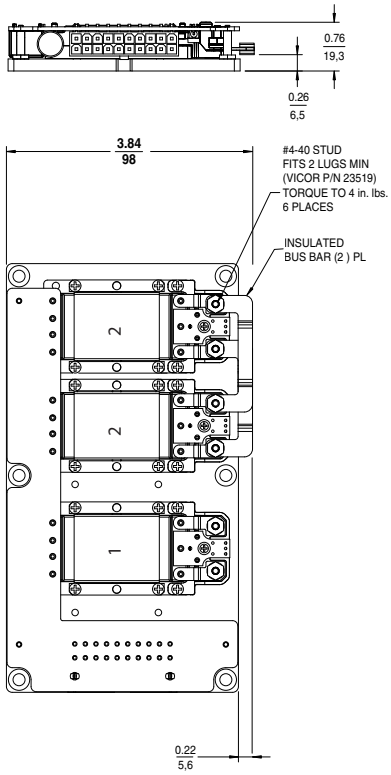


PlugMates

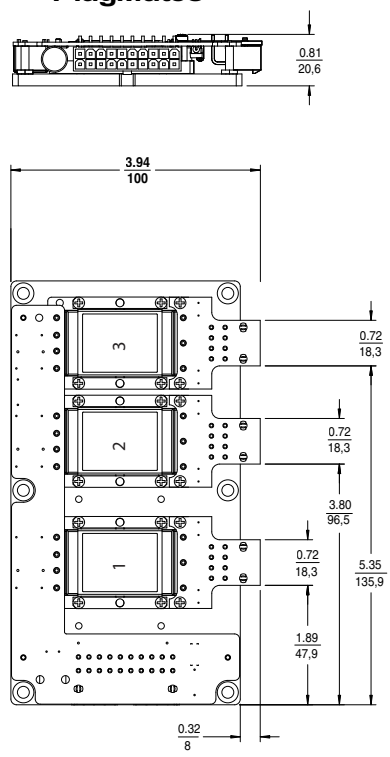


Configuration D and J

LugMates

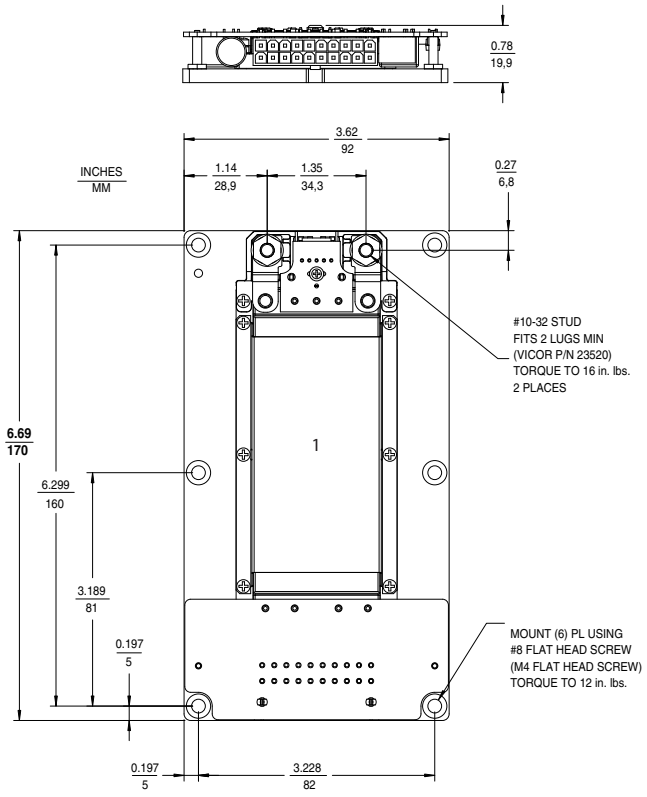


PlugMates

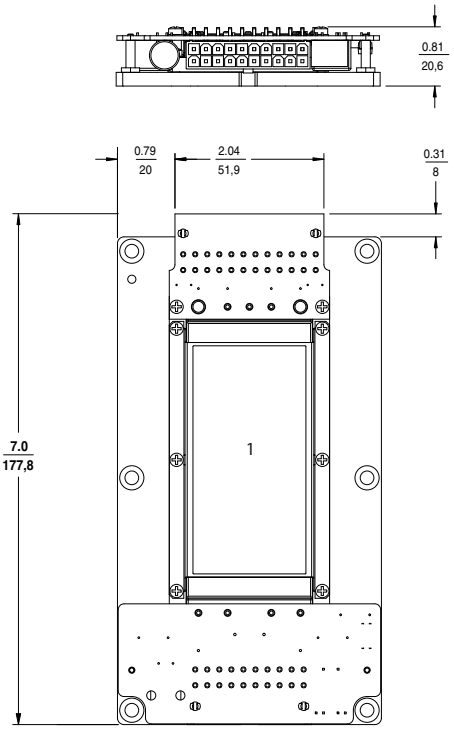


MECHANICAL DRAWINGS

Configuration E


LugMates

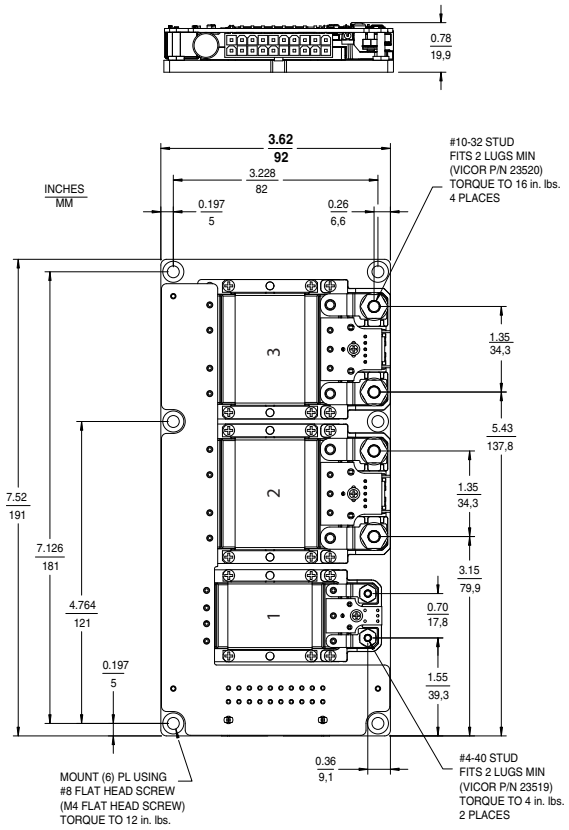

LugMates/Bus Bars

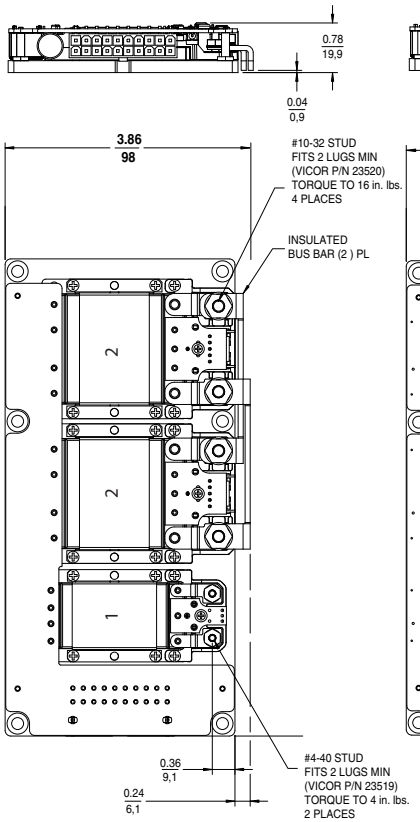


PlugMates

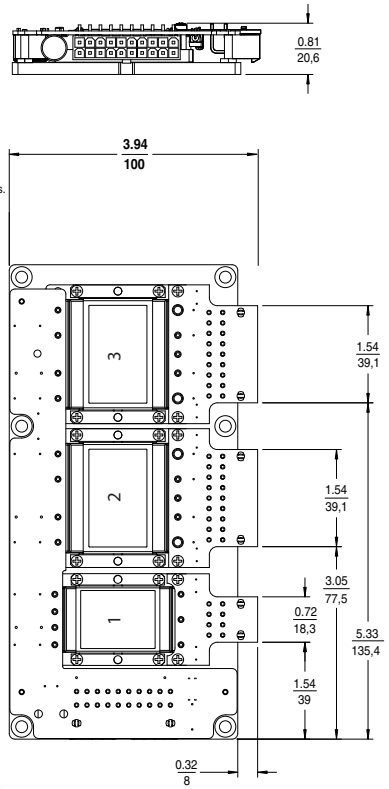


Configuration F


LugMates

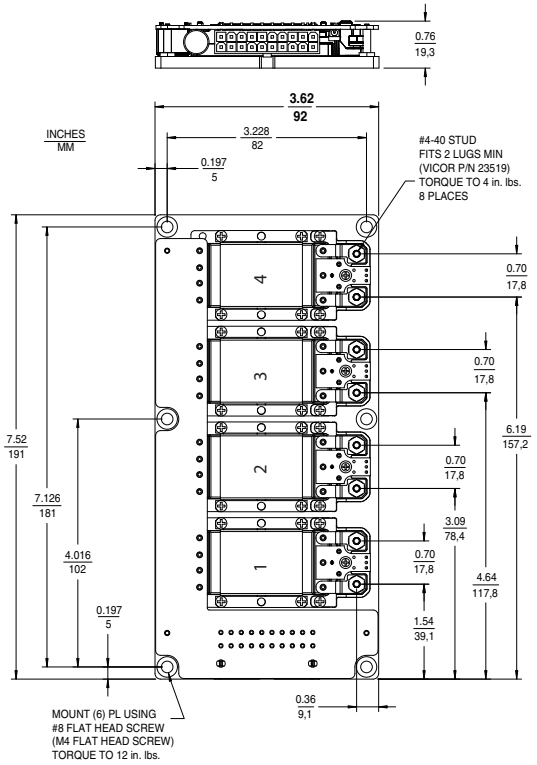

LugMates/Bus Bars

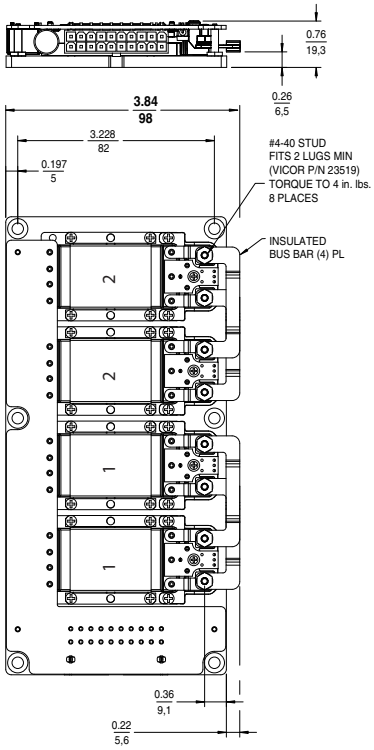


PlugMates

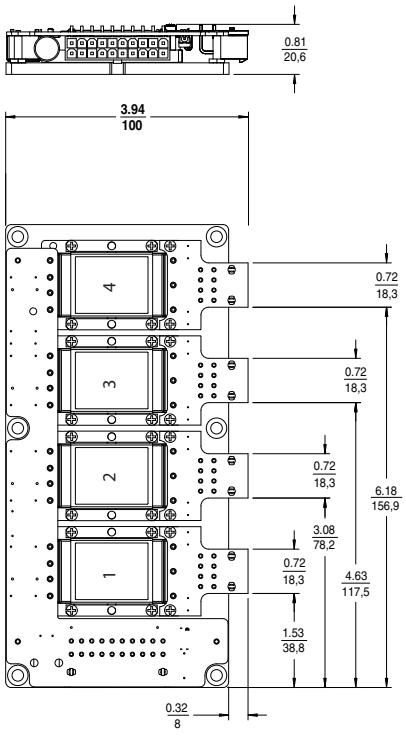


MECHANICAL DRAWINGS

Configuration G and K

LugMates

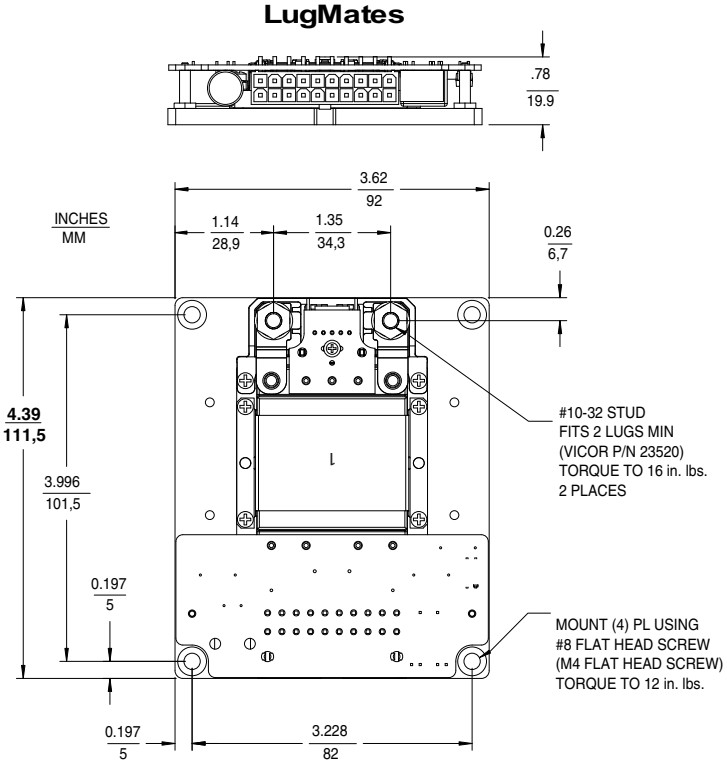


PlugMates

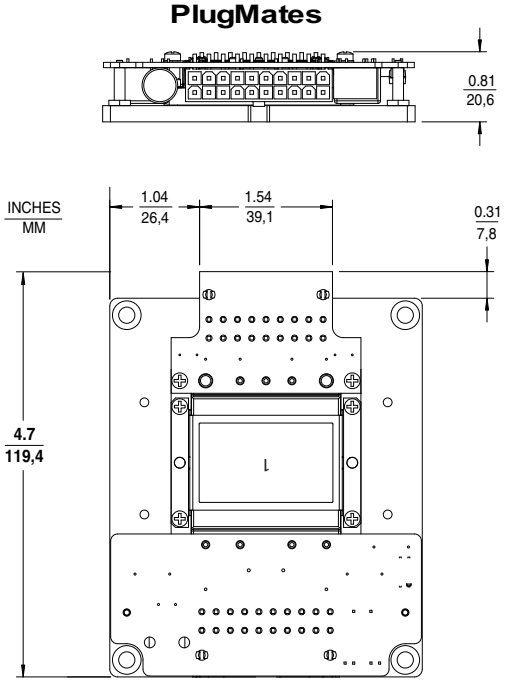


Configuration H


LugMates

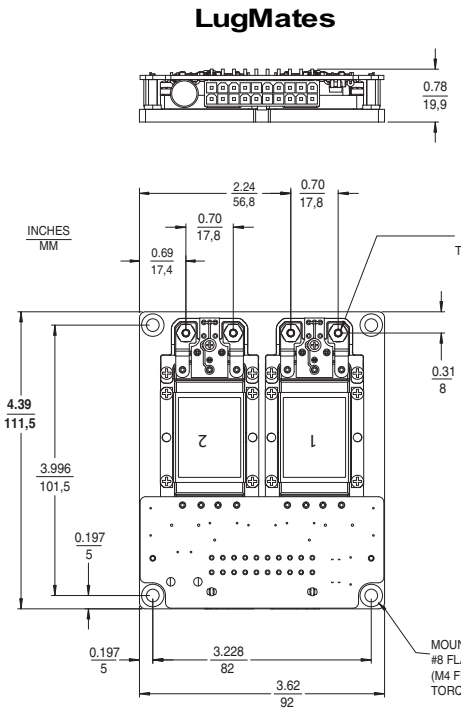

LugMates/Bus Bars

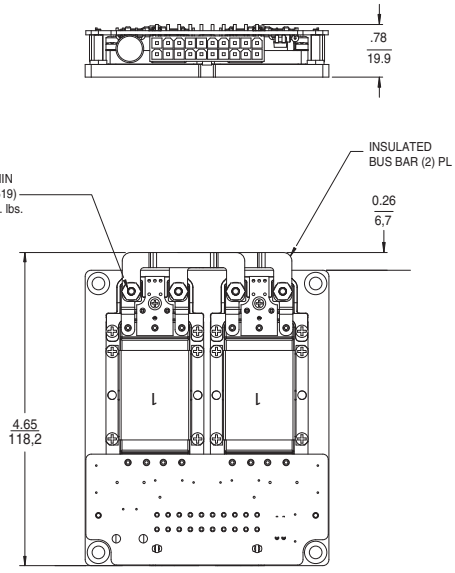

PlugMates

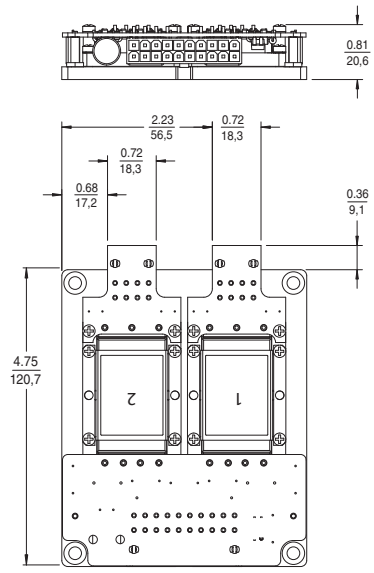

Technical Support Contacts

Vicor's Technical support team is staffed with Applications Engineers to provide the product and application information and technical assistance customers need concerning Vicor products and power solutions.

Our facilities house electronics laboratories where Vicor Applications Engineers can evaluate specific customer design issues and offer a wide range of component-based power solutions that include distributed power, current sharing, N + 1 redundancy, thermal management, and compliance with safety and performance standards.

Applications engineers ...

- Answer technical questions (by phone, fax, email, or the Vicor website).
- Assist with component-based power system design.
- Support user needs through visits to Vicor and customer facilities.
- Help select the most appropriate product for your application.

If you have a specific technical question, call or email an Applications Engineer located at one of our global offices.

USA

vicorpower.com

Vicor Corporation
(Corporate Headquarters)
25 Frontage Road
Andover, MA 01810-5413

For General Information
Tel: 978 470 2900
Fax: 978 475 6715

For Technical Support
Tel: 800 927 9474
Fax: 978 749 3341
email: apps@vicorpower.com

For Sales Support
U.S. and Canada: 800 735 6200
Fax: 978 475 6715
email: vicorexp@vicorpower.com

Europe

vicoreurope.com

Vicor France
Tel: +33 1 34 52 18 30
0800 419 419 (in France)
Fax: +33 1 34 52 28 30
email: vicorfr@vicorpower.com

Vicor Germany
Tel: +49 89 962 439 0
0800 018 29 18 (in Germany)
Fax: +49 89 962 439 39
email: expressde@vicorpower.com

Vicor Italy
Tel: +39 02 22 47 23 26
800 899 677 (in Italy)
Fax: +39 02 22 47 31 66
email: vicorit@vicorpower.com

Vicor U.K.
Tel: +44 1276 678222
UK: 0800 980 8427
Sweden: 020 794 143
Fax: +44 1276 681269
email: vicoruk@vicorpower.com

Asia-Pacific

Vicor Japan Co., Ltd.
Tokyo 141-0031 Japan
Tel: +81 3 5487 3880
Fax: +81 3 5487 3885
vicorpowerco.jp

Vicor Hong Kong
Tsim Sha Tsui, Hong Kong
vicor-asia.com
Tel: +852 2956 1782
Fax: +852 2956 0782


Latin America

Argentina: 800 555 4288
Brazil: 0800 8890 0288
Mexico: 011 52 333 647 7881

Ask the operator to connect you to: 800 735 6200

Information furnished by Vicor is believed to be accurate and reliable. However, no responsibility is assumed by Vicor for its use. No license is granted by implication or otherwise under any patent or patent rights of Vicor. Vicor components are not designed to be used in applications, such as life support systems, wherein a failure or malfunction could result in injury or death. All sales are subject to Vicor's Terms and Conditions of Sale, which are available upon request. No user serviceable components, contact Vicor to arrange for repair or replacement. ***Specifications are subject to change without notice.***

vicorpower.com

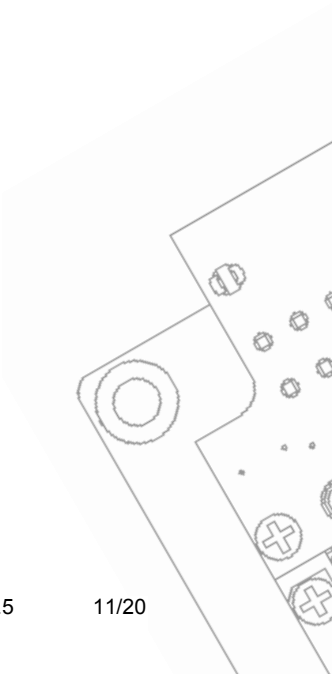

Vicor Corporation
Tel: 978-470-2900 Fax: 978-475-6715

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Vicor:

24828 VA-D1139247 VA-A2104827 VA-A2108211 VA-K2989631 VA-K3026811 VA-K3035235E VA-K3090425 VA-J2176232 VA-J2176244 VA-J2176259 VA-J2197277 VA-J2254612 VA-J2285821 VA-J2303036E VA-J2310428E VA-J2323047 VA-J2323058 VA-J2323830E VA-J2364047 VA-J2378867E VA-J2399677 VA-J2420044 VA-J2424040E VA-J2424057E VA-J2441020 VA-J2442112 VA-H2282013E VA-H2285613 VA-H2291630E VA-H2325221E VA-H2332615 VA-H2335423E VA-H2335744E VA-H2347018E VA-H2348845E VA-H2351428 VA-H2356588 VA-H2362240E VA-H2387436 VA-H2387449 VA-H2392213E VA-H2400816E VA-H2405249E VA-H2406231 VA-H2409848E VA-H2414610 VA-H2416841E VA-H2421618 VA-H2434415 VA-J3187820 VA-J3208811E VA-J3211210E VA-J3224010 VA-J3225438 VA-K2108103E VA-K2123014 VA-K2123235 VA-K2144245E VA-K2144250E VA-K2197289 VA-K2244633E VA-K2248858 VA-K2339627E VA-K2406162 VA-K2409640 VA-K2409657 VA-K2500021 VA-J3000628 VA-F2484648E VA-F2501051 VA-F2504647E VA-F2508012 VA-F2511450 VA-F2511461 VA-F2521643 VA-F2533748 VA-F2536615 VA-F2536632 VA-F2547148 VA-F2548431 VA-F2550416E VA-F2552426 VA-F2567626 VA-F2578067E VA-F2578610E VA-F2582224 VA-F2586419 VA-F2797347 VA-F2797818 VA-F2800615E VA-F2827619E VA-F2831531 VA-F2841088 VA-F2844211 VA-F2852417 VA-F2854894 VA-F2861425 VA-F2862637 VA-F2875613E

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP