

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

**Artisan Technology Group**
(217) 352-9330 | sales@artisantg.com | artisantg.com

**Full-service, independent repair center**
with experienced engineers and technicians on staff.

**We buy your excess, underutilized, and idle equipment**
along with credit for buybacks and trade-ins.

**Custom engineering**
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

**Expert team | Trust guarantee | 100% satisfaction**

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

**Visit our website - *Click HERE***

# MICRO MEMORY INC.

9540 Vassar Ave.
Chatsworth, Ca. 91311
(818) 998-0070


# MM6390

## USERs GUIDE

High Performance EXPANSION Memory Module for the **VME/VME64/VSBus**

# Table of Contents

## SECTION I

### GENERAL INFORMATION

1.1 INTRODUCTION . . . . . 1-1
1.2 GENERAL DESCRIPTION . . . . . 1-1
1.2.1 Memory capacity options . . . . . 1-2
1.2.2 Operational features . . . . . 1-2
1.3 GENERAL SPECIFICATIONS. . . . . 1-4
1.4 INTERFACE TIMING . . . . . 1-5
1.4.1 Refresh Timing . . . . . 1-5
1.4.2 VMEbus Interface Timing . . . . . 1-6
1.4.3 VSBus Interface Timing. . . . . 1-7
1.5 MEMORY ARRAY ORGANIZATION. . . . . 1-10

## SECTION II

### INSTALLATION

2.1 INTRODUCTION . . . . . 2-1
2.2 UNPACKING INSTRUCTIONS . . . . . 2-1
2.3 HARDWARE PREPARATION. . . . . 2-1
2.3.1 Handling Procedure. . . . . 2-1
2.4 OPERATING ENVIRONMENT . . . . . 2-2
2.4.1 Airflow and Cooling . . . . . 2-2
2.4.2 Power Requirements . . . . . 2-2
2.5 JUMPER OPTIONS . . . . . 2-2
2.5.1 Address Modifier Evaluation (Factory, A32 and A24 ENABLED) . . . . . 2-2
2.5.2 VSBus Alternate Address Space Selection (Factory, OPEN) . . . . . 2-2
2.5.3 Rescinded DTACK*/ACK* (Factory, DISABLED) . . . . . 2-3
2.5.4 VMEbus Fast! DTACK* (Factory, DISABLED) . . . . . 2-3
2.5.5 Control Status Register (CSR) Enable (Factory, ENABLED) . . . . . 2-3
2.5.6 System FAIL (SYSFAIL*) Refresh Timeout (Factory ENABLED) . . . . . 2-3
2.6 CONFIGURATION JUMPER & SWITCH SETTINGS . . . . . 2-5
2.6.1 VMEbus Module Selection . . . . . 2-5
2.6.2 VSBus Module Selection . . . . . 2-5
2.6.3 Adjusted Addressing . . . . . 2-6
2.6.4 Control Status Register (CSR) Selection . . . . . 2-6
2.7 INSTALLATION IN THE SYSTEM. . . . . 2-6

## SECTION III

### PROGRAMMING INFORMATION

3.1 Control Status Register . . . . . 3-1
3.2 Parity Error Detection . . . . . 3-1
3.3 RP - Ram Private . . . . . 3-2
3.4 Cacheable Memory Enable . . . . . 3-2

3.5 Write Wrong Parity . . . . . 3-2

# APPENDIX A

**MODULE SELECTION**

VME/VSB Switch Table (A31 - A28) . . . . . A-1
VME/VSB Switch Table (A27- A24). . . . . A-2
VME/VSB Switch Table (A23- A20). . . . . A-3

# APPENDIX B

**U1 PLD Equations**

# FIGURES

Figure 1.1 Block Diagram . . . . . 1-3
Figure 1.2 Refresh Timing. . . . . 1-5
Figure 1.3 VME Interface Timing . . . . . 1-6
Figure 1.4 VSBus Interface Timing . . . . . 1-7
Figure 1.5 Memory Array Organization. . . . . 1-10
Figure 2.1 Jumpers & Switch Locations . . . . . 2-4

# TABLES

Table 1.1 Model Numbering . . . . . 1-1
Table 1.2 General Specifications . . . . . 1-4
Table 1.3 P1 - VMEbus Connector Pin Definitions . . . . . 1-8
Table 1.4 P2 - VME/VSB Connector Definitions. . . . . 1-9
Table 3.1 C.S.R. Bit Definitions . . . . . 3-1

# SECTION II
# INSTALLATION

## 2.1 INTRODUCTION

This section details a step by step procedure to interface the MM6390D Dual Ported Memory to both the VMEbus and VSBus.

## 2.2 UNPACKING INSTRUCTIONS

Unpack module from shipping carton. If carton is damaged upon receipt, request that the carrier's agent be present during unpacking and inspection of the equipment. Refer to packing list and verify that all items are present. Save packing material for storing or reshipping the equipment. For repairs or replacement of a board damaged during shipment, contact **Micro MemoryInc** to obtain a Return Authorization number and further instructions.

## 2.3 HARDWARE PREPARATION

The memory module should be inspected and prepared for jumper placement prior to system installation. The following sections describe the proper jumper options necessary for system operation (see Section 2.5, for jumper options).

### 2.3.1 Handling Procedure

The **MM6390D** Dual Ported Memory uses CMOS components that are susceptible to damage if exposed to static electrical charges. To avoid damage of these components during handling, testing or operation, the following procedure should be used.

- Device leads should contact conductive material to avoid building of any static charge, except during testing or operation.
- Soldering iron tips, metal fixtures, tools, and handling facilities used in preparing the module for operation should be grounded.
- Devices should never be removed or inserted while power is applied to the module because voltage transients may permanently damage the devices and/or module.
- **The memory module should never be plugged in or out of the cardcage while power is applied.**
- External signals should not be applied to device inputs while power is removed.

- Any memory module removed from the system should be transferred to either non-conductive foam or an anti-static plastic bag for storage or shipment.

## 2.4 OPERATING ENVIRONMENT

The **MM6390D** Dual Ported Memory is an extremely High Density memory product. Containing, 96 bits of high current (48ma.) data bus drivers, numerous high speed components. And as a result, the environment into which the **MM6390D** Dual Ported Memory is placed, must be carefully considered.

### 2.4.1 Airflow and Cooling

Due to the extremely high component density of the **MM6390D** Dual Ported Memory, an adequate airflow is required to maintain the operating temperature within specifications of the memory module. Failure to adhere to these requirements may result in poor long term reliability.

### 2.4.2 Power Requirements

The power requirements of **MM6390D** Dual Ported Memory are such, that the module should never be operated while powered only by the P1 connector. Hence power should be applied to the appropriate pins (See Tables 1.3 & 1.4) of both the P1 and the P2 connector prior to operation of the **MM6390D** Dual Ported Memory.

## 2.5 JUMPER OPTIONS

There are several jumper options attainable on the **MM6390D** Dual Ported Memory module, depending on the user application. All of the available options are selected by installing or removing minijumpers on wirewrap pins on 0.100 inch centers. (see Figure 2.1)

### 2.5.1 Address Modifier Evaluation (Factory, A32 and A24 ENABLED)

The **MM6390D** Dual Ported Memory evaluates the Address Modifiers from the VMEbus to determine if they are to be responded to. As shipped from the factory, the **MM6390D** Dual Ported Memory responds to the EXTENDED A32 (using all 32 address bits) Address Modifier codes and the STANDARD A24 (ignoring the upper 8 bits). Optional, the USER may remove E8 to disable the EXTENDED A32 selection and/or E7 STANDARD A24 selection. These Address Modifier codes are described in Appendix D. The user may select to replace the Address Modifier selection PLD (U1), to allow for some other combination or the creation of a special (user defined) code or codes.

### 2.5.2 VSBus Alternate Address Space Selection (Factory, OPEN)

The **MM6390D** Dual Ported Memory normally is selected in the **VSBus** in the System Space, however the user may configure the **MM6390D** Dual Ported Memory to respond to the Alternate Space selection by removing jumper E5 and shorting jumper E6. (See Figure 2.1 for locations)

### 2.5.3 Rescinded DTACK*/ACK* (Factory, DISABLED)

As shipped from the factory the **MM6390D** Dual Port Memory is configured to use an 74S38 (an OPEN Collector device) to generate DTACK* (VMEbus) and ACK* (VSBus). This conforms to the VMEbus and VSBus specifications. However, on heavily loaded systems (ie: full 21 slot cardcage) this can cause DTACK* to take over 40ns to be negated. This can prevent most systems from attaining the maximum bus bandwidth of 40 Megabytes per second (100ns bus cycles). On certain system configurations (ie: those without 'PARTICIPATING SLAVES') the designer MAY wish to use a 'RESCINDED DTACK*'. That is to say an 74FCT240 (with 3 state control) is used in place of the 74S38. Moving jumper E4 from pins 1 to 2, to pins 2 to 3 will enable the VMEbus 'RESCINDED DTACK*', while moving jumper E1 from pins 1 to 2, to pins 2 to 3 will enable the same on the VSBus.

- **Caution!** This will violate **VMEbus** specifications, and should ONLY be attempted with a thorough understanding of the system and its configuration.

### 2.5.4 VMEbus Fast! DTACK* (Factory, DISABLED)

Due to **VMEbus** specification, the **MM6390** Dual Ported Memory is required to wait a minimum of 30ns before reponding to DS0* or DS1* with the DTACK* signal. If jumper E3 is removed, the **MM6390** Dual Ported Memory can repond in as little as 13ns from the earliest Data Strobe (DS0* or DS1*). Data Strobe skew (DS0* or DS1*) may cause un wanted results.

- **Caution!** This will violate **VMEbus** specifications, and should ONLY be attempted with a thorough understanding of the system and its configuration.

### 2.5.5 Control Status Register (CSR) Enable (Factory, ENABLED)

The Control Status Register (CSR) address decoding may be disabled by removing jumper E16.

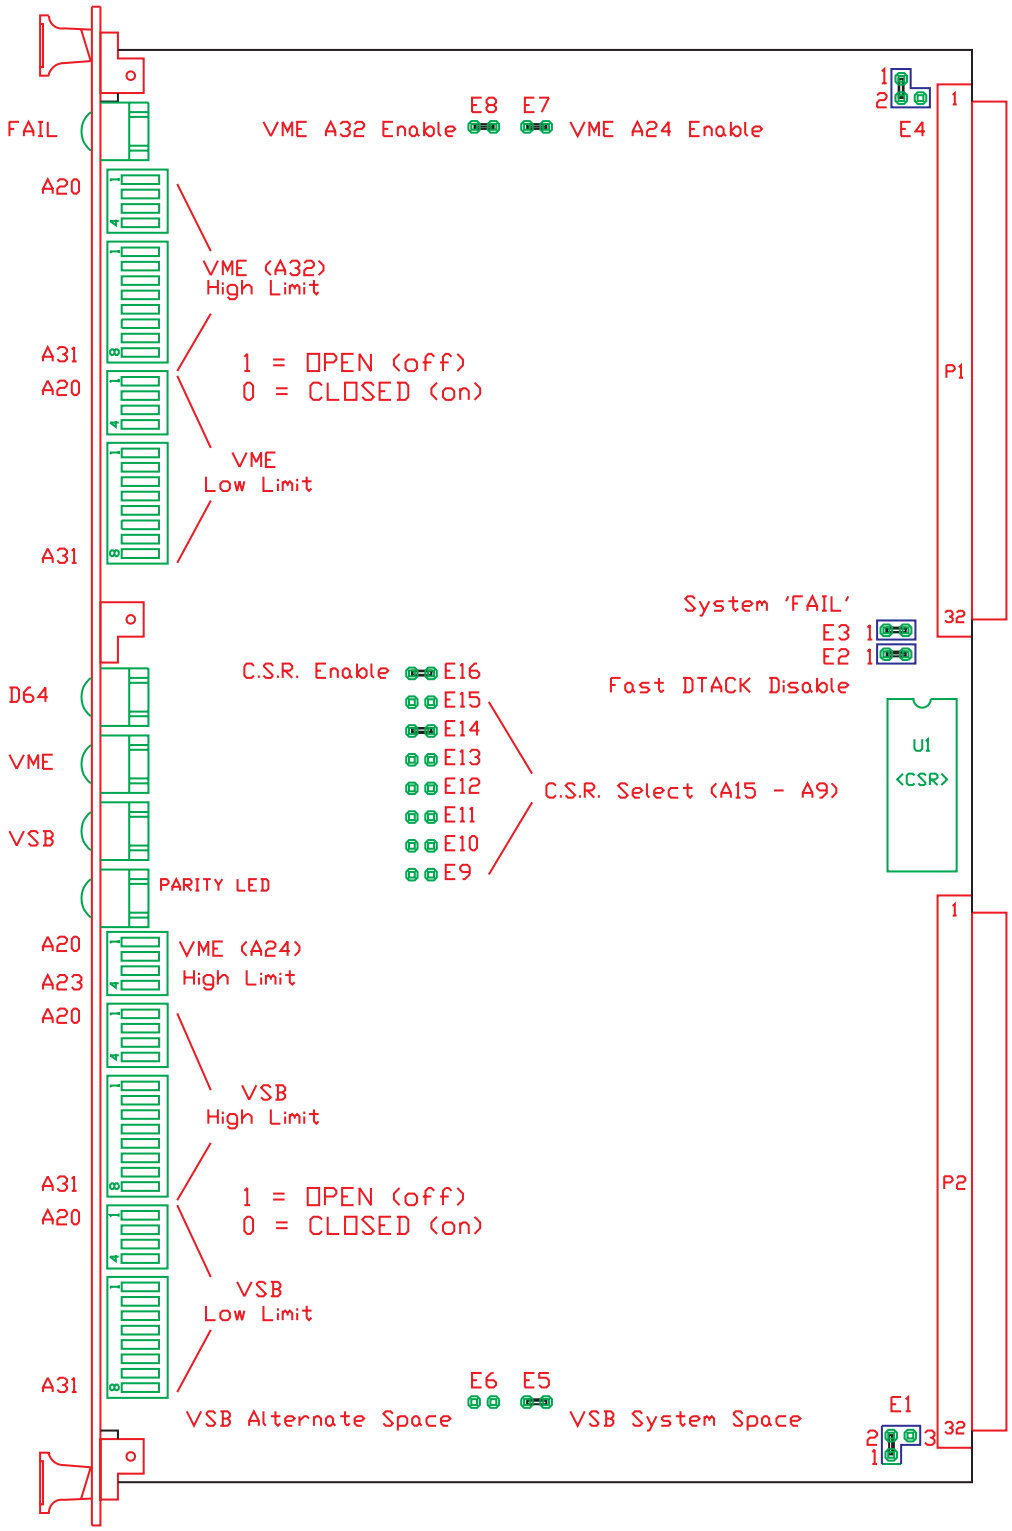



**Figure 2.1 Jumpers & Switch Locations**

### 2.5.6 System FAIL (SYSFAIL*) Refresh Timeout (Factory ENABLED)

If memory cycles exceed the refresh counter (See Section 1.4.1 Refresh Timing) capacity of 31 requests the **MM6390D** light the FAIL L.E.D. and attempt to report a 'System FAILURE' by asserting SYSFAIL* on the **VME** bus. Removal of jumper E3 will prevent SYSFAIL* from being asserted.

## 2.6 CONFIGURATION JUMPER & SWITCH SETTINGS

The **MM6390D** Dual Port Memory contains four (4) major jumper blocks and a single jumper pair that must be configured prior to installation before proper operation can be obtained. (See Figure 2.1 for jumper locations)

Each port of the **MM6390D** Dual Port Memory must be addressed within it's four (4) Gigabyte address space. The **VMEbus** port is controlled by switches SW6, SW7, SW8 & SW9, also by jumpers E7 (A24 Address Modifier Enable) and E8 (A32 Address Modifier Enable See Section 2.5.1). While the **VSBus** port is controlled by switches SW1, SW2, SW3 & SW4, also by jumpers E5 & E6 (Select Alternate Space or System Space See Section 2.5.2).

### 2.6.1 VMEbus Module Selection

Selection of the **VMEbus** lower limit and upper limit on 1024Kilobyte byte ($100000) boundaries and accomplished using switches SW6 & SW7 for the LOW LIMIT and switches SW8 & SW9 for the A32 space UPPER LIMIT. Position 4 of switches SW6 & SW8 is the most significant address (A31) and position 1 of switches SW7 & SW9 is the least significant address (A20) for both UPPER and LOWER limits. While Position 4 or SW5 is the most significant address (A23) and position 1 is the least significant address (A20) for A24 space UPPER LIMIT.

When the **MM6390D** Dual Ported Memory is selected using an A24 address modifier, the **MM6390** will automatically force a 0 on internal addresses A24 thru A31, forcing the address request into the FIRST 16Megabyte block and will use SW5 for the UPPER LIMIT selection (Position 4 is the most significant address (A23) while position 1 is the least significant (A20)).

- NOTE: The UPPER LIMIT is an inclusive address. Therefore an 128MByte board addressed to start at $00000000 would have the LOW LIMIT set to $00000000 and the UPPER LIMIT set to $07FFFFFF ($000 to $07F on the switches). **NOT** $000 to $080.

### 2.6.2 VSBus Module Selection

As with the **VMEbus** module selection, the **VSBus** lower limit and upper limit may be selected on any 1024Kilobyte byte ($100000) boundaries and is accomplished using switches SW1 & SW2 for the LOW LIMIT and switches SW3 & SW4 for the UPPER LIMIT. Position 4 of switches SW1 & SW3 is the most significant address (A31) and position 1 of switches SW2 & SW4 is the least significant address (A20) for both UPPER and LOWER limits.

- NOTE: The UPPER LIMIT is an inclusive address. Therefore an 128MByte board addressed to start at $00000000 would have the LOW LIMIT set to $00000000 and the UPPER LIMIT set to $07FFFFFF ($000 to $07F on the switches, **NOT** $000 to $080).

### 2.6.3 Adjusted Addressing

In normal operation, the **MM6390D** Dual Ported Memory would be selected on a 128/512 Megabyte boundary and simply set the UPPER and **LOWER**limits accordingly. However, in some applications the user may wish to more accurately control the starting and ending addresses. An example would be when the user wants to start the memory immediately following some on-board memory (IE: 1 Megabyte CPU on-board memory). To keep both ports aligned (IE: first byte on **VSBus** port is first byte on **VMEbus**port), the addresses applied to the **MM6390D** Dual Ported Memory must be adjusted. This is accomplished by on board circuitry that subtracts the LOW LIMIT address from the address applied from the bus. The **MM6390D** Dual Ported Memory allows the user to select an address on any 1 Megabyte boundary, and still be fully aligned.

### 2.6.4 Control Status Register (CSR) Selection

If enabled (See section 2.5.5) the CSR address selection is a combination of jumpers E15, E14, E13, E12, E11, E10, E9 and the **VMEbus**LOW LIMIT selection. The CSR is located in **VMEbus** A16 (or I/O) space, and responds to ONLY A16 Address Modifiers ($29 & $2D. See section 2.5.1 for more details). Jumper E15 corresponds to the most significant address A15 while E9 corresponds to the least significant address A9. Addresses A8 down through A1 correspond to the **VMEbus** LOW LIMIT address positions for addresses A27 through A20. Where SW7 position 8 (A27) corresponds to A8, SW7 position 7 (A26) corresponds to A7 and so on.

## 2.7 INSTALLATION IN THE SYSTEM

After selecting the memory for the proper address locations by opening/closing the appropriate switches (see Section 2.6) and installing/removing the user defined option jumpers (see Section 2.5). And after following the guidelines set forth in Section 2.3, remove power, install the **MM6390D** Dual Ported Memory into the system, reapply power to the system.

# SECTION III

## PROGRAMMING INFORMATION

## 3.1 Control Status Register

The Control Status Register (CSR) provides a **VMEbus** accessible resister to control and determine the status of the **MM6390D Dual Ported Memory**. In the following sections, the CSR bits are defined and their use is explained.

**Table 3.1 C.S.R. Bit Definitions**

```
          -
| 7 6 5 4 3 2 1 0 |
          -
  | | | | | | | |
  | | | | | | | |    (EPER) Enable Parity Error Reporting
  | | | | | | |     (WWP) Write Wrong Parity
  | | | | | |      (CACHE) CACHEable memory
  | | | | |       Not Used
  | | | |        Not Used
  | | |         Not Used
  | |          (RP) Ram Private to VSBus
  |           (PE) Parity Error
```

## 3.2 Parity Error Detection

The **MM6390D Dual Ported Memory** generates and checks for errors in the memory by calculating the parity of each byte in memory. During write cycles, the **MM6390D Dual Ported Memory** writes this bit into the array, and on read cycles it checks this bit against the bit in the array. If, during a read cycle, a difference is detected the CSR PE bit is set and if the CSR EPER bit is also set, the appropriate ERROR lead is asserted. In the case of a **VMEbus** reference, the BERR* lead is asserted instead of the DTACK* lead. However on the VSBus, the ERR* is asserted instead of the ACK* lead. The PE bit is cleared by reset or by writing a 0 into CSR bit7.

- To insure proper parity operation, the **MM6390D Dual Ported Memory** must be Initialized. That is to say a memory location **MUST** be written before it is read.

- **NOTE:** Due to certain memory caching systems used with the **VSBus**, the **MM6390D** Dual Port Memory reads ALL 32 bits during ANY read cycle. As a result, it is recommended that ALL memory be Initialized using a 32 bit write instruction (IE: The 680x0 “CLR.L” instruction or equivalent), to prevent unexpected Parity ERRORS.

## 3.3 RP - Ram Private

The **MM6390D Dual Ported Memory** may be reserved in ***TOTAL***, by setting the RP bit in the CSR to a 1. Any references made of the **MM6390D Dual Ported Memory** from the **VMEbus** port are ignored while this bit is set.

## 3.4 Cacheable Memory Enable

When set, this bit disables the CACHE* lead on the **VSBus**, indicating, to a bus master, that the selected memory is ***NOT*** cacheable.

## 3.5 Write Wrong Parity

When set, this bit will force the **MM6390** to generate the **WRONG** parity for each byte written. This allows testing of the parity bit memory device for increased system confidence.

- This mode may be used to also test BUS ERROR Reporting circuits on other boards.

# APPENDIX A
## MODULE SELECTION

### VME/VSB Switch Table (A31 - A28)

(A31 - A28) 1 = Open
0 = Close

(VMEbus = SW6 & SW8) (VSBUS = SW1 & SW3)

| Low Limit | | | | | High Limit | | | | |
|---|---|---|---|---|---|---|---|---|---|
| SWITCH POSITION | SW6/SW1 4 | 3 | 2 | 1 | SWITCH POSITION | SW8/SW3 4 | 3 | 2 | 1 |
| $0yz00000 | 0 | 0 | 0 | 0 | $0yzFFFFF | 0 | 0 | 0 | 0 |
| $1yz00000 | 0 | 0 | 0 | 1 | $1yzFFFFF | 0 | 0 | 0 | 1 |
| $2yz00000 | 0 | 0 | 1 | 0 | $2yzFFFFF | 0 | 0 | 1 | 0 |
| $3yz00000 | 0 | 0 | 1 | 1 | $3yzFFFFF | 0 | 0 | 1 | 1 |
| $4yz00000 | 0 | 1 | 0 | 0 | $4yzFFFFF | 0 | 1 | 0 | 0 |
| $5yz00000 | 0 | 1 | 0 | 1 | $5yzFFFFF | 0 | 1 | 0 | 1 |
| $6yz00000 | 0 | 1 | 1 | 0 | $6yzFFFFF | 0 | 1 | 1 | 0 |
| $7yz00000 | 0 | 1 | 1 | 1 | $7yzFFFFF | 0 | 1 | 1 | 1 |
| $8yz00000 | 1 | 0 | 0 | 0 | $8yzFFFFF | 1 | 0 | 0 | 0 |
| $9yz00000 | 1 | 0 | 0 | 1 | $9yzFFFFF | 1 | 0 | 0 | 1 |
| $Ayz00000 | 1 | 0 | 1 | 0 | $AyzFFFFF | 1 | 0 | 1 | 0 |
| $Byz00000 | 1 | 0 | 1 | 1 | $ByzFFFFF | 1 | 0 | 1 | 1 |
| $Cyz00000 | 1 | 1 | 0 | 0 | $CyzFFFFF | 1 | 1 | 0 | 0 |
| $Dyz00000 | 1 | 1 | 0 | 1 | $DyzFFFFF | 1 | 1 | 0 | 1 |
| $Eyz00000 | 1 | 1 | 1 | 0 | $EyzFFFFF | 1 | 1 | 1 | 0 |
| $Fyz00000 | 1 | 1 | 1 | 1 | $FyzFFFFF | 1 | 1 | 1 | 1 |

## VME/VSB Switch Table (A27- A24)

(A27 - A24) 1 = Open
0 = Close

(VMEbus = SW7 & SW9) (VSBUS = SW2 & SW4)

| Low Limit | | High Limit | |
|---|---|---|---|
| SWITCH POSITION | SW6/SW1 8 7 6 5 | SWITCH POSITION | SW8/SW3 8 7 6 5 |
| $x0z00000 | 0 0 0 0 | $x0zFFFFF | 0 0 0 0 |
| $x1z00000 | 0 0 0 1 | $x1zFFFFF | 0 0 0 1 |
| $x2z00000 | 0 0 1 0 | $x2zFFFFF | 0 0 1 0 |
| $x3z00000 | 0 0 1 1 | $x3zFFFFF | 0 0 1 1 |
| $x4z00000 | 0 1 0 0 | $x4zFFFFF | 0 1 0 0 |
| $x5z00000 | 0 1 0 1 | $x5zFFFFF | 0 1 0 1 |
| $x6z00000 | 0 1 1 0 | $x6zFFFFF | 0 1 1 0 |
| $x7z00000 | 0 1 1 1 | $x7zFFFFF | 0 1 1 1 |
| $x8z00000 | 1 0 0 0 | $x8zFFFFF | 1 0 0 0 |
| $x9z00000 | 1 0 0 1 | $x9zFFFFF | 1 0 0 1 |
| $xAz00000 | 1 0 1 0 | $xAzFFFFF | 1 0 1 0 |
| $xBz00000 | 1 0 1 1 | $xBzFFFFF | 1 0 1 1 |
| $xCz00000 | 1 1 0 0 | $xCzFFFFF | 1 1 0 0 |
| $xDz00000 | 1 1 0 1 | $xDzFFFFF | 1 1 0 1 |
| $xEz00000 | 1 1 1 0 | $xEzFFFFF | 1 1 1 0 |
| $xFz00000 | 1 1 1 1 | $xFzFFFFF | 1 1 1 1 |

## VME/VSB Switch Table (A23- A20)

(A23 - A20) 1 = Open
0 = Close

(VMEbus = SW7 & SW9) (VSBUS = SW2 & SW4)

| Low Limit | | | | | High Limit | | | | |
|---|---|---|---|---|---|---|---|---|---|
| SWITCH POSITION | SW6/SW1 4 | 3 | 2 | 1 | SWITCH POSITION | SW8/SW3 4 | 3 | 2 | 1 |
| $xy000000 | 0 | 0 | 0 | 0 | $xy0FFFFF | 0 | 0 | 0 | 0 |
| $xy100000 | 0 | 0 | 0 | 1 | $xy1FFFFF | 0 | 0 | 0 | 1 |
| $xy200000 | 0 | 0 | 1 | 0 | $xy2FFFFF | 0 | 0 | 1 | 0 |
| $xy300000 | 0 | 0 | 1 | 1 | $xy3FFFFF | 0 | 0 | 1 | 1 |
| $xy400000 | 0 | 1 | 0 | 0 | $xy4FFFFF | 0 | 1 | 0 | 0 |
| $xy500000 | 0 | 1 | 0 | 1 | $xy5FFFFF | 0 | 1 | 0 | 1 |
| $xy600000 | 0 | 1 | 1 | 0 | $xy6FFFFF | 0 | 1 | 1 | 0 |
| $xy700000 | 0 | 1 | 1 | 1 | $xy7FFFFF | 0 | 1 | 1 | 1 |
| $xy800000 | 1 | 0 | 0 | 0 | $xy8FFFFF | 1 | 0 | 0 | 0 |
| $xy900000 | 1 | 0 | 0 | 1 | $xy9FFFFF | 1 | 0 | 0 | 1 |
| $xyA00000 | 1 | 0 | 1 | 0 | $xyAFFFFF | 1 | 0 | 1 | 0 |
| $xyB00000 | 1 | 0 | 1 | 1 | $xyBFFFFF | 1 | 0 | 1 | 1 |
| $xyC00000 | 1 | 1 | 0 | 0 | $xyCFFFFF | 1 | 1 | 0 | 0 |
| $xyD00000 | 1 | 1 | 0 | 1 | $xyDFFFFF | 1 | 1 | 0 | 1 |
| $xyE00000 | 1 | 1 | 1 | 0 | $xyEFFFFF | 1 | 1 | 1 | 0 |
| $xyF00000 | 1 | 1 | 1 | 1 | $xyFFFFFF | 1 | 1 | 1 | 1 |

# APPENDIX B
## U1 PLD Equations

```
TITLE     MM6390 VMEbus AM Control
PATTERN   U1 - PN46102
REVISION  NC
AUTHOR    Michael Hasenfratz
COMPANY   Micro Memory Inc. Chatsworth, Ca.
DATE      January 4, 1993 [04:59pm]

;       This device controls the VMEbus Address Modifier/Selection

CHIP AM PAL22V10

AM0      ; Address Modifier 0
AM1      ; Address Modifier 1
AM2      ; Address Modifier 2
AM3      ; Address Modifier 3
AM4      ; Address Modifier 4
AM5      ; Address Modifier 5
SRST     ; System RESET
AS       ; Address Strobe
DIS      ; VMEbus DISable
WR       ; VME WRite
/CSRHEQ  ; CSR HIGH .EQ.
GND      ; Ground (Vss)
/CSRLEQ  ; CSR LOW  .EQ.
NC       ; No Connection
/IACK    ; Interrupt ACKnowlage
D64      ; VME D64 (MBLT) AM
SHTBLK   ; SHORT BLOCK AM
BLK      ; BLOCK MODE REQUESTED
/WRCSR   ; WRITE to CSR
/RDCSR   ; READ from CSR
/AMCSR   ; VME I/O (A16) AM
/AM24    ; VME A24 AM
/AM32    ; VME A32 AM
VCC      ; Power (Vdd)

NC       ; No Connection

EQUATIONS

AM32     = /AM5 * /AM4 *  AM3 * /AM2 * /AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 * /AM2 *  AM1 * /AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 * /AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 *  AM1 * /AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
```

```
AM24     =  AM5 *  AM4 *  AM3 * /AM2 * /AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 *  AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 * /AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 *  AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS

AMCSR    =  AM5 * /AM4 *  AM3 * /AM2 * /AM1 *  AM0 * /SRST * /IACK
         +  AM5 * /AM4 *  AM3 *  AM2 * /AM1 *  AM0 * /SRST * /IACK

BLK      = /AM5 * /AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS

D64      = /AM5 * /AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 * /AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 * /AM1 * /AM0 * /SRST * /IACK * /DIS

SHTBLK   =  AM5 *  AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         +  AM5 *  AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 * /AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS
         + /AM5 * /AM4 *  AM3 *  AM2 *  AM1 *  AM0 * /SRST * /IACK * /DIS

RDCSR    =  AM5 * /AM4 *  AM3 * /AM2 * /AM1 *  AM0 * /SRST * /IACK * /WR * CSRHEQ * CSRLEQ
         +  AM5 * /AM4 *  AM3 *  AM2 * /AM1 *  AM0 * /SRST * /IACK * /WR * CSRHEQ * CSRLEQ

WRCSR    =  AM5 * /AM4 *  AM3 * /AM2 * /AM1 *  AM0 * /SRST * /IACK *  WR * CSRHEQ * CSRLEQ
         +  AM5 * /AM4 *  AM3 *  AM2 * /AM1 *  AM0 * /SRST * /IACK *  WR * CSRHEQ * CSRLEQ
```

**Artisan Technology Group** is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP