

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *National Instruments AT-AO-6* at our website: ***Click HERE***

DAQ

Getting Started with SCXI™

June 1996 Edition
Part Number 320515C-01

© Copyright 1993, 1996 National Instruments Corporation. All Rights Reserved.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Internet Support

GPIB: gpib.support@natinst.com
DAQ: daq.support@natinst.com
VXI: vxi.support@natinst.com
LabVIEW: lv.support@natinst.com
LabWindows: lw.support@natinst.com
HiQ: hiq.support@natinst.com
VISA: visa.support@natinst.com

E-mail: info@natinst.com
FTP Site: ftp.natinst.com
Web Address: http://www.natinst.com



Bulletin Board Support

BBS United States: (512) 794-5422 or (800) 327-3077
BBS United Kingdom: 01635 551422
BBS France: 1 48 65 15 59



FaxBack Support

(512) 418-1111



Telephone Support (U.S.)

Tel: (512) 795-8248
Fax: (512) 794-5678



International Offices

Australia 03 9 879 9422, Austria 0662 45 79 90 0, Belgium 02 757 00 20,
Canada (Ontario) 519 622 9310, Canada (Québec) 514 694 8521, Denmark 45 76 26 00,
Finland 90 527 2321, France 1 48 14 24 24, Germany 089 741 31 30, Hong Kong 2645 3186,
Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456, Mexico 95 800 010 0793,
Netherlands 0348 433466, Norway 32 84 84 00, Singapore 2265886, Spain 91 640 0085,
Sweden 08 730 49 70, Switzerland 056 200 51 51, Taiwan 02 377 1200, U.K. 01635 523545

National Instruments Corporate Headquarters

6504 Bridge Point Parkway Austin, TX 78730-5039 Tel: (512) 794-0100

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Important Information

Warranty

SCXI devices are warranted against defects in materials and workmanship for a period of one year from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this manual is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THERETOFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

Portions, copyright 1989-1996 Datalight, Inc. All rights reserved.

Trademarks

ComponentWorks®, LabVIEW®, NI-DAQ®, RTSI®, DAQPad™, DAQCard™, and SCXI™ are trademarks of National Instruments Corporation.

Product and company names listed are trademarks or trade names of their respective companies.

WARNING REGARDING MEDICAL AND CLINICAL USE OF NATIONAL INSTRUMENTS PRODUCTS

National Instruments products are not designed with components and testing intended to ensure a level of reliability suitable for use in treatment and diagnosis of humans. Applications of National Instruments products involving medical or clinical treatment can create a potential for accidental injury caused by product failure, or by errors on the part of the user or application designer. Any use or application of National Instruments products for or involving medical or clinical treatment must be performed by properly trained and qualified medical personnel, and all traditional medical safeguards, equipment, and procedures that are appropriate in the particular situation to prevent serious injury or death should always continue to be used when National Instruments products are being used. National Instruments products are NOT intended to be a substitute for any form of established process, procedure, or equipment used to monitor or safeguard human health and safety in medical or clinical treatment.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

About This Guide

Organization of This Guide xi
Conventions Used in This Guide xii
Related Documentation xiii
Customer Communication xiii

Chapter 1
Introduction to SCXI

What You Need to Get Started 1-3
Identifying Your SCXI Components 1-3
- SCXI Chassis 1-4
- SCXI Modules 1-5
- SCXI Terminal Blocks 1-7
- Connector-and-Shell Assemblies 1-10
- DAQ Plug-In Boards and PC Cards 1-11
- DAQ Modules 1-12
- SCXI Cable Assemblies 1-12
- SCXI Multichassis System with Plug-In DAQ Board 1-13
- Optional Software 1-14

Overview of SCXI Operation 1-15
- Analog Input Modules 1-15
- Digital and Analog Output Modules 1-17

Chapter 2
Installing SCXI Modules and Connecting the SCXI System to the DAQ Board

Installing Your Software 2-1
Installing Your DAQ Device 2-2
Installing Your SCXI Modules 2-2
Connecting the SCXI System to the DAQ Device or Computer 2-2
- Using the Parallel Port 2-2
- Using a Plug-in DAQ Board or PC Card 2-3
- Using an RS-232 or RS-485 Serial Port 2-6

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 3
Configuring Your SCXI Hardware and Software

Module Configuration 3-1
Analog Modules 3-2
Types of Signals 3-3
Ground-Referenced and Floating Signal Sources 3-3
SCXI-1100 Module 3-4
SCXI-1102 Module 3-8
Current-Loop Receivers 3-8
SCXI-1120 Module 3-9
SCXI-1121 Module 3-13
SCXI-1122 Module 3-22
Current-Loop Receivers 3-24
Scanning Techniques 3-24
Calibration Procedure 3-25
SCXI-1124 Module 3-25
SCXI-1140 Module 3-27
DAQ Device Connections in Multiple-Module Systems 3-28
User-Configurable Jumpers and DIP Switches 3-28
SCXI-1141 Module 3-31
Digital SCXI Modules 3-34
Communication Modes 3-34
Serial Mode 3-34
Parallel Mode 3-34
SCXI-1160 Module 3-35
SCXI-1161 Module 3-36
SCXI-1162 Module 3-37
SCXI-1162HV Module 3-39
SCXI-1163 Module 3-42
SCXI-1163R Module 3-45
SCXI-1200 Module 3-48
Parallel Port Interface 3-48
Module Configuration 3-49
Analog I/O Configuration 3-49
Analog Output Configuration 3-50
Analog Input Configuration 3-50
RSE Input (Eight Channels, Factory Setting) 3-51
NRSE Input (Eight Channels) 3-51
DIFF Input (Four Channels) 3-51
Analog Input Polarity and Range Configuration 3-52
SCXI-1180 Feedthrough Panel 3-53
SCXI-1181 Breadboard Module 3-54

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-2400 Serial Communications Module 3-54
Baud Rate and Address Configuration 3-55
SCXI Chassis 3-56
SCXI-2000 Chassis with Serial Communications 3-56
Baud Rate and Address Configuration 3-56
SCXI-1000, SCXI-1000DC, and SCXI-1001 Chassis 3-56
Configure Your Software for Use with SCXI Products 3-57
Example Programs 3-57

Chapter 4
Connecting and Using Accessories and Transducers

Connecting Signal Wires to the SCXI System 4-1
SCXI-13*XX* Terminal Blocks 4-2
TBX Terminal Blocks 4-3
Onboard Temperature Sensors for Cold-Junction Compensation ... 4-4
Opening the SCXI-13*XX* Terminal Block 4-5
Connector-and-Shell Assemblies 4-6
Connecting Transducers to the SCXI System 4-7
Thermocouples 4-7
Using Thermocouples with the SCXI-1100 4-7
Using Thermocouples with the SCXI-1102 4-8
Using Thermocouples with the SCXI-1120, the SCXI-1121, and SCXI-1122 4-8
Noise and Filtering 4-8
Strain Gauges 4-9
RTDs 4-15
Excitation Channel Signal Connections on the SCXI-1122 4-18
Excitation Level 4-18
Using the Internal Half-Bridge Completion 4-18
Analog Circuitry 4-19
Analog Input Channels 4-19
Excitation Output Channels 4-21
Analog Output Channel Signal Connections on the SCXI-1124 4-24
Chassis Ground Connections 4-27

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 5
SCXI Troubleshooting and Common Questions

Troubleshooting Tips 5-1
Common Questions and Problems 5-2

Appendix A
Customer Communication

Glossary

Index

Figures

Figure 1-1. SCXI Configurations 1-2
Figure 1-2. SCXI System Components 1-4
Figure 1-3. SCXI Chassis Signal Routing 1-5
Figure 1-4. Terminal Block Options 1-8
Figure 1-5. Multichassis SCXI System with Shielded Cabling 1-13
Figure 1-6. The Relationship Between the Programming Environment, NI-DAQ, and Your Hardware 1-15
Figure 1-7. SCXI Signal Routing 1-16

Figure 2-1. Attaching the SCXI Cable Assembly to the SCXI Module and Chassis 2-5

Figure 3-1. Removing the SCXI Module Grounding Screw 3-1
Figure 3-2. Removing the SCXI Module Cover 3-2
Figure 3-3. Scanning Techniques 3-25
Figure 3-4. SCXI-1200 Front Connector Pin Assignments 3-53
Figure 3-5. SCXI-2400 Module Default Switch Settings 3-55

Figure 4-1. TBX Terminal Block Cabled to an SCXI Module 4-3
Figure 4-2. Removing the Terminal Block Grounding Screw 4-5
Figure 4-3. Removing the Terminal Block Cover 4-6
Figure 4-4. Connecting the Half-Bridge Strain Gauge to Channel 1 of the SCXI-1321 Terminal Block 4-10
Figure 4-5. Quarter-Bridge Configurations 4-12
Figure 4-6. Half-Bridge Configurations 4-13
Figure 4-7. Full-Bridge Configurations 4-14

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4-8. Connecting a Four-Wire Platinum RTD to Channel 1 of the SCXI-1320 4-16
Figure 4-9. SCXI-1121 RTD Configurations 4-17
Figure 4-10. Connecting a Quarter-Bridge Strain Gauge to Channel 0 4-19
Figure 4-11. Series Connection with Current Excitation 4-23
Figure 4-12. Four-Wire Scan Connection with Multiplexed Current Excitation 4-23
Figure 4-13. DAC Channel Connection as Voltage Output 4-25
Figure 4-14. DAC Channel Connection as Current Output, Internal Loop Supply 4-25
Figure 4-15. DAC Channel Connection as Current Output, External Loop Supply 4-26
Figure 4-16. Current Loop Connection, Load and External Supply Both Grounded 4-27

Tables

Table 1-1. SCXI Modules 1-6
Table 1-2. Direct-Mount Terminal Blocks 1-9
Table 1-3. TBX Terminal Blocks for SCXI 1-10
Table 1-4. AI and MIO DAQ Devices 1-11
Table 1-5. SCXI Cable Assemblies 1-12

Table 3-1. SCXI-1100 Input Signal Referencing Jumper Configurations 3-5
Table 3-2. SCXI-1100 Filtering Jumper Configurations 3-6
Table 3-3. SCXI-1100 PGIA Referencing Jumper Configurations 3-7
Table 3-4. SCXI-1102 Jumper Configurations 3-8
Table 3-5. SCXI-1120 Input Channels and Corresponding Gain Jumpers 3-10
Table 3-6. SCXI-1120 Gain Jumper Configurations 3-10
Table 3-7. SCXI-1120 First-Stage and Second-Stage Filter Jumper Configurations 3-11
Table 3-8. SCXI-1120 Signal Referencing Jumper Configurations 3-12
Table 3-9. SCXI-1121 First-Stage and Second-Stage Gain Jumper Configurations 3-14
Table 3-10. SCXI-1121 Gain Jumper Configurations 3-15
Table 3-11. SCXI-1121 First-Stage and Second-Stage Filter Jumper Configurations 3-16
Table 3-12. SCXI-1121 Excitation Mode Jumper Configurations 3-16
Table 3-13. SCXI-1121 Excitation Level Jumper Configurations 3-18
Table 3-14. SCXI-1121 Maximum Load per Excitation Channel 3-19
Table 3-15. SCXI-1121 Half-Bridge Completion Network Jumper Configurations 3-20
Table 3-16. SCXI-1121 Signal Referencing Jumper Configurations 3-21
Table 3-17. SCXI-1122 Digital Signal Jumper Configurations 3-23

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-18. SCXI-1122 Analog Jumper Configuration 3-23
Table 3-19. SCXI-1124 Chassis Jumper Configurations 3-26
Table 3-20. SCXI-1124 Device-Type Jumper Configurations 3-27
Table 3-21. SCXI-1140 Signal Referencing Jumper Configurations 3-29
Table 3-22. SCXI-1140 Instrumentation Amplifier Jumper Configurations 3-29
Table 3-23. SCXI-1140 Gain Switches for Each Channel 3-30
Table 3-24. SCXI-1140 Switch Settings for Gain Selection 3-31
Table 3-25. SCXI-1141 Chassis Jumper Configurations 3-32
Table 3-26. SCXI-1141 Grounding and Shielding Jumper Configurations 3-33
Table 3-27. SCXI-1160 Digital Jumper Configurations 3-36
Table 3-28. SCXI-1161 Digital Jumper Configurations 3-36
Table 3-29. SCXI-1162 Mode Jumper Configurations 3-37
Table 3-30. SCXI-1162 Parallel Lines Jumper Configurations 3-38
Table 3-31. SCXI-1162 Device-Type Jumper Configurations 3-39
Table 3-32. SCXI-1162HV Jumper Configurations 3-40
Table 3-33. SCXI-1163 Device-Type Jumper Configurations 3-42
Table 3-34. SCXI-1163 Mode Jumper Configurations 3-43
Table 3-35. SCXI-1163R Device-Type Jumper Configurations 3-46
Table 3-36. SCXI-1163R Chassis and Mode Jumper Configurations 3-47
Table 3-37. SCXI-1200 Analog I/O Settings 3-49
Table 3-38. SCXI-1200 Analog Input Configurations 3-50
Table 3-39. SCXI-1200 Jumper Configurations 3-52

Table 4-1. SCXI Module and Connector Compatibility 4-1
Table 4-2. TBX Terminal Block Compatibility with SCXI Modules 4-3
Table 4-3. SCXI-1122 Maximum Load per Excitation Channel 4-18
Table 4-4. Sense and Current Output Channel Associations 4-20
Table 4-5. Pros and Cons of Two-Wire and Four-Wire Connections with Current-Excited Transducers 4-24

Table 5-1. Onboard Resources Reserved by SCXI 5-7

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

About This Guide

This guide is a beginner's handbook to the installation, configuration, and use of the National Instruments Signal Conditioning eXtensions for Instrumentation (SCXI) chassis, modules, and associated data acquisition (DAQ) boards. This guide is an introduction to SCXI, not a complete reference. Advanced users should refer to the appropriate hardware and software manuals for further information.

Organization of This Guide

Getting Started with SCXI™ is organized as follows:

- Chapter 1, *Introduction to SCXI*, gives a brief overview of SCXI and helps you identify the components of an SCXI system.
- Chapter 2, *Installing SCXI Modules and Connecting the SCXI System to the DAQ Board*, describes how to install your SCXI hardware and how to connect your SCXI system to your computer.
- Chapter 3, *Configuring Your SCXI Hardware and Software*, explains how to configure your SCXI hardware and National Instruments software.
- Chapter 4, *Connecting and Using Accessories and Transducers*, describes the function and use of the SCXI terminal blocks and connector-and-shell assemblies and explains how to connect three commonly used transducers—thermocouples, strain gauges, and resistive temperature devices (RTDs)—to your SCXI system.
- Chapter 5, *SCXI Troubleshooting and Common Questions*, contains troubleshooting tips and answers to questions that SCXI users commonly ask National Instruments technical support staff.
- Appendix A, *Customer Communication*, contains forms you can use to request help from National Instruments or to comment on our products and manuals.
- The *Glossary* contains an alphabetical list and description of terms used in this guide, including abbreviations, acronyms, metric prefixes, mnemonics, and symbols.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- The *Index* contains an alphabetical list of key terms and topics in this manual, including the page where you can find each one.

Conventions Used in This Guide

The following conventions are used in this guide.

516 device	Refers to the DAQCard-516 and PC-516.
AI device	Refers to analog input devices that have *AI* in their names, such as the NEC-AI-16E-4.
AT E Series devices	These AT devices have an *E-* toward the ends of their names, such as the AT-MIO-16DE-10 and AT-AI-16XE-10.
bold	Bold text denotes menus, menu items, or dialog box buttons or options.
bold italic	Bold italic text denotes a note, caution, or warning.
DAQCard-500/700	Refers to the DAQCard-500 and DAQCard-700.
DAQCard E Series	Refers to the DAQCard-AI-16E-4 and DAQCard-AI-16XE-50.
DIO-24	Refers to the PC-DIO-24 and DAQCard-DIO-24.
DIO-32F	Refers to the AT-DIO-32F.
DIO-96PnP	Refers to the PC-DIO-96/PnP.
DIO device	Refers to any digital I/O devices that have *DIO* in their names, such as the AT-DIO-32F or PC-DIO-96/PnP.
italic	Italic text denotes emphasis, a cross reference, or an introduction to a key concept.
Lab/1200 device	Refers to the DAQCard-1200, DAQPad-1200, Lab-PC+, Lab-PC-1200, Lab-PC-1200AI, and SCXI-1200.
LPM device	Refers to the PC-LPM-16 and PC-LPM-16PnP.
MIO device	Refers to the multifunction I/O devices that have *MIO* in their names, such as the AT-MIO-16 and NEC-MIO-16E-4.
MIO-16D	Refers to the MIO-16D and AT-MIO-16DE-10.
`monospace`	Text in this font denotes text or characters that are to be literally input from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, variables, filenames, and extensions, and for statements and comments taken from program code.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NI-DAQ	Refers to the NI-DAQ software for PC compatibles unless otherwise noted.
Remote SCXI	Refers to an SCXI configuration where either an SCXI-2000 chassis or an SCXI-2400 remote communications module is connected to the serial port of your computer.
SCXI analog input module	Refers to the SCXI-1100, SCXI-1102, SCXI-1120, SCXI-1121, SCXI-1122, SCXI-1140, and SCXI-1141.
SCXI analog output module	Refers to the SCXI-1124.
SCXI chassis	Refers to the SCXI-1000, SCXI-1000DC, SCXI-1001, and SCXI-2000.
SCXI communication module	Refers to the SCXI-2400.
SCXI digital module	Refers to the SCXI-1160, SCXI-1161, SCXI-1162, SCXI-1162HV, SCXI-1163, and SCXI-1163R.
SCXI DAQ module	Refers to the SCXI-1200.

Abbreviations, acronyms, metric prefixes, mnemonics, symbols, and terms are listed in the *Glossary*.

Related Documentation

As you read this manual, you may find it helpful to refer to the following documents:

- Your SCXI chassis, module, terminal block, connector-and-shell, application notes, and cable assembly user manuals or installation guides
- Your DAQ hardware user manual
- Your National Instruments software manuals

Customer Communication

National Instruments wants to receive your comments on our products and manuals. We are interested in the applications you develop with our products, and we want to help if you have problems with them. To make it easy for you to contact us, this guide contains comment and configuration forms for you to complete. These forms are in Appendix A, *Customer Communication*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Introduction to SCXI

Chapter 1

This chapter gives a brief overview of SCXI and helps you identify the components of an SCXI system.

Figure 1-1 shows how you can use SCXI's flexible architecture in three ways—as a front-end signal conditioning system for plug-in DAQ devices, or as an external DAQ system that attaches either directly to the computer parallel port or via an RS-232 or RS-485 serial connection.

Figure 1-1a shows SCXI products as a front-end signal conditioning system for plug-in DAQ devices. The SCXI chassis can house a variety of signal conditioning and instrumentation modules. Analog signals are conditioned and passed back to a single plug-in DAQ device for acquisition directly into computer memory. The plug-in DAQ device also controls and monitors the operation of digital I/O and analog output modules in the SCXI system. You can monitor and control up to 3,072 signals with a single plug-in DAQ device.

Figure 1-1b shows an SCXI-1200 DAQ module with which you can acquire and condition your signals in the SCXI chassis external to the computer. The 12-bit SCXI-1200 module in an SCXI chassis digitizes the conditioned analog signals and transmits the digital data to the computer parallel port.

Figure 1-1c shows an SCXI system that uses an SCXI-2000 or SCXI-2400 to transmit data digitized by an SCXI-1200 to the computer via an RS-232 or RS-485 serial connection. If you use an RS-485, you can connect multiple SCXI chassis to a single network. If you use an SCXI chassis without any analog input modules, you do not need an SCXI-1200 module in that chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

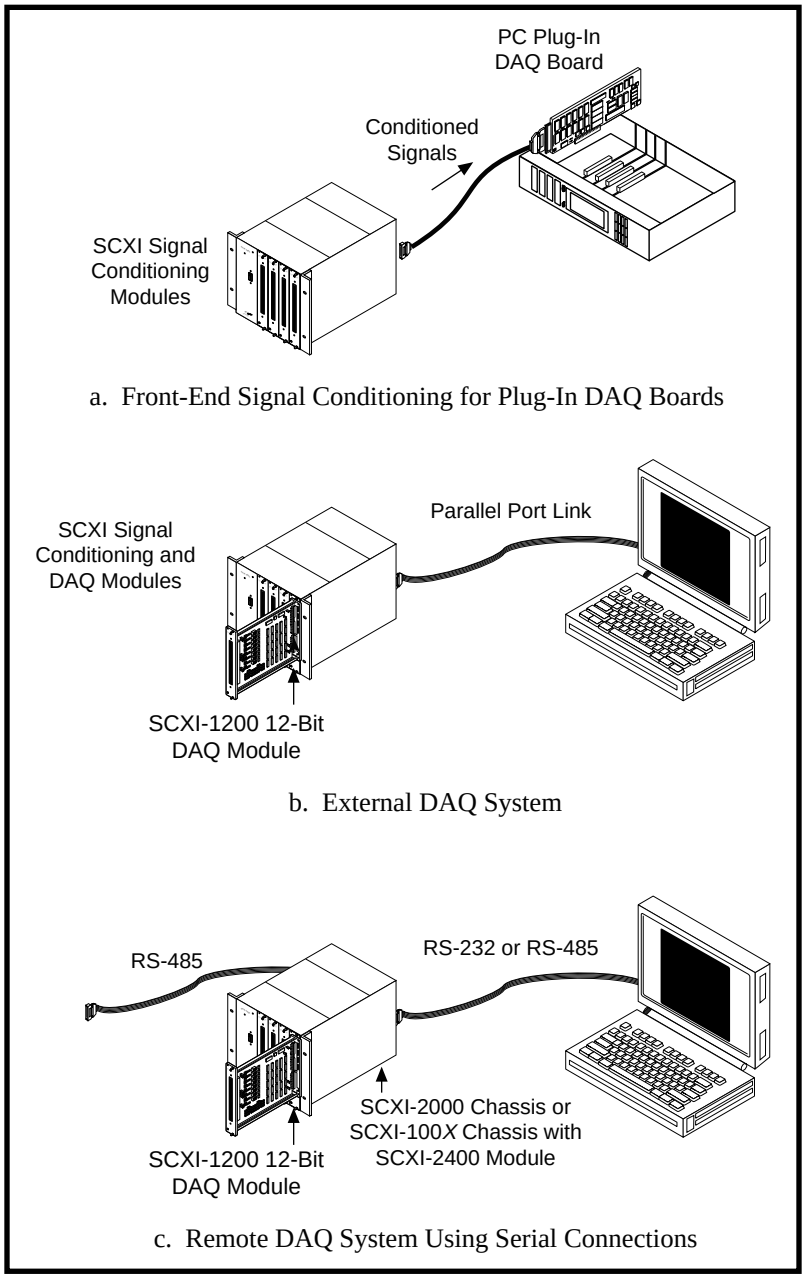


Figure 1-1. SCXI Configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

What You Need to Get Started

To set up and use your SCXI system, you will need the following:

- ❑ One of the following chassis and the *SCXI Chassis User Manual*:
  - SCXI-1000
  - SCXI-1000DC
  - SCXI-1001
  - SCXI-2000
- ❑ *SCXI Getting Started Pack*
- ❑ SCXI modules and terminal blocks to use in your chassis
- ❑ SCXI-1200 DAQ module or DAQ device
- ❑ SCXI cable assemblies
- ❑ Your computer
- ❑ One of the following software packages and documentation:
  - LabVIEW for Macintosh
  - LabVIEW for Windows
  - LabWindows®/CVI for Windows
  - NI-DAQ software for Macintosh
  - NI-DAQ software for PC compatibles
  - ComponentWorks

Identifying Your SCXI Components

The basic components of the SCXI system are terminal blocks, modules, chassis, cable assemblies, DAQ devices, and software, as shown in Figure 1-2. Refer to Chapter 1, *Introduction*, of your National Instruments DAQ board or SCXI module user manual for unpacking instructions. The following sections briefly describe the components of an SCXI system and help you to identify each component and to understand how they work together.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

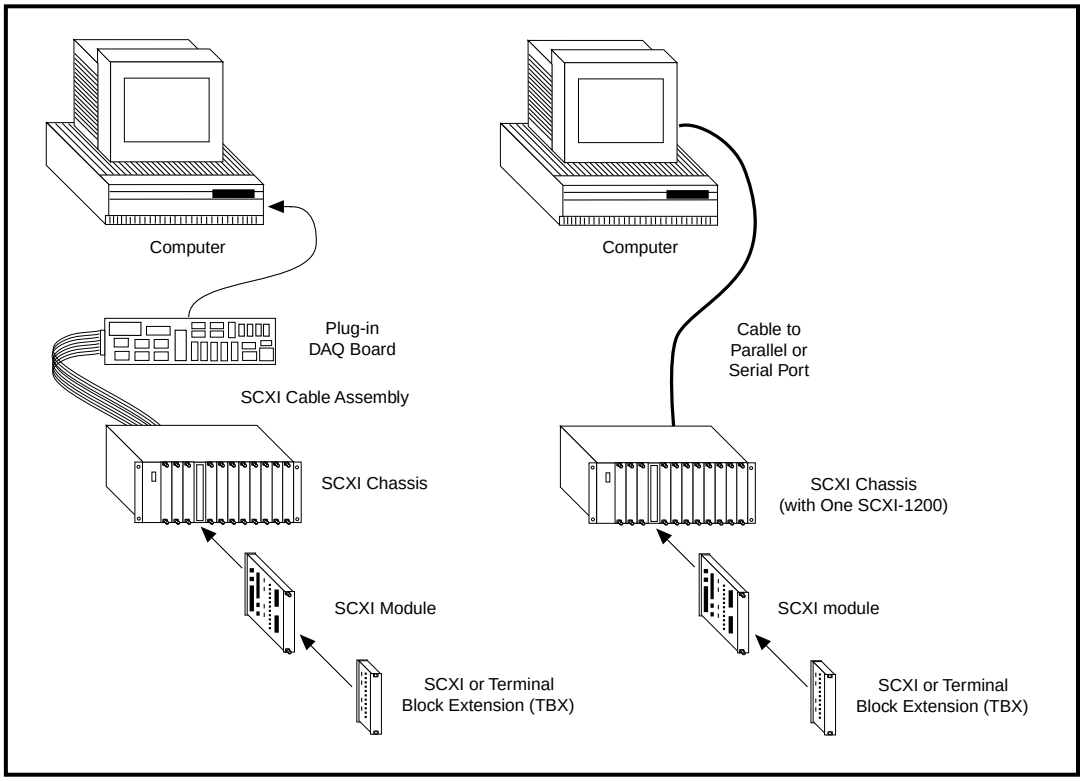


Figure 1-2. SCXI System Components

SCXI Chassis

The SCXI chassis houses the SCXI modules, supplying power and controlling the data and control lines of the SCXIbus. National Instruments offers four SCXI chassis:

- SCXI-1000 4-slot chassis
- SCXI-1000DC 4-slot, DC-powered chassis
- SCXI-1001 12-slot chassis for multichassis configurations
- SCXI-2000 4-slot, RS-232/485 serial communication chassis

The rugged aluminum SCXI chassis consists of an analog bus, a digital bus, and a chassis controller that regulates bus operation, as shown in Figure 1-3. The analog bus transfers analog signals from all resident modules to the DAQ board via a connection from one of the modules to the DAQ board. The digital lines of the DAQ board communicate with

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

the SCXI chassis controller and manipulate the digital bus, which controls chassis operation.

The SCXI-2000 chassis also includes a communication processor that you can use to connect the SCXI system directly to the RS-232 serial port of a computer, or to an RS-485 network for long-distance communications.

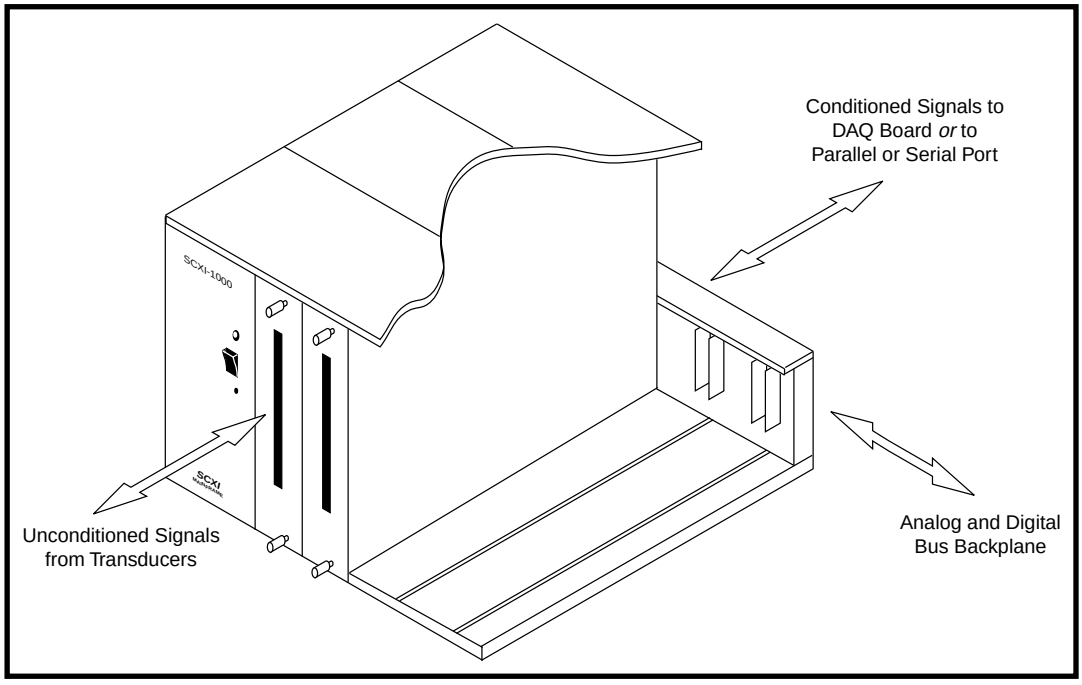


Figure 1-3. SCXI Chassis Signal Routing

SCXI Modules

National Instruments produces a range of SCXI modules for the SCXI chassis. Various analog input modules can multiplex, amplify, filter, and isolate voltage and current signals. Some modules have excitation potentials or currents and half-bridge completion networks for transducers such as strain gauges or resistive temperature devices (RTDs). Digital modules isolate digital signals through relays or optocouplers.

With the SCXI-1181 breadboard module, you can design custom circuits such as signal conditioning and filtering networks to your own specifications.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The SCXI-2400 module is a serial communication module with the same RS-232 and RS-485 capabilities as the SCXI-2000 chassis. Use the SCXI-2400 for remote or long-distance communication.

Table 1-1 lists the National Instruments SCXI modules and accessories. For detailed descriptions of the National Instruments SCXI modules, refer to Chapter 3, *Configuring Your SCXI Hardware and Software*.

Table 1-1. SCXI Modules

Product	Classification	Description
SCXI-1100	Analog input	32-channel differential multiplexer/amplifier
SCXI-1102	Analog input	32-channel amplifier module for thermocouples
SCXI-1120	Analog input	8-channel isolated amplifier
SCXI-1121	Analog input	4-channel isolated amplifier with excitation
SCXI-1122	Analog input	16-channel isolated transducer multiplexer
SCXI-1124	Analog output	6-channel isolated D/A converter
SCXI-1140	Analog input	8-channel simultaneously sampling differential amplifier
SCXI-1141	Analog input	8-channel programmable lowpass filter
SCXI-1160	Digital	16-channel electromechanical single-pole double-throw (SPDT) relay
SCXI-1161	Digital	8-channel electromechanical SPDT relay
SCXI-1162	Digital input	32-channel optically isolated digital input
SCXI-1162HV	Digital input	32-channel optically isolated high-voltage digital input
SCXI-1163	Digital output	32-channel optically isolated digital output
SCXI-1163R	Digital input	32-channel optically isolated solid-state relay
SCXI-1180	Accessory	Feedthrough panel
SCXI-1181	Accessory	Breadboard
SCXI-1200	Analog, digital, and timing I/O	Multifunction module with parallel port communication
SCXI-2400	Serial communication	RS-232/RS-485 serial communication interface

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI Terminal Blocks

SCXI terminal blocks attach directly to the front of an SCXI module and provide a quick, convenient method for connecting I/O signals to your system. There are two types of SCXI terminal blocks—direct-mount or TBX—that connect to SCXI modules.

Direct-mount terminal blocks connect transducers to the screw terminals that are in a fully shielded terminal block enclosure. Strain-relief clamps hold the signal wires in place.

Terminal block extensions (TBXs) are DIN rail-mountable and attach to SCXI modules with shielded cables. These TBX terminal blocks are functionally equivalent to their direct-mount terminal block counterparts. Figure 1-4 shows the terminal block options and Table 1-2 lists the modules with which they work. Table 1-3 lists the TBX terminal blocks and the modules with which they work.

Several terminal blocks have a temperature sensor for cold-junction compensation with thermocouples. Terminal blocks can also provide additional signal conditioning functionality, including high-voltage attenuation, AC/DC coupling, bridge offset nulling, and shunt calibration.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

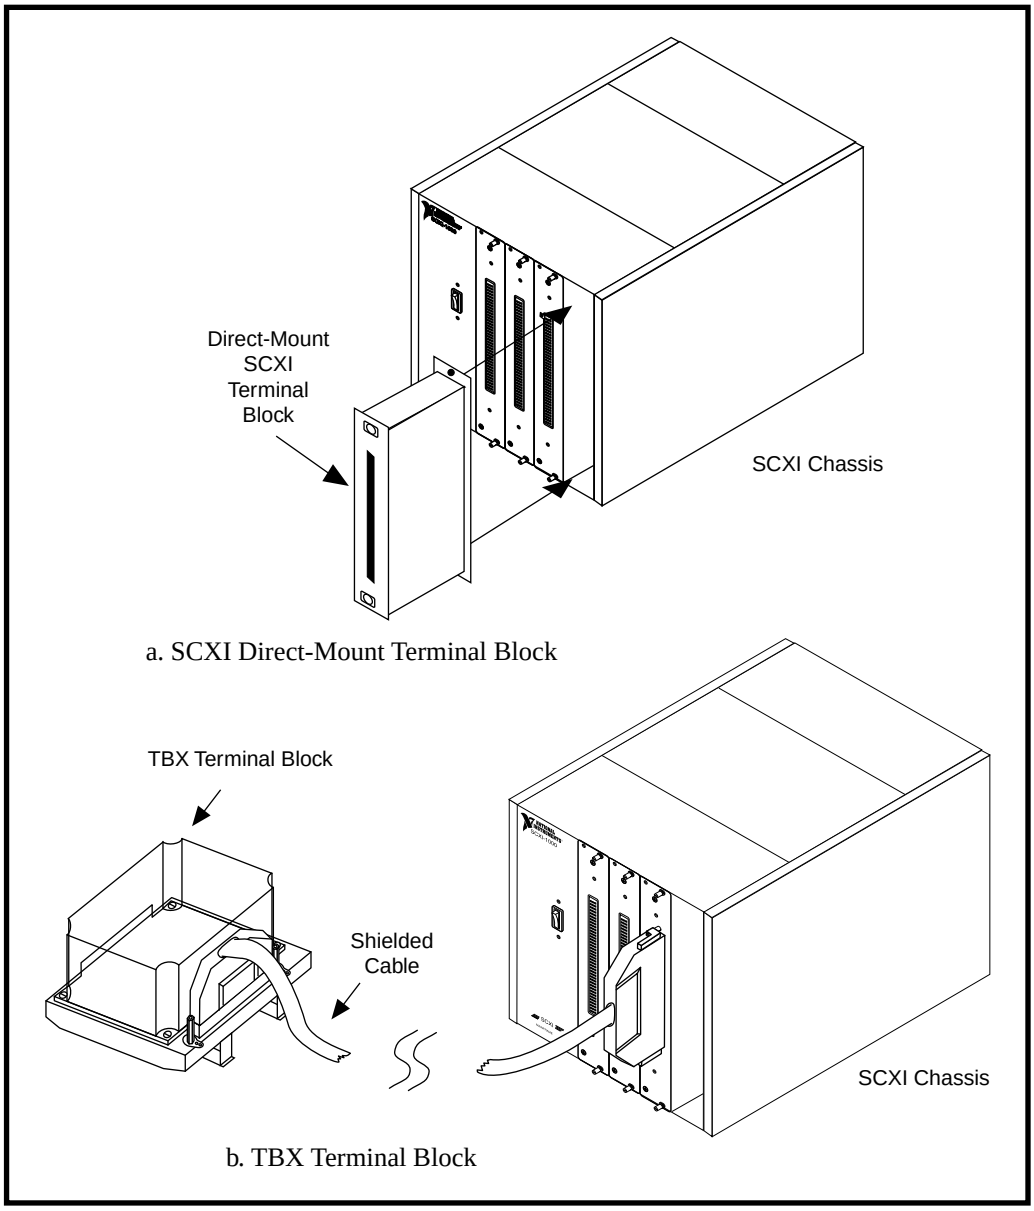


Figure 1-4. Terminal Block Options

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-2. Direct-Mount Terminal Blocks

Module	Terminal/ Connector Blocks	Terminal Block or Connector and Shell	CJC Sensor	Other Terminal Block Features
SCXI-1100, SCXI-1102	SCXI-1303	Terminal block	√[1]	Isothermal, signal referencing, and open thermocouple detection
	SCXI-1300	Terminal block	√	—
	SCXI-1310	Connector and shell	—	Low-cost connector-and-shell assembly
SCXI-1120,	SCXI-1320	Terminal block	√	—
SCXI-1121	SCXI-1321 (for SCXI-1121)	Terminal block	√	Offset-nulling and shunt calibration for strain gauges
	SCXI-1327	Terminal block	√[1]	100:1 attenuation of voltages to 250 Vrms, switch configurable per channel
	SCXI-1328	Terminal block	√[1]	Isothermal design for thermocouples
	SCXI-1330	Connector and shell	—	Low-cost connector and shell assembly
SCXI-1122	SCXI-1322	Terminal block	√[1]	—
SCXI-1124	SCXI-1325	Terminal block	—	—
SCXI-1140	SCXI-1301	Terminal block	—	—
	SCXI-1304	Terminal block	—	AC/DC coupling, switch configurable per channel
	SCXI-1310	Connector and shell	—	Low-cost connector and shell assembly
SCXI-1141	SCXI-1304	Terminal block	—	AC/DC coupling, switch configurable per channel
	SCXI-1310	Connector and shell		Low-cost connector and shell assembly
SCXI-1160	SCXI-1324	Terminal block	—	—
SCXI-1161	—	No terminal block—screw terminals in module		
SCXI-1162/ 1162HV, SCXI-1163/1163R	SCXI-1326	Terminal block	—	—
SCXI-1180	SCXI-1302	Terminal block	—	—
SCXI-1181, SCXI-1181K	SCXI-1300 SCXI-1301	Terminal block Terminal block	√	—
	SCXI-1310	Connector and shell	—	—
	SCXI-1330	Connector and shell	—	—
SCXI-1200	SCXI-1302 CB-50	Terminal block —	— —	— General-purpose connector block

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-2. Direct-Mount Terminal Blocks (Continued)

Module	Terminal/ Connector Blocks	Terminal Block or Connector and Shell	CJC Sensor	Other Terminal Block Features
SCXI-2400	n/a	n/a	n/a	Serial communication module

[1] The SCXI-1303, SCXI-1322, SCXI-1327, and SCXI-1328 use an onboard thermistor for sensing cold-junction. Other terminal blocks use an IC sensor.

Table 1-3. TBX Terminal Blocks for SCXI

Term. Blks	SCXI Modules											CJC Sensor	Required Cables
	1100/ 1102	1120/ 1121	1122	1124	1140/ 1141	1160	1161	1162/ 1162HV /1163/ 1163R	1180	1181/ 1181K	1200		
TBX-1303	•									•		•[1]	SH96-96 or R96-96
TBX-1328		•										•[1]	SH32-32-A
TBX-1325				•									SH48-48-A
TBX-1326								•					SH48-48-B
TBX-24F			•		•	•	•						User-supplied wiring
CB-50									•		•		NB1

[1] The TBX-1303 and TBX-1328 use an onboard thermistor for sensing cold-junction temperature.

Connector-and-Shell Assemblies

Connector-and-shell assemblies are low-cost alternatives to SCXI terminal blocks and are less rugged, plastic assemblies that connect signals using solder pins.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DAQ Plug-In Boards and PC Cards

You can cable the conditioned analog signals from the SCXI system directly to a plug-in DAQ board, PC Card, or to an SCXI-1200 DAQ module located in your chassis. Using SCXI multiplexing capability, a single plug-in DAQ device can acquire up to 3,072 conditioned analog signals.

You can use any of the following DAQ devices to control an SCXI system:

- Multifunction I/O (MIO) and AI devices can control single-chassis or multichassis SCXI systems consisting of any combination of analog and digital SCXI modules. Use MIO and AI devices for systems that require high-speed, hardware-controlled scanning. Table 1-4 lists these devices.

Table 1-4. AI and MIO DAQ Devices

AT	PCMCIA	PCI/NB	NEC
AT-AI-16XE-10	DAQCard-AI-16E-4	NB-MIO-16	NEC-AI-16E-4
AT-MIO-16DE-10	DAQCard-AI-16XE-50	NB-MIO-16X	NEC-AI-16XE-50
AT-MIO-16E-1		PCI-MIO-16XE-50	NEC-MIO-16E-4
AT-MIO-16E-2			NEC-MIO-16XE-50
AT-MIO-16E-10			
AT-MIO-16F-5			
AT-MIO-16X			
AT-MIO-16XE-10			
AT-MIO-16XE-50			
AT-MIO-64E-3			

- Lab/1200 Series devices can control single-chassis SCXI systems consisting of any combination of analog and digital SCXI modules.
- DIO devices can control single-chassis or multichassis SCXI systems consisting of digital SCXI modules.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DAQ Modules

As an alternative to a plug-in DAQ board or PC Card, you can use an SCXI DAQ module, such as the SCXI-1200. The SCXI-1200, which is functionally similar to the Lab-PC+, Lab-PC-1200, Lab-PC-1200AI, and DAQCard-1200, can control single-chassis systems with any combination of analog and digital modules. The SCXI-1200 connects to the computer parallel port, or to the SCXI-2000 chassis or SCXI-2400 module, which in turn communicates with the computer via a serial port.

SCXI Cable Assemblies

If you are using SCXI with a plug-in DAQ board or PC Card, cable the conditioned analog input signal lines directly to a plug-in DAQ device using one of the SCXI cable assemblies listed in Table 1-5.

Table 1-5. SCXI Cable Assemblies

Cable Assembly	Device Connection
SCXI-1340	MIO devices with 50-pin connector
SCXI-1341	Lab-PC+, Lab-PC-1200, Lab-PC-1200AI, Lab-NB
SCXI-1342	PC-LPM-16PnP, DAQCard-700 (requires PR50-50 cable)
SCXI-1343	Terminal adapter for custom configurations
SCXI-1344	Lab-LC
SCXI-1345	MIO devices with 50-pin connector
SCXI-1347	MIO-16X (with 68-pin connector)
SCXI-1348	DIO-32F
SCXI-1349	MIO E devices with 68-pin connector
SCXI-1353	AT E devices with 100-pin connector (AT-MIO-64E-3 and AT-MIO-16DE-10)
SCXI-1354	DAQCard-1200
SCXI-1355	DAQCard-AI-16E-4, DAQCard-AI-16XE-50
NB5 ribbon cable with optional SCXI-1351	PC-DIO-96/PnP, AT-MIO-16D, AT-MIO-64F-5
NB6 ribbon cable with optional SCXI-1351	NB-DIO-96

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Some cable assemblies have extra male breakout connectors with which you can access unused DAQ device signals via the SCXI-1180 feedthrough panel or the SCXI-1181 breadboard module. The SCXI-1200 comes with a 1 m parallel port cable.

SCXI Multichassis System with Plug-In DAQ Board

For a multichassis SCXI system, cabled via an SCXI-1346 or SCXI-1350, chassis are daisy-chained using multichassis adapters with shielded or unshielded cables to a single, plug-in DAQ device. You can control up to eight SCXI-1000, SCXI-1000DC, SCXI-1001, and SCXI-2000 chassis with a single AI, MIO or DIO-24 device. Figure 1-5 shows a multichassis configuration using the SCXI-1346 multichassis adapter.

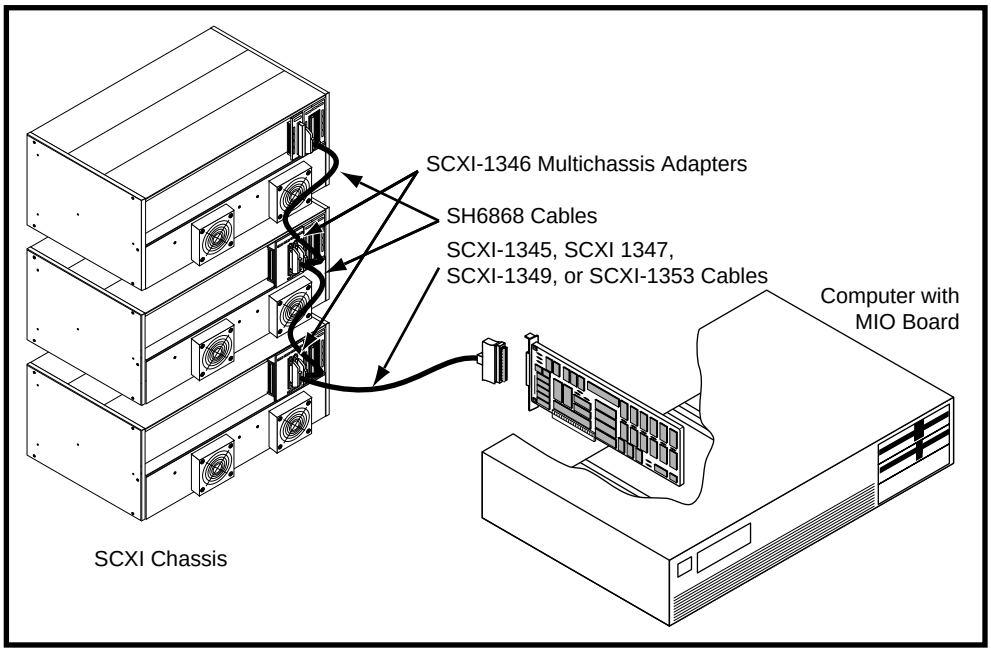


Figure 1-5. Multichassis SCXI System with Shielded Cabling

When using shielded cabling for a multichassis configuration, the maximum allowable cable length from the DAQ device to the last chassis is 10 m.

If using the NB-MIO-16 or NB-MIO-16X with shielded cabling, the maximum number of chassis is two and the length between the two chassis cannot exceed 1 m.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Optional Software

The final component of the SCXI system is software. You can program your SCXI system using NI-DAQ driver software, LabWindows/CVI, LabVIEW for Windows, LabVIEW for Macintosh, or ComponentWorks.

NI-DAQ driver software ships with your National Instruments DAQ device, SCXI-1200, SCXI-2000, or SCXI-2400. NI-DAQ has a library of functions that you can call from your application programming environment.

Alternatively, you can use LabVIEW for Windows, LabVIEW for Macintosh, LabWindows/CVI for Windows, or ComponentWorks. LabVIEW and LabWindows/CVI are innovative program development software packages for data acquisition and control applications. LabVIEW uses graphical programming, whereas LabWindows/CVI enhances Microsoft C. Both packages include extensive libraries for data acquisition, instrument control, data analysis, and graphical data presentation.

ComponentWorks is a collection of OLE (object linking and embedding) controls and DLLs (dynamic link libraries) for acquiring, analyzing, and presenting data within Visual Basic 4.0.

Whether you are using conventional programming languages, LabVIEW, LabWindows/CVI, or ComponentWorks, your application uses the NI-DAQ driver software, as illustrated in Figure 1-6.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

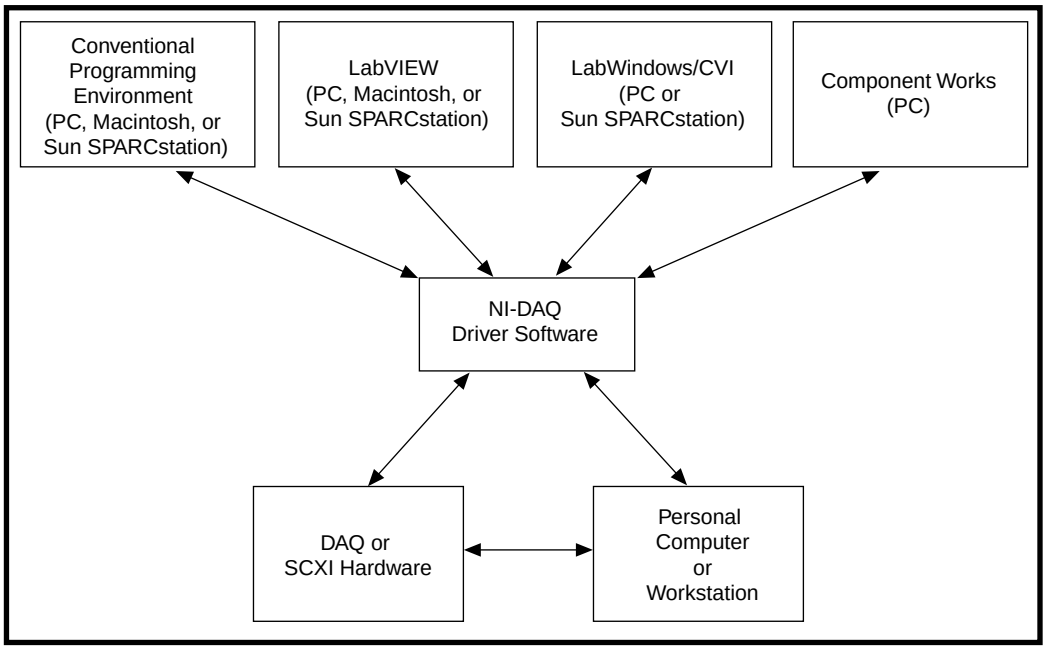


Figure 1-6. The Relationship Between the Programming Environment, NI-DAQ, and Your Hardware

Overview of SCXI Operation

Analog Input Modules

Analog SCXI modules can operate in parallel or multiplexed mode. In parallel mode, the modules perform no signal multiplexing and simply pass the conditioned signals straight through to the plug-in DAQ device. Table 1-1 lists the analog input modules.

You will probably operate your analog SCXI modules in multiplexed mode. You can multiplex thousands of conditioned analog input signals into a single plug-in DAQ device. In this mode, cable the plug-in DAQ device to only one SCXI module in a chassis. You use digital lines of the plug-in DAQ device to communicate with the modules and chassis. The DAQ devices use three or four lines of digital port A and the EXTSTROBE line to program the SCXI system. In addition, a digital input line is reserved for reading information back from the SCXI modules.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When using SCXI analog input modules, you can acquire analog signals through single-channel readings or hardware scanning.

With single-channel readings, the DAQ device serially writes a digital pattern to the SCXI Slot 0, located in the chassis, indicating which SCXI module to address. The device then writes a digital pattern to the module indicating which input channel is to be read. This write configures the module to drive the desired signal onto the analog bus of the SCXI chassis and the signal passes on to analog input channel 0 of the plug-in DAQ device.

The plug-in device then reads channel 0, as shown in Figure 1-7. NI-DAQ performs this low-level configuration when you call the single-reading functions.

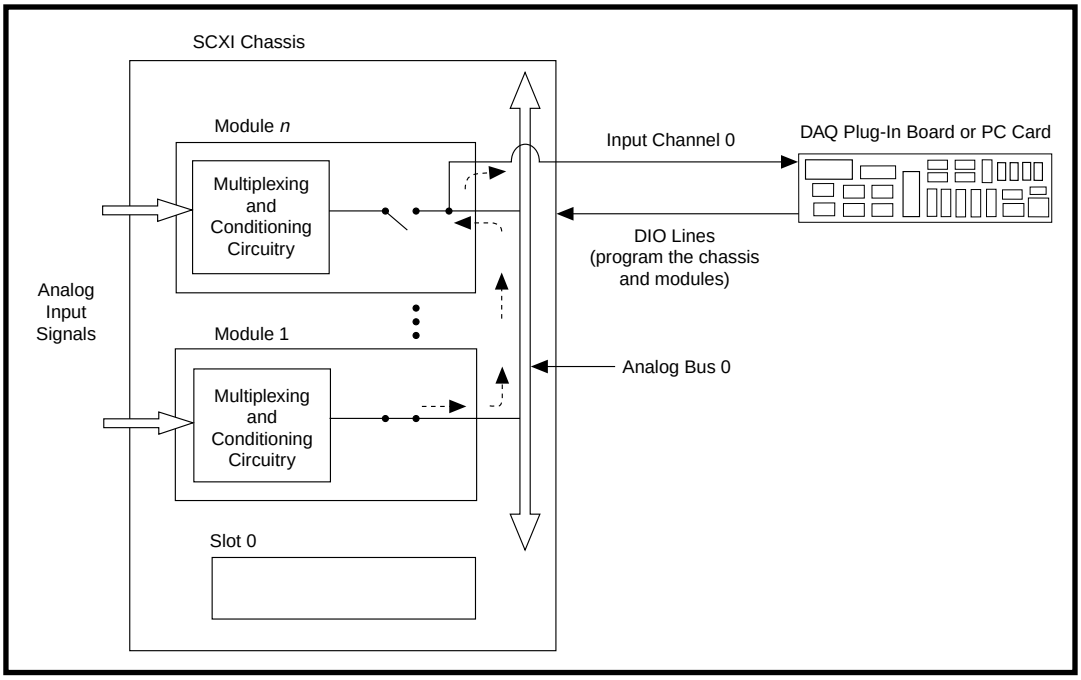


Figure 1-7. SCXI Signal Routing

If you are using SCXI-1200 single-channel readings, the SCXI-1200 programs the SCXI Slot 0 and indicates which SCXI module to address. The output of that module is sent back to the parallel port, where you can read it from NI-DAQ.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

With hardware scanning, the DAQ device or module programs the SCXI Slot 0 with a list of modules and the number of channels to scan from each module. Each module in the list is programmed with the channel on which to start the scan. The DAQ device or module then begins a data acquisition operation. The SCANCLK signal from the AI or MIO device or the counter 1 output from the DAQ device synchronizes the SCXI multiplexing with the internal clock that triggers the A/D conversions on the DAQ device.

The SCXI Slot 0 enables and disables the modules according to a preprogrammed list. In this way, the system multiplexes channels from several modules to analog input of the DAQ device or module at very high rates. NI-DAQ contains high-level functions you can use for multichannel scanning operations.

Digital and Analog Output Modules

Digital SCXI modules include the SCXI-116*X* series. Digital SCXI modules can operate in either serial mode or parallel mode. In serial mode, the SCXI system uses a maximum of four digital output lines and one digital input line of the plug-in DAQ device to control and monitor multiple digital modules. The plug-in device serially writes digital patterns to set the state of the digital output lines or relays, or serially reads patterns from the modules to determine the state of the digital input lines. In parallel mode, each SCXI digital I/O line requires a digital I/O line from the DAQ device.

The SCXI-1162, SCXI-1162HV, SCXI-1163, and SCXI-1163R can operate in parallel mode. The SCXI-1160 and SCXI-1161 operate only in serial mode. Refer to Chapter 3, *Configuring Your SCXI Hardware and Software*, for more information.

The SCXI-1124 is a 6-channel isolated analog output module. As with the digital I/O modules, the SCXI-1124 is programmed serially by the plug-in DAQ device or SCXI-1200 using a maximum of four digital output lines and one digital input line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing SCXI Modules and Connecting the SCXI System to the DAQ Board

Chapter 2

This chapter describes how to install your SCXI hardware and how to connect your SCXI system to your computer.

Installing Your Software

All SCXI system configurations require NI-DAQ software. Whether you are using LabVIEW, LabWindows/CVI, ComponentWorks, or programming in a standard language and third-party compiler, you must install the NI-DAQ driver software and NI-DAQ Configuration Utility to communicate with your DAQ/SCXI system.

1. You receive NI-DAQ software with your DAQ device, SCXI-1200, SCXI-2400, or SCXI-2000. If you ordered LabVIEW, LabWindows/CVI, or ComponentWorks, the driver software and configuration utility will be installed as part of the application software installation.
   - If you are using LabWindows/CVI, install your LabWindows/CVI disks first. Next, install NI-DAQ for PC compatibles and run the setup option. Then select the LabWindows/CVI option to install DAQ support.
   - LabVIEW includes all the NI-DAQ files you need to control the SCXI system. However, NI-DAQ for PC compatibles also has a LabVIEW update option that installs *newer* driver files in your system when the installation utility detects older files on your hard disk.
2. If you already have the NI-DAQ Configuration Utility and driver software installed and you received a newer NI-DAQ version with this kit, install the newer version now.
   - If you are using NI-DAQ for Windows 3.1 or Windows NT, launch the Windows program and then run the `SETUP.exe` program on Disk 1 of the NI-DAQ for Windows 3.1 and Windows NT disk set.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- If you are using NI-DAQ for Windows 95, launch Windows 95 and then run the `SETUP.exe` program on Disk 1 of the NI-DAQ for Windows 95 disk set.
- If you have a Macintosh, run the NI-DAQ Installer.

Installing Your DAQ Device

If you are using SCXI with a plug-in DAQ device or DAQCard, install your DAQ hardware into your computer now and configure your DAQ device with the NI-DAQ Configuration Utility. Refer to your DAQ device user manual for installation instructions.

Installing Your SCXI Modules

Caution: ***Before installing an SCXI module or removing a module from the chassis, turn off power to the chassis.***

Follow this procedure to install your SCXI modules:

1. To insert a module into the chassis, line up the module with the chassis board guides. Slide the module back until it connects smoothly to the SCXI chassis backplane. Do not force the module. If the module does not connect smoothly, check that it is aligned correctly. A module with a cable assembly attached may be more difficult to connect.
2. Tighten the thumbscrews finger-tight. Do not over-tighten.
3. Repeat steps 1 and 2 until you have installed all of your modules.

Connecting the SCXI System to the DAQ Device or Computer

Using the Parallel Port

If you are using an SCXI-1200 module as a parallel interface directly to the computer, connect the parallel port cable to the computer parallel port. Connect the other end of the cable to the SCXI-1200 and screw in the mounting screws on the connectors to establish a firm connection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When you have connected the parallel port cable, you can go to Chapter 4, *Connecting and Using Accessories and Transducers*, of this manual.

Using a Plug-in DAQ Board or PC Card

If you are using an SCXI module with a DAQ board or PC Card, connect the SCXI chassis to your DAQ device with an SCXI-134*X* Series or SCXI-135*X* Series cable assembly. In certain instances, you can also use a 50-pin NB1 or 100-pin NB5 or NB6 ribbon cable in conjunction with an SCXI-1351 cable assembly.

To connect the SCXI chassis to your DAQ board, you must connect the appropriate SCXI cable assembly to the DAQ board and then connect the other end to the rear connector of a single SCXI module. Use the following procedure:

1. Determine to which SCXI module you will connect the SCXI cable assembly. If all modules are configured for multiplexed or serial mode, you must cable *only one module to a DAQ board*. Use the following rules to determine which is the proper SCXI module to connect to the cable:
   - For systems containing *at least one analog SCXI module*:
     a. If you are using one or more SCXI-1140 modules, connect the cable assembly to any one of the SCXI-1140 modules. The SCXI-1140 requires a counter signal from the DAQ board to control the track-and-hold circuitry. Cable only one SCXI-1140 to the DAQ board because other SCXI-1140 modules in the chassis can access the track-and-hold counter signal via the SCXIbus in the chassis backplane.
     b. If you are not using an SCXI-1140 and are using one or more SCXI-110*X* module, connect the cable assembly to any one of the SCXI-110*X* modules. The SCXI-110*X* module drives only two of the DAQ board analog input lines, leaving the other lines available.
     c. If you are not using any SCXI-1140 or SCXI-110*X* modules but are using other analog modules, connect the cable assembly to any one of the analog modules.
   - For systems containing *only digital modules* (no analog modules), connect the cable assembly to any one of the digital modules.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- For systems containing *both analog and digital modules*, follow steps a through c for connecting an analog module. Enable the MISO and SERDATOUT lines of the module you connect to the DAQ board. See Chapter 2 of the appropriate SCXI module user manual for MISO and SERDATOUT settings.
- If the system contains any digital modules configured for parallel mode, connect each of these digital modules to a separate DIO board. If the system contains any analog modules configured for parallel mode, connect each of these modules to a separate analog DAQ board.

2. Connect the connector at the bracket end of the SCXI cable assembly to the rear signal connector of the module. Figure 2-1 shows the cable assembly attached to the SCXI module and chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

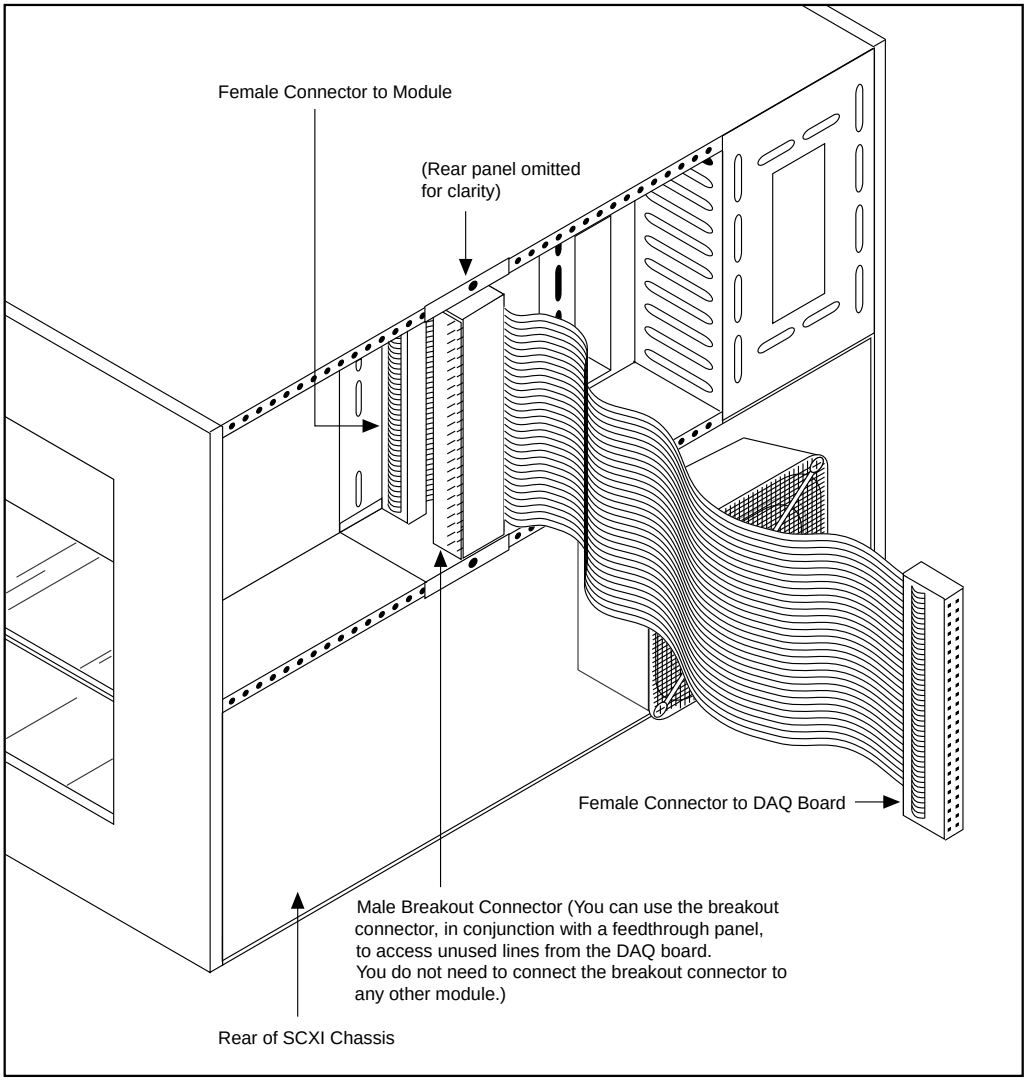


Figure 2-1. Attaching the SCXI Cable Assembly to the SCXI Module and Chassis

The DAQ board communicates with the SCXIbus through the connector at the bracket end of the cable assembly. Therefore, *you do not need to connect the remaining modules to the SCXI cable assembly*. Notice that the extra male breakout connector of the SCXI cable assembly is usually not connected to other modules. You can use this male breakout connector to connect unconditioned signals from the DAQ board to an SCXI-1180 feedthrough panel,

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1181 breadboard module, or the SCXI-1351 one-slot cable extender.

In some cases, you can use an NB1 cable instead of the SCXI-1340 cable assembly. The NB1 cable and the SCXI-1340 are functionally identical; however, the SCXI-1340 ensures a more secure attachment than the NB1 cable, eliminating the possibility of inadvertently loosening the cable. The SCXI-1340 also has an extra male breakout connector that provides access to unconditioned signals using an SCXI-1180 feedthrough panel or SCXI-1181 breadboard module.

Cable assemblies also have an integral rear panel that you can lock to the SCXI chassis with two screws. Using a cable assembly, you can remove a module from or insert a module into the chassis without disconnecting the cable.

3. If you are using an SCXI-1180 feedthrough panel to access unused lines of the DAQ board, install the feedthrough panel in the slot directly to the right of the module cabled to the DAQ board. Attach the rear connector of the SCXI-1180 feedthrough panel connector to the 50-pin male breakout connector of the SCXI cable assembly connected to the adjacent module.
4. If you are using an SCXI-1181 breadboard module, install the breadboard module in the slot directly to the right of the module that is connected to the DAQ board. Attach an SCXI-1351 one-slot cable extender to the 50-pin male breakout connector of the SCXI cable assembly connected to the adjacent module. Attach the other end of the SCXI-1351 to the rear signal connector of the SCXI-1181 breadboard module.

If you want to use more than 12 modules with a single DAQ board, you must use more than one SCXI chassis. In this case, you must use multichassis adapters.

Using an RS-232 or RS-485 Serial Port

You can use the RS-232 port on your computer to control one chassis up to 100 ft (2,500 pF) from your computer. If your chassis is farther away or you are using multiple chassis, you must use RS-485.

If you are using an SCXI-2400 module, insert the SCXI-2400 into the far left slot of your SCXI-100*X* chassis and insert the SCXI-1200 module immediately next to it. Attach the connector adapter that is shipped with the SCXI-2400 module to the rear of the SCXI-2400.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

If you are using an SCXI-2000 chassis, insert the SCXI-1200 into the far left slot of your SCXI chassis. Next, connect the 7 in. IEEE 1284 parallel port cable to the back of the SCXI-1200 and the SCXI-2000 chassis.

☞ **Note:** ***If your SCXI chassis includes only analog output and digital I/O modules, you do not need the SCXI-1200 module. The SCXI-2000 and SCXI-2400 can communicate directly with analog output and digital I/O modules.***

Next, connect the SCXI-2000 or SCXI-2400 to an RS-232 or RS-485 port of your computer.

- RS-232—You can connect one SCXI chassis directly to the standard COM serial port of your computer. If your computer has a 9-pin communication port, use the 2 m null modem cable included with the SCXI-2000/2400 to connect the 9-pin RS-232 connector on the front panel of the SCXI-2000/2400 to the serial port of your computer.
- RS-485—Alternatively, you can connect the RS-485 connectors on the back of the SCXI-2000 chassis or SCXI-2400 module to an RS-485 network. For example, you can wire the RS-485 connector directly to a port of the plug-in AT-485 adapter board. The RS-485 connection is a four-wire connection. See the *SCXI Chassis User Manual* or *SCXI-2400 User Manual* for more information on configuring an RS-485 network.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Configuring Your SCXI Hardware and Software

Chapter 3

This chapter explains how to configure your SCXI hardware and National Instruments software.

Module Configuration

You may need to configure your SCXI modules before using them in your application. Some SCXI modules have a number of user-configurable jumpers that you can access by removing a single screw on the back of the module, as shown in Figure 3-1.

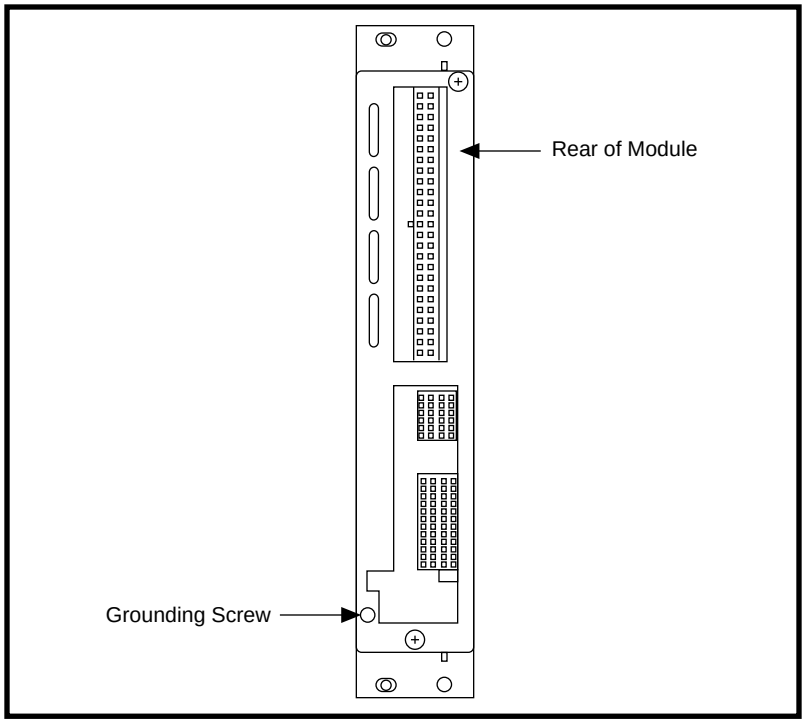


Figure 3-1. Removing the SCXI Module Grounding Screw

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Use this procedure to access the user-configurable jumpers.

1. Remove the grounding screw, shown in Figure 3-1.
2. Remove the cover by inserting a flathead screwdriver in the slot at the bottom of the module and gently pushing the screwdriver down until the cover pops off, as shown in Figure 3-2.

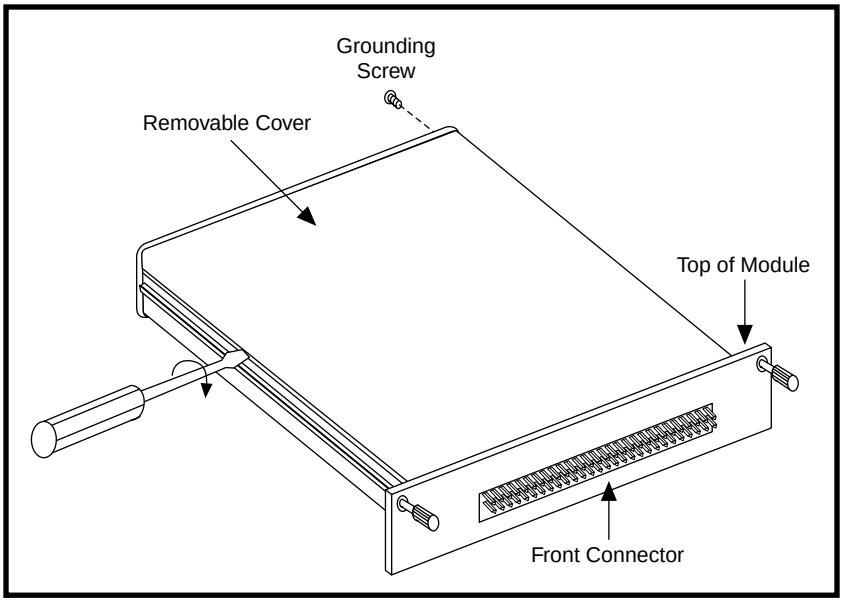


Figure 3-2. Removing the SCXI Module Cover

To replace the cover, follow these steps:

1. Align the slots at the top of the module and snap the bottom of the cover into place.
2. Replace the grounding screw, taking care not to over-tighten it.

Analog Modules

The following sections describe each analog SCXI module and contain step-by-step instructions for configuring the jumpers on each module. Follow the steps in the procedure for your module, check the position of each jumper, and read the jumper position description. Change the appropriate jumpers to configure the module for the signal you intend to measure.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Each analog module includes jumpers that configure the output referencing mode of the module. Configure these jumpers according to the analog input mode of the DAQ device. The recommended analog input mode of your DAQ device is as follows:

- The AI and MIO devices are shipped from the factory in differential (DIFF) mode. National Instruments recommends that you leave your AI or MIO device configured for DIFF inputs.
- The Lab/1200 devices are shipped from the factory in referenced single-ended (RSE) mode. You can leave the device in this mode or change its configuration to NRSE mode for optimal noise elimination. Because of the cabling, you cannot use the Lab and 1200 devices in DIFF mode with SCXI.
- The Lab-NB, Lab-LC, LPM devices, and DAQCard-700 devices work only in RSE mode.

Each analog SCXI module includes jumpers to configure module parameters, such as filtering, gain, analog input referencing, and output referencing. You must select the analog input referencing of a module according to the type of signal you are measuring. This section begins with a description of the main types of signals.

Types of Signals

SCXI modules measure both analog signals that do not require excitation and those that do. Sources of signals that do not require excitation include volt or millivolt sources such as thermocouples and process-current sources. SCXI modules can accommodate process-current signals in the 4 to 20 mA or 0 to 20 mA ranges using resistor kits that are available separately from National Instruments. Other signals, such as outputs from strain gauges, RTDs, and thermistors, require either voltage or current excitation.

Ground-Referenced and Floating Signal Sources

Signal sources are either ground-referenced or floating sources.

A ground-referenced source is connected to the building ground and thus shares a common ground with the DAQ device, assuming that your computer is connected to the building power supply as well. Examples of ground-referenced signals are the nonisolated outputs of any devices that plug into the building power supply, such as signal generators and power supplies. Isolated outputs do not constitute ground-referenced sources; you should treat them as floating sources.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A floating source is not connected in any way to the building ground system and thus has an isolated ground-reference point that you cannot assume to be at the same potential as any other ground. Examples of this type of source include transformers, insulated thermocouples, optical isolators, isolation amplifiers, and battery-powered devices.

In general, you should reference an input signal to ground at only one point. Therefore, do not reference the input of a differential amplifier module to ground if the signal source is already ground referenced. If you are measuring a floating source, on the other hand, reference the input signal to ground.

SCXI-1100 Module

This module is a 32-channel differential-input multiplexer with an onboard programmable-gain instrumentation amplifier (PGIA). The SCXI-1100 has 32 differential voltage or current input signals, an analog input range of ±10 V, jumper-selectable lowpass filters of 4 Hz and 10 kHz, and software-selectable module gains of 1, 2, 5, 10, 20, 50, 100, 200, 500, 1,000, and 2,000.

The SCXI-1100 works only in multiplexed mode and drives two analog input channels on the DAQ device—channel 0 and channel 1. If you need additional DAQ channels in an application using a single DAQ device, a single chassis, and multiple modules, connect the SCXI-1100 to the DAQ device. For more information on making this connection, refer to Chapter 2, *Installing SCXI Modules and Connecting the SCXI System to the DAQ Board*.

The SCXI-1100 is factory configured for use with an MIO or AI device in DIFF mode, using ground-referenced signals, with no hardware filtering. If this configuration is suitable, do not reconfigure any jumpers. However, you must adjust the configuration if any of the following conditions is true:

- You are cabling this SCXI-1100 directly to a DAQ device and you are using a Lab or 1200 device, LPM device, or DAQCard-700, or you are using an AI or MIO device in SE mode.
- Your input signals are floating or nonreferenced and you want to ground reference the signals through a 100 kΩ resistor installed in the module; it is best to ground reference the signals at the source or at the terminal block.
- You need hardware filtering and can accept slower scanning throughput.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- You are measuring current signals.

Read the rest of this section on the SCXI-1100 module if any of the previous conditions applies to you.

The SCXI-1100 module has seven user-configurable jumpers for configuring input, signal referencing, filtering, and PGIA output referencing. Leave all other jumpers in their factory-default positions.

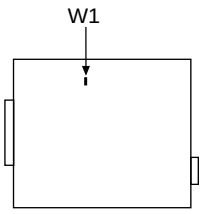

Use the following procedure to configure your SCXI-1100 module:

1. Configure the input signal referencing mode.

   For ground-referenced sources, leave jumper W1 in the factory-default position. This is the preferred position and produces the optimum performance.

Caution: ***If you plan to use any floating thermocouples or other floating-source transducers, National Instruments recommends that you leave jumper W1 in the factory-default setting and either ground the negative lead of each transducer to the chassis ground on your terminal block, or reference the transducer to ground at the source. In either case, the transducer should not have a high common-mode voltage. Ground your signal at only one location along the entire signal path to prevent saturation of the amplifier and reduce common-mode noise.***

Table 3-1. SCXI-1100 Input Signal Referencing Jumper Configurations

Jumper	Description	Configuration
	1-2 Position—Ground-referenced source position (factory-default position).	
	2-3 Position—For floating sources only (connects an internal 100 kΩ resistor from CH- to ground). Read the text in this section for the implications of using this position.	

If all of the sources are floating, you can configure jumper W1 to connect a 100 kΩ resistor to the negative input of the amplifier to prevent saturating the amplifier inputs. This reduces the input

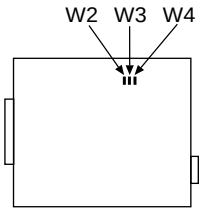
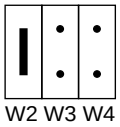
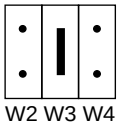

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

impedance, however, and usually increases settling time and common-mode noise. Also, if W1 is connected to the 100 kΩ resistor and any of the sources are ground-referenced or have high leakage to ground, a ground loop can result, causing DC offsets or noise.

2. Configure the filtering.

The SCXI-1100 has two lowpass, one-pole resistance-capacitor (RC) filters, with values of 10 kHz and 4 Hz, positioned after the multiplexer. You select filtering by setting a single jumper to one of three positions—W2, W3, or W4. Table 3-2 shows the SCXI-1100 filtering configuration.

Table 3-2. SCXI-1100 Filtering Jumper Configurations

Jumper	Description	Configuration
	W2—Full bandwidth; no filtering (factory-default position). W3—10 kHz lowpass filter; maximum aggregate sampling rate is 6.7 kS/s. W4—4 Hz lowpass filter; maximum aggregate sampling rate is 2.9 S/s.	  

Position W2, the factory-default position, disables filtering. Position W3 selects the 10 kHz lowpass filter, which filters out signals with frequencies above 10 kHz. Position W4 selects the 4 Hz lowpass filter, which filters out signals with frequencies greater than 4 Hz, such as 60 Hz noise. For more information, refer to the *Noise and Filtering* section in Chapter 4, *Connecting and Using Accessories and Transducers*.

Caution: ***If you enable filtering, you cannot scan SCXI-1100 channels at high rates. Because the filter is applied after the signal is multiplexed, the sample rate***

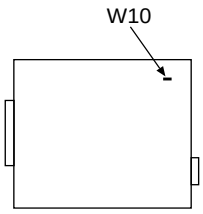
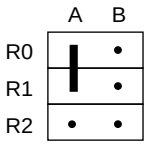
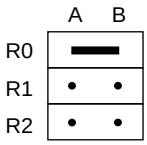
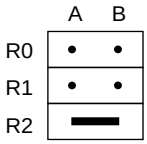
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

or channel rate must be low enough for the filter to settle to the required accuracy. Table 3-2 ***shows the maximum recommended aggregate sampling rates for settling under worst-case conditions.***

3. Configure the PGIA output referencing modes for your DAQ device.

You use jumper W10 to configure the various output referencing modes of the SCXI-1100 PGIA. The correct output referencing mode depends on the DAQ device and input mode you use. Table 3-3 shows three configurations for jumper W10.

Table 3-3. SCXI-1100 PGIA Referencing Jumper Configurations

Jumper	Description	Configuration
	A-R0R1—Parking position. Use this position for MIO, AI, or SCXI-1200 devices in DIFF input mode (factory-default position).	
	AB-R0—Connects the PGIA reference to data acquisition analog ground, pins 1 and 2, of the rear signal connector. Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	
	AB-R2—Select this position for AI or MIO devices in NRSE mode.	

4. Add current-loop receivers, if necessary. Process-current resistor packs are available from National Instruments. Refer to *Input Filtering and Current-Loop Receivers* in the *SCXI-1100 User Manual* for detailed information about filter pads and current loop receivers.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1102 Module

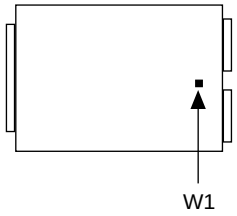


The SCXI-1102 is a 32-channel amplifier module designed for measuring thermocouples and other low bandwidth signals. Each of the 32 channels includes input protection circuitry to 42 Vrms, a lowpass 1 Hz noise filter, and a software-selectable gain of 1 or 100. The SCXI-1102 works only in multiplexed mode and drives a single analog output channel on the DAQ device (channel 0).

The SCXI-1102 is software-configurable. However, the SCXI-1102 does include a single jumper that may require adjustment if you are using multiple SCXI chassis.

The SCXI-1102 has one user-configurable jumper, W1. You need to change the jumper setting only if you are using a multichassis system and your DAQ device is directly cabled to your SCXI-1102 module.

☞ **Note:** ***If you are using a single SCXI chassis, or there is no SCXI cable assembly connected to the SCXI-1102, the position of jumper W1 is irrelevant. Table*** 3-4 ***shows the possible configurations for jumper W1.***

Table 3-4. SCXI-1102 Jumper Configurations

Jumper	Description	Configuration
	Pullup—Use this position for a single-chassis system and for one cabled module in a multichassis system. Connects a 2.2 kΩ pullup resistor to the SERDATOUT line (factory-default position). No Pullup—Use this position for additional chassis in a multichassis system. No pullup resistor is connected to the SERDATOUT line.	 

Current-Loop Receivers

The SCXI-1102 includes pads for measuring current inputs. National Instruments offers an SCXI process current resistor pack, which consists of four 249 Ω high-precision resistors. Refer to your *SCXI-1102 User Manual* for detailed information on installing current resistors into the module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1120 Module

The SCXI-1120 module is an 8-channel isolation amplifier. Features of the SCXI-1120 include eight isolated input channels, 1,500 Vrms breakdown isolation per channel, an analog input range of ±5 V, 240 Vrms common-mode voltage, jumper-selectable 4 Hz or 10 kHz lowpass filtering, and individually configurable jumper-selectable channel gains of 1, 2, 5, 10, 20, 50, 100, 200, 500, 1,000, and 2,000.

The SCXI-1120 is factory configured for use with an MIO or AI device in DIFF mode; each module channel is configured for a gain of 1,000, an input range of ±5 mV, and 4 Hz filtering. If this configuration is suitable for your application, do not adjust any of the jumpers. However, you must adjust the jumper configuration if any of the following conditions is true:

- You are cabling this SCXI-1120 directly to a DAQ device and you are using a Lab or 1200 device, LPM devices, or DAQCard-700, or you are using an AI or MIO device in SE mode.
- You need a different gain or bandwidth (other than 1,000 and 4 Hz) on any channel.
- You are using digital modules in the same chassis and are cabling the SCXI-1120 to a DAQ device.
- You are using the SCXI-1120 in parallel mode and want to access the SCXI-1320 temperature sensor.

Read the rest of this section on the SCXI-1102 module if any of the previous conditions applies to you.

The SCXI-1120 has 42 user-configurable jumpers, many of which perform the same function but configure different channels. You can set the jumpers for configuring gain, filtering, temperature sensor signal routing, and signal output referencing. Leave all other jumpers in the factory-default positions.

Use the following procedure to configure your SCXI-1120 module:

1. Configure the gains.

   You select the gain for each SCXI-1120 channel in two stages, each of which is jumper-controlled. Jumpers W1 through W8 select the first-stage gain for channels 0 through 7; jumpers W9 through W16 select the second-stage gain for channels 0 through 7, as shown in Table 3-5. The default gain for each channel is 1,000.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The total gain produced on a particular channel is equal to the product of the first-stage and second-stage gains applied to that channel, as shown in the following equation:

Total gain (channel n) = first-stage gain (channel n) • *second-stage gain (channel n)*

The effective input range that you can measure with a particular gain is:

$$Input\ range(V) = \frac{\pm 5V}{total\ gain}$$

The jumper settings and corresponding gain values are listed in Tables 3-5 and 3-6.

Table 3-5. SCXI-1120 Input Channels and Corresponding Gain Jumpers

Input Channel Number	First-Stage Gain Jumper	Second-Stage Gain Jumper
0	W1	W9
1	W2	W10
2	W3	W11
3	W4	W12
4	W5	W13
5	W6	W14
6	W7	W15
7	W8	W16

Table 3-6. SCXI-1120 Gain Jumper Configurations

Gain	Setting	Jumper Position
First-stage	1	D
	10	C
	50	B
	100	A (factory setting)
Second-stage	1	A
	2	B
	5	C
	10	D (factory setting)
	20	E

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Configure the filtering. The two-stage filtering is jumper-selectable for each channel. The SCXI-1120 uses a two-stage filtering configuration to achieve a higher signal-to-noise ratio. The filters on the SCXI-1120 are three-pole RC filters and do not affect the maximum scanning rate. The factory-default configuration is 4 Hz filters for each channel.

   a. Configure the first-stage filtering.

      Jumpers W17 through W24 select the first-stage filtering. Each of these jumpers has two positions—A and B. Position A selects the first stage of 4 Hz filtering, whereas position B selects the first stage of 10 kHz filtering.

   b. Configure the second-stage filtering.

      Jumpers W25 through W40 select the second-stage filtering, which you must configure for the same frequency as the first stage. There are actually only eight jumpers, as in the first stage; W25 through W40 correspond to 16 positions, rather than 16 jumpers. You can set each of the eight jumpers to one of two positions. Setting the jumper to an odd number (for example, W25) selects the second stage of 4 Hz filtering, whereas setting the jumper to an even number (for example, W26) sets the second stage of the same channel to 10 kHz filtering. Table 3-7 shows the jumper and channel correspondence for filtering.

Table 3-7. SCXI-1120 First-Stage and Second-Stage Filter Jumper Configurations

Input Channel	First-Stage Filter Jumper		Second-Stage Filter Jumper	
Number	4 Hz (Factory-Default)	10 kHz	4 Hz (Factory-Default)	10 kHz
0	W17-A	W17-B	W25	W26
1	W18-A	W18-B	W27	W28
2	W19-A	W19-B	W29	W30
3	W20-A	W20-B	W31	W32
4	W21-A	W21-B	W33	W34
5	W22-A	W22-B	W35	W36
6	W23-A	W23-B	W37	W38
7	W24-A	W24-B	W39	W40

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Configure the temperature sensor signal routing, if necessary.

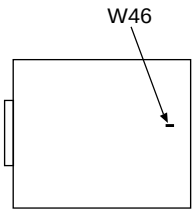
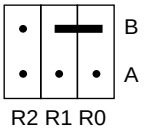
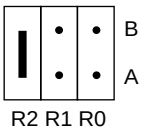
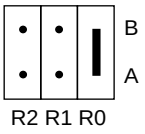
   Jumper W41 controls the routing of the temperature sensor signal available on the SCXI-1320 terminal block. Use position 1, 2 (the factory-default position) for MTEMP (multiplexed) mode if you are using the module in multiplexed mode. Use position 2, 3 for DTEMP (direct) mode if you are using the module in parallel mode. Normally, the SCXI-1120 operates in multiplexed mode and you should use the MTEMP position. Refer to Chapter 4, *Connecting and Using Accessories and Transducers*, for more detailed information about the MTEMP and DTEMP modes.

4. Configure the signal output referencing for your DAQ device. The signal output referencing is relevant only if you are connecting this SCXI-1120 module directly to a DAQ device.

   Use jumper W46 to configure the various referencing modes of the SCXI-1120 instrumentation amplifier. The correct output referencing mode depends on the DAQ device and input mode you use.

Table 3-8 shows the signal referencing configurations for jumper W46.

Table 3-8. SCXI-1120 Signal Referencing Jumper Configurations

Jumper	Description	Configuration
	B-R0R1—Parking position. Use this position for MIO, AI, or SCXI-1200 devices in DIFF input mode. (factory-default position).	
	AB-R2—Select this position for AI or MIO devices in NRSE mode.	
	AB-R0—Connects the PGIA reference to data acquisition analog ground, pins 1 and 2, of the rear signal connector. Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. If you are using any digital SCXI modules in serial mode and want to connect the SCXI-1120 module to the plug-in DAQ device, configure the SCXI-1120 module to connect the MISO signal to the SERDATOUT pin (jumper W43). See Chapter 2, *Configuration and Installation*, of your *SCXI-1120 User Manual* for details.

SCXI-1121 Module

This module is a 4-channel isolation amplifier with excitation. Major features include four channels of isolated input, 1,500 Vrms isolation per channel, current or voltage excitation, an analog input range of ±5 V, 240 Vrms common-mode voltage, jumper-selectable lowpass three-pole RC filters with values of 4 Hz or 10 kHz, and individually configurable jumper-selectable channel gains of 1, 2, 5, 10, 20, 50, 100, 200, 500, 1,000, and 2,000.

The SCXI-1121 module has 45 user-configurable jumpers. You can set the jumpers for gain configuration, filtering, excitation mode, bridge completion, and signal output referencing. Leave all other jumpers in the factory-default positions.

The SCXI-1121 is factory-configured for use with an MIO or AI device in DIFF mode—each module channel is configured for a gain of 1,000, an input range of ±5 mV, 4 Hz filtering, 3.33 V voltage excitation, and disabled bridge completion. If this configuration is suitable for your application, do not adjust any of the jumpers. However, you must adjust the jumper configuration if any of the following conditions is true:

- You are cabling the SCXI-1121 module directly to a DAQ device and you are using a Lab or 1200 devices, LPM device, or DAQCard-700, or you are using an AI or MIO device in SE mode.
- You need a different gain or bandwidth (other than 1,000 and 4 Hz) on any channel.
- Your transducers require current excitation or 10.0 V voltage excitation.
- Your transducers require half-bridge completion circuitry.
- You are using digital modules and are cabling the SCXI-1121 to a DAQ device.

Read the rest of this section on the SCXI-1121 module if any of the previous conditions applies to you.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Use the following procedure to configure your SCXI-1121 module:

1. Configure the gain selection.

   You select the gain for each SCXI-1121 in two stages, each of which is jumper controlled. The default gain for each channel is 1,000.

   The total gain produced on a particular channel is equal to the product of the first-stage and second-stage gains applied to that channel, as shown by the following equation:

$$\textit{Total gain (channel n)} = \textit{first-stage gain (channel n)} \bullet \textit{second-stage gain (channel n)}$$

   The effective input range that you can measure with a particular gain is:

$$\textit{Input range}(V) = \frac{\pm 5V}{\textit{total gain}}$$

   a. Configure the first-stage gain selection.

      Use jumpers W3, W19, W29, and W41 to configure the first-stage gain of channels 0 through 3, respectively. Each jumper has four possible positions—A, B, C, and D—each corresponding to a particular gain.

   b. Configure the second-stage gain.

      Use jumpers W4, W20, W30, and W42 to configure the second-stage gain of channels 0 through 3, respectively. Each of these jumpers has five possible positions—A, B, C, D, and E—each corresponding to a particular gain.

The jumper settings and corresponding gain values are listed in Tables 3-9 and 3-10.

Table 3-9. SCXI-1121 First-Stage and Second-Stage Gain Jumper Configurations

Input Channel Number	First-Stage Gain Jumper	Second-Stage Gain Jumper
0	W3	W4
1	W19	W20
2	W29	W30
3	W41	W42

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-10. SCXI-1121 Gain Jumper Configurations

Gain	Setting	Jumper Position
First-stage	1	D
	10	C
	50	B
	100	A (factory setting)
Second-stage	1	A
	2	B
	5	C
	10	D (factory setting)
	20	E

2. Configure the filtering.

   The filtering is also two-stage and is jumper-selectable for each channel. The SCXI-1121 uses a two-stage filtering configuration to achieve a higher signal-to-noise ratio. Filtering does not affect the maximum scanning rate. The factory-default position configures the jumper for 4 Hz filters for each channel.

   a. Configure the first-stage filtering.

      Jumpers W5, W21, W31, and W43 select the first-stage filtering. Each of these jumpers has two positions—A and B. Position A selects the first stage of 4 Hz filtering, whereas position B selects the first stage of 10 kHz filtering.

   b. Configure the second-stage filtering.

      Jumpers W6 through W13 select the second-stage filtering, which you must configure for the same frequency as that of the first stage. There are actually only four jumpers, as in the first stage; W6 through W13 correspond to eight positions, rather than eight jumpers. You can set each jumper to one of two positions. Setting the jumper to an even number (for example, W6) selects the second stage of 4 Hz filtering, whereas setting the jumper to an odd number (for example, W7) sets the second stage of the same channel to 10 kHz filtering. Refer to Table 3-11 for the jumper and channel correspondence for filtering.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

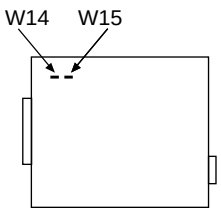


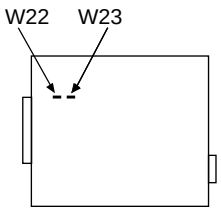


Table 3-11. SCXI-1121 First-Stage and Second-Stage Filter Jumper Configurations

Input Channel	First-Filter Jumper		Second-Filter Jumper	
Number	4 Hz (Factory-Default)	10 kHz	4 Hz (Factory-Default)	10 kHz
0	W5-A	W5-B	W6	W7
1	W21-A	W21-B	W8	W9
2	W31-A	W31-B	W10	W11
3	W43-A	W43-B	W12	W13

3. Configure the excitation mode as current or voltage.

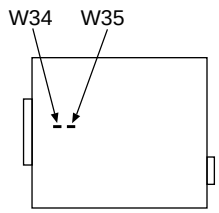


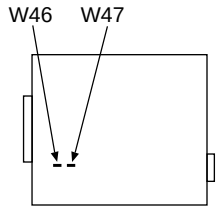


   You can configure each SCXI-1121 excitation channel to produce voltage or current excitation. Strain gauges require voltage excitation, whereas RTDs and thermistors typically require current excitation. Each excitation channel has two jumpers to select the appropriate mode—W14, W15, W22, W23, W34, W35, W46, and W47. Table 3-12 summarizes the excitation mode jumper settings. Notice that only position 1 is marked on the SCXI-1121 module. The factory-default excitation mode for each channel is voltage.

Table 3-12. SCXI-1121 Excitation Mode Jumper Configurations

Jumpers	Excitation Channel	Voltage Mode (Factory-Default Position)	Current Mode
	0		
	1		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-12. SCXI-1121 Excitation Mode Jumper Configurations (Continued)

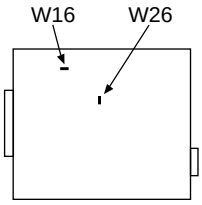
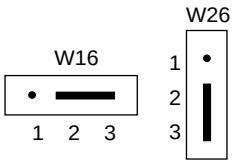
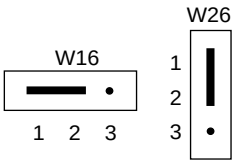
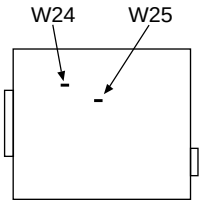


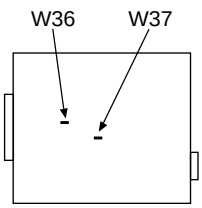


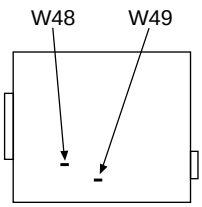


Jumpers	Excitation Channel	Voltage Mode (Factory-Default Position)	Current Mode
	2		
	3		

4. Configure the excitation levels.

   You can select the level of excitation applied to each excitation channel, again using two jumpers per channel—W16, W24, W25, W26, W36, W37, W48, and W49. If you select voltage mode, you can apply a potential difference of either 3.333 V or 10.00 V. If you select current mode, you can apply an excitation current of either 0.150 mA or 0.450 mA. Refer to the transducer manufacturer specifications to verify the necessary excitation level. See Table 3-13 for the SCXI-1121 excitation level jumper settings, and refer to Table 3-14 for the maximum load per excitation channel.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-13. SCXI-1121 Excitation Level Jumper Configurations

Jumpers	Excitation Channel	3.333 V or 0.150 mA (Factory-Default Position)	10 V or 0.450 mA
	0		
	1		
	2		
	3		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-14. SCXI-1121 Maximum Load per Excitation Channel

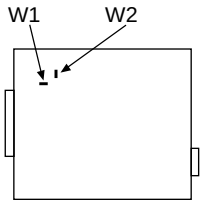
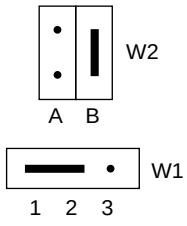
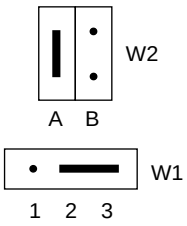
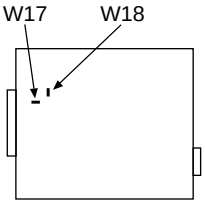
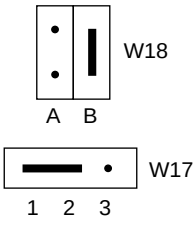
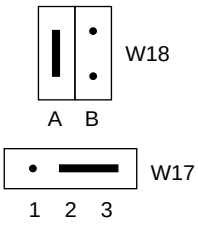
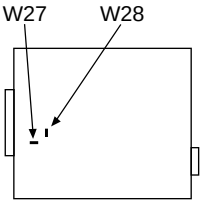
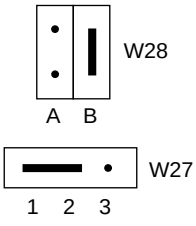
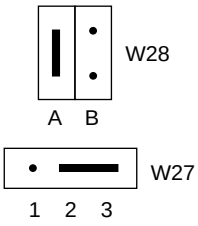
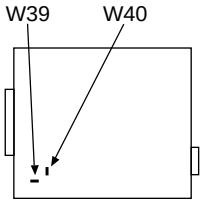
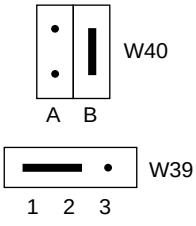
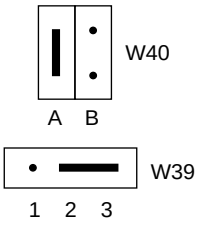
Excitation Level	Maximum Load
3.333 V	28 mA
10 V	14 mA
0.150 mA	10 kΩ
0.450 mA	10 kΩ

5. Enable the half-bridge completion network, if necessary.

   The SCXI-1121 includes a built-in half-bridge completion network to use with half-bridge or quarter-bridge transducers. The network includes two 4.5 kΩ (±0.05%) resistors, connected in series, with a temperature coefficient of 5 ppm/°C. You can enable the network on an individual channel basis using two additional jumpers per channel—W1, W2, W17, W18, W27, W28, W39, and W40. When you enable the completion network, you automatically remove access to the negative input of the amplifier to preserve overvoltage protection. See Table 3-15 for half-bridge completion network jumper information, and refer to Figures 4-5, 4-6, and 4-7 for diagrams of standard bridge configurations.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-15. SCXI-1121 Half-Bridge Completion Network Jumper Configurations

Jumpers	Channel	Enable Network	Disable Network (Factory-Default Position)
	0		
	1		
	2		
	3		

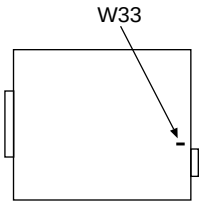
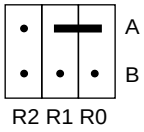
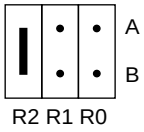
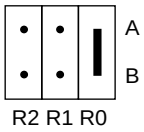
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6. Configure the signal output referencing for the DAQ device you are using. The signal output referencing is relevant only if you connect this SCXI-1121 module directly to a DAQ device.

   Use jumper W33 to configure the various output referencing modes of the SCXI-1121 amplifier. The correct output referencing mode depends on the DAQ device and input mode you use.

Table 3-16 shows the three possible signal referencing configurations.

Table 3-16. SCXI-1121 Signal Referencing Jumper Configurations

Jumper	Description	Configuration
	A-R0R1—Parking position. Use this setting for MIO, AI, or SCXI-1200 devices in DIFF input mode. (factory-default position).	
	AB-R2—Select this position for AI and MIO devices in NRSE mode.	
	AB-R0—Connects the PGIA reference to data acquisition analog ground, pins 1 and 2 of the rear signal connector. Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	

7. If you are using any digital SCXI modules in serial mode and will connect the SCXI-1121 module to the plug-in DAQ device, configure the SCXI-1121 module to connect the MISO signal to the SERDATOUT pin (jumper W38). See Chapter 2 of your *SCXI-1121 User Manual* for details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1122 Module

This module has 16 isolated input channels and two isolated excitation channels. The SCXI-1122 is a module for signal conditioning of strain gauges, RTDs, thermistors, thermocouples, volt and millivolt sources, 4 to 20 mA current sources, and 0 to 20 mA process-current sources. The SCXI-1122 can operate in two modes. Use the two-wire scan mode with all 16 input channels used for input or the four-wire scan mode with the eight upper channels configured as sense leads for connecting input channels and the lower eight channels configured as current output channels. Other major features of this module include software-programmable gain and filtering, and the ability to account for voltage drop of long lead wires in strain-gauge measurement. The SCXI-1122 input signals are multiplexed to a single output, which drives a single DAQ device channel if you are using a plug-in card.

The SCXI-1122 has two jumpers. Jumper W2 connects a pullup resistor to the SERDATOUT signal on the rear signal connector as shown in Table 3-17. Jumper W1 configures the guard and the analog output ground and enables the NRSE mode. Filtering and two-wire or four-wire scanning is software configured.

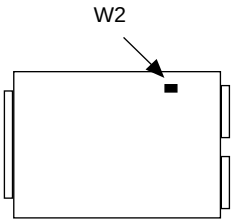

Use the following procedure to configure your SCXI-1122 module.

☞ **Note:** ***If a module is not connected to a DAQ device, the position of W2 is irrelevant.***

1. When using a single chassis, set jumper W2 in position 1 on the SCXI-1122 that is connected to the DAQ device. When using multiple chassis, set jumper W2 to position 1 on only one of the SCXI-1122s that are cabled to the DAQ device. It does not matter which of the SCXI-1122s cabled to the DAQ device has the pullup connected. Set jumper W2 in position 3 on all of the other SCXI-1122 modules.

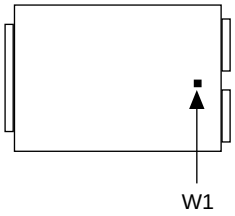
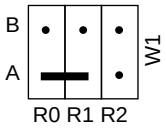
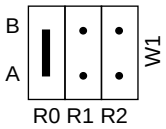
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-17. SCXI-1122 Digital Signal Jumper Configurations

Jumper	Description	Configuration
DAQ device to SCXIbus communication 	Position 1 (pullup)—Use this setting for a single-chassis system. Connects a 2.2 kΩ pullup resistor to the SERDATOUT line (factory-default position).	
	Position 3 (unmarked position, no pullup)—Use this setting for additional chassis in a multichassis system. No pullup resistor is connected to the SERDATOUT line.	

2. The SCXI-1122 has one analog configuration jumper for grounding, shielding, and reference mode selection. Set jumper W1 as shown in Table 3-18.

Table 3-18. SCXI-1122 Analog Jumper Configuration

Jumper	Description	Configuration
Grounding, shielding, and reference mode selection 	A-R0R1—Parking position. Use this setting for MIO, AI, or SCXI-1200 devices in DIFF input mode. (factory-default position)	
	AB-R0— Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	

You must use software to further configure the module. Refer to your software documentation or to the *SCXI-1122 Register-Level Programmer Manual* if you are a register-level programmer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Current-Loop Receivers

The SCXI-1122 has pads for transforming individual channels to current-to-voltage converters. National Instruments offers an SCXI process-current resistor pack, which consists of four 249 Ω, 0.1%, 5 ppm, 1/4 W resistors. For more information on how to install current loop receiver resistors, consult your *SCXI-1122 User Manual*.

Scanning Techniques

☞ **Note:** ***The SCXI-1122 input multiplexer is composed of relays. Relays have a certain life expectancy, as listed in Appendix A,*** *Specifications****, of the*** *SCXI-1122 User Manual****.***

To avoid mechanical wear on the relays and when you are acquiring a large number of points per channel and averaging, you should acquire the *n* samples on a given channel before proceeding to the next channel, as shown in Figure 3-3b. For example, rather than performing 100 scans and taking a single sample from each channel during each scan, as shown in Figure 3-3a, acquire 100 points on each channel then switch to the next channel and acquire a new set of samples, as shown in Figure 3-3b. The recommended method, software-driven scanning, saves relay life.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

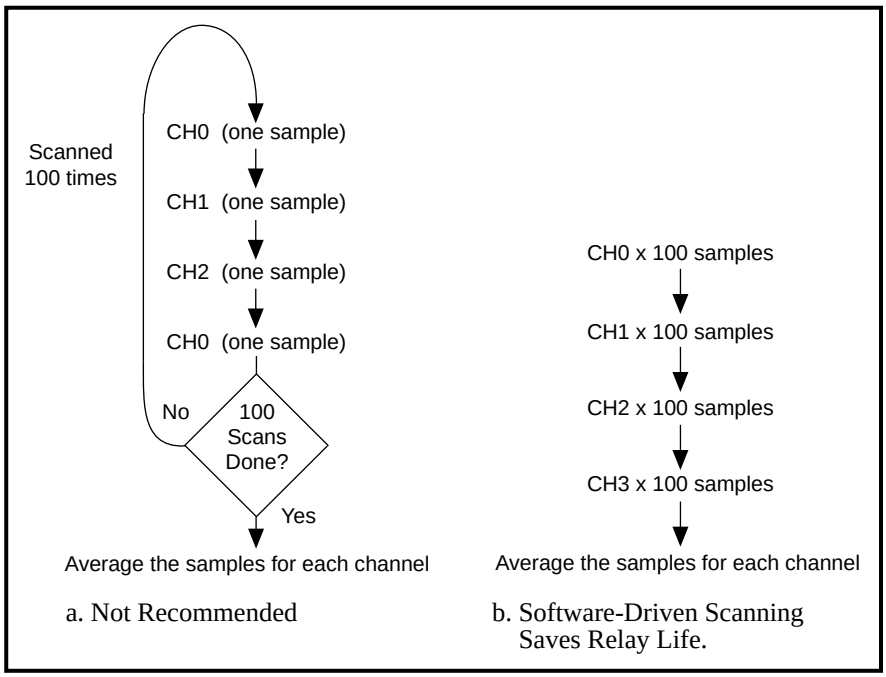


Figure 3-3. Scanning Techniques

Calibration Procedure

If you want to perform gain and offset calibration or excitation calibration, consult the *SCXI-1122 User Manual*.

SCXI-1124 Module

The SCXI-1124 has six isolated DACs with voltage or current outputs. You can use the SCXI-1124 voltage outputs for such functions as 12-bit resolution voltage sourcing and control signal output, and you can use the 0 to 20 mA current output signals in industrial control loops. The SCXI-1124 is designed for DC output sourcing, not waveform generation.

The SCXI-1124 works with National Instruments AI and MIO devices, Lab and 1200 devices, DIO-24, DIO-32F, and DIO-96/PnP devices. You can control several SCXI-1124s in a single chassis with one DAQ device and in combination with other SCXI module types.

☞ **Note:** ***If nothing is cabled to the SCXI-1124 rear signal connector, the position of all of the jumpers is irrelevant.***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Set jumper W1 to position P on only one of the SCXI-1124s that is cabled to the DAQ device in a multichassis system. It does not matter which of the SCXI-1124s has the pullup connected.

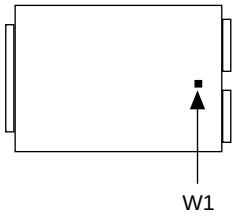

There are four jumpers on the SCXI-1124 that configure the module for the cable system that you connect to the module rear signal connector. You connect only one module per chassis to the DAQ device, which allows the DAQ device to communicate with all of the other modules in each chassis. On the unconnected modules, the jumper settings are irrelevant. Tables 3-19 and 3-20 list the description and configuration of the jumper settings.

You must use software to further configure the module. Refer to your software documentation or the *SCXI-1124 Register-Level Programmer Manual*.

If you cable this SCXI-1124 directly to a plug-in DAQ device, then use the following procedure to configure your SCXI-1124:

1. Set jumper W1 for a single chassis or multichassis system, as shown in Table 3-19.

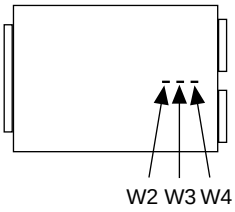
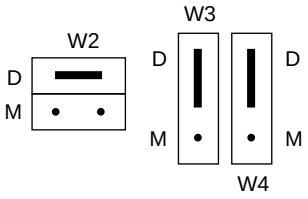
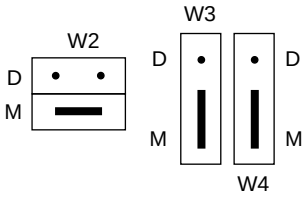
Table 3-19. SCXI-1124 Chassis Jumper Configurations

Jumper	Description	Configuration
	Pullup—Use this setting for a single-chassis system. Connects a 2.2 kΩ pullup resistor to the SERDATOUT line (factory-default position).	
	No Pullup—Use this setting for additional chassis in a multichassis system. No pullup resistor is connected to the SERDATOUT line (parking position).	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. If you are cabling this module directly to a DAQ device, set jumpers W1, W2, and W3 depending on the type of DAQ device you are using, as shown in Table 3-20.

Table 3-20. SCXI-1124 Device-Type Jumper Configurations

Jumper	Description	Configuration
	D—Use this setting for all three jumpers if you want to connect the SCXI-1124 to a DIO device (factory-default position).	
	M—Use this setting for all three jumpers if you want to connect the SCXI-1124 to an MIO device. Includes MIO, Lab and 1200, and LPM devices, and DAQCard-700.	

You can connect two types of DAQ devices to the SCXI-1124—DIO devices and MIO devices. If you want to connect the SCXI-1124 to an MIO device, place jumpers W2, W3, W4 in the M position. If you are using the SCXI-1124 and MIO device as well as modules with analog inputs, you should cable the MIO device to one of the analog input modules. The SCXI-1124 cannot send analog signals back to the MIO device.

SCXI-1140 Module

This module is an 8-channel simultaneously sampling differential amplifier. The SCXI-1140 has an instrumentation amplifier that can track and hold on all eight channels, an analog input range of ±10 V, and individual DIP-switch-programmable channel gains of 1, 10, 100, 200, and 500.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DAQ Device Connections in Multiple-Module Systems

☞ **Note:** ***If you use an SCXI-1140 in a system that contains multiple SCXI modules and one DAQ device, you must connect the SCXI-1140 to the DAQ device because the SCXI-1140 requires a counter/timer signal from the DAQ device to control the module track-and-hold circuitry.***

Other modules do not use this signal and thus do not pass the signal to the SCXIbus. If your system contains more than one SCXI-1140, the system operates correctly only when you have connected one of the SCXI-1140s to the DAQ device. Additional SCXI-1140s in the chassis can access the counter/timer signal via that module and the SCXI digital backplane. Other SCXI modules in the same chassis operate normally.

User-Configurable Jumpers and DIP Switches

This module has 10 user-configurable jumpers and eight DIP switches. You can set the jumpers for configuring signal referencing, instrumentation amplifier output referencing, grounding, shielding, and gain. Leave all other jumpers in their factory-default positions.

The SCXI-1140 is factory configured for use with an AI or MIO device in DIFF mode measuring ground-referenced signal sources—each module channel is configured for a gain of 1. If this configuration is suitable for your application, do not adjust any of the jumpers or DIP switches. However, you must adjust the configuration if any of the following conditions is true:

- Your input signals are floating or nonreferenced.
- You are cabling this SCXI-1140 directly to a DAQ device and you are using a Lab or 1200 device, LPM device, or DAQCard-700, or you are using an MIO or AI device in SE mode.
- You require a gain other than 1 on any channel.
- You are using digital modules and are cabling the SCXI-1140 to a DAQ device.

Read the rest of this section on the SCXI-1140 module if any of the previous conditions applies to you.

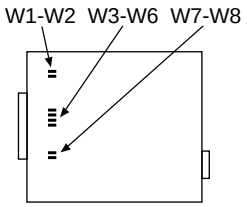
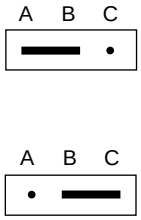
Use the following procedure to configure your SCXI-1140 module:

1. Configure the signal referencing modes. Leave the jumper at this setting if the channel will be measuring ground-referenced signals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-21 lists the SCXI-1140 signal referencing configurations.

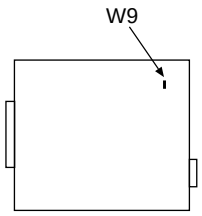

Table 3-21. SCXI-1140 Signal Referencing Jumper Configurations

Jumpers	Description	Configuration
	AB—Connects the instrumentation amplifier negative input only to the front panel connector (for ground-referenced sources) (factory-default position). BC—Connects instrumentation amplifier negative input to the front panel connector *and* to module analog ground through a 100 kΩ resistor (for floating sources). Use this setting if you intend to measure floating signals with this channel.	

2. Configure the instrumentation amplifier output referencing mode for your DAQ device using jumper W9. The output referencing mode is relevant only if this SCXI-1140 is connected directly to a plug-in DAQ device.

   Table 3-22 lists the SCXI-1140 instrumentation amplifier signal referencing configurations.

Table 3-22. SCXI-1140 Instrumentation Amplifier Jumper Configurations

Jumper	Description	Configuration
	AB—Use this setting for MIO or AI devices in DIFF mode (factory-default position). BC—Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	

Jumper W12 selects various grounding and shielding options. The factory-default position, CD, leaves the grounds disconnected and is suitable for most applications. For more information, refer to

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Configuration in Chapter 2, *Configuration and Installation*, in the *SCXI-1140 User Manual*.

3. Configure the gain selection.

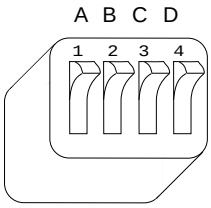
   Use the eight 4-bit DIP switches, U12 through U19, to select the gains of channels 0 through 7, respectively, as shown in Table 3-23. The factory-default position sets the gain to 1; that is, all four bits of each DIP switch are set to the off position (number side up). Select other gains by setting one or more of the four bits of a particular DIP switch to the on (closed) position as indicated in Table 3-24.

Table 3-23. SCXI-1140 Gain Switches for Each Channel

Channel	Use DIP Switch
0	U12
1	U13
2	U14
3	U15
4	U16
5	U17
6	U18
7	U19

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-24. SCXI-1140 Switch Settings for Gain Selection

Switch	Desired Gain	Closed Switches
 Switch is shown in factory-default (gain = 1) position.	1 10 100 200 300 500 600 700 800	None D C B B and C A A and C A and B A, B, and C

4. If you are using any digital SCXI modules in serial mode and will connect the SCXI-1140 module to the plug-in DAQ device, configure the SCXI-1140 module to connect the MISO signal to the SERDATOUT pin (jumper W11). See Chapter 2, *Configuration and Installation*, of your *SCXI-1140 User Manual* for details.

SCXI-1141 Module

This module has eight lowpass elliptic filters with differential input amplifiers. You can use the SCXI-1141 for antialiasing applications as well as for general-purpose amplification and filtering of signals.

The SCXI-1141 has two user-configurable jumpers. Jumper W1 is set at the factory for a single-chassis system, and jumper W2 is set at the factory for a differential input DAQ device.

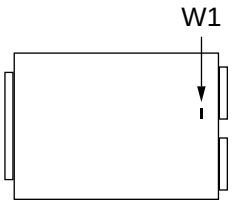
☞ **Note:** ***You need to change the SCXI-1141 jumper configuration only if or when you are using a multichassis system, when using a DAQ device in SE mode, or to change the default grounding and shielding configuration.***

Jumper W1, when set to position P, connects a 2.2 kΩ pullup resistor to the SERDATOUT line. An open-collector driver drives the SERDATOUT line. An open-collector driver actively drives low or goes to a high-impedance state, relying on a pullup resistor to make the signal line go high. If too many pullup resistors are attached to the SERDATOUT line, the drivers cannot drive the line low. To prevent this, set jumper W1 to position P on only one of the SCXI-1141s that are cabled to the DAQ device in a multiple chassis system. It does not matter which of the SCXI-1141s that are cabled to the DAQ device has the pullup connected.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

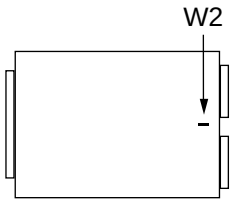
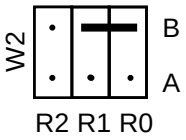
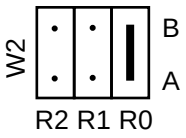
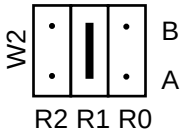
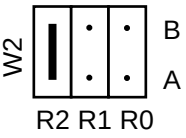
Tables 3-25 and 3-26 list the description and configuration of the configurable jumpers.

Table 3-25. SCXI-1141 Chassis Jumper Configurations

Jumper	Description	Configuration
	Pullup—Use this position for a single-chassis system or for the first chassis in a multichassis system (factory-default position). No Pullup—Use this position for additional chassis in a multichassis system.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-26. SCXI-1141 Grounding and Shielding Jumper Configurations

Jumper	Description	Configuration
	Parking position. Use this setting with DAQ devices in DIFF mode (factory-default position).	
	Use this position for DAQ devices with SE inputs, such as the Lab and 1200 devices, DAQCard-700, or MIO and AI devices in RSE mode.	
	Connects the SCXIbus guard to the analog reference.	
	Select this position for MIO and AI devices in NRSE mode.	

You must use software to further configure the module. Refer to your software documentation or to the *SCXI-1141 Register-Level Programmer Manual* if you are a register-level programmer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Digital SCXI Modules

In addition to the analog SCXI modules, National Instruments produces a range of digital modules—the SCXI-1160, SCXI-1161, SCXI-1162, SCXI-1162HV, SCXI-1163, and SCXI-1163R. You can connect these modules to either an analog or a digital DAQ device. The digital modules can work with analog modules in the same chassis.

When you are working with both analog and digital modules, you must use an analog DAQ device because it can accept both analog and digital signals. You must also connect an analog module to the analog DAQ device because an analog module can transfer both analog and digital signals. Refer to Chapter 1, *Introduction to SCXI*, for descriptions of National Instruments analog and digital DAQ devices.

The following sections describe each digital SCXI module and contain step-by-step instructions for configuring the jumpers on each module. Find the section about the module you want to configure. Check the position of each jumper and read the jumper position description. Change the appropriate jumpers to configure the module for the signal you intend to measure.

Communication Modes

Serial Mode

You can use any digital SCXI module in serial mode, in which you use a maximum of five digital lines to serially transfer data to and from the DAQ device. Either an analog or digital DAQ device can operate in serial mode, but an analog device works only in serial mode. Also, if you want to control a number of modules using any one DAQ device, you must configure all your modules for serial mode. The software configuration utilities use the multiplexed operating mode selection for digital modules to specify serial mode.

Parallel Mode

The SCXI-1162, SCXI-1162HV, SCXI-1163, and SCXI-1163R modules can work in parallel mode, in which you can use either 24 or 32 parallel lines to transfer data to or from a digital device. You must cable a module configured for parallel mode directly to a digital DAQ device. In parallel mode, you can use only one module per digital DAQ device; you must connect any other modules in the chassis, in either parallel or serial mode, to a different DAQ device. The only exception

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

to this rule is the DIO-96/PnP, which can work with two digital modules in parallel mode or one module in parallel mode and any number in serial mode. If you connect a digital module to the second half (pins 51 through 100) of the NB5 cable connected to the DIO-96/PnP, you must select Parallel or Secondary operating mode in the Configuration window. No analog DAQ devices except the MIO-16D devices work with digital modules in parallel mode.

☞ **Note:** ***On the MIO-16D, the cable breaks out the 100-pin male I/O connector to two 50-pin female connectors. One 50-pin connector is equivalent to the MIO-16 I/O connector; the other 50-pin connector is equivalent to the DIO-24 I/O connector.***

If you want to use your digital modules in serial mode, connect one module to the MIO-16-equivalent half of the NB5 cable and use the MIO-16D as an analog device.

If you want to use parallel mode with the SCXI-1162 or SCXI-1163, connect the SCXI module to the PC-DIO-24-equivalent half of the cable and use the MIO-16D as a digital device. If you use the DIO-24 equivalent half of the cable, you must select the parallel (secondary) operating mode selection in the configuration utility.

SCXI-1160 Module

This module switches and controls 16 isolated SPDT relays. The module has three user-configurable jumpers for configuring the type of DAQ device connected to your module. Leave all other jumpers in the factory-default positions.

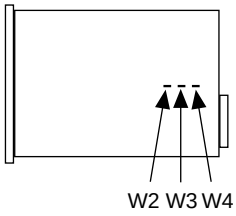
The SCXI-1160 module is shipped configured for use with a DIO device.

☞ **Note:** ***If you are not connecting the SCXI-1160 module directly to a plug-in device, you do not need to change any jumper settings.***

If you are connecting the SCXI-1160 directly to a plug-in device, set jumpers W2, W3, and W4 according to whether the module is connected to an analog device or a DIO device as shown in Table 3-27.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-27. SCXI-1160 Digital Jumper Configurations

Jumper	Description	Configuration
	DIO—Use this setting to connect the SCXI-1160 to a DIO device (factory-default position). MIO—Use this setting if you connect your SCXI-1160 to an AI or MIO device, Lab or 1200 device, LPM device, or DAQCard-700.	

SCXI-1161 Module

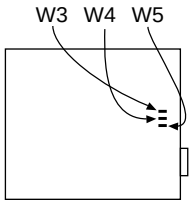
The SCXI-1161 module switches and controls eight SPDT relays. The module has three user-configurable jumpers for configuring the type of DAQ device connected to your module. Leave all other jumpers in the factory-default positions.

The SCXI-1161 module is shipped configured for use with a DIO device.

☞ **Note:** ***If you are not connecting the SCXI-1161 module directly to a plug-in device, you do not need to change any jumper settings.***

If you are connecting the SCXI-1161 directly to a plug-in device, set jumpers W3, W4, and W5 according to whether the module is connected to an analog device or a DIO device as shown in Table 3-28.

Table 3-28. SCXI-1161 Digital Jumper Configurations

Jumper	Description	Configuration
	DIO—Use this setting to connect the SCXI-1161 to a DIO device. (factory-default position). MIO—Use this setting if you connect your SCXI-1160 to an AI or MIO device, Lab or 1200 device, LPM device, or DAQCard-700.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1162 Module

This module has 32 optically isolated digital input channels. Major features include 450 Vrms isolation, 1,900 Vrms breakdown, TTL and CMOS compatibility, and high-speed parallel data transfer to digital DAQ devices. The module has four user-configurable jumpers for configuring the operating mode and the type of DAQ device connected to your module. Leave all other jumpers in the factory-default positions.

The SCXI-1162 module is shipped configured for use with a DIO device in serial mode.

☞ **Note:** ***You need to adjust jumpers on this module only if you cable the module directly to an analog DAQ device or use the module in parallel mode. If either of these conditions applies to you, read the rest of this section.***

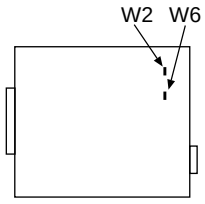
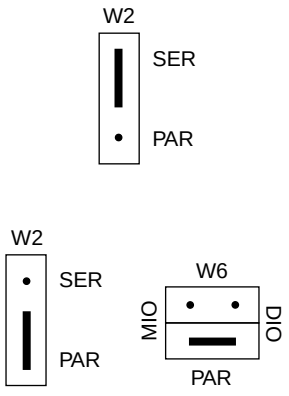
Use the following procedure to configure your SCXI-1162 module:

1. Select parallel or serial mode.

   Use jumper W2 to select whether the module transfers data in parallel to a digital DAQ device (or the DIO-24 connector of an MIO-16D device) or serially to either a digital or an analog DAQ device. If you use parallel mode, you must also set the number of parallel lines using jumper W1.

Table 3-29 shows the SCXI-1162 DIO connections and jumper settings.

Table 3-29. SCXI-1162 Mode Jumper Configurations

Jumper	Description	Configuration
	SER—Use this setting to configure the rear connector for serial communication (factory-default position). PAR—Use this setting to configure the rear connector for parallel communication.	

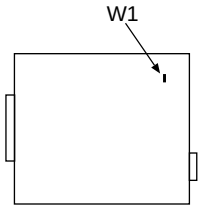

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Select 24 or 32 lines.

   If jumper W2 is set to parallel mode, you can use jumper W1 to select whether the module transfers 24 or 32 parallel lines of data to the device. If you are using a DIO-24 or the digital connector (pins 51 through 100) of an MIO-16D, you must select 24 lines. If you are using a DIO-32F or a DIO-96/PnP, select 32 lines. If you are using an analog device, set jumper W2 to the serial position, which makes the position of W1 irrelevant.

Table 3-30 shows the SCXI-1162 parallel lines jumper configurations.

Table 3-30. SCXI-1162 Parallel Lines Jumper Configurations

Jumper	Description	Configuration
	24—Use this setting to drive only 24 rear connector data lines when W2 is set to PAR (factory-default position). 32—Use this setting to drive all 32 rear connector data lines when W2 is set to PAR.	

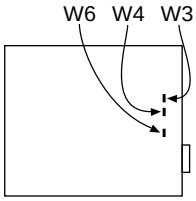
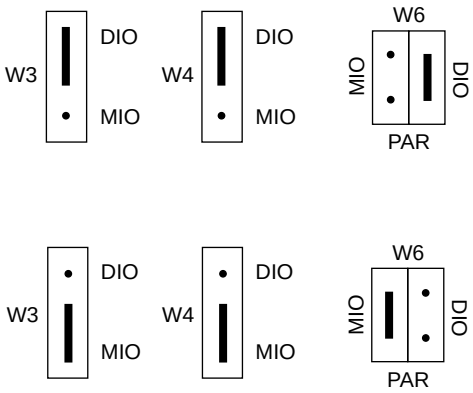
3. Select your device type—either analog or digital.

   If this module is connected *directly* to a DAQ device, jumpers W3, W4, and W6 specify to which type of device the module is connected. Set jumpers W3, W4, and W6 to the DIO position if the module is connected to a DIO-24, DIO-32F, or DIO-96/PnP device. Set the jumpers to the MIO position if the module is connected to an AI or MIO device, Lab or 1200 device, LPM analog device, or DAQCard-700. If you are using the SCXI-1162 in parallel mode, set jumper W6 to the PAR position. If the module is not connected directly to a DAQ device, the positions of W3, W4, and W6 are irrelevant.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-31 shows the SCXI-1162 device-type jumper configurations.

Table 3-31. SCXI-1162 Device-Type Jumper Configurations

Jumper	Description	Configuration
	MIO—Use this setting to configure rear connector for AI or MIO device, Lab or 1200 device, LPM device, or DAQCard-700 in serial mode (factory-default position). DIO—Use this setting to configure rear connector for DIO device in serial mode.	

SCXI-1162HV Module

The SCXI-1162HV module consists of 32 optically isolated, wide range, AC or DC digital inputs. The SCXI-1162HV is a module for sensing the presence of AC or DC voltages where high common-mode voltages may be present.

To configure the SCXI-1162HV module, use the six user-configurable jumpers (W2–W7). (Jumper W1 is a reserved jumper and should remain unconnected.)

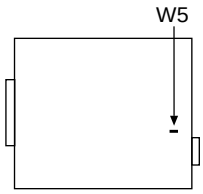
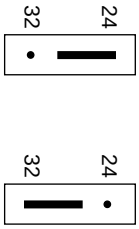
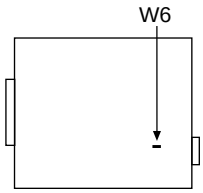
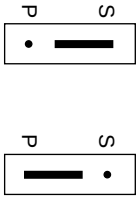
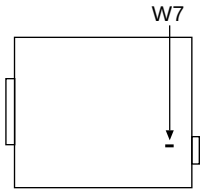
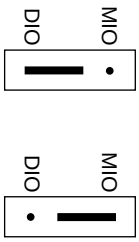
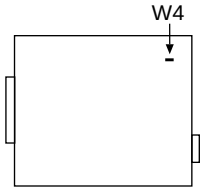
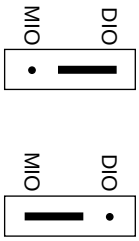
☞ **Note:** ***If you are controlling the SCXI-1162HV via the SCXIbus and are not cabling a DAQ device directly to the rear connector of the SCXI-1162HV, the positions of these jumpers are irrelevant.***

Jumper W3, when set to position P, connects a 2.2 kΩ pullup resistor to the SERDATOUT line. An open-collector driver actively drives low or goes to a high-impedance state, relying on a pullup resistor to make the signal line go high. If too many pullup resistors are attached to the SERDATOUT line, the drivers cannot drive the line low. To prevent this, set jumper W3 to position P on only one of the SCXI-1162HVs cabled to the DAQ device in a multichassis system. It does not matter which of the SCXI-1162HVs cabled to the DAQ device has the pullup connected.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

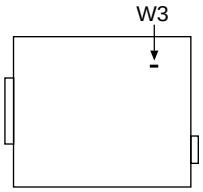


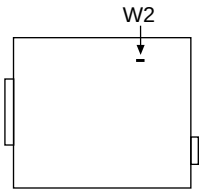
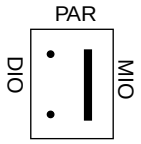
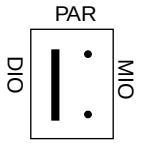

Table 3-32 lists the description and configuration of the user-configurable jumpers.

Table 3-32. SCXI-1162HV Jumper Configurations

Jumper	Description	Configuration
	24—Use this setting to drive only 24 lines when W2 is set to PAR and you are using a DIO-24 or an MIO-16D device (factory-default position). 32—Use this setting to drive all 32 rear connector data lines when W2 is set to PAR and you are using a DIO-32F or DIO-96/PnP device.	
	S—Use this setting to configure the rear connector for serial communication (factory-default position). P—Use this setting to configure the rear connector for parallel communication. Use with DIO devices only.	
	DIO—Use this setting to configure the rear connector for a DIO device (factory-default position). MIO—Use this setting to configure the rear connector for an MIO device. Includes AI or MIO device, Lab or 1200 device, LPM devices, and DAQCard-700.	
	DIO—Use this setting to configure the rear connector for a DIO device (factory-default position). MIO—Use this setting to configure the rear connector for an MIO device. Includes AI or MIO device, Lab or 1200 device, LPM devices, and DAQCard-700.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-32. SCXI-1162HV Jumper Configurations (Continued)

Jumper	Description	Configuration
	Pullup—Use this setting for a single-chassis system or for the first chassis in a multichassis system. Connects a pullup resistor to the SERDATOUT line (factory-default position).	
	No Pullup—Use this setting for additional chassis in a multichassis system. No pullup resistor is connected to the SERDATOUT line.	
	DIO—Use this setting to configure SERDATOUT for DIO devices (factory-default position).	
	MIO—Use this setting to configure SERDATOUT for MIO device. Includes AI or MIO device, Lab or 1200 device, LPM devices, and DAQCard-700.	
	PAR—Use this setting to disconnect SERDATOUT line. Use for parallel mode.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1163 Module

This module is a 32-channel optically isolated digital output module with TTL and CMOS compatibility, 450 Vrms isolation and 1,900 Vrms breakdown, and high-speed parallel data transmission from digital devices. The module has five user-configurable jumpers for configuring the operating mode and the type of DAQ device connected to your module. Leave all other jumpers in the factory-default positions.

The SCXI-1163 module is shipped configured for use with a DIO device in serial mode.

☞ **Note:** ***You need to adjust jumpers on this module only if you plan to cable the module directly to an analog DAQ device or if you want to use the module in parallel mode. If either of these conditions applies to you, read the rest of this section.***

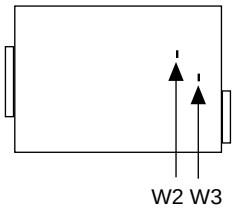
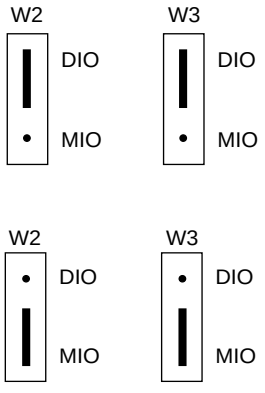
Use the following procedure to configure your SCXI-1163 module:

1. Select your device type—either analog or digital.

   If the module is connected to a DIO device, set jumpers W2 and W3 to the DIO position, as shown in Table 3-33. If the module is connected to an analog device, set W2 and W3 to the MIO position. If the module is not cabled *directly* to a DAQ device, the positions of W2 and W3 are irrelevant.

Table 3-33 shows the SCXI-1163 device-type jumper configurations.

Table 3-33. SCXI-1163 Device-Type Jumper Configurations

Jumper	Description	Configuration
	DIO—Use this setting to configure rear connector for DIO device in serial mode (factory-default position). MIO—Use this setting to configure rear connector for AI or MIO, Lab or 1200, LPM devices, and DAQCard-700 in serial mode.	

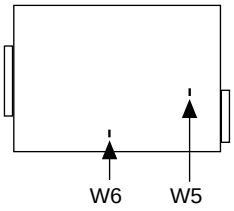
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Select serial or parallel mode.

   If you are using the module in parallel mode, set jumper W6 to the P position and jumper W5 to the PAR position. For serial mode, set W6 to the S position and jumper W5 to the MIO or DIO position, depending on the type of device to which the module is connected. If you are using the module in parallel mode, it must be directly connected to a digital device or the DIO-24 connector of an MIO-16D.

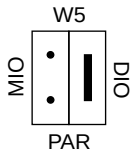
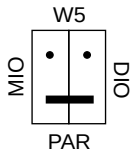
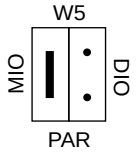
Table 3-34 shows the SCXI-1163 mode jumper configurations.

Table 3-34. SCXI-1163 Mode Jumper Configurations

Jumper	Description	Configuration
	S—Use this setting to configure the module in serial mode (factory-default position). P—Use this setting to configure rear connector for DIO device in parallel mode.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-34. SCXI-1163 Mode Jumper Configurations (Continued)

Jumper	Description	Configuration
	DIO—Use this setting to configure the module in serial mode (factory-default position).	
	PAR—Use this setting to configure rear connector for DIO device in parallel mode.	
	MIO—Use this setting to configure rear connector for MIO device in parallel mode.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1163R Module

The SCXI-1163R is an SCXI module consisting of 32 optically isolated solid-state relays. The SCXI-1163R module switches loads up to 240 Vrms or VDC and 200 mA where common-mode voltages may be present.

The SCXI-1163R operates in serial mode with full functionality with National Instruments MIO and AI devices, Lab and 1200 devices, LPM devices, DAQCard-700, and DIO devices. You can control several SCXI-1163Rs in serial mode in a single chassis with one DAQ device. In addition, you can control 24 of the relays in parallel mode with a DIO-24, or all 32 relays in parallel mode with a DIO-32F or DIO-96/PnP.

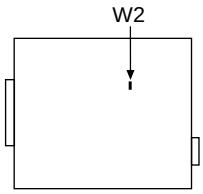
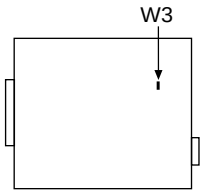
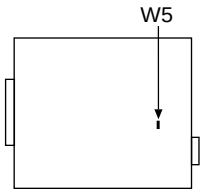
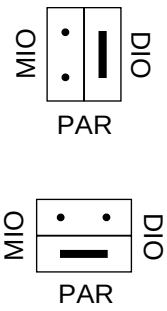
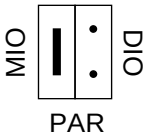
The SCXI-1163R is factory-configured for serial communication through a DIO device or through the SCXI chassis.

☞ **Note:** ***You should change the jumper configuration from the factory-default settings only if you plan to cable the SCXI-1163R rear connector directly to an MIO and AI device, or if you plan to use the SCXI-1163R in parallel mode.***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

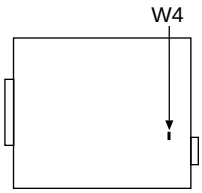
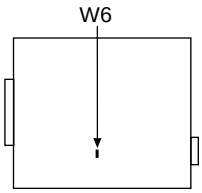
Tables 3-35 and 3-36 show the SCXI-1163R jumper configurations.

Table 3-35. SCXI-1163R Device-Type Jumper Configurations

Jumper	Description	Configuration for DIO Device	Configuration for MIO Device
	Configures rear connector. Factory-default position is for DIO devices.		
	Configures rear connector. Factory-default position is for DIO devices.		
	Configures SERDATOUT line for a DIO or MIO device. Factory-default position is for DIO devices. PAR—Use this setting to disconnect SERDATOUT line and for parallel mode.		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-36. SCXI-1163R Chassis and Mode Jumper Configurations

Jumper	Description	Configuration
	A—Use this setting for a single-chassis system (factory-default position).	
	B—Use this setting for an additional chassis in a multichassis system.	
	S—Sets primary mode of operation to serial (factory-default position).	
	P—Sets primary mode of operation to parallel.	

Jumper W4, when set to position A, connects a 2.2 kΩ pullup resistor to the SERDATOUT line. An open-collector driver drives the SERDATOUT line. An open-collector driver actively drives low or goes to a high-impedance state, relying on a pullup resistor to make the signal line go high. If too many pullup resistors are attached to the SERDATOUT line, the drivers cannot drive the line low. To prevent this, set jumper W4 to position A on only one of the SCXI-1163Rs that is cabled to the DAQ device in a multichassis system. It does not matter which of the SCXI-1163Rs cabled to the DAQ device has the pullup connected.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1200 Module

The SCXI-1200 is an SCXI module that works like the Lab-PC+ multifunction analog, digital, and timing I/O plug-in device. The SCXI-1200 controls the operation of and digitizes the conditional analog signals from other SCXI modules. The SCXI-1200 has eight analog input channels, which can be configured as eight SE or four DIFF; a 12-bit successive-approximation ADC; two 12-bit DACs with voltage outputs; 24 lines of TTL-compatible digital I/O; and 16-bit counter/timer channels for timing I/O.

You can use the SCXI-1200 module in two types of configurations—connecting the SCXI-1200 module directly to the parallel port of the computer, or connecting the SCXI-1200 to the parallel connector of the SCXI-2000 or SCXI-2400 for connection to RS-232 or RS-485 serial ports.

The SCXI-1200 complies with IEEE 1284 parallel port standard. This IEEE protocol supports three different parallel port types—the original Centronics or unidirectional port for printers, the PS/2 type bidirectional port, and the 386-SL Enhanced Parallel Port (EPP).

Parallel Port Interface

If you plan to connect the SCXI-1200 directly to the parallel port of your computer, read this section carefully.

An IBM-compatible computer can support up to three parallel printer ports, which are designated LPT1, LPT2, and LPT3. Each port uses three consecutive I/O addresses. When you power up your system, DOS assigns the printer ports to the logical LPT designations in the following order—LPT1, LPT2, and LPT3. The starting addresses of the parallel printer ports, in the order assigned to LPT designations, are 3BC, 378, and 278 hex. Therefore, if you have installed all three ports, 3BC hex is LPT1, 378 hex is LPT2, and 278 hex is LPT3. If you have not installed port 3BC hex, port 378 hex becomes LPT1 and port 278 hex becomes LPT2. If only one parallel port is present, it is LPT1.

The SCXI-1200 can use the parallel port hardware interrupts for interrupt-driven data acquisition. Interrupt levels 7 and 5 are commonly used for parallel ports. Refer to your parallel port reference manual for details about interrupt selection.

When you use the SCXI-1200, you must know which port and interrupt channel is being used. If you use the SCXI-1200 with NI-DAQ

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

software, however, you select the port and interrupt at configuration time.

If you are using the SCXI-1200 with the SCXI-2000 chassis or the SCXI-2400 module with RS-232/RS-485 communications, you do not need to be concerned with parallel port addresses and interrupts.

Module Configuration

The SCXI-1200 is software calibrated and software configurable. Seven bits in the SCXI-1200 control registers configure all of the analog I/O options. The SCXI-1200 has one reserved jumper that selects the grounding scheme for the SCXIbus guard.

Analog I/O Configuration

The SCXI-1200 is shipped from the factory with the following configuration:

- RSE input mode
- ±5 V analog input range (bipolar)
- ±5 V analog output range (bipolar)

Table 3-37 lists all the available analog I/O bit configurations for the SCXI-1200 and shows the factory settings.

Table 3-37. SCXI-1200 Analog I/O Settings

Parameter	Configuration
Analog Output CH0 Polarity	Bipolar—±5 V (factory setting) Unipolar—0 to 10 V
Analog Output CH1 Polarity	Bipolar—±5 V (factory setting) Unipolar—0 to 10 V
Analog Input Range	Bipolar—±5 V (factory setting) Unipolar—0 to 10 V
Analog Input Mode	RSE (factory setting) NRSE DIFF Analog Bus 0 (AB0)

Both the analog input and analog output circuitries are software configurable.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Output Configuration

The SCXI-1200 has two channels of analog output voltage at the I/O connector. You can configure each analog output channel for either unipolar or bipolar output. A unipolar configuration has a range of 0 to 10 V at the analog output. A bipolar configuration has a range of -5 V to +5 V at the analog output. In addition, you can select the coding scheme for each DAC as either two's complement or straight binary.

If you select a bipolar range for a DAC, the two's complement coding is recommended. In this mode, data values written to the analog output channel range from F800 hex (-2,048 decimal) to 7FF hex (2,047 decimal). If you select a unipolar range for a DAC, the straight binary coding is recommended. In this mode, data values written to the analog output channel range from 0 to FFF hex (4,095 decimal).

Analog Input Configuration

The SCXI-1200 has three different input modes—RSE, NRSE, and DIFF. The single-ended input configurations use eight channels. The DIFF input configuration uses four channels. Table 3-38 describes these configurations.

Table 3-38. SCXI-1200 Analog Input Configurations

Configuration	Description
RSE	RSE configuration provides eight single-ended inputs with the negative input of the instrumentation amplifier referenced to analog ground (factory setting).
NRSE	NRSE configuration provides eight single-ended inputs with the negative input of the instrumentation amplifier tied to AISENSE/AIGND and not connected to ground.
DIFF	DIFF configuration provides four differential inputs with the positive input of the instrumentation amplifier tied to channels 0, 2, 4, or 6 and the negative input tied to channels 1, 3, 5, or 7, respectively, thus choosing channel pairs (0, 1), (2, 3), (4, 5), or (6, 7).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RSE Input (Eight Channels, Factory Setting)

RSE input means that all input signals are referenced to a common ground point that is also tied to the SCXI-1200 analog input ground. The differential amplifier negative input is tied to analog ground. The RSE configuration is useful for measuring floating signal sources. With this input configuration, the SCXI-1200 can monitor eight different analog input channels.

Considerations for using the RSE configuration are discussed in Chapter 3, *Signal Connections*, of the *SCXI-1200 User Manual*. Notice that in this mode the return path of the signal is analog ground at the connector through the AISENSE/AIGND pin.

NRSE Input (Eight Channels)

NRSE input means that all input signals are referenced to the same common-mode voltage, which floats with respect to the SCXI-1200 analog ground. This common-mode voltage is subsequently subtracted by the input instrumentation amplifier. The NRSE configuration is useful for measuring ground-referenced signal sources.

Considerations for using the NRSE configuration are discussed in Chapter 3, *Signal Connections*, of the *SCXI-1200 User Manual*. Notice that in this mode, the return path of the signal is through the negative terminal of the amplifier at the connector through the AISENSE/AIGND pin.

DIFF Input (Four Channels)

DIFF input means that each input signal has its own reference, and the difference between each signal and its reference is measured. The signal and its reference are each assigned an input channel. With this input configuration, the SCXI-1200 can monitor four differential analog input signals.

Considerations for using the DIFF configuration are discussed in Chapter 3, *Signal Connections*, of the *SCXI-1200 User Manual*. Notice that the signal return path is through the negative terminal of the amplifier and through channel 1, 3, 5, or 7, depending on which channel pair you select.

These three modes are all software-selectable. Refer to the *SCXI-1200 Register-Level Programmer Manual* for further details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Input Polarity and Range Configuration

You can select the analog input on the SCXI-1200 for either a unipolar range (0 to 10 V) or a bipolar range (-5 to +5 V). The range and the coding scheme are both software-selectable. In addition, you can select the coding scheme for analog input as either two's complement or straight binary. If you select a bipolar range, the two's complement coding is recommended. In this mode, -5 V input corresponds to F800 hex (-2,048 decimal) and +5 V corresponds to 7FF hex (2,047 decimal). If you select a unipolar mode, the straight binary coding is recommended. In this mode, 0 V input corresponds to 0 hex, and +10 V corresponds to FFF hex (4,095 decimal).

☞ **Note:** ***If AB0 is selected by the SCXI-1200, this selection is still valid. If another module is in unipolar mode and drives AB0, the SCXI-1200 must also be in unipolar mode.***

Table 3-39 describes the jumper settings for different configurations.

Table 3-39. SCXI-1200 Jumper Configurations

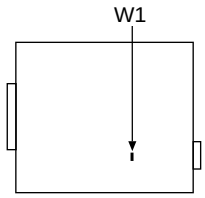
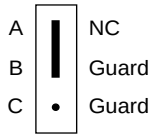
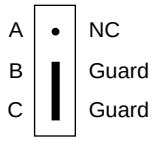
Jumper	Description	Configuration
	AB—The SCXI analog bus guard is not connected to the SCXI-1200 analog ground. Use this setting when using the SCXI-1200 in stand-alone mode (factory-default position).	
	BC—The SCXI analog bus guard is connected to the SCXI-1200 analog ground. Use this setting when using the SCXI-1200 in conjunction with other modules or in SCXI multiplexed mode.	

Figure 3-4 shows the SCXI-1200 front connector pin assignments.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ACH0	1	2	ACH1
ACH2	3	4	ACH3
ACH4	5	6	ACH5
ACH6	7	8	ACH7
AISENSE/AIGND	9	10	DAC0OUT
AGND	11	12	DAC1OUT
DGND	13	14	PA0
PA1	15	16	PA2
PA3	17	18	PA4
PA5	19	20	PA6
PA7	21	22	PB0
PB1	23	24	PB2
PB3	25	26	PB4
PB5	27	28	PB6
PB7	29	30	PC0
PC1	31	32	PC2
PC3	33	34	PC4
PC5	35	36	PC6
PC7	37	38	EXTTRIG
EXTUPDATE*	39	40	EXTCONV*
OUTB0	41	42	GATB0
COUTB1	43	44	GATB1
CCLKB1	45	46	OUTB2
GATB2	47	48	CLKB2
+5 V	49	50	DGND

Figure 3-4. SCXI-1200 Front Connector Pin Assignments

SCXI-1180 Feedthrough Panel

You can use the SCXI-1180 feedthrough panel, in conjunction with an SCXI cable assembly, to route signals from the front connector of the SCXI-1180 to the 50-pin I/O connector of the DAQ device. With the SCXI-1180, you can integrate signals that do not require conditioning

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

into the SCXI chassis and use channels that the chassis is not already using. This is useful if you need to use the analog output channels or connect unconditioned signals to unused analog input channels.

For example, the SCXI-1100 drives only two of the DAQ device analog input channels, channel 0 and channel 1; if you connect an SCXI-1100 module to a DAQ device, channels 2 through 7 remain available for use with unconditioned signals. You should always install the SCXI-1180 panel in the SCXI chassis slot immediately to the right of the SCXI module connected to the DAQ device to ensure easy connection to the cable assembly. Other uses for the SCXI-1180 are described in Chapter 2, *SCXI-1180 Feedthrough Panel*, of the *SCXI-1180/1181 User Manual*.

SCXI-1181 Breadboard Module

The SCXI-1181 module has a breadboard area for integrating custom circuitry into the SCXI system. Refer to the *SCXI-1180/1181 User Manual* for more information.

SCXI-2400 Serial Communications Module

The SCXI-2400 serial communications module adds RS-232 and RS-485 serial communications to any SCXI chassis, including the SCXI-1000, SCXI-1000DC, and SCXI-1001 chassis. You can either connect the SCXI-2400 module directly to the RS-232 serial COM port of a computer, or you can connect the SCXI-2400 module to RS-485 network for long-distance, multidrop configurations.

If your SCXI chassis includes any analog input modules, the chassis must include the SCXI-1200 DAQ module to digitize the conditioned analog signals. The digitized data, available on the rear parallel connector of the SCXI-1200, is communicated to the SCXI-2400 via the short parallel port cable provided with the SCXI-2400 module. Therefore, you should install the SCXI-1200 module in a slot adjacent to the SCXI-2400 module.

The SCXI-2400 also includes a connector adapter assembly that provides the parallel port connector and RS-485 connection. After installing the SCXI-2400 module into the SCXI chassis, attach this connector adapter to the rear of the SCXI-2400 through the back opening of the SCXI chassis. Screw down the connector adapter for secure cabling.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Baud Rate and Address Configuration

The SCXI-2400 includes DIP switches on the front panel to select the baud rate for serial communications with the computer and the address when used with an RS-485 connector.

The SCXI-2400 is shipped with a default baud rate of 9600 bps and a chassis address of 1. These switch settings are shown in Figure 3-5. Leave the DIP switches in these settings for initial configuration. After establishing communications with the computer, you can increase the baud rate (up to 57.6 kbps) and, if using an RS-485 connector with multiple chassis, change the address. See the *SCXI-2400 User Manual* for more information about changing the baud rate and address.

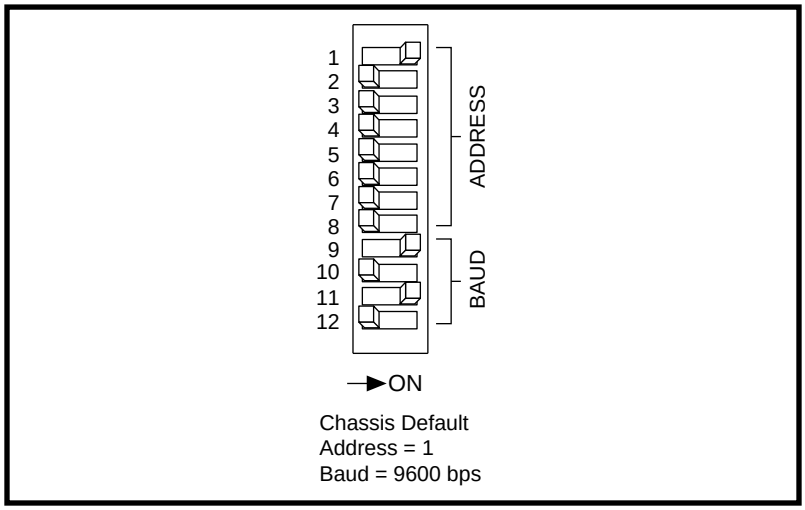


Figure 3-5. SCXI-2400 Module Default Switch Settings

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI Chassis

SCXI-2000 Chassis with Serial Communications

The SCXI-2000 is a four-slot chassis with built-in RS-232 and RS-485 serial communication. You can connect the SCXI-2000 module directly to the RS-232 serial COM port of a computer, or you can connect the SCXI-2000 chassis to an RS-485 network for long-distance, multidrop configurations.

If your SCXI chassis includes any analog input modules, the SCXI-2000 chassis must include the SCXI-1200 DAQ module to digitize the conditioned analog signals. The digitized data, available on the rear parallel connector of the SCXI-1200, is communicated to the SCXI-2000 via the 7 in. IEEE 1284 parallel port cable provided with the SCXI-2000 module. Therefore, you should install the SCXI-1200 module into slot 1 of the chassis.

Baud Rate and Address Configuration

The SCXI-2000 includes DIP switches on the front panel. Select the baud rate for serial communications with the computer and the address (when used with an RS-485 connector).

The SCXI-2000 is shipped with a default baud rate of 9600 bps and a chassis address of 1. You should leave the DIP switches in these settings for initial configuration. After establishing communications with the computer, you can increase the baud rate (up to 57.6 kbps) and, if you are using an RS-485 connector with multiple chassis, change the address. See the *SCXI Chassis User Manual* for more information about changing the baud rate and address.

SCXI-1000, SCXI-1000DC, and SCXI-1001 Chassis

The SCXI-100*X* Series chassis house four or 12 SCXI modules. The only configuration you must make is to set the chassis address for the SCXI-100*X* chassis when you are connecting more than one chassis to a single plug-in DAQ board. If you are configuring a multichassis system with a plug-in DAQ board, refer to the *SCXI Chassis User Manual* for instructions on how to change the chassis address.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Configure Your Software for Use with SCXI Products

Before you can configure your software, you must install it. Refer to *Installing Your Software* in Chapter 2, *Installing SCXI Modules and Connecting the SCXI System to the DAQ Board*, for installation instructions.

After you have installed your software, perform the following steps:

1. Check your DAQ board jumper settings.
2. Configure your DAQ board.
3. Configure your SCXI system.

Refer to the NI-DAQ Configuration Utility for instructions on configuring your software.

Example Programs

You can learn more about the SCXI system by running the example programs that are included with all National Instruments application software packages and with the NI-DAQ software you received with your DAQ board. Be sure to read the information in the remarks at the top of each example program and configure your SCXI system appropriately. Refer to the NI-DAQ software documentation for detailed information about how each of the function calls works.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connecting and Using Accessories and Transducers

Chapter 4

This chapter describes the function and use of the SCXI terminal blocks and connector-and-shell assemblies and explains how to connect three commonly used transducers—thermocouples, strain gauges, and resistive temperature devices (RTDs)—to your SCXI system.

Connecting Signal Wires to the SCXI System

There are two methods for connecting signals to the SCXI system—using SCXI terminal blocks and using TBX terminal blocks. Because the front panel connectors of different SCXI modules have different pinouts, there are several different terminal blocks and connector-and-shell assemblies you can use with particular modules. Some terminal blocks are interchangeable between modules, as shown in Table 4-1.

Table 4-1. SCXI Module and Connector Compatibility

Module	Terminal/ Connector	Features		
		Cold-Junction Sensor	Isothermal	Others
SCXI-1100	SCXI-1300	√	—	—
SCXI-1102	SCXI-1303	√	√	Signal referencing
	TBX-1303	√	√	and open thermocouple detection
	SCXI-1310	—	—	Low-cost connector and shell
SCXI-1120	SCXI-1320	√	—	—
SCXI-1121	SCXI-1321	√	—	Offset-nulling and shunt calibration for strain gauges
	SCXI-1327	√	—	100:1 attenuation of voltages to 250 Vrms
	SCXI-1328	√	√	—
	TBX-1328	√	√	Low-cost connector
	SCXI-1330	—	—	and shell

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-1. SCXI Module and Connector Compatibility (Continued)

Module	Terminal/ Connector	Features		
		Cold-Junction Sensor	Isothermal	Others
SCXI-1122	SCXI-1322	√	—	—
SCXI-1124	SCXI-1325 TBX-1325	—	—	—
SCXI-1140 SCXI-1141	SCXI-1301 SCXI-1304 SCXI-1310	— — —	— — —	— AC coupling —
SCXI-1160	SCXI-1324	—	—	—
SCXI-1162 SCXI-1162HV SCXI-1163 SCXI-1163R	SCXI-1326 TBX-1326 SCXI-1324	— —	— —	— — — —
SCXI-1180	SCXI-1302	—	—	—
SCXI-1181	SCXI-1301 SCXI-1310 SCXI-1330[1]	— — —	— — —	— — —
SCXI-1200[2]	SCXI-1302	—	—	—
All modules	TBX-24F[3]			

[1] The SCXI-1330 connector is keyed for use with high-voltage modules. To use the SCXI-1330 with the SCXI-1181, you must remove the keys by sliding the two coding wedges from their dovetail grooves. The SCXI-1181 is not intended for use with hazardous voltages (exceeding 42 Vrms). National Instruments is not liable for any damages or injuries resulting from improper installation.

[2] To connect signals to the SCXI-1200, you can also use a CB-50, a BNC-2081, or an SC-2071.

[3] The TBX-24F is a general-purpose feedthrough connector that mounts on a DIN rail.

SCXI-13*XX* Terminal Blocks

An SCXI-13*XX* terminal block contains a number of labeled screw terminals to which you can connect signal wires, along with a strain-relief mechanism to prevent the connections from being inadvertently loosened. The terminal block plugs directly to the front of the appropriate SCXI module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TBX Terminal Blocks

TBX terminal blocks provide DIN-rail mounted terminal blocks that you cable to the front of your SCXI modules. Figure 4-1 shows a TBX cabled to an SCXI module. Table 4-2 summarizes the TBX terminal blocks and the SCXI modules for which they were designed. The TBX terminal blocks are designed to mount on a DIN rail in a separate panel and provide easy access to the screw terminals. These terminal blocks are functionally equivalent to the SCXI-13*XX* terminal block counterparts.

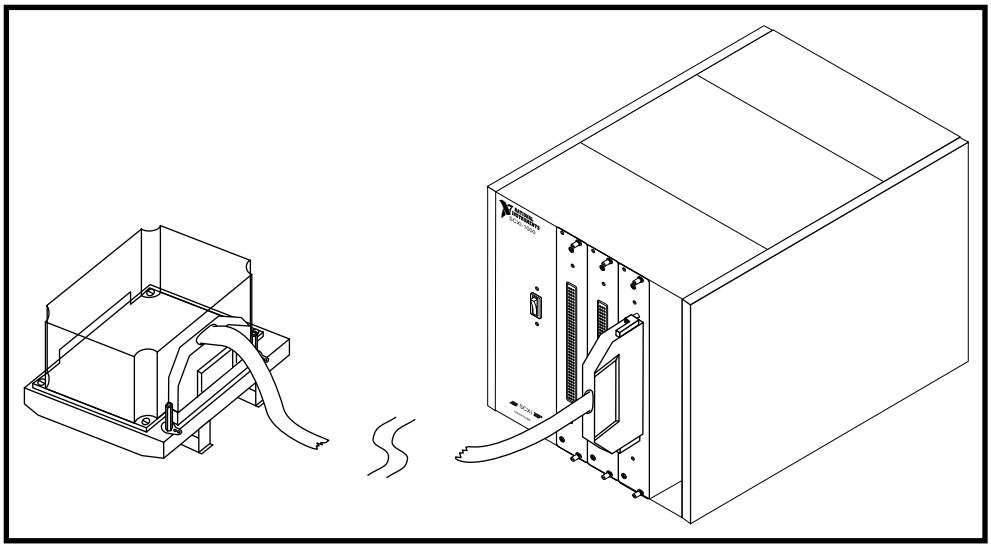


Figure 4-1. TBX Terminal Block Cabled to an SCXI Module

Table 4-2. TBX Terminal Block Compatibility with SCXI Modules

SCXI Module	TBX Terminal Block	Cable Assembly
SCXI-1100/1102	TBX-1303	SH96-96 or R96-96
SCXI-1124	TBX-1325	SH48-48A
SCXI-1162/1162HV/1163/1163R	TBX-1326	SH28-28B
SCXI-1120/1121	TBX-1328	SH32-32A
All other SCXI modules	TBX-24F	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Onboard Temperature Sensors for Cold-Junction Compensation

The SCXI-1300, SCXI-1303, TBX-1303, SCXI-1320, SCXI-1321, SCXI-1322, SCXI-1327, SCXI-1328, and TBX-1328 terminal blocks have onboard temperature sensors for measuring ambient temperature inside the terminal block. If you are measuring temperatures with thermocouples, you can obtain a reference temperature from the onboard temperature sensor that you can use for cold-junction compensation.

Jumper W1 on the SCXI-1300, SCXI-1303, TBX-1303, SCXI-1320, SCXI-1322, SCXI-1327, SCXI-1328, or TBX-1328 and jumper W5 on the SCXI-1321 determine the temperature-sensor signal routing. There are two possible positions for these jumpers—MTEMP for multiplexed operation (factory-default) and DTEMP for parallel operation. When using MTEMP, you will not be able to scan the temperature sensor reading with other SCXI channels. If you need to do so, use DTEMP.

☞ **Note:** ***When using the SCXI-1102, the position of the MTEMP/DTEMP jumper is irrelevant.***

The MTEMP position multiplexes the onboard temperature signal, along with other signals from the SCXI module, to channel 0 on the DAQ device. Read the temperature signal using the `SCXI_Single_Chan_Setup` call in NI-DAQ or LabVIEW for Macintosh and specifying **Channel (-1)** in software, or by using the LabVIEW for Windows channel string MTEMP.

Configuring this jumper in the DTEMP position routes the temperature measurement to a different channel on the DAQ device than the other signals from the SCXI module. A terminal block connected to an SCXI-1100 module routes the temperature measurement to channel 1 on the DAQ device. A terminal block connected to an SCXI-1120 module routes the measurement to channel 15 on the DAQ device if you have also set jumper W41 on the SCXI-1120 module to the DTEMP position. However, the terminal block used with an SCXI-1121 module routes the measurement to channel 4 on the DAQ device. In each case, you can read the measurement with one software call.

To scale the voltage reading from an SCXI-1300, SCXI-1320, or SCXI-1321 to temperature, multiply the value by 100 to get a temperature reading in degrees Celsius accurate to ±0.5° C.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The SCXI-1303, TBX-1303, SCXI-1322, SCXI-1327, SCXI-1328, and TBX-1328 use a thermistor to measure the temperature. To convert the voltage reading to a temperature, use a thermistor conversion formula. In LabVIEW, use the Convert Thermistor VI. In NI-DAQ, use the `Thermistor_Convert` function call. Refer to *Transducer Conversion Function Descriptions* in Chapter 3, *Software Overview*, of the *NI-DAQ User Manual for PC Compatibles*, for more information.

National Instruments recommends that you configure your terminal block in the MTEMP position, not the DTEMP position. Refer to your SCXI module user manual for details.

The Lab/1200 Series devices do not have channel 15 and, therefore, cannot read the temperature from the SCXI-1120 module if jumper W1 is in the DTEMP position. To access channel 15 on AI and MIO devices, you must set jumper W46 of the SCXI-1120 module to the AB-R2 position (NRSE mode), and you must configure the AI and MIO devices for NRSE mode. Refer to Chapter 2, *Installing SCXI Modules and Connecting the SCXI System to the DAQ Board*, of your AI or MIO device user manual for detailed information concerning jumper settings.

Opening the SCXI-13*XX* Terminal Block

You open terminal blocks the same way that you open modules. Figure 4-2 shows the back of the terminal block.

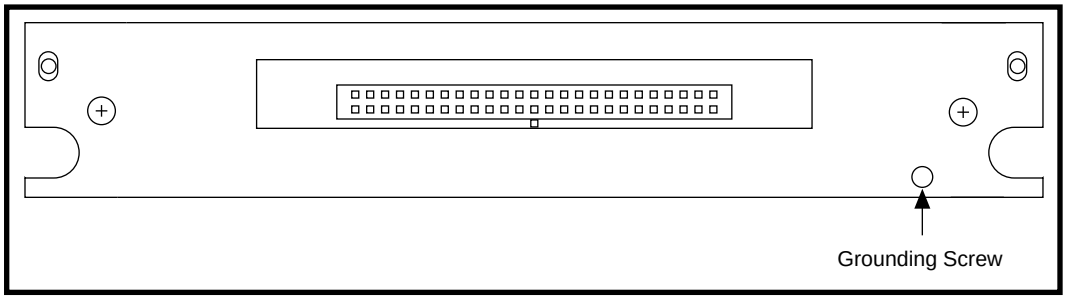


Figure 4-2. Removing the Terminal Block Grounding Screw

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Use this procedure to open the terminal block:

1. Remove the grounding screw.
2. Remove the cover by inserting a flathead screwdriver in the slot at the bottom of the terminal block and pushing the screwdriver down until the cover plate pops off, as shown in Figure 4-3. You now can access the screw terminals inside the terminal block.

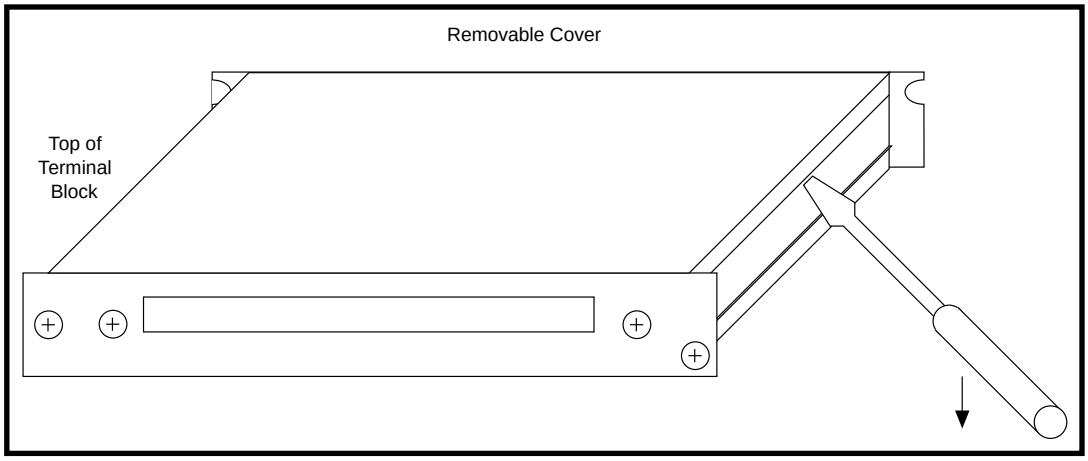


Figure 4-3. Removing the Terminal Block Cover

To replace the cover plate, follow these steps:

1. Align the slot at the top of the terminal block and snap the bottom of the cover plate into place.
2. Replace the grounding screw, taking care not to over-tighten it.

Connector-and-Shell Assemblies

Connector-and-shell assemblies, which are low-cost alternatives to terminal blocks, have solder pins instead of screw terminals for more permanent configurations. Connector-and-shell assemblies do not have strain relief and are made of plastic instead of aluminum. The connector-and-shell assemblies include the SCXI-1310 and SCXI-1330. Table 4-1, earlier in this chapter, summarizes the module compatibility for these connectors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connecting Transducers to the SCXI System

National Instruments application software packages include transducer conversion functions to evaluate transfer functions for thermocouples, strain gauges, and RTDs. The following sections explain how to connect these transducers to the SCXI system.

Thermocouples

Thermocouples are among the most commonly used transducers. You can use the SCXI-1100 or the SCXI-1102 to condition up to 32 thermocouple signals. If you require isolation, you can use the SCXI-1120, the SCXI-1121, or the SCXI-1122.

Using Thermocouples with the SCXI-1100

Application Note 056, *How to Use Thermocouples with the SCXI-1100*, accompanies this manual in the *SCXI Getting Started Pack*. This application note describes how to connect and use thermocouples with the SCXI-1100.

If the thermocouple is insulated or not ground-referenced, the thermocouple produces a floating signal. Therefore, you must ground-reference the thermocouple before proceeding. You may acquire inaccurate readings if you do not use one of the following methods to ground the thermocouple.



Caution: ***To avoid noise and errors from ground loops, do not reference the thermocouple to ground at more than one point.***

The most convenient way to ground-reference your floating thermocouples is to use the SCXI-1303, which provides a ground-reference for all 32 inputs. However, if you are using the SCXI-1300, you must connect the negative input of all your floating thermocouples to the negative input of the input channel and to chassis ground.

You can also ground the thermocouple at the source, assuming the ground difference between the source and your SCXI system is within the common-mode voltage range of the SCXI module. If the thermocouple is already ground-referenced, do not connect the negative input to chassis ground.



Note: ***The SCXI-1100 has a jumper, W1, that connects a 100 kΩ resistor to ground at the output of the input multiplexer when measuring floating***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

sources. However, when you are using thermocouples, leave jumper W1 in the factory-default position (no connect) because connecting jumper W1 introduces noise and settling time delays.

Using Thermocouples with the SCXI-1102

Application Note 076, *How to Use Thermocouples with the SCXI-1102*, accompanies this manual in the *SCXI Getting Started Pack*. This application note describes how to connect and use thermocouples with the SCXI-1102.

The most convenient way to ground-reference your floating thermocouples is to use the SCXI-1303 or TBX-1303, which provides a ground-reference for all 32 inputs. If you are using the SCXI-1303 or TBX-1303, install the supplementary 10 MΩ resistor networks into the terminal blocks. This configuration allows you to connect either floating or ground-referenced thermocouples to the SCXI-1102. However, if you are using the SCXI-1300, you must connect the negative input of all your floating thermocouples to the negative input of the input channel and to chassis ground.

☞ **Note:** ***Chassis ground is also available at the strain-relief bar. Be certain to connect to chassis ground at only one point.***

Using Thermocouples with the SCXI-1120, the SCXI-1121, and SCXI-1122

The SCXI-1120, SCXI-1121, and SCXI-1122 modules have isolated analog inputs. Therefore, you can connect these modules directly to both floating and nonreferenced thermocouples. You do not need to reference the thermocouple to chassis ground. Simply wire the positive and negative lead of the thermocouple to the positive and negative input of the input channel on the terminal block.

Noise and Filtering

Because thermocouples inevitably pick up some amount of noise, National Instruments recommends that you sample thermocouples at a higher rate than you actually need and average the data to reduce its noise content. Try averaging at least 30 points per reading. In addition, averaging over one power cycle helps reject power line noise; for example, averaging 100 points per reading at a 6 kHz scan rate rejects 60 Hz noise in your DAQ system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Hardware filtering is another way to reduce noise. The SCXI-1102, SCXI-1120, and SCXI-1121 have lowpass noise filters on every input channel that you can apply as detailed in Chapter 2, *Installing SCXI Modules and Connecting the SCXI System to the DAQ Board*. These filters are commonly used in thermocouple applications.

The SCXI-1100 includes a single selectable filter following the multiplexer. Therefore, enabling the 4 Hz filter limits sampling rates to less than 4 Hz—attempting to sample faster produces erroneous data. This is not a problem on the SCXI-1102, SCXI-1120, and SCXI-1121 because each input channel has a filter. Refer to Table 3-3 for SCXI-1100 maximum recommended sampling rates.

Strain Gauges

The strain gauge is another common transducer. The strain gauge requires excitation; therefore, an SCXI-1121 or SCXI-1122 module is suitable for measuring this transducer.

First, establish whether the strain gauge is a quarter-bridge, half-bridge, or full-bridge configuration and determine the level and type of excitation the strain gauge requires. For example, a half-bridge configuration requires voltage excitation of 3.333 V (commonly used arrangement).

Because the strain gauge requires 3.333V of excitation, you do not need to change the settings of the excitation mode or level jumpers because 3.333 V is the factory-default setting.

Because you have a half-bridge strain gauge configuration, you must enable the half-bridge completion network. Set jumpers W17 and W18 (for channel 1) to the positions shown in Table 3-15.



Warning: ***If the strain gauge has a high common-mode voltage, refer to Appendix A,*** *Specifications****, of the*** *SCXI-1121 User Manual* ***to verify that the common-mode voltage is within the specified limits before connecting the signal to the SCXI-1121.***

Failure to verify that the common-mode voltage is within specified limits can damage the SCXI system and is potentially dangerous. National Instruments is not liable for damages or injuries resulting from improper configuration. If you have a large common-mode voltage (≥30 Vrms and 42.4 V peak or 60 VDC), ground the terminal block to safety earth ground as shown in Figure 4-4.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connect the strain gauge to the SCXI-1321 terminal block as shown in Figure 4-4. You can also use the SCXI-1320 for this arrangement.

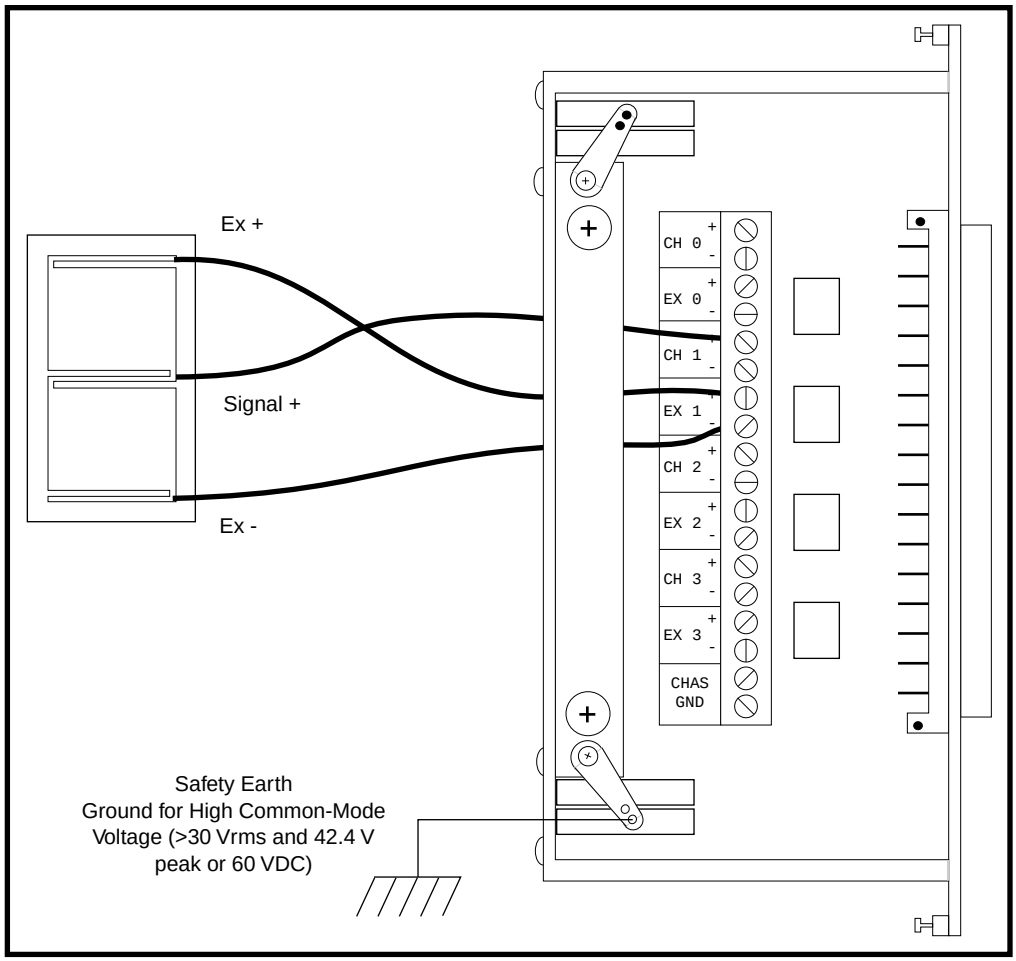


Figure 4-4. Connecting the Half-Bridge Strain Gauge to Channel 1 of the SCXI-1321 Terminal Block

If your strain gauge is a quarter-bridge configuration, you still need to enable the bridge-completion network, but you must also install a dummy resistor with resistance equal to that of the strain gauge at no load. If you have a full-bridge configuration, you do not need to enable the bridge-completion network. In all configurations, however, you must still use excitation. Figures 4-5, 4-6, and 4-7 show a number of possible bridge configurations in which V_{EX}, R_1, and R_2 are on the

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

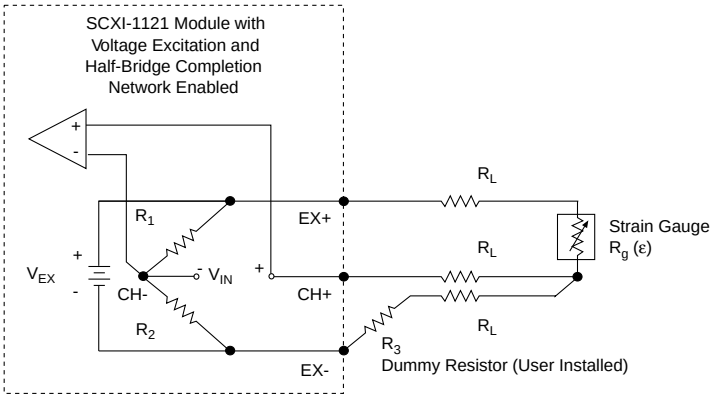
SCXI-1121 module. To determine which of the following bridge configurations your strain gauge uses, refer to your strain gauge manufacturer manual.

☞ **Note:** ***The following acronyms and symbols apply to Figures 4-5 through 4-7:***

ε	=	strain
GF	=	Gauge Factor
ν	=	Poisson's Ration
V_r	=	$[V_{IN}/V_{EX})Strained - (V_{IN}/V_{EX})Unstrained]$
R_L	=	Line Resistance
R_g	=	Gauge Resistance
•	=	Connection to Terminal Block

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

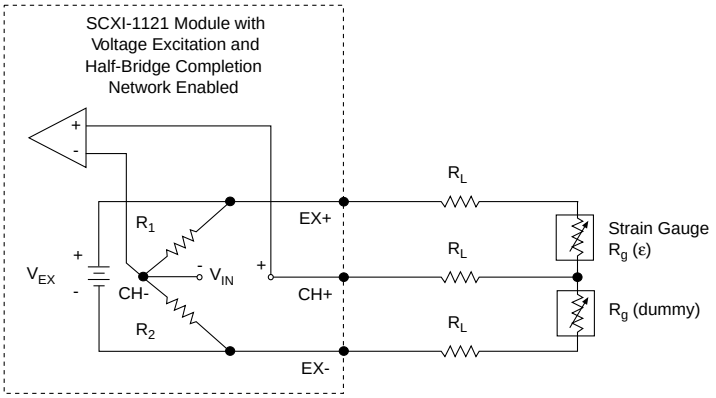
Quarter-Bridge Configuration I



Note: ***National Instruments recommends that you make R_3 equal to R_g (ε) at no load.***

$$\text{strain } (\varepsilon) = \frac{-4\,V_r}{GF\,(1 + 2V_r)} \cdot \left(1 + \frac{R_L}{R_g}\right)$$

Quarter-Bridge Configuration II



$$\text{strain } (\varepsilon) = \frac{-4\,V_r}{GF\,(1 + 2V_r)} \cdot \left(1 + \frac{R_L}{R_g}\right)$$

Figure 4-5. Quarter-Bridge Configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

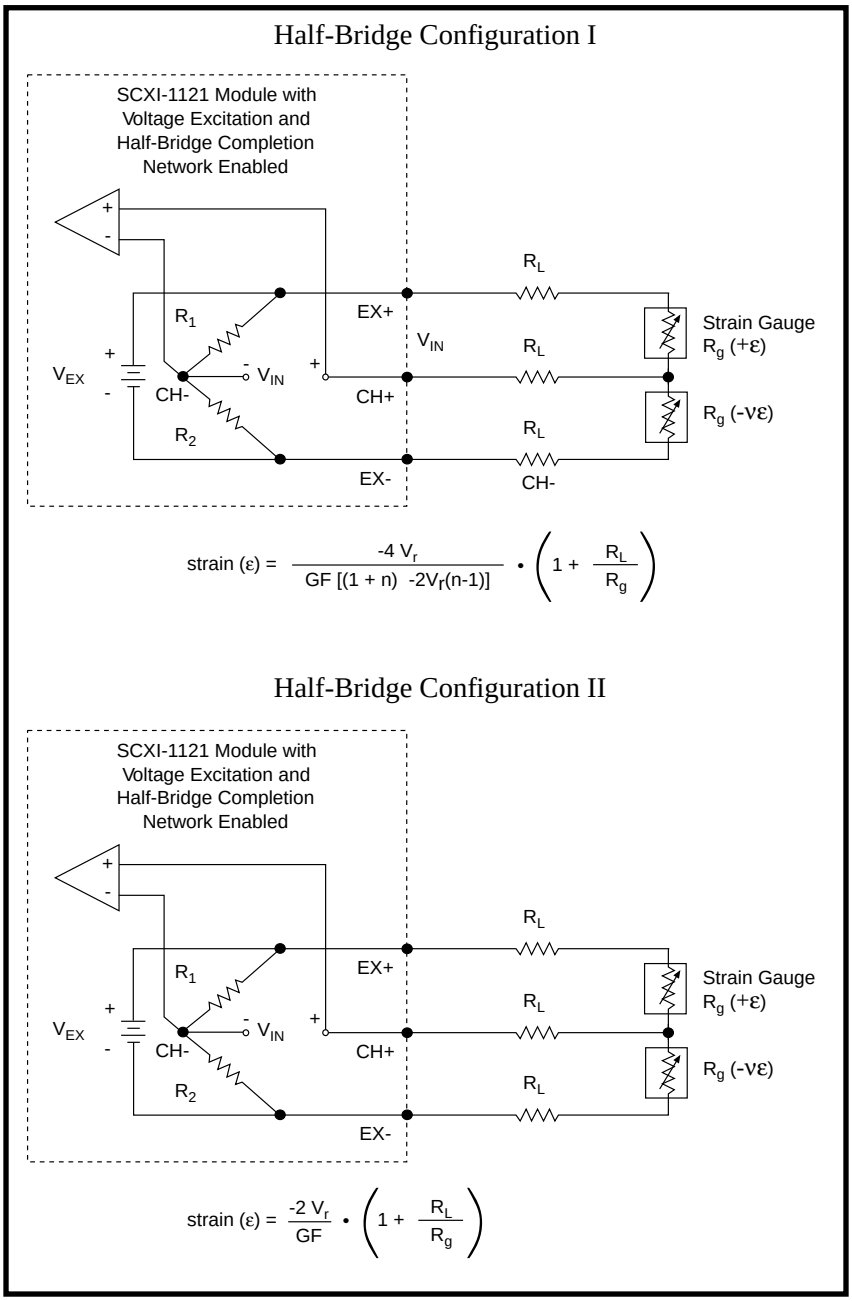


Figure 4-6. Half-Bridge Configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

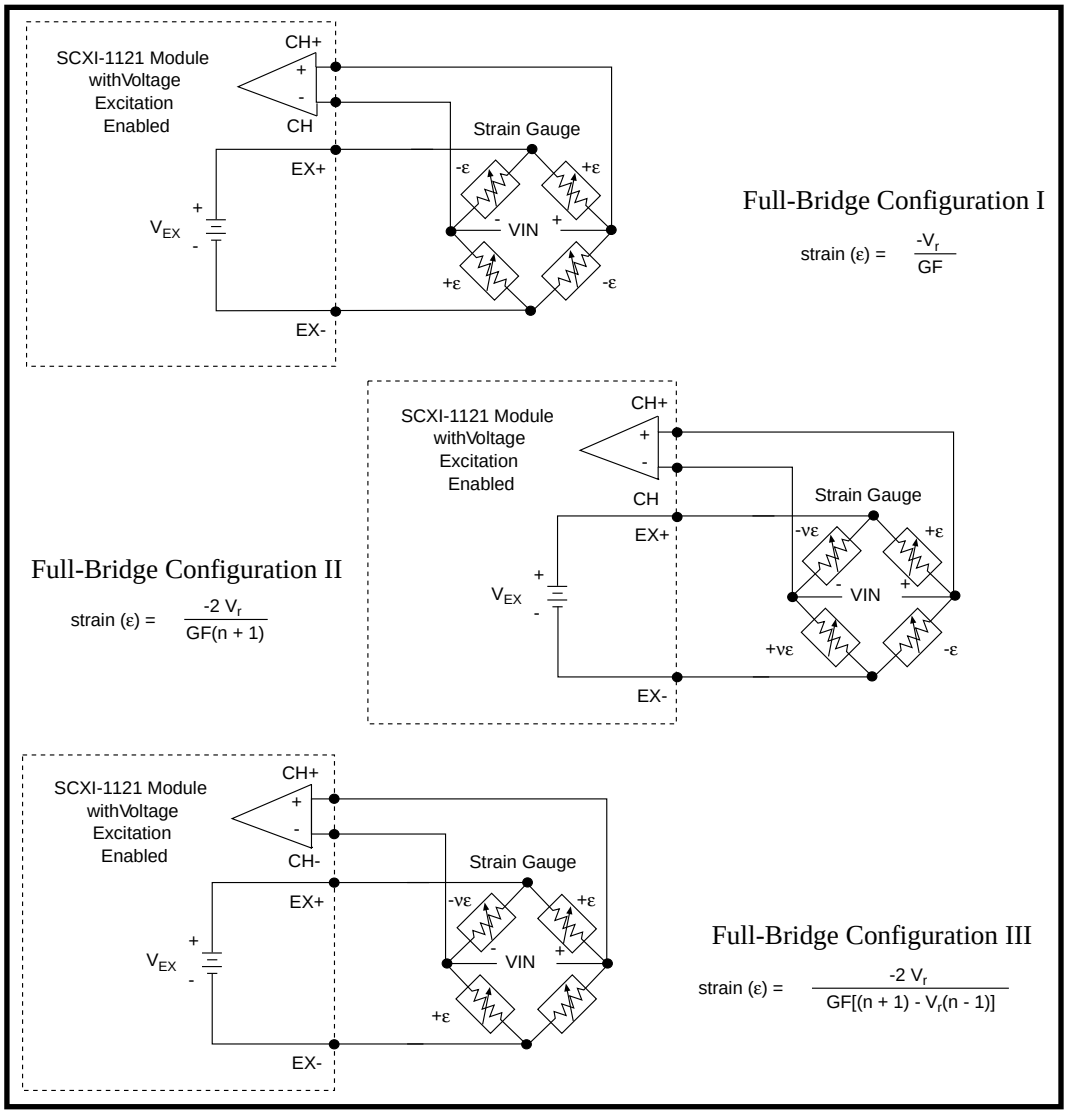


Figure 4-7. Full-Bridge Configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RTDs

An RTD requires excitation and, thus, the SCXI-1121 module is a suitable choice for conditioning the signal. Establish your RTD type and configuration. The RTD in this example is a 100 Ω, four-wire platinum RTD, which is a fairly common type. In general, the RTD uses current excitation. However, you can use RTDs in a Wheatstone bridge configuration with voltage excitation. Refer to your RTD user manual for the level of current or voltage excitation the RTD requires.

Follow these steps to connect the RTD to channel 1 of the SCXI-1320 terminal block:

1. Set jumpers W22 and W23 to produce current excitation, as shown in Table 3-12.
2. Set jumpers W24 and W25 to configure the excitation current level to either 0.150 mA or 0.450 mA, as shown in Table 3-13.

Note: ***You do not need to enable the half-bridge completion network.***

3. Connect the RTD to channel 1 of the SCXI-1320 terminal block, as shown in Figure 4-8.

Warning: ***Before you connect the RTD to the SCXI-1121, verify that the common-mode voltage is within limits. Refer to Appendix A,*** *Specifications****, in the*** *SCXI-1121 User Manual****. Common-mode voltage that is not within the specified limits can damage the SCXI system and is potentially dangerous. National Instruments is not liable for damages or injuries from improper configuration. If you have a common-mode voltage greater than or equal to 42 Vrms, ground the terminal block to safety earth ground as shown in Figure 4-8.***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

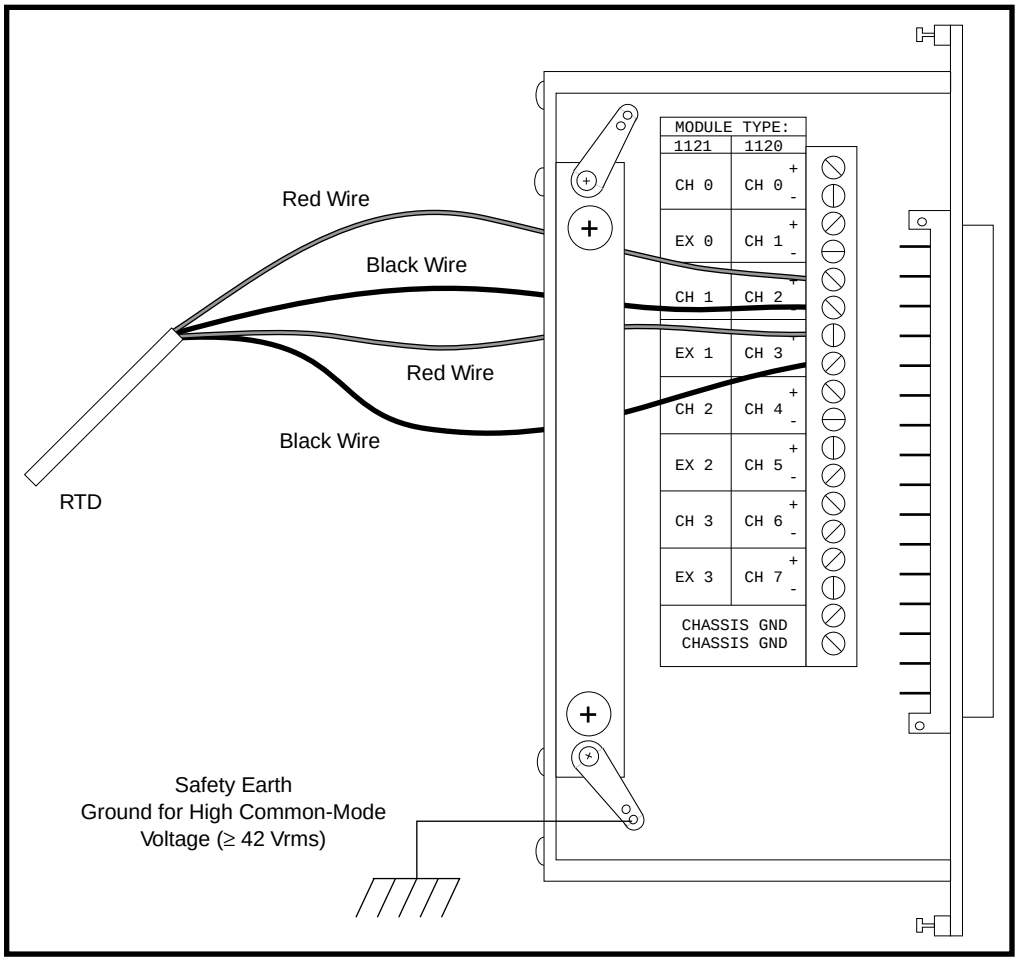
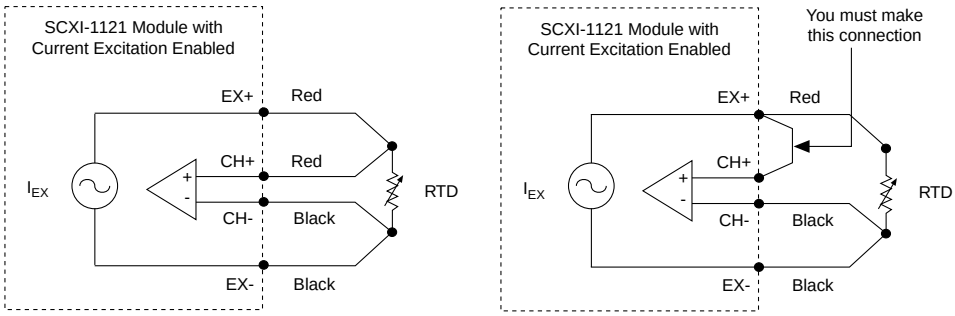


Figure 4-8. Connecting a Four-Wire Platinum RTD to Channel 1 of the SCXI-1320

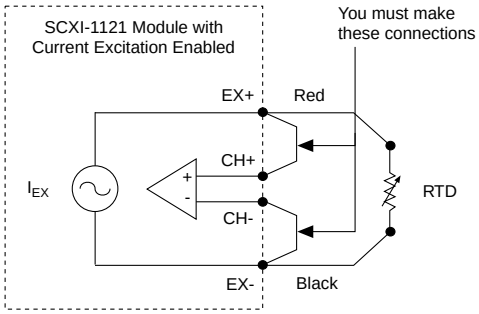
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4-9 shows how to connect commonly configured RTDs to the SCXI-1121 module.



a. Four-Wire RTD Configuration

b. Three-Wire RTD Configuration



c. Two-Wire RTD Configuration

• = Connection to Terminal Block

Note: ***Four-wire RTDs produce more accurate temperature measurements than either two-wire or three-wire RTDs, which introduce the factor of lead resistance. See your RTD manufacturer's user manual for details of these effects and the reduction of associated errors.***

Figure 4-9. SCXI-1121 RTD Configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Excitation Channel Signal Connections on the SCXI-1122

The SCXI-1122 has a voltage (VEX) and a current excitation (IEX) channel, which are available at the front connector. In addition, VEX/2 is available for half-bridge and quarter-bridge transducers. Both channels are isolated from earth ground up to 450 Vrms working common-mode voltage. Notice that the voltage and current excitations are electrically isolated from each other but do not provide a *safety isolation* between them.

Warning: ***Exceeding the overvoltage protection or isolation rating on the excitation output can damage the SCXI-1122, the SCXIbus, and the DAQ board. National Instruments is not liable for any damages or injuries resulting from such signal connections.***

Excitation Level

Each excitation channel of your SCXI-1122 has one level:

- Current excitation—1 mA
- Voltage excitation—3.333 V

It is important that you do not exceed the maximum permissible load of each channel as listed in Table 4-3.

Table 4-3. SCXI-1122 Maximum Load per Excitation Channel

Excitation Level	Maximum Load
3.333 V	225 mA
1 mA	5 kΩ

Using the Internal Half-Bridge Completion

Your SCXI-1122 includes half-bridge completion for half-bridge and quarter-bridge setups. The completion network consists of two 2.5 kΩ ±0.02% ratio tolerance resistors with a temperature coefficient of 2 ppm/° C. These resistors are connected in series. To use the network, connect the VEX/2 screw terminal on the terminal block to the negative input of the channel of interest, as shown in Figure 4-9.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

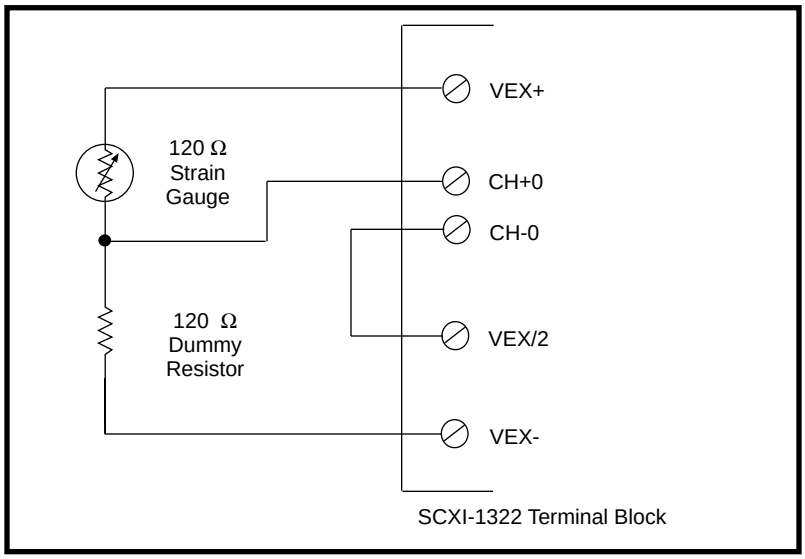


Figure 4-10. Connecting a Quarter-Bridge Strain Gauge to Channel 0

☞ **Note:** ***When using the half-bridge completion network with a quarter-bridge setup, you must use an extra resistor to complete the bridge. Place this resistor on the terminal block between the positive input channel and the negative excitation output.***

Analog Circuitry

The analog circuitry consists of a relay multiplexer, a software-programmable gain isolation amplifier, software-programmable filtering, a temperature sensor channel for cold-junction compensation, calibration hardware, and voltage and current excitation channel outputs.

Analog Input Channels

The relay multiplexer feeds into the isolation amplifier. This relay multiplexer can be configured in two-wire or four-wire mode scanning. In the two-wire scan mode, all 16 channels operate as voltage sense channels. At any time only one of 16 channels is connected to the isolation amplifier. In the four-wire scan mode, the 16 channels are divided into two banks that switch synchronously. The eight upper channels (0 through 7) operate as voltage sense channels and one out of eight is connected to the amplifier at any time. In addition, the eight lower channels (8 through 15) operate as current output channels that

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

switch in tandem with the sense channels. At any time only one channel is connected to the current output channels. Table 4-4 lists the sense and current output channel associations.

Table 4-4. Sense and Current Output Channel Associations

Sense	Current Output
Channel 0	Channel 8
Channel 1	Channel 9
Channel 2	Channel 10
Channel 3	Channel 11
Channel 4	Channel 12
Channel 5	Channel 13
Channel 6	Channel 14
Channel 7	Channel 15

The temperature sensor consists of a thermistor located on the SCXI-1322 terminal block. This thermistor connects via the temperature channel to the isolation amplifier. The temperature sensor is for cold-junction compensation of thermocouples. When measuring the temperature sensor output, set your SCXI-1122 for a gain of 5 and a 4 Hz filter. This increases the measurement resolution and accuracy and reduces noise.

☞ **Note:** ***With a 4 Hz bandwidth, you must wait 1 s before you take the temperature measurement to permit the system to settle. If you want to use the 4 kHz filter, take a large number of samples and average them. To reject 50 or 60 Hz noise, you should acquire data over an integral number of power-line cycles, then average this data.***

The filtering consists of one of two lowpass filters, 4 kHz (-3 dB) or 4 Hz (-10 dB), which you can select via software control. These cascaded filters are located in two stages to help eliminate noise introduced by the isolation amplifier.

The isolation amplifier fulfills two purposes on the SCXI-1122 module. The isolation amplifier converts a small signal riding on a high common-mode voltage into a single-ended signal with respect to the SCXI chassis ground. With this conversion, you can extract the input analog signal from a high common-mode voltage or noise before it is sampled and converted by the DAQ board. The isolation amplifier also

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

amplifies and conditions an input signal, which increases measurement resolution and accuracy. The isolation amplifier drives the analog output stage, which consists of hardware circuitry that permits several module output signals to multiplex into one DAQ board channel.

The calibration hardware consists of a software-controlled shunt calibration resistor for strain gauge calibration, an autozeroing calibration for nulling the amplifier offsets, and an EEPROM that holds calibration constants for software correction of gain and offset of the isolation amplifier and of the current and voltage excitations. Refer to your NI-DAQ, LabVIEW, or LabWindows/CVI software documentation.

Excitation Output Channels

In addition to the isolated input channels, the SCXI-1122 has two isolated excitation output channels, one 3.333 V voltage output source and one 1 mA current output source. Both channels—like the relay input channel—have 450 Vrms common-mode voltage with respect to earth ground and 250 Vrms common-mode voltage between each other and any other channel. Both channels are overvoltage-protected to 250 Vrms and are current-limited.

The voltage excitation channel is for transducers, such as strain gauges, which need voltage excitation to operate properly. The maximum current sourcing that this channel can provide is 225 mA. Exceeding this limit will cause the channel to lose regulation. This channel has four terminals, two sense terminals (SENSE+ and SENSE-), and two excitation terminals (VEX+ and VEX-), which you can use for remote load regulation. For proper operation, the SENSE+ terminal must always be connected to the VEX+, and the SENSE- terminal to the VEX-. Refer to the *SCXI-1322 Terminal Block Installation Guide* for further details on using the sense terminals for remote load sensing.

The voltage excitation channel is primarily used to provide power to a strain gauge configured in a Wheatstone bridge. To verify correct bridge operation, you can program shunt calibration.

When you select shunt calibration during a Wheatstone bridge strain measurement, a 301 kΩ, 1% resistor internally shunts across the strain gauge between the VEX+ and the CH+. This resistor is socketed so you can change its value to meet your requirements. If you are performing several strain measurements, you can enable shunt calibration, then scan all of the channels of interest. When you have completed your

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

check, you can disable shunt calibration and proceed with measurement. Before making your measurement to permit the system to settle, notice that when you are either enabling or disabling the shunt calibration resistor, you must wait 1 s if you have selected 4 Hz bandwidth or wait 10 ms if you have selected 4 kHz bandwidth. Finally, to determine the effect of the shunt resistor on your measurement, use the following procedure.

Assuming a quarter-bridge strain-gauge configuration with a gauge factor of GF = 2, the equivalent strain change the R_{SCAL} shunting resistor introduces is -199 με. This is determined as follows:

1. Determine the change the shunting resistor causes using the following formula:

$$V_{change} = \frac{V_{EX} R (R_{SCAL} + R_g)}{R_g R_{SCAL} + R (R_{SCAL} + R_g)} - \frac{V_{EX}}{2}$$

2. Using the appropriate strain-gauge formula and assuming that you have no static voltage, determine the equivalent strain that the R_{SCAL} resistor should produce. For example, if your SCXI system is configured with R_{SCAL} = 301 kΩ, a quarter-bridge 120 Ω strain gauge with a gauge factor of GF = 2, VEX = 3.333 V, and R = 120 Ω, the following result occurs:

$$V_{change} = 0.3321\ mV$$

Replacing the strained voltage with V_{change} in the quarter-bridge strain equation produces an equivalent -199 με of change.

Also, the SCXI-1122 module has an internal completion network that you can use with half-bridge or quarter-bridge networks. To use this completion network, simply connect the VEX/2 terminal to the negative input channel of the appropriate transducer channel. In a quarter-bridge configuration, you must provide an additional resistor that is equal in value to your nominal strain gauge resistor to complete the bridge network. Connect this resistor in your SCXI-1322 terminal block between the CH+ and VEX- terminals.

The current output channel is for transducers, such as thermistors and RTDs, that need a current excitation to operate properly. The current output has a value of 1 mA and has a maximum permissible load of 5 kΩ. If you connect loads greater than 5 kΩ, the current source will

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

lose regulation. When connecting several loads that need current excitation, you have two possible approaches. The first is to connect them all in series (as long as they do not exceed 5 kΩ total) and use the two-wire scan mode as shown in Figure 4-11. The second way is to use the four-wire scan mode and connect them as shown in Figure 4-12.

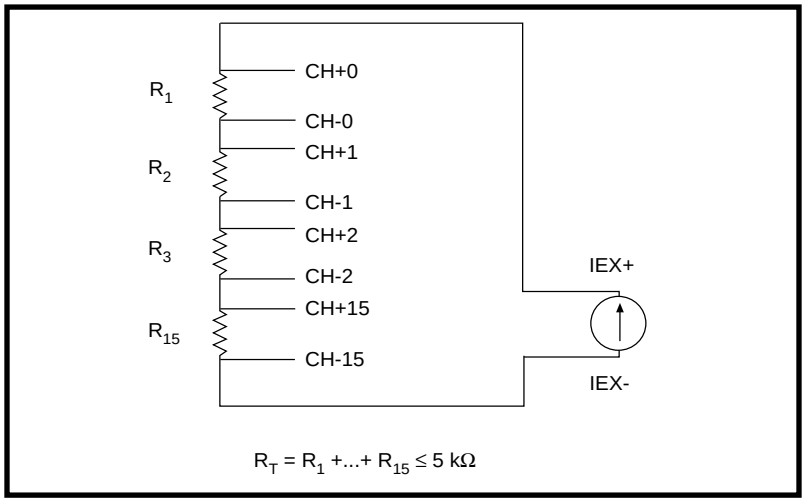


Figure 4-11. Series Connection with Current Excitation

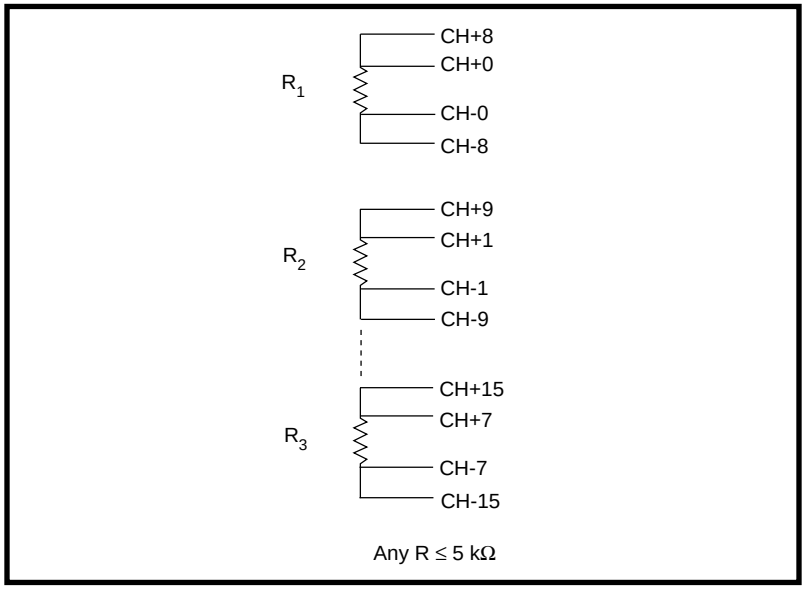


Figure 4-12. Four-Wire Scan Connection with Multiplexed Current Excitation

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

☞ **Note:** ***Always connect the current excitation terminals outside the sense terminals as shown in both Figures 4-11 and 4-12.***

Each approach has its advantages and disadvantages, as listed in Table 4-5.

Table 4-5. Pros and Cons of Two-Wire and Four-Wire Connections with Current-Excited Transducers

Type	Pros	Cons
Series connection with two-wire scanning	16 transducers per module All transducers are continuously excited Two-wire connections are easier to connect because of fewer wires	Limited to 5 kΩ total resistance No isolation between channels
Independent connection with four-wire scanning	5 kΩ per channel 250 Vrms common-mode voltage (CMV) between transducers	Eight transducers maximum per module; More connections

Analog Output Channel Signal Connections on the SCXI-1124

You can connect each SCXI-1124 output channel independently for voltage output or current output. Each channel is referenced to its own isolated ground. Each isolated ground can have up to 250 Vrms of CMV between itself and any other channel ground or chassis ground. The following illustrations show how to make different types of signal connections. The dots in the figures indicate where you connect wires to the SCXI-1325 terminal block. For information on how to connect the wires to your terminal block, consult the *SCXI-1325 High-Voltage Terminal Block Installation Guide*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4-13 shows how to connect a DAC channel as a voltage output.

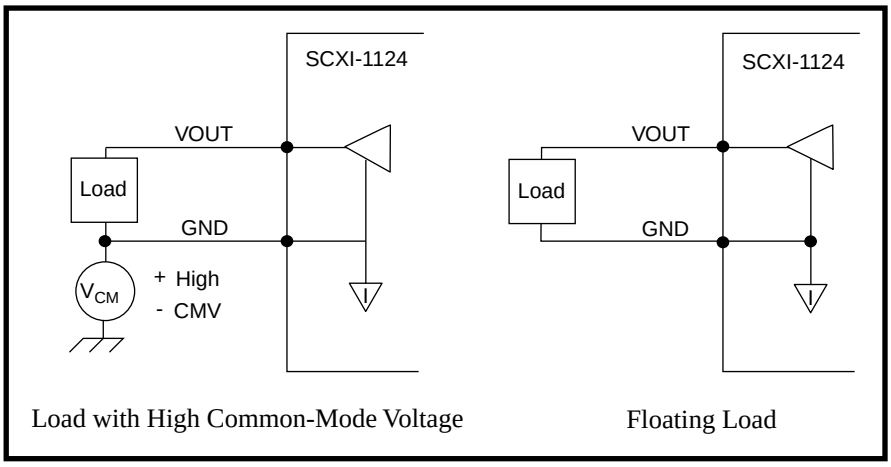


Figure 4-13. DAC Channel Connection as Voltage Output

Figure 4-14 shows how to connect a DAC channel as a current output using the channel loop supply.

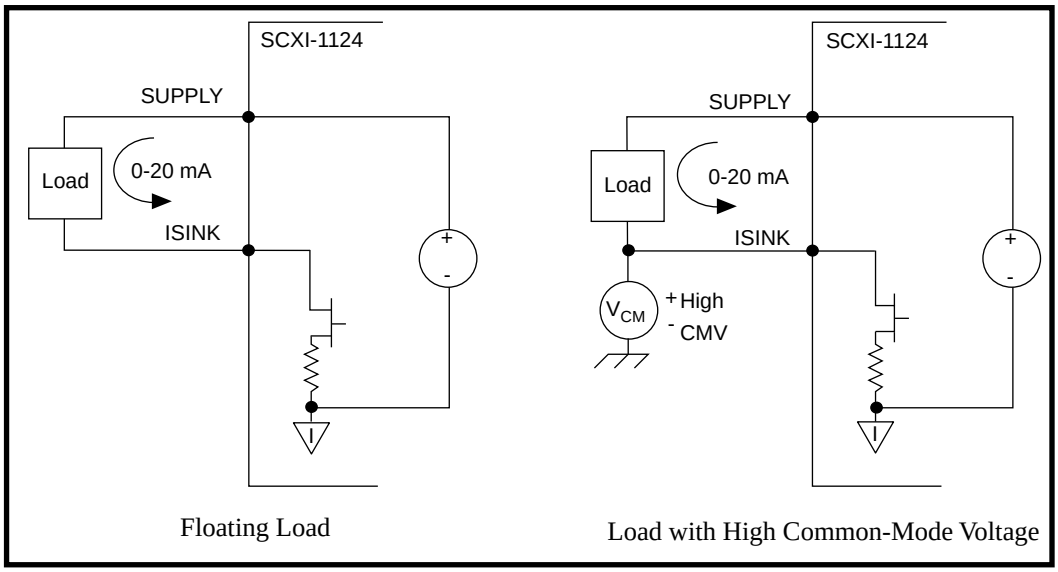


Figure 4-14. DAC Channel Connection as Current Output, Internal Loop Supply

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4-15 shows how to connect a DAC channel as a current output using an external loop supply.

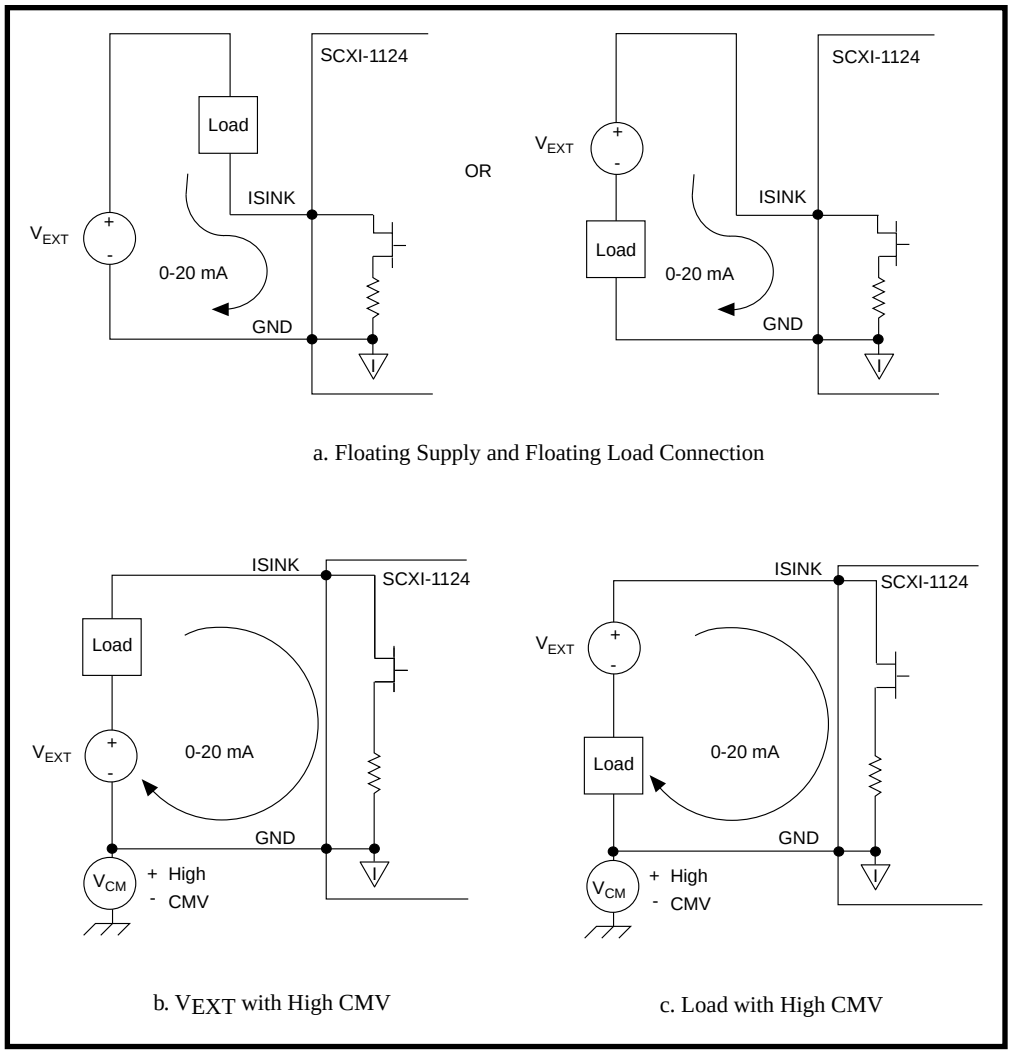


Figure 4-15. DAC Channel Connection as Current Output, External Loop Supply

When you use an external supply, the order of supply and load does not matter as long as you do not create a second loop through which current flows. If both your supply and load are grounded, you must connect your signals as shown in Figure 4-16a. The circuit in Figure 4-16b does not work.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

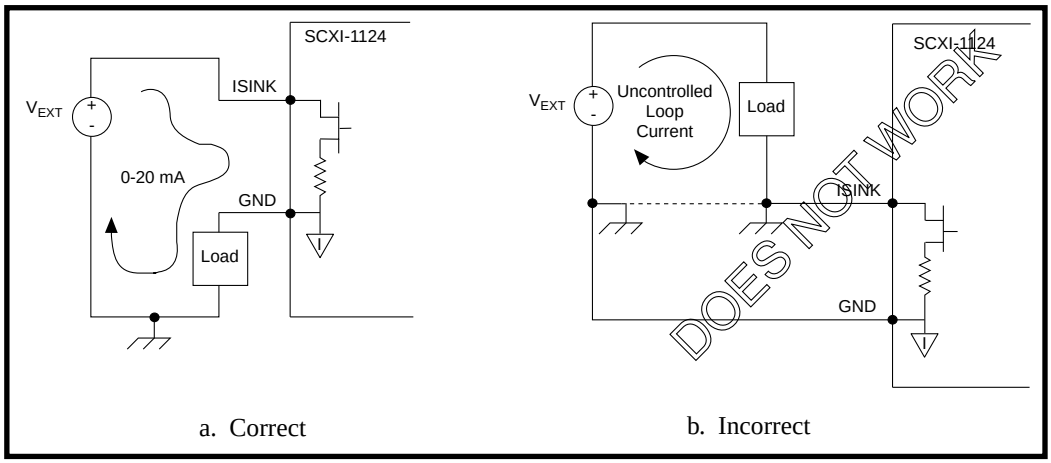


Figure 4-16. Current Loop Connection, Load and External Supply Both Grounded

Chassis Ground Connections

The front signal connector also has a chassis ground pin. If you have any floating channels (channels that are not already referenced to ground from your signal connections) that you want to reference to earth ground, connect the isolated ground of the channel to the chassis ground pin. Do not use this pin as a safety earth ground because the ground trace cannot handle the potentially large currents that result when the channel is short-circuited to high voltage. Use the strain relief tab on the terminal block for the safety earth ground.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI Troubleshooting and Common Questions

Chapter 5

This chapter contains troubleshooting tips and answers to questions that SCXI users commonly ask National Instruments technical support staff. Before you call National Instruments, try the following troubleshooting tips.

Troubleshooting Tips

- Try to recreate the problem.
- Make sure you have the most recent version of the NI-DAQ software. RS-232 and RS-485 SCXI products work only with NI-DAQ for PC version 4.9.0 or later.
- Does the NI-DAQ Configuration Utility establish communication with the module? Test this through the configuration and test section of the NI-DAQ Configuration Utility.
- If you have multiple chassis, disconnect them and reconnect them one at a time to isolate the problem.
- Make sure that each SCXI chassis has a unique address.
- If you have multiple SCXI modules, remove all the modules and check each module individually. Try to isolate one or a combination of specific modules or chassis.
- Try to alter any of the inputs that cause the errors to yield different results.
- If a particular chassis does not work, connect another chassis to see if it will work in your SCXI system.
- If you are receiving strange readings, short circuit each channel to ground. You should get a 0 V reading on all the channels.
- Compare a battery or other test voltage reading to your SCXI reading to verify that your SCXI system is working.
- Run the NI-DAQ example program to check if you get erroneous results.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Common Questions and Problems

1. **All my channels float to a positive rail when I try to take a measurement.**

   Make sure that the signal reference settings for your DAQ device match the SCXI module. For example, if your device is configured for NRSE, make sure that your SCXI module is also (this may require a jumper setting).

2. **I cannot get a reasonable value when I connect my sensor to the Lab or 1200 device, DAQCard-500/700, or LPM device.**

   Make sure that your signal is properly connected to an SCXI-13*XX* terminal block. MIO devices do not require connection to an SCXI-13*XX*.

3. **I am trying to communicate with multiple chassis over an RS-485 network but can communicate only with the first chassis or not at all.**

   To communicate with multiple chassis, the communication path from the computer to the SCXI chassis must also be RS-485, via either an installed RS-485 communications card or an RS-232/RS-485 converter. Each chassis must have a unique address. Make sure the RS-485 network is configured for 4-wire operation. You must also be using NI-DAQ for PC version 4.9.0 or later.

4. **What is the most common software configuration error?**

   Users sometimes set **DAQ Board Slot #** to a board number for a module that is not directly connected to the DAQ board. Make sure that you set **DAQ Board Slot #** to None for all modules except the module that you have cabled directly to the DAQ board.

5. **What version of LabVIEW works with my SCXI-1122, SCXI-1124, or SCXI-1200?**

   You need LabVIEW 3.0.1 or higher. This version of LabVIEW corresponds to NI-DAQ for PC compatibles version 4.5.0 and NI-DAQ for Macintosh version 4.6.6.

6. **When using LabVIEW for Windows, how do I address the SCXI-1200 channels?**

   Use the onboard channel number to address a particular analog channel. Do not use the SCXI string `ob0!sc1!md...`.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7. **Using LabVIEW for Windows, I am acquiring two ground-referenced signals with my SCXI-1100. I am using the string `SCXI1!MD1!CH0:1`; the channel 0 signal comes from a 2 V source and the channel 1 signal originates from a 5 V source. My scan rate is 10 Hz, which is relatively slow. My software reading for channel 0 is about the same as channel 1. What is wrong?**

   First, read the answer to question 5. If you have enabled the 4 Hz or 10 kHz filter on the SCXI-1100, or if you are using high gains, set the channel rate (interchannel delay) to a value that gives the amplifier time to settle for each channel. The default channel rate is automatically set to the fastest rate with which the DAQ board can work, but no faster than 7 µs if you are using SCXI. You can use the AI Config VI to specify a longer interchannel delay, or you can use the advanced Analog Input Clock Config VI to specify slower channel clock parameters. Do not confuse the scan rate parameter, which determines the time between successive scans, with the channel rate. You can specify the scan rate, but not the channel rate, for the Easy I/O VIs and most of the Data Acquisition example VIs. However, you can specify the interchannel delay for the SCXI Thermocouple example VI.

   Refer to Appendix B, *Hardware Capabilities*, of the *LabVIEW Data Acquisition VI Reference Manual* for tables of the settling times for all gain and filter settings on SCXI modules.

8. **I have an MIO board and two SCXI modules. I am confused about how to configure the SCXI modules in the configuration utility. Please explain the difference between Cabled Device, Communication Path, and Communication Mode.**

   The information in **Cabled Device** informs your software which SCXI module is physically cabled to the DAQ board. Therefore, if you have two SCXI modules and only one DAQ board in your system, only one SCXI module should have a DAQ board appear in this window. This value should be `None` for all other SCXI modules.

   Enable **Communication Mode.** Set the value for **Communication Mode** to enable serial communication using the DIO port.

   The **Communication Path** parameter determines through which plug-in DAQ board each module communicates. If you have only one DAQ board in your computer, all SCXI modules receive serial information from that board via the SCXI backplane.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9. **My chassis worked fine until I inadvertently removed and reinserted a module while the chassis was on. Now my chassis does not power on. What can I do?**

   You may have blown a fuse. There are two fuses located behind the fan in the SCXI chassis. Remove the fan by removing the four screws that secure it to the chassis and check to see if any of the fuses have blown. Consult the *SCXI Chassis User Manual* for more information on your fuses.

10. **I am using an SCXI-1100 module terminal block with a thermocouple that measures room temperature. How do I stop the thermocouple reading in software from changing erratically?**

    Most thermocouples are floating signal sources with low common-mode voltage; they require a path for bias currents from the SCXI-1100 amplifier to ground. Check jumper W1 on your SCXI-1100 module to make sure the jumper is in the factory-default position. Make sure that you have grounded the negative lead of each floating thermocouple and that your grounded thermocouples do not have high common-mode voltages. Also remember to average your temperature readings.

11. **I am using the SCXI-1100 to monitor two ground-referenced signals. The first signal is from a 2 V source and the second is from a 5 V source. Why are the software readings incorrect for both channels?**

    You may have a settling problem caused by either filters or high gains. First, check to see if you have enabled filtering. If you use a 4 Hz or 10 kHz filter on the SCXI-1100, you must scan channels at a slower rate. Because the filter circuitry is located after the amplifier, you must give the amplifier time to settle before switching to the next channel. If you are not using the filter, check the amplifier gains you are using on the SCXI-1100 module and the DAQ board. Using a very high gain on your SCXI-1100 module and on some DAQ boards also has the effect of increasing your settling time. Decreasing your scan rate (increasing the delay between channels) should solve this problem.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

12. I understand my SCXI-1100 has software-programmable gain, but I need to continuously acquire data at different gains without stopping to change the gain on my SCXI module. How can I do this?

You can use any MIO board to accomplish this. Assume you need to set the gain for the first eight channels on the module to 100 and the gain for the last 24 channels to 1,000.

Set the SCXI module gain to the lowest required gain and create multiple entries in the MIO board scan list that use different MIO board gains so that the total gain on each channel will be the desired gain. For this example, set the SCXI module gain to 100, and set the MIO board gain to 1 for the first eight channels and 10 for the last 24 channels.

In NI-DAQ for PC compatibles and NI-DAQ for Macintosh, use the function call `SCXI_Set_Gain` to set the SCXI-1100 gain to 100. Then call the function `SCXI_MuxCtr_Setup (deviceNumber, 1, 1, 8)`; this specifies that eight SCXI module channels are scanned for each entry in the MIO board scan list. The MIO board channel list is `{0, 0, 0, 0}` (remember that in multiplexed mode only MIO board channel 0 is used), and the MIO board gain list is `{1, 10, 10, 10}`. The first eight channels on the module will have a total gain of 100 • 1 = 100, and the last 24 channels will have a total gain of 100 • 10 = 1,000.

Notice that you are now using four MIO board scan list entries instead of just one. For more complicated gain distributions, your MIO board scan list will be longer. The AT-MIO-16, MC-MIO-16, NB-MIO-16, and NB-MIO-16X can have up to 16 scan list entries. The AT-MIO-16F-5, AT-MIO-16X, and AT-MIO-64F-5 can have up to 512 scan list entries.

In LabVIEW, use the channel list strings and input limits arrays to specify your gain distribution. You do not need to set the SCXI-1100 gain in the configuration utility; the Analog Input VIs determine the best module gain and MIO board gains for you based on your input limits. Put two entries in the channel list array–`OB0 ! SC1 ! MD1 ! CH0:7, and OB0 ! SC1 ! MD1 ! CH8:31`. Put two entries in your input limits cluster array. Set the first element limits to `{-0.1 to 0.1}` and the second element limits to `{-0.01 to 0.01}`. Using the `OB0` specifier in your channel strings causes the Analog Input Hardware Config VI to modify the onboard MIO board gains as well as the SCXI module gain. The group channel settings array that the Analog Input Hardware

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Config VI returns shows the input limits and total gain for each channel, so you can verify your gain distribution. If your gain distribution results in an MIO board scan list that is too long for your MIO board, the Analog Input Hardware Config VI returns the -100370 error code (badScanListError).

13. **I have four SCXI-1140 modules and one SCXI-1100. Which module should I connect to my DAQ board?**

    Connect one of the SCXI-1140s to your DAQ board to ensure that the track-and-hold signal from a counter on your DAQ board has a path to the SCXI digital backplane. Other SCXI-1140 modules can read this information from the backplane. In this situation, all the modules operate in multiplexed mode.

14. **Can my Lab-NB, Lab-LC, or Lab-PC DAQ board scan my SCXI module?**

    These boards can scan multiplexing SCXI modules only under software control. The Lab-NB, Lab-LC, and Lab-PC boards must individually address and read from each SCXI channel. These boards do not generate the SCANCLK clock signal that is required for high-speed hardware scanning of multiplexing modules. However, the Lab-NB, Lab-LC, or Lab-PC can scan a single SCXI-1120 or SCXI-1121 module in parallel mode. The SCXI-1100 and SCXI-1102 do not work in parallel mode. The Lab-PC+ and any MIO board can scan any module in any operating mode.

15. **I have two SCXI-1100 modules and an SCXI-1340 cable assembly, which has three 50-pin connectors. I know I should connect one end of the cable assembly—the end with a single connector—to my DAQ board. The other end of the cable assembly has a female connector, which I plug into one of the modules, and a male connector. What do I do with that male connector?**

    Nothing, usually. The extra male connector on a cable assembly is called the breakout connector. You can use the breakout connector, in conjunction with the SCXI-1180, SCXI-1181, or SCXI-1351, to access unused DAQ board signals.

16. **My SCXI-1162 module cannot read serial data unless I connect it directly to my DAQ board. Also, my SCXI-1163 module seems to be reading faulty information from the status registers. What is causing these problems?**

    The SCXI-1162 and SCXI-1163 send digital data to the SCXIbus. However, the analog modules, by default, do not send digital data

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

from the SCXIbus to the DAQ board. If you have digital and analog SCXI modules in the same chassis and control them all through a DAQ board cabled to an analog module, you must configure that analog module to send digital data out. You may not have been aware of these digital lines because you do not need to set them for the analog modules to operate properly.

Each SCXI module user manual explains how to configure the module, with two jumpers, to send serial data out. One jumper connects the SCXIbus MISO line to SERDATOUT; the other jumper connects a pullup resistor to the MISO line.

17. **I was using your SCXI chassis and modules on my AT-style computer. I upgraded the software and bought some new SCXI modules. I have verified my jumper settings and software, but still cannot communicate with my old or new modules. What can I do to isolate the problem?**

    One thing to try is to delete the configuration file (`DAQCONF.CFG` or NI-DAQ Configuration Utility) and run your configuration utility again.

18. **What signals are reserved by SCXI on my plug-in board?**

    The following table shows which signals SCXI reserves.

Table 5-1. Onboard Resources Reserved by SCXI

SCXIbus Line	MIO-16	Lab-NB/Lab-PC/ Lab-PC+/Lab-LC	PC-LPM-16	DIO-24	DIO-96	DIO-32F
MOSI	ADIO0	PB4	DOUT4	PB3	APB3	DIOB3
D*/A	ADIO1	PB5	DOUT5	PB2	APB2	DIOB2
INTR*	ADIO2	PB6	DOUT6	PB1	APB1	DIOB1
SPICLK	EXTSTROBE*	PB7	DOUT7	PB0	APB0	DIOB0
MISO	BDIO0	PC1	DIN6	PA0	APA0	DIOA0

☞ **Note:** ***SCXI reserves a counter on your plug-in board for the Track/Hold signal.***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

You can see that using SCXI reserves at least one digital port on your plug-in board. Another digital port is reserved for some of the SCXI digital input modules.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Customer Communication

Appendix A

For your convenience, this appendix contains forms to help you gather the information necessary to help us solve your technical problems and a form you can use to comment on the product documentation. When you contact us, we need the information on the Technical Support Form and the configuration form, if your manual contains one, about your system configuration to answer your questions as quickly as possible.

National Instruments has technical assistance through electronic, fax, and telephone systems to quickly provide the information you need. Our electronic services include a bulletin board service, an FTP site, a FaxBack system, and e-mail support. If you have a hardware or software problem, first try the electronic support systems. If the information available on these systems does not answer your questions, we offer fax and telephone support through our technical support centers, which are staffed by applications engineers.

Electronic Services



Bulletin Board Support

National Instruments has BBS and FTP sites dedicated for 24-hour support with a collection of files and documents to answer most common customer questions. From these sites, you can also download the latest instrument drivers, updates, and example programs. For recorded instructions on how to use the bulletin board and FTP services and for BBS automated information, call (512) 795-6990. You can access these services at:

United States: (512) 794-5422 or (800) 327-3077
Up to 14,400 baud, 8 data bits, 1 stop bit, no parity

United Kingdom: 01635 551422
Up to 9,600 baud, 8 data bits, 1 stop bit, no parity

France: 1 48 65 15 59
Up to 9,600 baud, 8 data bits, 1 stop bit, no parity



FTP Support

To access our FTP site, log on to our Internet host, `ftp.natinst.com`, as anonymous and use your Internet address, such as `joesmith@anywhere.com`, as your password. The support files and documents are located in the `/support` directories.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FaxBack Support

FaxBack is a 24-hour information retrieval system containing a library of documents on a wide range of technical information. You can access FaxBack from a touch-tone telephone at (512) 418-1111.

E-Mail Support (currently U.S. only)

You can submit technical support questions to the appropriate applications engineering team through e-mail at the Internet addresses listed below. Remember to include your name, address, and phone number so we can contact you with solutions and suggestions.

GPIB: gpib.support@natinst.com
DAQ: daq.support@natinst.com
VXI: vxi.support@natinst.com
LabWindows: lw.support@natinst.com
LabVIEW: lv.support@natinst.com
HiQ: hiq.support@natinst.com
VISA: visa.support@natinst.com
Lookout: lookout.support@natinst.com

Fax and Telephone Support

National Instruments has branch offices all over the world. Use the list below to find the technical support number for your country. If there is no National Instruments office in your country, contact the source from which you purchased your software to obtain support.

	Telephone	Fax
Australia	03 9 879 9422	03 9 879 9179
Austria	0662 45 79 90 0	0662 45 79 90 19
Belgium	02 757 00 20	02 757 03 11
Canada (Ontario)	519 622 9310	
Canada (Quebec)	514 694 8521	514 694 4399
Denmark	45 76 26 00	45 76 26 02
Finland	90 527 2321	90 502 2930
France	1 48 14 24 24	1 48 14 24 14
Germany	089 741 31 30	089 714 60 35
Hong Kong	2645 3186	2686 8505
Italy	02 413091	02 41309215
Japan	03 5472 2970	03 5472 2977
Korea	02 596 7456	02 596 7455
Mexico	95 800 010 0793	5 520 3282
Netherlands	0348 433466	0348 430673
Norway	32 84 84 00	32 84 86 00
Singapore	2265886	2265887
Spain	91 640 0085	91 640 0533
Sweden	08 730 49 70	08 730 43 70
Switzerland	056 200 51 51	056 200 51 55
Taiwan	02 377 1200	02 737 4644
U.K.	01635 523545	01635 523154

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Technical Support Form

Photocopy this form and update it each time you make changes to your software or hardware, and use the completed copy of this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

If you are using any National Instruments hardware or software products related to this problem, include the configuration forms from their user manuals. Include additional pages if necessary.

Name _____

Company _____

Address _____

_____

Fax (___)_____ Phone (___)_____

Computer brand _____ Model _____ Processor_____

Operating system (include version number) _____

Clock speed _____ MHz RAM _____ MB Display adapter _____

Mouse ___yes ___no Other adapters installed _____

Hard disk capacity _____ MB Brand _____

Instruments used _____

_____

National Instruments hardware product model _____ Revision _____

Configuration _____

National Instruments software product _____ Version _____

Configuration _____

The problem is: _____

_____

_____

_____

_____

List any error messages: _____

_____

_____

The following steps reproduce the problem:_____

_____

_____

_____

_____

_____

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Getting Started with SCXI Hardware and Software Configuration Form

Record the settings and revisions of your hardware and software on the line to the right of each item. Complete a new copy of this form each time you revise your software or hardware configuration, and use this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

National Instruments Products

DAQ hardware _____

Interrupt level of hardware _____

DMA channels of hardware _____

Base I/O address of hardware _____

Programming choice _____

ComponentWorks, NI-DAQ, LabVIEW, or LabWindows/CVI version _____

Other boards in system _____

Base I/O address of other boards _____

DMA channels of other boards _____

Interrupt level of other boards _____

Other Products

Computer make and model _____

Microprocessor _____

Clock frequency or speed _____

Type of video board installed _____

Operating system version _____

Operating system mode _____

Programming language _____

Programming language version _____

Other boards in system _____

Base I/O address of other boards _____

DMA channels of other boards _____

Interrupt level of other boards _____

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Documentation Comment Form

National Instruments encourages you to comment on the documentation supplied with our products. This information helps us provide quality products to meet your needs.

Title: *Getting Started with SCXI™*

Edition Date: June 1996

Part Number: 320515C-01

Please comment on the completeness, clarity, and organization of the manual.

_____

_____

_____

_____

_____

_____

_____

If you find errors in the manual, please record the page numbers and describe the errors.

_____

_____

_____

_____

_____

_____

_____

Thank you for your help.

Name _____

Title _____

Company _____

Address _____

_____

Phone ( ) _____

Mail to: Technical Publications
National Instruments Corporation
6504 Bridge Point Parkway
Austin, TX 78730-5039

Fax to: Technical Publications
National Instruments Corporation
(512) 794-5678

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Prefix	Meaning	Value
μ-	micro-	10^{-6}
m-	milli-	10^{-3}
k-	kilo0	10^{3}
M-	mega-	10^{6}

Numbers/Symbols

516 device	Refers to the DAQCard-516 and PC-516.
ε	strain
Ω	ohm
°	degree
%	percent
+	plus
-	minus
±	plus or minus

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A

A	amperes
A/D	analog-to-digital
AC	alternating current
ADC	A/D converter. An electronic device, often an integrated circuit, that converts an analog voltage to a digital number.
ADC resolution	The resolution of the ADC, which is measured in bits. An ADC with 16 bits has a higher resolution, and thus a higher degree of accuracy, than a 12-bit ADC.
AI	analog input
AT E Series devices	These AT devices have an *E*- toward the ends of their names, such as the AT-MIO-16DE-10 and AT-AI-16XE-10.

B

base address	A memory address that serves as the starting address for programmable registers. All other addresses are located by adding to the base address.
bipolar	A signal range that includes both positive and negative values (for example, -5 V to +5 V).
bit	One binary digit, either 0 or 1.
bus	The group of conductors that interconnect individual circuitry in a computer. Typically, a bus is the expansion vehicle to which I/O or other devices are connected. Examples of PC buses are the AT bus, NuBus, Micro Channel, and EISA bus.
byte	Eight related bits of data, an 8-bit binary number. Also used to denote the amount of memory required to store one byte of data.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C

C	Celsius
CMOS	complementary metal-oxide semiconductor
CMV	common-mode voltage
cold-junction compensation	A method of compensating for thermoelectric voltages created when a thermocouple is connected to a measurement device.
conversion time	The time required, in an analog input or output system, from the moment a channel is interrogated (such as with a read instruction) to the moment that accurate data is available.
counter/timer	A circuit that counts external pulses or clock pulses (timing).
coupling	The manner in which a signal is connected from one location to another.
CPU	central processing unit

D

D/A	digital-to-analog
DAC	D/A converter. An electronic device, often an integrated circuit, that converts a digital number into a corresponding analog voltage or current.
DAQ	Data acquisition. (1) Collecting and measuring electrical signals from sensors, transducers, and test probes or fixtures and inputting them to a computer for processing. (2) Collecting and measuring the same kinds of electrical signals with A/D and/or DIO boards plugged into a PC, and possibly generating control signals with D/A and/or DIO boards in the same PC.
DAQCard-500/700	Refers to the DAQCard-500 and DAQCard-700.
DAQCard E Series	Refers to the DAQCard-AI-16E-4 and DAQCard-AI-16XE-50.
DC	direct current

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

device	Device is used to refer to a DAQ device inside your computer or attached directly to your computer via a parallel port. Plug-in boards, PCMCIA cards, and devices such as the DAQPad-1200, which connects to your computer parallel port, are all examples of DAQ devices. SCXI modules are distinct from devices, with the exception of the SCXI-1200, which is a hybrid.
DIFF (differential) input	An analog input consisting of two terminals, both of which are isolated from computer ground, whose difference is measured.
digital port	*See* port.
DIO	digital I/O
DIO-24	Refers to the PC-DIO-24 and DAQCard-DIO-24.
DIO-32F	Refers to the AT-DIO-32F.
DIO-96PnP	Refers to the PC-DIO-96PnP.
DIO device	Refers to any digital I/O devices that have *DIO* in their names, such as the AT-DIO-32F or PC-DIO-96PnP.
DIP	dual-inline package
DLL	Dynamic-link library. A software module in Microsoft Windows containing executable code and data that can be called or used by Windows applications or other DLLs. Functions and data in a DLL are loaded and linked at run time when they are referenced by a Windows application or other DLLs.
DMA	Direct memory access. A method by which data can be transferred to/from computer memory from/to a device or memory on the bus while the processor does something else. DMA is the fastest method of transferring data to/from computer memory.
DOS	Disk Operating System
driver	Software that controls a specific hardware device such as a DAQ board or a GPIB interface board.
DSP	digital signal processing
DTEMP	direct temperature mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

E

EEPROM	Electronically erasable programmable read-only memory. ROM that can be erased with an electrical signal and reprogrammed.
EGA	enhanced graphics adapter
EISA	Extended Industry Standard Architecture
EPP	enhanced parallel port
external trigger	A voltage pulse from an external source that triggers an event such as A/D conversion.

G

gain	The factor by which a signal is amplified, sometimes expressed in decibels.
GF	gauge factor

H

Hz	hertz

I

IBM	International Business Machines
IEEE	Institute of Electrical and Electronics Engineers
interrupt	A computer signal indicating that the CPU should suspend its current task to service a designated activity.
I/O	input/output
IRQ	interrupt request
ISA	Industry Standard Architecture

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

K

kS	1,000 samples
Kword	1,024 words of memory

L

Lab/1200 device	Refers to the DAQCard-1200, DAQPad-1200, Lab-PC+, Lab-PC-1200, Lab-PC-1200AI, and SCXI-1200.
LED	light-emitting diode
library	A file containing compiled object modules, each comprised of one of more functions, that can be linked to other object modules that make use of these functions. NIDAQMSC.LIB is a library that contains NI-DAQ functions. The NI-DAQ function set is broken down into object modules so that only the object modules that are relevant to your application are linked in, while those object modules that are not relevant are not linked.
LPM device	Refers to the PC-LPM-16 and PC-LPM-16PnP.
LSB	least significant bit

M

MB	megabytes of memory
MIO	multifunction I/O
MIO device	Refers to the multifunction I/O devices that have *MIO* in their names, such as the AT-MIO-16 and NEC-MIO-16E-4.
MS	million samples
MTEMP	multiplexed temperature mode
mux	multiplexer; a switching device with multiple inputs that sequentially connects each of its inputs to its output, typically at high speeds, in order to measure several signals with a single analog input channel.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

N

NB	NuBus
NC	Not Connected
NI-DAQ	Refers to the NI-DAQ software for PC compatibles unless otherwise noted.
NRSE	nonreferenced single-ended mode

O

output settling time	The amount of time required for the analog output voltage to reach its final value within specified limits.

P

PGIA	programmable-gain instrumentation amplifier
port	A digital port, consisting of four or eight lines of digital input and/or output.
posttriggering	The technique used on a DAQ board to acquire a programmed number of samples after trigger conditions are met.
ppm	parts per million
pretriggering	The technique used on a DAQ board to keep a continuous buffer filled with data, so that when the trigger conditions are met, the sample includes the data leading up to the trigger condition.
programmed I/O	The standard method a CPU uses to access an I/O device—each byte of data is read or written by the CPU.
pts	points

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

R

RAM	random-access memory
RC	resistance-capacitor
Remote SCXI	Refers to an SCXI configuration where either an SCXI-2000 chassis or an SCXI-2400 remote communications module is connected to the serial port of your computer.
REQ	request
resolution	The smallest signal increment that can be detected by a measurement system. Resolution can be expressed in bits, in proportions, or in percent of full scale. For example, a system has 12-bit resolution, one part in 4,096 resolution, and 0.0244 percent of full scale.
R_g	gauge resistance
R_L	line resistance
RMA	return material authorization
ROM	read-only memory
R_{SCAL}	gauge resistance
RSE	referenced single-ended
RTD	Resistance temperature detector. A metallic probe that measures temperature based upon its coefficient of resistivity.
RTSI	Real-Time System Integration (bus). The National Instruments timing bus that connects DAQ boards directly, by means of connectors on top of the boards, for precise synchronization of functions.

S

s	seconds
S	samples

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sample-and-Hold (S/H)	A circuit that acquires and stores an analog voltage on a capacitor for a short period of time.
SCXI	Signal Conditioning eXtensions for Instrumentation; the National Instruments product line for conditioning low-level signals within an external chassis near sensors so only high-level signals are sent to DAQ boards in the noisy PC environment.
SCXI analog input module	Refers to the SCXI-1100, SCXI-1102, SCXI-1120, SCXI-1121, SCXI-1122, SCXI-1140, and SCXI-1141.
SCXI analog output module	Refers to the SCXI-1124.
SCXI chassis	Refers to the SCXI-1000, SCXI-1000DC, SCXI-1001, and SCXI-2000.
SCXI communication module	Refers to the SCXI-2400.
SCXI digital module	Refers to the SCXI-1160, SCXI-1161, SCXI-1162, SCXI-1162HV, SCXI-1163, and SCXI-1163R.
SCXI DAQ module	Refers to the SCXI-1200.
SDK	Software Development Kit
self-calibrating	A property of a DAQ board that has an extremely stable onboard reference and calibrates its own A/D and D/A circuits without manual adjustments by the user.
SE (single-ended) inputs	An analog input that is measured with respect to a common ground.
SPDT	single-pole double-throw
S/s	Samples per second; used to express the rate at which a DAQ board samples an analog signal.
software trigger	A programmed event that triggers an event such as data acquisition.
STC	System Timing Controller
synchronous	(1) Hardware—A property of an event that is synchronized to a reference clock. (2) Software—A property of a function that begins an operation and returns only when the operation is complete.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

T

TTL	transistor-transistor logic

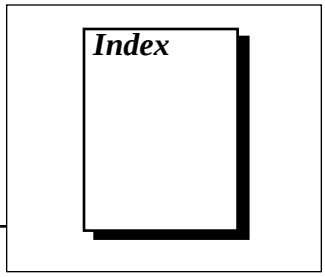
U

unipolar	A signal range that is always positive (for example, 0 to +10 V).

V

V	volts
VDC	volts direct current
V_r	(V_{IN}/V_{EX})strained - (V_{IN}/V_{EX})unstrained
V_{rms}	volts, root mean square

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



A

analog circuitry for RTDs, 4-19
analog input channels for RTDs, 4-19 to 4-21
    sense and current output channel associations (table), 4-20
analog input modes
    DIFF
        configuration (table), 3-50
        description, 3-51
    NRSE
        configuration (table), 3-50
        description, 3-51
    recommended modes for DAQ boards, 3-3
    RSE
        configuration (table), 3-50
        description, 3-51
analog input modules
    overview, 1-15 to 1-17
    SCXI signal routing (figure), 1-16
analog module configuration, 3-2 to 3-33
    floating signal sources, 3-3 to 3-4
    ground-referenced signals, 3-3 to 3-4
    SCXI-1100, 3-4 to 3-7
    SCXI-1102, 3-8
    SCXI-1120, 3-9 to 3-13
    SCXI-1121, 3-13 to 3-21
    SCXI-1122, 3-22 to 3-25
    SCXI-1124, 3-25 to 3-27
    SCXI-1140, 3-27 to 3-31
    SCXI-1141, 3-31 to 3-33
    types of signals, 3-3 to 3-4
analog output channel signal connections for SCXI-1124, 4-24 to 4-27
    connecting DAC channel as voltage output (figure), 4-25
    current loop connection, load and external supply grounded (figure), 4-27
    DAC channel connection as current output
        external loop supply (figure), 4-26
        internal loop supply (figure), 4-25
analog output modules, 1-17

B

breakout connector, 5-6
bulletin board support, Appendix-1

C

cable assemblies, 1-12 to 1-13
    attaching to SCXI module and chassis, 2-3 to 2-5
        illustration, 2-5
        problems and solutions, 5-6
    available cable assemblies (table), 1-12
cold-junction compensation, 4-4 to 4-5
communication modes, digital SCXI modules, 3-34 to 3-35
    parallel mode, 3-34 to 3-35
    serial mode, 3-34
configuration
    analog modules, 3-2 to 3-33
        floating signal sources, 3-3 to 3-4
        ground-referenced signals, 3-3 to 3-4
        SCXI-1100, 3-4 to 3-7
        SCXI-1102, 3-8
        SCXI-1120, 3-9 to 3-13
        SCXI-1121, 3-13 to 3-21
        SCXI-1122, 3-22 to 3-25
        SCXI-1124, 3-25 to 3-27
        SCXI-1140, 3-27 to 3-31

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1141, 3-31 to 3-33
types of signals, 3-3 to 3-4
digital SCXI modules, 3-34 to 3-55
communication modes, 3-34 to 3-35
parallel mode, 3-34 to 3-35
serial mode, 3-34
SCXI-1160, 3-35 to 3-36
SCXI-1161, 3-36
SCXI-1162, 3-37 to 3-39
SCXI-1162HV, 3-39 to 3-41
SCXI-1163, 3-42 to 3-44
SCXI-1163R, 3-45 to 3-47
SCXI-1200, 3-48 to 3-53
SCXI-2400, 3-54 to 3-55
module configuration, 3-1 to 3-2
accessing jumpers, 3-1
removing grounding screw (figure), 3-1
removing module cover (figure), 3-2
problems, 5-2, 5-3
SCXI-1000, SCXI-1000DC, and SCXI1001 chassis, 3-56
SCXI-2000 chassis with serial communications, 3-56
software configuration
common errors, 5-2
SCXI systems, 3-57
example programs, 3-57
connector-and-shell assembly
definition, 1-10
overview, 4-6
current-loop receivers
SCXI-1102 module, 3-8
SCXI-1122 module, 3-24
customer communication, *xiii*, Appendix-1

D

DAQ devices
connecting to SCXI systems, 2-3 to 2-6, 5-6
DAQ plug-in boards and PC cards, 1-11
MIO DAQ devices (table), 1-11
multichassis system with plug-in DAQ device, 1-13
overview, 1-11
software configuration, 5-2
DAQ modules, 1-12
differential input mode
configuration (table), 3-50
description, 3-51
MIO boards, 3-3
digital SCXI modules
configuration, 3-34 to 3-55
communication modes, 3-34 to 3-35
parallel mode, 3-34 to 3-35
serial mode, 3-34
SCXI-1160, 3-35 to 3-36
SCXI-1161, 3-36
SCXI-1162, 3-37 to 3-39
SCXI-1162HV, 3-39 to 3-41
SCXI-1163, 3-42 to 3-44
SCXI-1163R, 3-45 to 3-47
SCXI-1200, 3-48 to 3-53
SCXI-2400, 3-54 to 3-55
overview, 1-17
direct-mount terminal blocks (table), 1-9 to 1-10
documentation
conventions used in guide, *xii-xiii*
organization of guide, *xi-xii*
related documentation, *xiii*

E

electronic support services, Appendix-1
e-mail support, A-2
excitation channel signal connections, 4-18 to 4-19
connecting quarter-bridge strain gauge (figure), 4-19
exceeding overvoltage protection or isolation rating (warning), 4-18
excitation level, 4-18
maximum load per excitation channel (table), 4-18

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

using internal half-bridge completion, 4-18 to 4-19
excitation output channels, 4-21 to 4-24
four-wire scan connection (figure), 4-23
pros and cons of two-wire and four-wire connections (table), 4-24
series connection (figure), 4-23
shunt calibration, 4-21 to 4-22
voltage excitation channel, 4-21

F

fax and telephone support, Appendix-2
FaxBack support, Appendix-2
filtering
configuration and jumper settings
SCXI-1100 module, 3-6 to 3-7
SCXI-1120 module, 3-11
SCXI-1121 module, 3-15 to 3-16
hardware filtering, 4-9
noise filtering, 4-8 to 4-9
floating signal sources
description, 3-3 to 3-4
SCXI-1100 module configuration, 3-5
FTP support, Appendix-1
fuse, blown, 5-4

G

gain
configuration and jumper settings
SCXI-1120 module, 3-9 to 3-10
SCXI-1121 module, 3-14 to 3-15
SCXI-1140 module, 3-30 to 3-31
setting gain for continuous data acquisition, 5-5 to 5-6
ground connections for RTDs, 4-27
ground-referenced signals
description, 3-3 to 3-4
problems and solutions, 5-4
SCXI-1100 module configuration, 3-5 to 3-6

H

half-bridge completion network
enabling for SCXI-1121 module, 3-19 to 3-20
SCXI-1122 module, 3-18 to 3-19
hardware filtering, 4-9
hardware scanning, 1-17

I

input modes. *See* analog input modes.
input signal referencing, SCXI-1100 module, 3-5 to 3-6
installation
attaching cable assembly to SCXI module and chassis, 2-3 to 2-5
illustration, 2-5
connecting SCXI systems to DAQ device or computer, 2-2 to 2-7
parallel port, 2-2 to 2-3
plug-in DAQ board or PC card, 2-3 to 2-6
RS-232 or RS-485 serial port, 2-6 to 2-7
SCXI modules, 2-2
SCXI-1180 feedthrough panel, 2-6
SCXI-1181 breadboard module, 2-6
software installation, 2-1 to 2-2
instrumentation amplifier output referencing mode, SCXI-1140 module, 3-29 to 3-30
isolation amplifier for RTDs, 4-20 to 4-21

J

jumper settings. *See* specific modules.
jumpers, accessing, 3-1

L

LabVIEW software
addressing SCXI-1200 channels, 5-2
choosing version for specific SCXI modules, 5-2
overview, 1-14

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

problems with SCXI-1100 module, 5-3
LabWindows/CVI software, 1-14

M

manual. *See* documentation.
multichassis system with plug-in DAQ device, 1-13
multiplexed mode of operation, 1-15

N

NI-DAQ driver software
overview, 1-14
relationship between programming environment and hardware (figure), 1-15
noise reduction for thermocouples, 4-8 to 4-9
nonreferenced single-ended (NRSE) mode
configuration (table), 3-50
description, 3-51
Lab boards, 3-3
NRSE. *See* nonreferenced single-ended (NRSE) mode.

O

output signal referencing
SCXI-1120 module, 3-12
SCXI-1121 module, 3-21
SCXI-1140 module, 3-29

P

parallel communication mode
configuration. *See* specific modules.
digital SCXI modules, 3-34 to 3-35
parallel mode of operation, 1-15
parallel port connections
SCXI systems, 2-2 to 2-3
SCXI-1200 module, 3-48 to 3-49
PGIA output referencing modes, SCXI-1100 module, 3-7
polarity settings for SCXI-1200 module
analog I/O settings (table), 3-49
configuration, 3-52
factory settings, 3-49
jumper settings (table), 3-52
problems and solutions, 5-1 to 5-8

R

referenced single-ended (RSE) mode
configuration (table), 3-50
description, 3-51
relay multiplexer for RTDs, 4-19
Resistance-Temperature Detectors (RTDs). *See* RTDs.
RS-232 or RS-485 serial port
connecting SCXI systems, 2-6 to 2-7
problems and solutions, 5-2
RSE mode. *See* referenced single-ended (RSE) mode.
RTDs, 4-15 to 4-27
analog circuitry, 4-19
analog input channels, 4-19 to 4-21
sense and current output channel associations (table), 4-20
analog output channel signal connections to SCXI-1124, 4-24 to 4-27
chassis ground connections, 4-27
connecting to SCXI-1121 module (figure), 4-17
connecting to SCXI-1320 terminal block, 4-15 to 4-16
excitation channel signal connections on SCXI-1122, 4-18 to 4-19
excitation output channels, 4-21 to 4-24
four-wire scan connection (figure), 4-23
pros and cons of two-wire and four-wire connections (table), 4-24
series connection (figure), 4-23
verifying high-common-mode voltage (warning), 4-15

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

S

scanning techniques, SCXI-1122 module, 3-24 to 3-25
SCXI
components, 1-3 to 1-15
cable assemblies, 1-12 to 1-13
DAQ modules, 1-12
DAQ plug-in boards and PC cards, 1-11
multichassis system with plug-in DAQ device, 1-13
optional software, 1-14 to 1-15
SCXI chassis, 1-4 to 1-5
SCXI modules, 1-5 to 1-6
terminal blocks, 1-7 to 1-10
configurations, 1-1 to 1-2
overview, 1-1
requirements, 1-3
SCXI chassis
configuration, 3-56
description, 1-4 to 1-5
signal routing (figure), 1-5
SCXI modules
available modules (table), 1-6
connecting to DAQ board or computer, 2-2 to 2-7
installation, 2-2
problems and solutions, 5-1 to 5-8
scanning with Lab boards, 5-6
SCXI module and connector compatibility (table), 4-1 to 4-2
SCXI operation, 1-15 to 1-17
analog input modules, 1-15 to 1-17
analog output modules, 1-17
digital modules, 1-17
signal routing (figure), 1-16
SCXI problems and solutions, 5-1 to 5-8
SCXI Slot 0, 1-17
SCXI-1000 chassis, configuring, 3-56
SCXI-1000DC chassis, configuring, 3-56
SCXI-1001 chassis, configuring, 3-56
SCXI-1100 module
configuration and jumper settings, 3-4 to 3-7
filtering, 3-6 to 3-7
input signal referencing mode, 3-5 to 3-6
PGIA output referencing modes, 3-7
when to change factory settings, 3-4 to 3-5
problems and solutions
cable assembly, 5-6
ground-referenced signals, 5-4
LabVIEW software, 5-3 to 5-4
setting gain for continuous data acquisition, 5-5 to 5-6
thermocouples, 5-4
thermocouples, 4-7 to 4-8
SCXI-1102 module
configuration and jumper settings, 3-8
current-loop receivers, 3-8
thermocouples, 4-8
SCXI-1120 module
configuration and jumper settings, 3-9 to 3-13
connecting MISO signal to SERDATOUT pin, 3-13
filtering, 3-11
gains, 3-9 to 3-10
signal output referencing, 3-12
temperature sensor signal routing, 3-11 to 3-12
when to change factory settings, 3-9
thermocouples, 4-8
SCXI-1121 module
configuration and jumper settings, 3-13 to 3-21
connecting MISO signal to SERDATOUT pin, 3-21
enabling half-bridge completion network, 3-19 to 3-20
excitation levels, 3-17 to 3-19
excitation mode, 3-16 to 3-17
filtering, 3-15 to 3-16

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

gain selection, 3-14 to 3-15
signal output referencing, 3-21
when to change factory settings, 3-13
connecting to RTDs (figure), 4-17
using thermocouples, 4-8
SCXI-1122 module
calibration procedure, 3-25
configuration and jumper settings, 3-22 to 3-25
grounding, shielding, and reference mode selection, 3-23
single or multiple chassis, 3-22 to 3-23
current-loop receivers, 3-24
excitation channel signal connections, 4-18 to 4-19
connecting quarter-bridge strain gauge (figure), 4-19
exceeding overvoltage protection or isolation rating (warning), 4-18
excitation level, 4-18
maximum load per excitation channel (table), 4-18
using internal half-bridge completion, 4-18 to 4-19
LabVIEW version, 5-2
scanning techniques, 3-24 to 3-25
using thermocouples, 4-8
SCXI-1124 module
analog output channel signal connections, 4-24 to 4-27
connecting DAC channel as voltage output (figure), 4-25
current loop connection, load and external supply grounded (figure), 4-27
DAC channel connection as current output
external loop supply (figure), 4-26
internal loop supply (figure), 4-25
configuration and jumper settings, 3-25 to 3-27
setting for specific DAQ board, 3-27
single or multichassis system, 3-26
LabVIEW version, 5-2
SCXI-1140 module
configuration and jumper settings, 3-27 to 3-31
connecting MISO signal to SERDATOUT pin, 3-31
DAQ board connections in multiple-module systems, 3-28
gain selection, 3-30 to 3-31
instrumentation amplifier output referencing mode, 3-29 to 3-30
signal referencing modes, 3-29
user-configurable jumpers and DIP switches, 3-28 to 3-31
connecting to DAQ board, 5-6
SCXI-1141 module configuration and jumper settings, 3-31 to 3-33
chassis jumper configurations (table), 3-32
grounding and shielding jumper configurations (table), 3-33
when to change factory settings (note), 3-31
SCXI-1160 module configuration and jumper settings, 3-35 to 3-36
SCXI-1161 module configuration and jumper settings, 3-36
SCXI-1162 module
configuration and jumper settings, 3-37 to 3-39
device type selection, 3-38 to 3-39
parallel lines selection, 3-38
parallel or serial mode selection, 3-37
when to change factory settings, 3-37
problems and solutions, 5-6 to 5-7
SCXI-1162HV module configuration and jumper settings, 3-39 to 3-41

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SCXI-1163 module
configuration and jumper settings, 3-42 to 3-44
device type selection, 3-42 to 3-44
serial or parallel mode selection, 3-43 to 3-44
when to change factory settings, 3-42
problems and solutions, 5-6 to 5-7
SCXI-1163R module configuration and jumper settings, 3-45 to 3-47
SCXI-1180 feedthrough panel, 2-6, 3-53 to 3-54
SCXI-1181 breadboard module, 2-6, 3-54
SCXI-1200 module
analog input configuration, 3-50 to 3-52
DIFF input, 3-51
input configurations (table), 3-50
NRSE input, 3-51
RSE input, 3-51
analog input polarity and range, 3-52
analog I/O settings (table), 3-49
factory settings, 3-49
jumper settings (table), 3-52
analog I/O configuration, 3-49
analog output configuration, 3-50
front connector pin assignments (figure), 3-53
LabVIEW problems, 5-2
module configuration, 3-49
overview, 3-48
parallel port interface, 3-48 to 3-49
SCXI-1320 terminal block (figure), 4-16
SCXI-1321 terminal block (figure), 4-10
SCXI-2000 chassis with serial communications
baud rate and address configuration, 3-56
overview, 3-56
SCXI-2400 serial communications module
baud rate and address configuration, 3-55
overview, 3-54
serial communication mode, digital SCXI modules, 3-34
signal referencing modes
input signal referencing, SCXI-1100 module, 3-4 to 3-5
output signal referencing
SCXI-1120 module, 3-12
SCXI-1121 module, 3-21
SCXI-1140 module, 3-29
signal wire connections, 4-1 to 4-6
connector-and-shell assemblies, 4-6
SCXI module and connector compatibility (table), 4-1 to 4-2
terminal blocks, 4-2 to 4-6
onboard temperature sensors for cold-junction compensation, 4-4 to 4-5
opening SCXI-13*XX* terminal block, 4-5 to 4-6
SCXI-13*XX* terminal blocks, 4-2
TBX terminal blocks, 4-3
signals
floating signal sources, 3-3 to 3-4
ground-referenced signals, 3-3 to 3-4
onboard resources reserved by SCXI (table), 5-7 to 5-8
types of signals, 3-3 to 3-4
single-channel readings, 1-16
single-ended mode for Lab boards, 3-3
Slot 0, 1-17
software
installation order for software, 2-1 to 2-2
optional software, 1-14 to 1-15
software configuration
common errors, 5-2
SCXI systems, 3-57
example programs, 3-57
strain gauges, 4-9 to 4-14
connecting half-bridge gauge to SCXI-1321 terminal block (figure), 4-10
full-bridge configuration (figure), 4-14
half-bridge configuration I (figure), 4-13
half-bridge configuration II (figure), 4-13
quarter-bridge configuration I (figure), 4-12

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

quarter-bridge configuration II (figure), 4-12
requirements for using, 4-9
verifying high-common-mode voltage (warning), 4-9

T

TBX terminal blocks. *See* terminal blocks.
technical support, Appendix-1
temperature sensors
cold-junction compensation, 4-4
configuring jumper settings, 4-4 to 4-5
terminal blocks, 4-2 to 4-6
connecting half-bridge strain gauge to SCXI-1321 terminal block (figure), 4-10
description, 1-7
direct-mount (table), 1-9 to 1-10
onboard temperature sensors for cold-junction compensation, 4-4 to 4-5
opening SCXI-13*XX* terminal block, 4-5 to 4-6
options (figure), 1-8
problems with connections, 5-2
SCXI-13*XX* terminal blocks, 4-2
TBX terminal blocks
available TBX terminal blocks (table), 1-10
cabled to SCXI module (figure), 4-3
compatibility with SCXI modules (table), 4-3
overview, 4-3
thermocouples, 4-7 to 4-9
noise and filtering, 4-8 to 4-9
problems and solutions, 5-4
SCXI-1100, 4-7 to 4-8
SCXI-1102, 4-8
SCXI-1120, SCXI-1121, and SCXI-1122 modules, 4-8
transducers, 4-7 to 4-27
RTDs, 4-15 to 4-27
analog circuitry, 4-19
analog input channels, 4-19 to 4-21
analog output channel signal connections to SCXI-1124, 4-24 to 4-27
chassis ground connections, 4-27
connecting to SCXI-1121 module (figure), 4-17
connecting to SCXI-1320 terminal block, 4-15 to 4-16
excitation channel signal connections on SCXI-1122, 4-18 to 4-19
excitation output channels, 4-21 to 4-24
verifying high-common-mode voltage (warning), 4-15
strain gauges, 4-9 to 4-14
connecting half-bridge gauge to SCXI-1321 terminal block (figure), 4-10
full-bridge configuration (figure), 4-14
half-bridge configuration I (figure), 4-13
half-bridge configuration II (figure), 4-13
quarter-bridge configuration I (figure), 4-12
quarter-bridge configuration II (figure), 4-12
requirements for using, 4-9
verifying high-common-mode voltage (warning), 4-9
thermocouples, 4-7 to 4-9
noise and filtering, 4-8 to 4-9
SCXI-1100 module, 4-7 to 4-8
SCXI-1102 module, 4-8
SCXI-1120, SCXI-1121, and SCXI-1122 modules, 4-8
troubleshooting SCXI problems, 5-1 to 5-8

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP