



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com



PMC-DIO-ETF

PMC-DIO-ETB

16 Digital Inputs & 16 Digital Outputs

User Manual

©SBS Technologies, Inc.

Subject to change without notice.

Part Number: 89010285 Rev. 1.0

20030422

PMC-DIO-ETF

PMC-DIO-ETB

16 Digital Inputs & 16 Digital Outputs

SBS Technologies, Inc.

1284 Corporate Center Drive

St. Paul, MN 55121-1245

Tel: (651) 905-4700

FAX: (651) 905-4701

Email: support.commercial@sbs.com

<http://www.sbs.com>

©2003 SBS Technologies, Inc.

IndustryPack is a registered trademark of SBS Technologies, Inc. QuickPack, SDpack and Unilin are trademarks SBS Technologies, Inc. PC•MIP is a trademark of SBS Technologies, Inc. and MEN Mikro GmbH.

SBS Technologies, Inc acknowledges the trademarks of other organizations for their respective products mentioned in this document.

All rights are reserved: No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without the express consent of SBS Technologies, Inc. This document is meant solely for the purpose in which it was delivered.

SBS Technologies, Inc. reserves the right to make any changes in the devices or device specifications contained herein at any time and without notice. Customers are advised to verify all information contained in this document.

The electronic equipment described herein generates, uses and may radiate radio frequency energy, which can cause radio interference. SBS Technologies, Inc. assumes no liability for any damages caused by such interference.

SBS Technologies, Inc.'s products are **not** authorized for use as critical components in medical applications such as life support equipment, without the express consent of the president of SBS Technologies, Inc., Commercial Group.

This product has been designed to operate with IndustryPack, PC•MIP or PMC modules or carriers and compatible user-provided equipment. Connection of incompatible hardware is likely to cause serious damage. SBS Technologies, Inc. assumes no liability for any damages caused by such incompatibility.

Table of Contents

1	PRODUCT DESCRIPTION	5
2	TECHNICAL SPECIFICATION	6
3	FUNCTIONAL DESCRIPTION	7
	3.1 Digital Outputs.....	7
	3.1.1 Optical Isolation	7
	3.1.2 Output Polarity.....	7
	3.1.3 Overload Protection.....	7
	3.1.4 Output Watchdog.....	8
	3.2 Digital Inputs.....	8
	3.2.1 Optical Isolation	8
	3.2.2 Debounce Function	8
	3.2.3 Interrupt Logic.....	9
4	LOCAL SPACE ADDRESSING	10
	4.1 PCI9030 Local Space Configuration.....	10
	4.2 Local Register Space Address Map	10
	4.2.1 Data Output Register.....	11
	4.2.2 Data Input Register.....	12
	4.2.3 Control / Status Register	13
	4.2.4 Rising Edge Interrupt Enable Register	14
	4.2.5 Falling Edge Interrupt Enable Register	15
	4.2.6 Rising Edge Interrupt Status Register	16
	4.2.7 Falling Edge Interrupt Status Register	17
	4.2.8 Debounce Time Register.....	18
5	PCI9030 TARGET CHIP	21
	5.1 PCI Configuration Registers (PCR)	21
	5.1.1 PCI9030 Header.....	21
	5.1.2 PCI Base Address Initialization	22
	5.2 Local Configuration Register (LCR).....	23
	5.3 Configuration EEPROM	24
	5.4 Local Software Reset	24
6	CONFIGURATION HINTS.....	25
	6.1 Software Reset (Controller and LRESET#).....	25
	6.2 Big / Little Endian	25
7	INSTALLATION TPMC670	27
	7.1 Input Wiring.....	27
	7.2 Output Wiring.....	27
8	PIN ASSIGNMENT – I/O CONNECTOR	28
	8.1 Front Panel I/O	28
	8.2 Mezzanine Card Connector P14.....	29

Table of Figures

FIGURE 1-1 : BLOCK DIAGRAM	5
FIGURE 2-1 : TECHNICAL SPECIFICATION	6
FIGURE 3-1 : ISOLATED DIGITAL OUTPUTS	7
FIGURE 3-2 : ISOLATED DIGITAL INPUTS	8
FIGURE 4-1 : PCI9030 LOCAL SPACE CONFIGURATION.....	10
FIGURE 4-2 : FPGA REGISTER SPACE.....	10
FIGURE 4-3 : DATA OUTPUT REGISTER	11
FIGURE 4-4 : DATA INPUT REGISTER	12
FIGURE 4-5 : CONTROL / STATUS REGISTER.....	13
FIGURE 4-6 : RISING EDGE INTERRUPT ENABLE REGISTER.....	14
FIGURE 4-7 : FALLING EDGE INTERRUPT ENABLE REGISTER	15
FIGURE 4-8 : RISING EDGE INTERRUPT STATUS REGISTER	16
FIGURE 4-9 : FALLING EDGE INTERRUPT STATUS REGISTER	17
FIGURE 4-10: DEBOUNCE TIME REGISTER.....	18
FIGURE 4-11: FORMULAS TO DETERMINE PRELOAD VALUE	19
FIGURE 4-12: DEBOUNCE TIME / EXAMPLES	20
FIGURE 5-1 : PCI9030 HEADER	21
FIGURE 5-2 : PCI9030 PLD BASE ADDRESS USAGE	22
FIGURE 5-3 : PCI9030 LOCAL CONFIGURATION REGISTER	23
FIGURE 5-4 : CONFIGURATION EEPROM	24
FIGURE 6-1 : LOCAL BUS LITTLE/BIG ENDIAN	25
FIGURE 7-1 : INPUT WIRING.....	27
FIGURE 7-2 : OUTPUT WIRING.....	27
FIGURE 8-1 : PIN ASSIGNMENT I/O HD50CONNECTOR.....	28
FIGURE 8-2 : MEZZANINE CARD CONNECTOR P14	29

1 Product Description

The PMC-DIO is a standard single-width 32-bit PMC with sixteen 24V digital inputs galvanically isolated from the computer system by optocouplers. The inputs are also potential free to each other in groups of four inputs. A high performance input circuit ensures a defined switching point and polarization protection against polarity inversion.

All inputs have a common electronic debounce circuit with a freely programmable debounce time.

All inputs can generate an interrupt. The signal edge handling is programmable to interrupt on rising, falling or both edges of the input signal.

The PMC-DIO has 16 digital high side switches with galvanic isolation from the computer system by optocouplers. The outputs are also isolated against each other in groups of four outputs. All outputs are protected against short-circuit and thermal overload. The output drivers are capable of driving 0.5A continuous per channel.

A hardware watchdog clears all outputs in case of trigger fail. The PMC-DIO-ETF provides front panel I/O, the PMC-DIO-ETB provides P14 I/O.

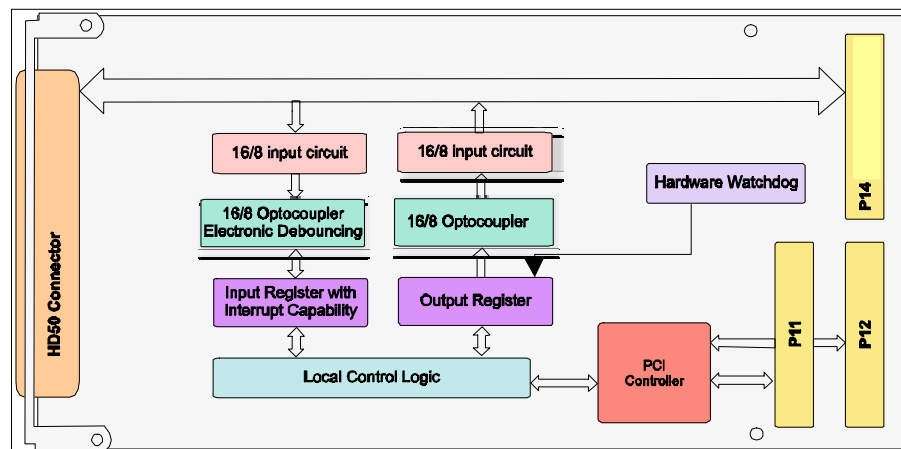


Figure 1-1 : Block Diagram

2 Technical Specification

PMC Interface		
Mechanical Interface	PCI Mezzanine Card (PMC) Interface Single Size	
Electrical Interface	PCI Rev. 2.1 compliant 33MHz / 32bit PCI 3.3V and 5V PCI Signaling Voltage	
On Board Devices		
PCI Target Chip	PCI9030 (PLX Technology)	
I/O Interface		
Number of Inputs	16 digital Inputs	
Input Isolation	Optocouplers for galvanic isolation, also isolated to each other in groups of four inputs	
Input Voltage	24V DC typical	
Input Current	4.2mA typical at 24V input voltage	
Input Switching Level	12V typical, 7.5V minimum, 14V maximum	
Input Signal Debouncing	Electronic debouncing (7 μ s to 440 ms in steps of 7 μ s) common for all input channels, can be disabled	
Input Interrupts	16 input interrupts (Trigger on rising, falling or both edges)	
Number of Outputs	16 digital outputs	
Output Isolation	Optocouplers for galvanic isolation, also isolated to each other in groups of four outputs	
External Output Voltage	24V DC typical, 6V DC minimum, 48V DC maximum	
Output Current	0.5A typical (0.3A for voltages over 32V)	
Short Circuit Current	0.8A typical	
Output Voltage Drop	1.1V typical at 0.5A	
Output Protection	Overload, short circuit, GND and Vs open wire protection, thermal shutdown	
I/O Connector	PMC-DIO-ETF PMC-DIO-ETB	HD50 connector – SCSI-2 type connector PMC P14 I/O (64 pin Mezzanine connector)
Physical Data		
Power Requirements	85 mA typical @ +3.3V DC with all inputs and outputs inactive 200 mA typical @ +3.3V DC with all inputs and outputs active	
Temperature Range	Operating Storage	-25 °C to +85 °C -55°C to +125°C
MTBF	252631 h	
Humidity	5 – 95 % non-condensing	
Weight	72 g	

Figure 2-1 : Technical Specification

3 Functional Description

3.1 Digital Outputs

3.1.1 Optical Isolation

The PMC-DIO has 16 digital outputs. The standard signal level for these outputs is 24V DC. All outputs are isolated by optocouplers from the computer system and are also isolated against each other in groups of four outputs.

GROUP	VS / standard 24V DC	GROUND	OUTPUT
O1	VS_O1	GND_O1	OUT 1 OUT 2 OUT 3 OUT 4
O2	VS_O	GND_O2	OUT 5 OUT 6 OUT 7 OUT 8
O3	VS_O3	GND_O3	OUT 9 OUT 10 OUT 11 OUT 12
O4	VS_O4	GND_O4	OUT 13 OUT 14 OUT 15 OUT 16

Figure 3-1 : Isolated Digital Outputs

3.1.2 Output Polarity

Each output can be individually switched to the according power supply VS_Ox (high side switch).

3.1.3 Overload Protection

The output drivers used on the PMC-DIO are smart drivers TDE1707. The maximum continuous output current is 0.5A. The output circuits are protected against overload, short circuit and over temperature. In case of such a failure the corresponding output is switched off until the error condition is removed. Then the output returns automatically to normal operation and the state programmed in the Data Output Register.

3.1.4 Output Watchdog

Writing '1' into bit 1 of the Global Control Register enables the hardware watchdog function. The status of the watchdog is indicated in bit 3 of the Global Control Register.

Any software access (read or write) to the Data Output Register of the PMC-DIO will retrigger the watchdog. The maximum time between two accesses is set to 120ms; if the time expires without a software access all outputs go into the 'OFF' state. At the same time the watchdog status will change from '0' to '1' and lock the Data Output Register. This prevents a write access to the Data Output Register.

Writing '1' to the watchdog status (Bit 3 Control Register) clears this bit and also unlocks the Output Register. After unlocking the Data Output Register the outputs stays in the 'OFF' state until the next write access to this Register.

The watchdog is disabled after power-on or reset.

3.2 Digital Inputs

3.2.1 Optical Isolation

The PCM-DIO has 16 digital inputs. The standard signal level for these inputs is 24V DC. The switching level of the inputs is between 7.5V and 14V. All inputs are isolated by optocouplers from the computer system and are also isolated against each other in groups of four inputs.

GROUP	GROUND	INPUT
I1	GND_I1	IN 1 IN 2 IN 3 IN 4
I2	GND_I2	IN 5 IN 6 IN 7 IN 8
I3	GND_I3	IN 9 IN 10 IN 11 IN 12
I4	GND_I4	IN 13 IN 14 IN 15 IN 16

Figure 3-2 : Isolated Digital inputs

3.2.2 Debounce Function

A programmable debounce function common for all inputs is implemented on the PMC-DIO. There is only one debounce time adjustable for all 16 digital inputs.

If the debounce function is enabled, the input pin must be static for the programmed debounce time before the rising or falling edge is recognized as valid. So only after a correct identification the Data Input Register is updated and an interrupt is generated.

The debounce function is disabled after power-on and reset. The debounce time is set to value 0 after power-on and reset.

3.2.3 Interrupt Logic

Interrupt generation can be individually programmed for each channel and input transition. To enable the interrupt after a reset, the Global Interrupt Enable bit in the Control Register must be set to the value '1'. Also the respective bit for rising or falling edge in the Rising Edge / Falling Edge Interrupt Enable Registers must be set.

The Global Interrupt Enable and also all individually interrupt enable bits are disabled after power-on and reset.

4 Local Space Addressing

4.1 PCI9030 Local Space Configuration

The local on board addressable regions are accessed from the PCI side by using the PCI9030 local spaces.

PCI9030 Local Space	PCI9030 PCI Base Address (Offset in PCI Configuration Space)	PCI Space Mapping	Size (Byte)	Port Width (Bit)	Endian Mode	Description
0	2 (0x18)	IO	16	16	BIG	Local Register Space
1	3 (0x1C)	-	-	-	-	Not Used
2	4 (0x20)	-	-	-	-	Not Used
3	5 (0x24)	-	-	-	-	Not Used

Figure 4-1 : PCI9030 Local Space Configuration

4.2 Local Register Space Address Map

PCI Base Address: PCI9030 PCI Base Address 2 (Offset 0x18 in PCI Configuration Space).

Offset to PCI Base Address 2	Register Name	Size (Bit)
0x00	Data Output Register	16
0x02	Data Input Register	16
0x04	Control / Status Register	16
0x06	Rising Edge Interrupt Enable Register	16
0x08	Falling Edge Interrupt Enable Register	16
0x0A	Rising Edge Interrupt Status Register	16
0x0C	Falling Edge Interrupt Status Register	16
0x0E	Debounce Time Register	16

Figure 4-2 : FPGA Register Space

4.2.1 Data Output Register

The Data Output Register is a word wide read/write register that is used to set or clear the different outputs of the PMC-DIO.


15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OUTPUT 16	OUTPUT 15	OUTPUT 14	OUTPUT 13	OUTPUT 12	OUTPUT 11	OUTPUT 10	OUTPUT 9	OUTPUT 8	OUTPUT 7	OUTPUT 6	OUTPUT 5	OUTPUT 4	OUTPUT 3	OUTPUT 2	OUTPUT 1

Bit	Symbol	Description	Access	Reset Value
15	OUTPUT16	To set an output line active, write '1' to the corresponding bit. For the inactive state write '0' to the corresponding bit. 0 : inactive 1 : active Bit 0 represents output line 1 and bit 15 represents output line 16. After power-on or reset the Data Output Register is cleared to '0', all outputs are inactive.	R/W	0x0000
14	OUTPUT15			
13	OUTPUT14			
12	OUTPUT13			
11	OUTPUT12			
10	OUTPUT11			
9	OUTPUT10			
8	OUTPUT9			
7	OUTPUT8			
6	OUTPUT7			
5	OUTPUT6			
4	OUTPUT5			
3	OUTPUT4			
2	OUTPUT3			
1	OUTPUT2			
0	OUTPUT1			

Figure 4-3 : Data Output Register

4.2.2 Data Input Register

The Data Input Register is a word wide read only register that reflects the actual status of the inputs.




Bit	Symbol	Description	Access	Reset Value
15	INPUT16	0 : Input line is logic low 1 : Input line is logic high Bit 0 represents Input Line 1 and bit 15 represents the Input Line 16.	R	-
14	INPUT15			
13	INPUT14			
12	INPUT13			
11	INPUT12			
10	INPUT11			
9	INPUT10			
8	INPUT9			
7	INPUT8			
6	INPUT7			
5	INPUT6			
4	INPUT5			
3	INPUT4			
2	INPUT3			
1	INPUT2			
0	INPUT1			

Figure 4-4 : Data Input Register

4.2.3 Control / Status Register

The Control / Status Register is a read/write register.



Bit	Symbol	Description	Access	Reset Value
15 : 4	-	Not used and undefined during reads	-	-
3	WD_STA	Watchdog Status Flag 1 = indicates that the watchdog had recognized a failure and had disabled all output channels. Also the Output Register is locked. 0 = clears this bit and unlocks Output Register	R/W	0
2	DB_ENA	Debounce Enable 1 = enables the debounce function for all 16 inputs 0 = disables debounce function	R/W	0
1	WD_ENA	Watchdog Enable 1 = enables watchdog for all 16 outputs 0 = disables watchdog function	R/W	0
0	INT_ENA	Global Interrupt Enable 1 = globally enables interrupt for all 16 inputs 0 = globally disables interrupts The input channels generate interrupts at pin INTA# of the PCI bus.	R/W	0

Figure 4-5 : Control / Status Register

Additional to this Global Interrupt Enable the Interrupt INTA# must be enabled in the PCI Interrupt Line Register (PCIILR; 0x3C) of the PCI Controller PCI9030. Default after power-on and reset is: INTA# is enabled.

The watchdog Status is only active if the watchdog is enabled.

4.2.4 Rising Edge Interrupt Enable Register

The Rising Edge Interrupt Enable Register is a word wide read/write register.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
INT_ENA_H16	INT_ENA_H15	INT_ENA_H14	INT_ENA_H13	INT_ENA_H12	INT_ENA_H11	INT_ENA_H10	INT_ENA_H9	INT_ENA_H8	INT_ENA_H7	INT_ENA_H6	INT_ENA_H5	INT_ENA_H4	INT_ENA_H3	INT_ENA_H2	INT_ENA_H1

Bit	Symbol	Description	Access	Reset Value
15	INT_ENA_H16	0 : Interrupt for input line disabled 1 : Interrupt for input line enabled Bit 0 of the Rising Edge Interrupt Enable Register enables the interrupt of input line 1 for the rising edge. Bit 15 enables interrupt of input line 16 for rising edge. All other bits are equivalent.	R/W	0x0000
14	INT_ENA_H15			
13	INT_ENA_H14			
12	INT_ENA_H13			
11	INT_ENA_H12			
10	INT_ENA_H11			
9	INT_ENA_H10			
8	INT_ENA_H9			
7	INT_ENA_H8			
6	INT_ENA_H7			
5	INT_ENA_H6			
4	INT_ENA_H5			
3	INT_ENA_H4			
2	INT_ENA_H3			
1	INT_ENA_H2			
0	INT_ENA_H1			

Figure 4-6 : Rising Edge Interrupt Enable Register

4.2.5 Falling Edge Interrupt Enable Register

The Falling Edge Interrupt Enable Register is a word wide read/write register.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
INT_ENA_L16	INT_ENA_L15	INT_ENA_L14	INT_ENA_L13	INT_ENA_L12	INT_ENA_L11	INT_ENA_L10	INT_ENA_L9	INT_ENA_L8	INT_ENA_L7	INT_ENA_L6	INT_ENA_L5	INT_ENA_L4	INT_ENA_L3	INT_ENA_L2	INT_ENA_L1

Bit	Symbol	Description	Access	Reset Value
15	INT_ENA_L16	0 : Interrupt for input line disabled 1 : Interrupt for input line enabled Bit 0 of the Falling Edge Interrupt Enable Register enables the interrupt of input line 1 for the falling edge. Bit 15 enables interrupt of input line 16 for falling edge. All other bits are equivalent.	R/W	0x0000
14	INT_ENA_L15			
13	INT_ENA_L14			
12	INT_ENA_L13			
11	INT_ENA_L12			
10	INT_ENA_L11			
9	INT_ENA_L10			
8	INT_ENA_L9			
7	INT_ENA_L8			
6	INT_ENA_L7			
5	INT_ENA_L6			
4	INT_ENA_L5			
3	INT_ENA_L4			
2	INT_ENA_L3			
1	INT_ENA_L2			
0	INT_ENA_L1			

Figure 4-7 : Falling Edge Interrupt Enable Register

4.2.6 Rising Edge Interrupt Status Register

The Rising Edge Interrupt Status Register is a word wide read/write register.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
INT_STA_H16	INT_STA_H15	INT_STA_H14	INT_STA_H13	INT_STA_H12	INT_STA_H11	INT_STA_H10	INT_STA_H9	INT_STA_H8	INT_STA_H7	INT_STA_H6	INT_STA_H5	INT_STA_H4	INT_STA_H3	INT_STA_H2	INT_STA_H1

Bit	Symbol	Description	Access	Reset Value
15	INT_STA_H16	<p>Read access:</p> <p>0 = no interrupt request pending</p> <p>1 = interrupt request pending</p> <p>Write access:</p> <p>0 = no effect</p> <p>1 = clear pending interrupt request</p> <p>Bit 0 of this register reflects the interrupt request state of input line 1 for the rising edge, bit 15 reflects the interrupt request state of input line 16 for the rising edge.</p> <p>An interrupt request for a specific input line is cleared by writing '1' to the according bit of the Rising Edge Interrupt Status Register.</p>	R/W	0x0000
14	INT_STA_H15			
13	INT_STA_H14			
12	INT_STA_H13			
11	INT_STA_H12			
10	INT_STA_H11			
9	INT_STA_H10			
8	INT_STA_H9			
7	INT_STA_H8			
6	INT_STA_H7			
5	INT_STA_H6			
4	INT_STA_H5			
3	INT_STA_H4			
2	INT_STA_H3			
1	INT_STA_H2			
0	INT_STA_H1			

Figure 4-8 : Rising Edge Interrupt Status Register

4.2.7 Falling Edge Interrupt Status Register

The Falling Edge Interrupt Status Register is a word wide read/write register.


15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
INT_STA_L16	INT_STA_L15	INT_STA_L14	INT_STA_L13	INT_STA_L12	INT_STA_L11	INT_STA_L10	INT_STA_L9	INT_STA_L8	INT_STA_L7	INT_STA_L6	INT_STA_L5	INT_STA_L4	INT_STA_L3	INT_STA_L2	INT_STA_L1

Bit	Symbol	Description	Access	Reset Value
15	INT_STA_L16	<p>Read access:</p> <p>0 = no interrupt request pending</p> <p>1 = interrupt request pending</p> <p>Write access:</p> <p>0 = no effect</p> <p>1 = clear pending interrupt request</p> <p>Bit 0 of this register reflects the interrupt request state of input line 1 for the falling edge, bit 15 reflects the interrupt request state of input line 16 for the falling edge.</p> <p>An interrupt request for a specific input line is cleared by writing '1' to the according bit of the Falling Edge Interrupt Status Register.</p>	R/W	0x0000
14	INT_STA_L15			
13	INT_STA_L14			
12	INT_STA_L13			
11	INT_STA_L12			
10	INT_STA_L11			
9	INT_STA_L10			
8	INT_STA_L9			
7	INT_STA_L8			
6	INT_STA_L7			
5	INT_STA_L6			
4	INT_STA_L5			
3	INT_STA_L4			
2	INT_STA_L3			
1	INT_STA_L2			
0	INT_STA_L1			

Figure 4-9 : Falling Edge Interrupt Status Register

4.2.8 Debounce Time Register

The Debounce Time Register is a word wide read/write register.



Bit	Symbol	Description	Access	Reset Value
15	DB_TIME	<p>The debounce time can be programmed by writing a hexadecimal value in the register.</p> <p>One hexadecimal step corresponds to a debounce time of about 7μs.</p> <p>min debounce time: 7μs max debounce time: 440 ms debounce step: ca. 7μs</p> <p>The value 0 in this register sets the debounce time to a minimum of 7μs. This is the default state after power-on or reset. Any debounce time in the range of 7μs to 440 ms can be programmed in steps of ca. 7μs. The debounce time is common for all 16 inputs.</p>	R/W	0x0000
14				
13				
12				
11				
10				
9				
8				
7				
6				
5				
4				
3				
2				
1				
0				

Figure 4-10: Debounce Time Register

To use the programmable debounce time, the Debounce Enable Bit of the Control / Status Register must be set to '1'.

If the Debounce Enable Bit of the Control / Status Register is set to '0', no debounce function is active for all inputs.

The following formulas can be used to determine the preload value.

$$t_{db} = (Z + 1) \cdot \frac{64}{PCICLK} \cdot 3.5$$

$$Z = \frac{t_{db}}{64 \cdot 3.5} \cdot PCICLK - 1$$

$$t_{max} = (Z + 1) \cdot \frac{64}{PCICLK} \cdot 4$$

$$t_{min} = (Z + 1) \cdot \frac{64}{PCICLK} \cdot 3$$

t_{db}	- typical debounce time [s]
Z	- preload value PCICLK- 33,33 MHz
t_{max}	- max. debounce time [s]
t_{min}	- min. debounce time [s]

Figure 4-11: Formulas to determine preload value

Debounce Time Examples:

typ. Debounce Time [ms]	inaccuracy [ms]	Counter dec.	Counter hex.
0.007	± 0.001	0	0x0000
0.014	± 0.002	1	0x0001
0.021	± 0.003	2	0x0002
0.027	± 0.004	3	0x0003
0.034	± 0.005	4	0x0004
0.041	± 0.006	5	0x0005
0.050	± 0.007	6	0x0006
0.060	± 0.008	7	0x0007
0.070	± 0.010	9	0x0009
0.080	± 0.011	10	0x000A
0.090	± 0.012	12	0x000C
0.100	± 0.013	13	0x000D
0.200	± 0.028	28	0x001C
0.300	± 0.042	43	0x002B
0.400	± 0.057	58	0x003A
0.500	± 0.071	73	0x0049
0.600	± 0.085	88	0x0058
0.700	± 0.100	103	0x0067
0.800	± 0.114	118	0x0076
0.900	± 0.128	132	0x0084
1.000	± 0.142	147	0x0093
2.000	± 0.285	296	0x0128
3.000	± 0.428	445	0x01BD
4.000	± 0.571	594	0x0252
5.000	± 0.714	743	0x02E7
6.000	± 0.856	891	0x037B
7.000	± 0.999	1040	0x0410
8.000	± 1.142	1189	0x04A5
9.000	± 1.285	1338	0x053A
10.000	± 1.428	1487	0x05CF
20.000	± 2.857	2975	0x0B9F
50.000	± 7.142	7439	0x1D0F
100.000	± 14.285	14879	0x3A1F
200.000	± 28.571	29760	0x7440
250.000	± 35.714	37201	0x9151
300.000	± 42.856	44641	0xAE61
350.000	± 50.000	52082	0xCB72
400.000	± 57.142	59522	0xE882
440.402	± 62.915	65535	0xFFFF

Figure 4-12: Debounce Time / Examples

5 PCI9030 Target Chip

5.1 PCI Configuration Registers (PCR)

5.1.1 PCI9030 Header

PCI CFG Register Address	Write '0' to all unused (Reserved) bits							PCI writeable	Initial Values (Hex Values)	
	31	24	23	16	15	8	7			0
0x00	Device ID				Vendor ID				N	9050 10B5
0x04	Status				Command				Y	0280 0000
0x08	Class Code					Revision ID		N	118000 00	
0x0C	BIST	Header Type		PCI Latency Timer		Cache Line Size		Y[7:0]	00 00 00 00	
0x10	PCI Base Address 0 for MEM Mapped Config. Registers							Y	FFFFFFF80	
0x14	PCI Base Address 1 for I/O Mapped Config. Registers							Y	FFFFFFF81	
0x18	PCI Base Address 2 for Local Address Space 0							Y	00000000	
0x1C	PCI Base Address 3 for Local Address Space 1							Y	00000000	
0x20	PCI Base Address 4 for Local Address Space 2							Y	00000000	
0x24	PCI Base Address 5 for Local Address Space 3							Y	00000000	
0x28	PCI Cardbus Information Structure Pointer							N	00000000	
0x2C	Subsystem ID			Subsystem Vendor ID				N	029E 1498	
0x30	PCI Base Address for Local Expansion ROM							Y	00000000	
0x34	Reserved					New Cap. Ptr.		N	000000 40	
0x38	Reserved							N	00000000	
0x3C	Max_Lat	Min_Gnt		Interrupt Pin		Interrupt Line		Y[7:0]	00 00 01 00	
0x40	PM Cap.			PM Nxt Cap.		PM Cap. ID		N	4801 48 01	
0x44	PM Data	PM CSR EXT		PM CSR				Y	00 00 0000	
0x48	Reserved	HS CSR		HS Nxt Cap.		HS Cap. ID		Y[23:16]	00 00 4C 06	
0x4C	VPD Address			VPD Nxt Cap.		VPD Cap. ID		Y[31:16]	0000 00 03	
0x50	VPD Data							Y	00000000	

Figure 5-1 : PCI9030 Header

5.1.2 PCI Base Address Initialization

PCI Base Address Initialization is scope of the PCI host software.

PCI9030 PCI Base Address Initialization:

1. Write 0xFFFF_FFFF to the PCI9030 PCI Base Address Register.
2. Read back the PCI9030 PCI Base Address Register.
3. For PCI Base Address Registers 0:5, check bit 0 for PCI Address Space:
 - Bit 0 = '0' requires PCI Memory Space mapping
 - Bit 0 = '1' requires PCI I/O Space mappingFor the PCI Expansion ROM Base Address Register, check bit 0 for usage:
 - Bit 0 = '0': Expansion ROM not used
 - Bit 0 = '1': Expansion ROM used
4. For PCI I/O Space mapping, starting at bit location 2, the first bit set determines the size of the required PCI I/O Space size.

For PCI Memory Space mapping, starting at bit location 4, the first bit set to '1' determines the size of the required PCI Memory Space size.

For PCI Expansion ROM mapping, starting at bit location 11, the first bit set to '1' determines the required PCI Expansion ROM size.

For example, if bit 5 of a PCI Base Address Register is detected as the first bit set to '1', the PCI 9030 is requesting a 32 byte space (address bits 4:0 are not part of base address decoding).
5. Determine the base address and write the base address to the PCI9030 PCI Base Address Register. For PCI Memory Space mapping the mapped address region must comply with the definition of bits 3:1 of the PCI9030 PCI Base Address Register.

After programming the PCI9030 PCI Base Address Registers, the software must enable the PCI9030 for PCI I/O and/or PCI Memory Space access in the PCI9030 PCI Command Register (Offset 0x04). To enable PCI I/O Space access to the PCI9030, set bit 0 to '1'. To enable PCI Memory Space access to the PCI9030, set bit 1 to '1'.

Offset in Config.	Description	Usage
0x10	PCI9030 LCR's MEM	Used
0x14	PCI9030 LCR's I/O	Used
0x18	PCI9030 Local Space 0	Used
0x1C	PCI9030 Local Space 1	Not used
0x30	Expansion ROM	Not used

Figure 5-2 : PCI9030 PLD Base Address Usage

5.2 Local Configuration Register (LCR)

After reset, the PCI9030 Local Configuration Registers are loaded from the on board serial configuration EEPROM.

The PCI base address for the PCI9030 Local Configuration Registers is PCI9030 PCI Base Address 0 (PCI Memory Space) (Offset 0x10 in the PCI9030 PCI Configuration Register Space) or PCI9030 PCI Base Address 1 (PCI I/O Space) (Offset 0x14 in the PCI9030 PCI Configuration Register Space).

Do not change hardware dependent bit settings in the PCI9030 Local Configuration Registers.

Offset from PCI Base Address	Register	Value
0x00	Local Address Space 0 Range	0x0FFF_FFF1
0x04	Local Address Space 1 Range	0x0000_0000
0x08	Local Address Space 2 Range	0x0000_0000
0x0C	Local Address Space 3 Range	0x0000_0000
0x10	Local Exp. ROM Range	0x0000_0000
0x14	Local Re-map Register Space 0	0x0000_0001
0x18	Local Re-map Register Space 1	0x0000_0000
0x1C	Local Re-map Register Space 2	0x0000_0000
0x20	Local Re-map Register Space 3	0x0000_0000
0x24	Local Re-map Register ROM	0x0000_0000
0x28	Local Address Space 0 Descriptor	0x0171_78A0
0x2C	Local Address Space 1 Descriptor	0x0000_0000
0x30	Local Address Space 2 Descriptor	0x0000_0000
0x34	Local Address Space 3 Descriptor	0x0000_0000
0x38	Local Exp. ROM Descriptor	0x0000_0000
0x3C	Chip Select 0 Base Address	0x0000_0009
0x40	Chip Select 1 Base Address	0x0000_0000
0x44	Chip Select 2 Base Address	0x0000_0000
0x48	Chip Select 3 Base Address	0x0000_0000
0x4C	Interrupt Control/Status	0x0041
0x4E	EEPROM Write Protect Boundary	0x0030
0x50	Miscellaneous Control Register	0x0078_0000
0x54	General Purpose I/O Control	0x0249_2492
0x70	Hidden1 Power Management data select	0x0000_0000
0x74	Hidden 2 Power Management data scale	0x0000_0000

Figure 5-3 : PCI9030 Local Configuration Register

5.3 Configuration EEPROM

After power-on or PCI reset, the PCI 9030 loads initial configuration register data from the on board configuration EEPROM.

The configuration EEPROM contains the following configuration data:

- Address 0x00 to 0x27 : PCI9030 PCI Configuration Register Values
- Address 0x28 to 0x87 : PCI9030 Local Configuration Register Values
- Address 0x88 to 0xFF : Reserved

See the PCI9030 Manual for more information.

Address	Offset							
	0x00	0x02	0x04	0x06	0x08	0x0A	0x0C	0x0E
0x00	0x9050	0x10B5	0x0280	0x0000	0x1180	0x0000	0x029E	0x1498
0x10	0x0000	0x0040	0x0000	0x0100	0x4801	0x4801	0x0000	0x0000
0x20	0x0000	0x4C06	0x0000	0x0003	0x0FFF	0xFFF1	0x0000	0x0000
0x30	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000	0x0001
0x40	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000
0x50	0x0171	0x78A0	0x0000	0x0000	0x0000	0x0000	0x0000	0x0000
0x60	0x0000	0x0000	0x0000	0x0009	0x0000	0x0000	0x0000	0x0000
0x70	0x0000	0x0000	0x0030	0x0041	0x0078	0x0000	0x0249	0x2492
0x80	0x0000	0x0000	0x0000	0x0000	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0x90	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xA0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xB0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xC0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xD0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xE0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF
0xF0	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF	0xFFFF

Figure 5-4 : Configuration EEPROM

5.4 Local Software Reset

The PCI9030 Local Reset Output LRESETo# is used to reset the on board local logic.

The PCI9030 local reset is active during PCI reset or if the PCI Adapter Software Reset bit is set in the PCI9030 local configuration register CNTRL (offset 0x50).

CNTRL[30] PCI Adapter Software Reset:

Value of 1 resets the PCI 9030 and issues a reset to the Local Bus (LRESETo# asserted). The PCI 9030 remains in this reset condition until the PCI Host clears this bit. The contents of the PCI9030 PCI and Local Configuration Registers are not reset. The PCI9030 PCI Interface is not reset.

6 Configuration Hints

6.1 Software Reset (Controller and LRESET#)

A host on the PCI bus can set the software reset bit in the Miscellaneous Control Register (CNTRL; 0x50) of the PCI Controller PCI 9030 to reset the Controller and assert LRESET# output. The PCI 9030 remains in this reset condition until the PCI host clears the software reset bit.

6.2 Big / Little Endian

- PCI – Bus (Little Endian)

Byte 0	AD[7..0]
Byte 1	AD[15..8]
Byte 2	AD[23..16]
Byte 3	AD[31..24]

- Every Local Address Space (0...3) and the Expansion ROM Space can programmed to operate in Big or Little Endian Mode.

Big Endian		Little Endian	
32 Bit		32 Bit	
Byte 0	D[31..24]	Byte 0	D[7..0]
Byte 1	D[23..16]	Byte 1	D[15..8]
Byte 2	D[15..8]	Byte 2	D[23..16]
Byte 3	D[7..0]	Byte 3	D[31..24]
16 Bit upper lane		16 Bit	
Byte 0	D[31..24]	Byte 0	D[7..0]
Byte 1	D[23..16]	Byte 1	D[15..8]
16 Bit lower lane			
Byte 0	D[15..8]		
Byte 1	D[7..0]		
8 Bit upper lane		8 Bit	
Byte 0	D[31..24]	Byte 0	D[7..0]
8 Bit lower lane			
Byte 0	D[7..0]		

Figure 6-1 : Local Bus Little/Big Endian

Standard use of the PMC-DIO:

Local Address Space 0	16Bit Bus in Big Endian Mode
Local Address Space 1	not used
Local Address Space 2	not used
Local Address Space 3	not used
Expansion ROM Space	not used

To change the Endian Mode use the Local Configuration Registers for the corresponding Space. Bit 24 of the according register sets the Mode. A value of 1 indicates Big Endian and a value of 0 indicates Little Endian.

For further information please refer to the PCI9030 manual.

Use the PCI Base Address 0 + Offset or PCI Base Address 1 + Offset:

Short cut Offset	Name
LAS0BRD	0x28 Local Address Space 0 Bus Region Description Register
LAS1BRD	0x2C Local Address Space 0 Bus Region Description Register
LAS2BRD	0x30 Local Address Space 0 Bus Region Description Register
LAS3BRD	0x34 Local Address Space 0 Bus Region Description Register
EROMBRD	0x38 Expansion ROM Bus Region Description Register

You can also use the PCI - Base Address 1 I/O Mapped Configuration Registers.

7 Installation PMC-DIO

7.1 Input Wiring

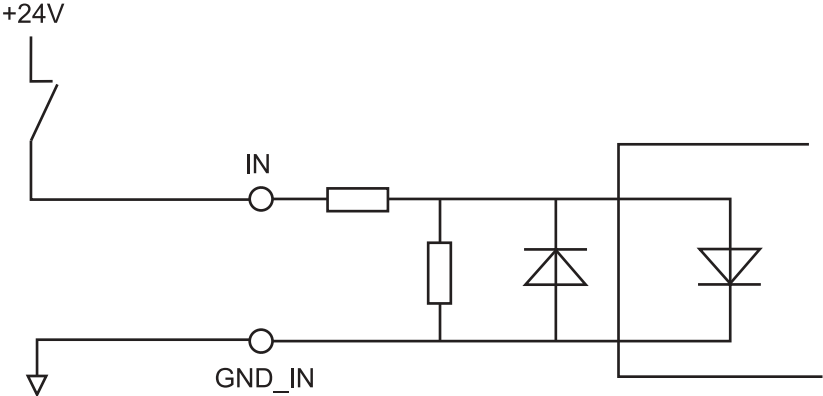


Figure 7-1 : Input Wiring

7.2 Output Wiring

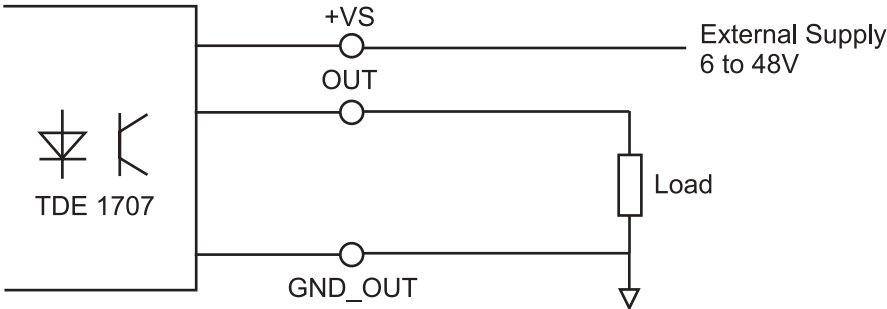


Figure 7-2 : Output Wiring

8 Pin Assignment – I/O Connector

8.1 Front Panel I/O

Pin	Signal		Pin	Signal	
1	VS_O1	External Supply OUT1 .. OUT4	26	GND_O2	Ground OUT 5 .. OUT 8
2	VS_O1	External Supply OUT1 .. OUT4	27	GND_O3	Ground OUT 9 .. OUT 12
3	VS_O2	External Supply OUT5 .. OUT8	28	GND_O4	Ground OUT 13 .. OUT 16
4	VS_O2	External Supply OUT5 .. OUT8	29	n.c.	not used
5	VS_O3	External Supply OUT9 .. OUT12	30	n.c.	not used
6	VS_O3	External Supply OUT9 .. OUT12	31	IN 1	Input Line 1
7	VS_O4	External Supply OUT13 .. OUT16	32	IN 2	Input Line 2
8	VS_O4	External Supply OUT13 .. OUT16	33	IN 3	Input Line 3
9	OUT 1	Output Line 1	34	IN 4	Input Line 4
10	OUT 2	Output Line 2	35	IN 5	Input Line 5
11	OUT 3	Output Line 3	36	IN 6	Input Line 6
12	OUT 4	Output Line 4	37	IN 7	Input Line 7
13	OUT 5	Output Line 5	38	IN 8	Input Line 8
14	OUT 6	Output Line 6	39	IN 9	Input Line 9
15	OUT 7	Output Line 7	40	IN 10	Input Line 10
16	OUT 8	Output Line 8	41	IN 11	Input Line 11
17	OUT 9	Output Line 9	42	IN 12	Input Line 12
18	OUT 10	Output Line 10	43	IN 13	Input Line 13
19	OUT 11	Output Line 11	44	IN 14	Input Line 14
20	OUT 12	Output Line 12	45	IN 15	Input Line 15
21	OUT 13	Output Line 13	46	IN 16	Input Line 16
22	OUT 14	Output Line 14	47	GND_I1	Ground IN 1 .. IN 4
23	OUT 15	Output Line 15	48	GND_I2	Ground IN 5 .. IN 8
24	OUT 16	Output Line 16	49	GND_I3	Ground IN 9 .. IN 12
25	GND_O1	Ground OUT 1 .. OUT 4	50	GND_I4	Ground IN 13 .. IN 16

Figure 8-1 : Pin Assignment I/O HD50Connector

Please check the maximum current of the used connection cable.

Some standard cables (AWG28 50pin) are limited to 0.75 A per lead.

8.2 Mezzanine Card Connector P14

Pin	Signal	Description	Pin	Signal	Description
1	VS_O1	External Supply OUT1 .. OUT4	2	VS_O1	External Supply OUT1 .. OUT4
3	VS_O2	External Supply OUT5 .. OUT8	4	VS_O2	External Supply OUT5 .. OUT8
5	VS_O3	External Supply OUT9 .. OUT12	6	VS_O3	External Supply OUT9 .. OUT12
7	VS_O4	External Supply OUT13 .. OUT15	8	VS_O4	External Supply OUT13 .. OUT15
9	OUT 1	Output Line 1	10	OUT 2	Output Line 2
11	OUT 3	Output Line 3	12	OUT 4	Output Line 4
13	OUT 5	Output Line 5	14	OUT 6	Output Line 6
15	OUT 7	Output Line 7	16	OUT 8	Output Line 8
17	OUT 9	Output Line 9	18	OUT 10	Output Line 10
19	OUT 11	Output Line 11	20	OUT 12	Output Line 12
21	OUT 13	Output Line 13	22	OUT 14	Output Line 14
23	OUT 15	Output Line 15	24	OUT 16	Output Line 16
25	GND_O1	Ground OUT 1 .. OUT 4	26	GND_O2	Ground OUT 5 .. OUT 8
27	GND_O3	Ground OUT 9 .. OUT 12	28	GND_O4	Ground OUT 13 .. OUT 16
29	n.c.	not used	30	n.c.	not used
31	IN 1	Input Line 1	32	IN 2	Input Line 2
33	IN 3	Input Line 3	34	IN 4	Input Line 4
35	IN 5	Input Line 5	36	IN 6	Input Line 6
37	IN 7	Input Line 7	38	IN 8	Input Line 8
39	IN 9	Input Line 9	40	IN 10	Input Line 10
41	IN 11	Input Line 11	42	IN 12	Input Line 12
43	IN 13	Input Line 13	44	IN 14	Input Line 14
45	IN 15	Input Line 15	46	IN 16	Input Line 16
47	GND_I1	Ground IN 1 .. IN 4	48	GND_I2	Ground IN 5 .. IN 8
49	GND_I3	Ground IN 9 .. IN 12	50	GND_I4	Ground IN 13 .. IN 16
51	n.c.	not used	52	n.c.	not used
53	n.c.	not used	54	n.c.	not used
55	n.c.	not used	56	n.c.	not used
57	n.c.	not used	58	n.c.	not used
59	n.c.	not used	60	n.c.	not used
61	n.c.	not used	62	n.c.	not used
63	n.c.	not used	64	n.c.	not used

Figure 8-2 : Mezzanine Card Connector P14

Please verify that the tracks from the P14 connector to the Px connector of the PMC carrier board are designed for a current of typical 0.5 A min per output.



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com