

VXI Technology SM7272N

SP4T Non-Latching Narda Relay Switch



© Artisan Technology Group

In Stock

Used and in Excellent Condition

Open Web Page

<https://www.artisanng.com/52466-16>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.



SM7000N SERIES

MICROWAVE SWITCH

USER'S MANUAL

P/N: 82-0046-001
Released February 7, 2006

VXI Technology, Inc.
2031 Main St.
Irvine, CA 92614
(949) 955-1894





TABLE OF CONTENTS

INTRODUCTION

Certification	5
Warranty	5
Limitation of Warranty	5
Restricted Rights Legend	5
DECLARATION OF CONFORMITY	6
GENERAL SAFETY INSTRUCTIONS.....	6
Terms and Symbols.....	7
Warnings	7
SUPPORT RESOURCES	9
SECTION 1.....	11
INTRODUCTION	11
Overview	11
Programming.....	13
Automatic Scanning	13
Programmable Timing Delays.....	13
Safety Interrupt.....	13
Break-Before-Make / Make-Before-Break Operation.....	13
SECTION 2.....	17
PREPARATION FOR USE.....	17
Introduction.....	17
Calculating System Power and Cooling Requirements.....	17
Setting the Chassis Backplane Jumpers	17
Setting the Logical Address	18
Selecting the Extended Memory Space.....	19
SECTION 3.....	21
PROGRAMMING.....	21
Register Access	21
Addressing	21
Description of Registers - A16.....	23
Description of SMIP II Module Registers - A24 / A32 - Extended Memory	32
DEVICE MEMORY MAP.....	35
Module Relay Control Address.....	35
Relay Register Offset	35
Writing to the Relays	35
Programming.....	36
SECTION 4.....	37
SWITCH CONFIGURATION	37
Front Panel Connection - SM7000N.....	37
Switch Replacement.....	44
Procedure.....	44
PASS-THROUGH ADAPTERS	46
Introduction.....	46
Pass-Through Adapters - Connection Examples.....	48
INDEX.....	51

CERTIFICATION

VXI Technology, Inc. (VTI) certifies that this product met its published specifications at the time of shipment from the factory. VTI further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

The product module base SM7000N referred to herein is warranted against defects in material and workmanship for a period of three years from the receipt date of the product at customer's facility. The same warranty applies to the switch options (SM72XXN) for a period of one year. The sole and exclusive remedy for breach of any warranty concerning these goods shall be repair or replacement of defective parts, or a refund of the purchase price, to be determined at the option of VTI.

For warranty service or repair, this product must be returned to a VXI Technology authorized service center. The product shall be shipped prepaid to VTI and VTI shall prepay all returns of the product to the buyer. However, the buyer shall pay all shipping charges, duties, and taxes for products returned to VTI from another country.

VTI warrants that its software and firmware designated by VTI for use with a product will execute its programming when properly installed on that product. VTI does not however warrant that the operation of the product, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The warranty shall not apply to defects resulting from improper or inadequate maintenance by the buyer, buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside the environmental specifications for the product, or improper site preparation or maintenance.

VXI Technology, Inc. shall not be liable for injury to property other than the goods themselves. Other than the limited warranty stated above, VXI Technology, Inc. makes no other warranties, express, or implied, with respect to the quality of product beyond the description of the goods on the face of the contract. VTI specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

RESTRICTED RIGHTS LEGEND

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software clause in DFARS 252.227-7013.

VXI Technology, Inc.
2031 Main St.
Irvine, CA 92614 U.S.A.

DECLARATION OF CONFORMITY

Declaration of Conformity According to ISO/IEC Guide 22 and EN 45014

MANUFACTURER'S NAME	VXI Technology, Inc.
MANUFACTURER'S ADDRESS	2031 Main St. Irvine, California 92614
PRODUCT NAME	Single Wide, Microwave Switch Base Module
MODEL NUMBER(S)	SM7000N
PRODUCT OPTIONS	All
PRODUCT CONFIGURATIONS	All

VXI Technology, Inc. declares that the aforementioned product conforms to the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/366/EEC (inclusive 93/68/EEC) and carries the "CE" mark accordingly. The product has been designed and manufactured according to the following specifications:

SAFETY	EN61010 (2001)
EMC	EN61326 (1997 w/A1:98) Class A CISPR 22 (1997) Class A VCCI (April 2000) Class A ICES-003 Class A (ANSI C63.4 1992) AS/NZS 3548 (w/A1 & A2:97) Class A FCC Part 15 Subpart B Class A EN 61010-1:2001

The product was installed into a C-size VXI mainframe chassis and tested in a typical configuration.

I hereby declare that the aforementioned product has been designed to be in compliance with the relevant sections of the specifications listed above as well as complying with all essential requirements of the Low Voltage Directive.

February 2006



Steve Mauga, QA Manager

GENERAL SAFETY INSTRUCTIONS

Review the following safety precautions to avoid bodily injury and/or damage to the product. These precautions must be observed during all phases of operation or service of this product. Failure to comply with these precautions, or with specific warnings elsewhere in this manual, violates safety standards of design, manufacture, and intended use of the product.

Service should only be performed by qualified personnel.

TERMS AND SYMBOLS

These terms may appear in this manual:


WARNING Indicates that a procedure or condition may cause bodily injury or death.

CAUTION Indicates that a procedure or condition could possibly cause damage to equipment or loss of data.

These symbols may appear on the product:



ATTENTION - Important safety instructions



Frame or chassis ground



Indicates that the product was manufactured after August 13, 2005. This mark is placed in accordance with *EN 50419, Marking of electrical and electronic equipment in accordance with Article 11(2) of Directive 2002/96/EC (WEEE)*. End-of-life product can be returned to VTI by obtaining an RMA number. Fees for take-back and recycling will apply if not prohibited by national law.

WARNINGS

Follow these precautions to avoid injury or damage to the product:

Use Proper Power Cord To avoid hazard, only use the power cord specified for this product.

Use Proper Power Source To avoid electrical overload, electric shock, or fire hazard, do not use a power source that applies other than the specified voltage.

Use Proper Fuse To avoid fire hazard, only use the type and rating fuse specified for this product.

WARNINGS (CONT.)**Avoid Electric Shock**

To avoid electric shock or fire hazard, do not operate this product with the covers removed. Do not connect or disconnect any cable, probes, test leads, etc. while they are connected to a voltage source. Remove all power and unplug unit before performing any service. ***Service should only be performed by qualified personnel.***

Ground the Product

This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground.

Operating Conditions

To avoid injury, electric shock or fire hazard:

- Do not operate in wet or damp conditions.
- Do not operate in an explosive atmosphere.
- Operate or store only in specified temperature range.
- Provide proper clearance for product ventilation to prevent overheating.
- DO NOT operate if you suspect there is any damage to this product. ***Product should be inspected or serviced only by qualified personnel.***

Improper Use

The operator of this instrument is advised that if equipment is used in a manner not specified in this manual, the protection provided by this equipment may be impaired.

SUPPORT RESOURCES

Support resources for this product are available on the Internet and at VXI Technology customer support centers.

VXI Technology World Headquarters

VXI Technology, Inc.
2031 Main Street
Irvine, CA 92614-6509

Phone: (949) 955-1894
Fax: (949) 955-3041

VXI Technology Cleveland Instrument Division

5425 Warner Road
Suite 13
Valley View, OH 44125

Phone: (216) 447-8950
Fax: (216) 447-8951

VXI Technology Lake Stevens Instrument Division

VXI Technology, Inc.
1924 - 203 Bickford
Snohomish, WA 98290

Phone: (425) 212-2285
Fax: (425) 212-2289

Technical Support

Phone: (949) 955-1894
Fax: (949) 955-3041
E-mail: support@vxitech.com



Visit <http://www.vxitech.com> for worldwide support sites and service plan information.

SECTION 1

INTRODUCTION

OVERVIEW

The SM7000N Microwave Switch Module is a member of the VXI Technology SMIP II™ family, which offers a modular design allowing custom switching configurations.

The SM7000N is a single-wide, C-size VXI module, which can support up to six different microwave switches in any combination of SPDT through SP6T relays. Blanking plates cover any unused switch positions (see Figure 1-1).



FIGURE 1-1: SM7000N MICROWAVE SWITCH MODULE

Using the SMIP *II* family for microwave switching, the user obtains the following benefits over other VXI microwave switch solutions:

Density	Up to six (1 x 6) microwave relays can be housed in a single VXIbus slot.
Modularity	Each SM7000N switch module can house up to six switches, or “building blocks”, which can be mixed and matched for the final configuration. There are eight of these “building blocks” from which to chose.

The following table lists the different switch available in the SM7000N series.

SM7000N SERIES SWITCH OPTIONS	
MODEL DC – 18 GHz	Relay Type
SM7270N	Dual SPDT Non-latching
SM7272N	SP4T Non-latching
SM7274N	SP6T Non-latching
SM7275N	Mini Transfer Switch
SM7276N	Pass-Through Adapter
Model DC – 26.5 GHz	Relay Type
SM7282N	SP4T Non-latching
SM7284N	SP6T Non-latching

PROGRAMMING

The SMIP II family of switch modules is programmed using direct register access for fast data throughput.

Automatic Scanning

A predefined sequence of channels can be programmed into an extensive scan list that can be incremented by a trigger. This approach relieves the host controller from having to tie up the VXIbus backplane when scanning.

Programmable Timing Delays

A delay can be programmed between relay closures to allow for settling times of other system resources. When used with triggers, a controlled synchronous switching system can easily be configured.

Safety Interrupt

This is a programmable fail-safe feature that allows all relays to open based upon the occurrence of a selected TTL backplane trigger. This allows signals to be removed from the unit under test if a system fail-safe occurs, such as inadvertent removal of a test adapter.

Break-Before-Make / Make-Before-Break Operation

This feature allows automatic Break-Before-Make (BBM) and Make-Before-Break (MBB) operations. It is programmed simply by setting user configurable options. In BBM operation, all opening relays are guaranteed to open prior to any closing relays being set. The relay open or close time is user configurable as well. In MBB operation, the closing relays are guaranteed to be set prior to the opening relays being opened.

TABLE 1-1: SM7000N SPECIFICATIONS

SM7000N SPECIFICATIONS					
RF PERFORMANCE					
Frequency (GHz)	DC – 3	3 – 8	8 – 12.4	12.4 – 18	18 – 26.5
VSWR	1.15:1	1.25:1	1.35:1	1.45:1	1.9:1
Insertion Loss (dB max)	0.15	0.25	0.35	0.45	0.8
Isolation (dB min)	85	75	65	65	45
ADDITIONAL SPECIFICATIONS					
RF Impedance	50 Ω nominal				
Actuating Voltage	24 VDC				
Actuating Current	Normally open: 350 mA (maximum)				
Switching Time	15 ms (maximum)				
Switching Sequence	Break-Before-Make				
Operating Ambient Temperature	-35°C to +70°C				
Operating Life	One million cycles per position				


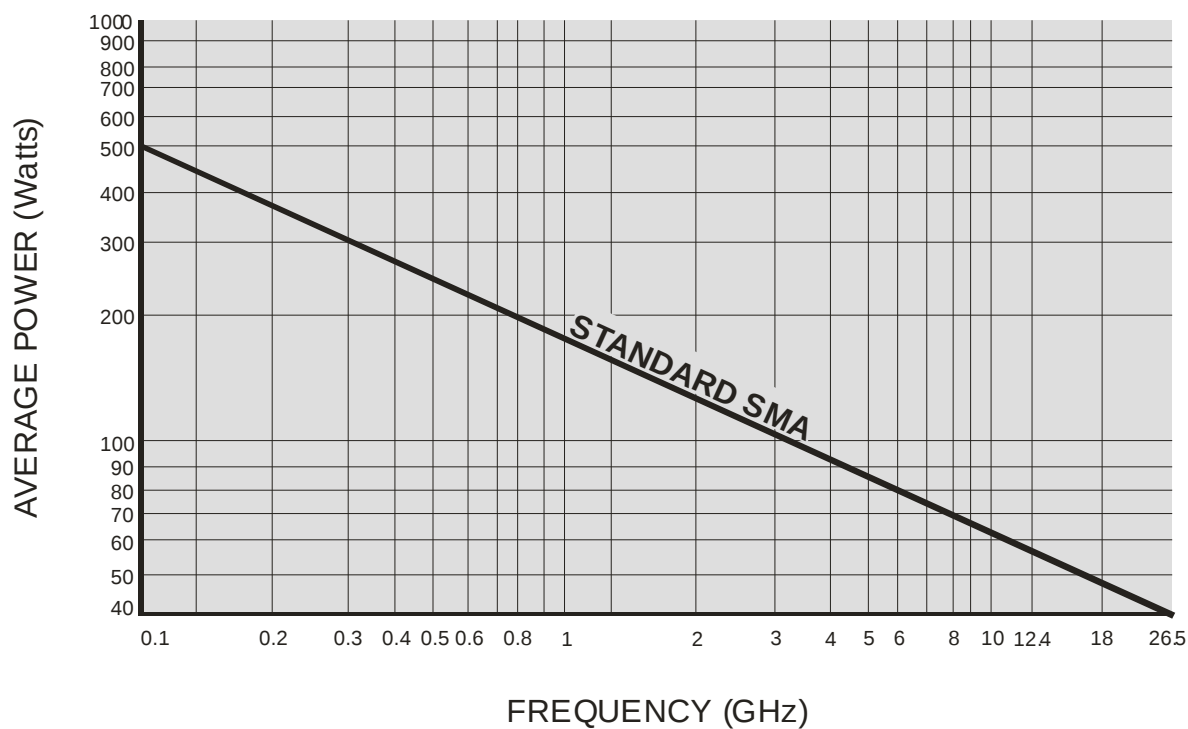
TABLE 1-2: POWER VS. FREQUENCY GRAPH FOR SWITCHES

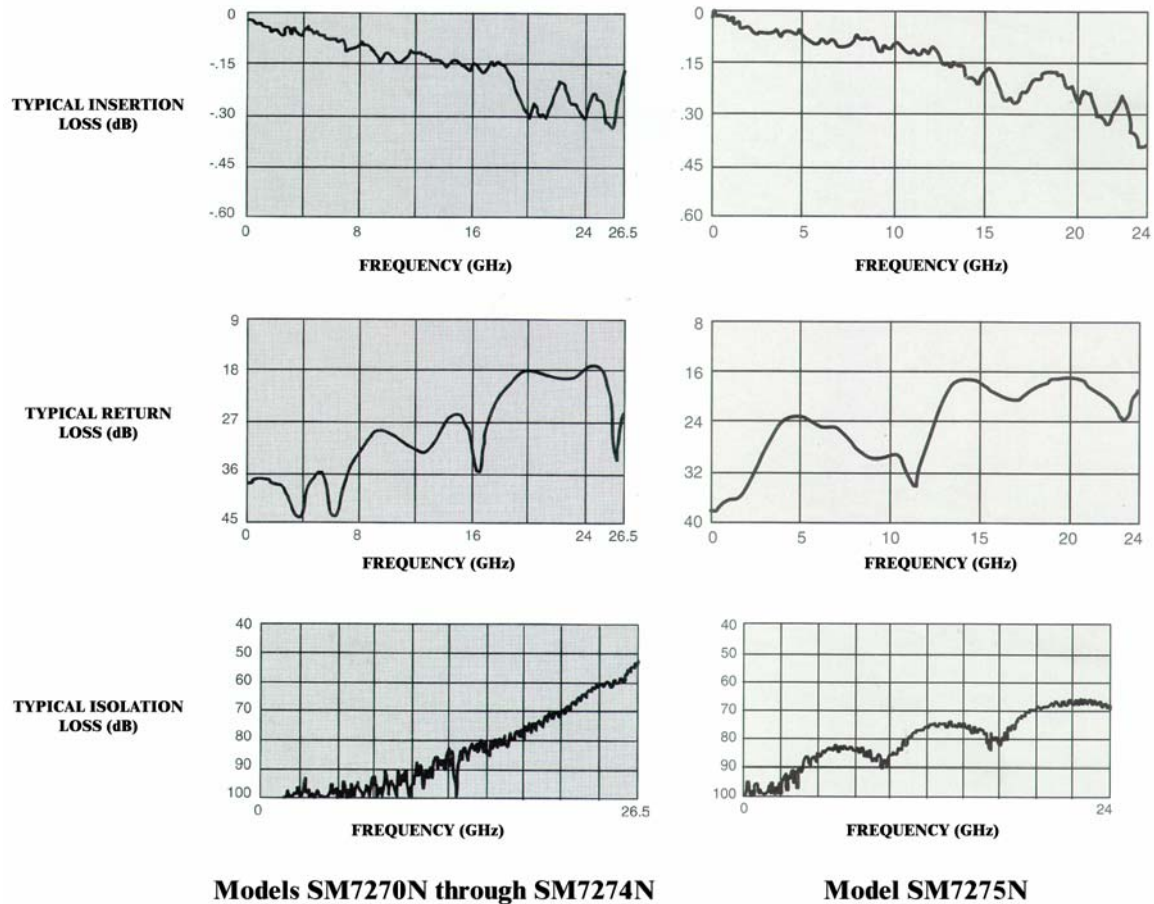TABLE 1-3: INSERTION, ISOLATION & RETURN LOSS GRAPHS FOR SWITCHES



SECTION 2

PREPARATION FOR USE

INTRODUCTION

When the SMIP *II* is unpacked from its shipping carton, the contents should include the following items:

- (1) SMIP *II* VXIbus module
- (1) SM7000N Series Microwave Switch User's Manual (this manual)

All components should be immediately inspected for damage upon receipt of the unit.

Once the SMIP *II* is assessed to be in good condition, it may be installed into an appropriate C-size or D-size VXIbus chassis in any slot other than slot zero. The chassis should be checked to ensure that it is capable of providing adequate power and cooling for the SMIP *II*. Once the chassis is found adequate, the SMIP's logical address and the chassis' backplane jumpers should be configured prior to the SMIP's installation.

CALCULATING SYSTEM POWER AND COOLING REQUIREMENTS

It is imperative that the chassis provide adequate power and cooling for this module. Referring to the chassis operation manual, confirm that the power budget for the system (the chassis and all modules installed therein) is not exceeded and that the cooling system can provide adequate airflow at the specified backpressure.



It should be noted that if the chassis cannot provide adequate power to the module, the instrument may not perform to specification or possibly not operate at all. In addition, if adequate cooling is not provided, the reliability of the instrument will be jeopardized and permanent damage may occur. Damage found to have occurred due to inadequate cooling would also void the warranty of the module.

SETTING THE CHASSIS BACKPLANE JUMPERS

Please refer to the chassis operation manual for further details on setting the backplane jumpers.


SETTING THE LOGICAL ADDRESS

The logical address of the SMIP II is set by two rotary switches located on the top edge of the interface card, near the backplane connectors. Each switch is labeled with positions 0 through F. The switch closer to the front panel of the module is the least significant bit (**LSB** or “**Front**”), and the switch located towards the back of the module is the most significant bit (**MSB** or “**Back**”). To set the Logical Address (LA), simply rotate the pointer to the desired value. For example, to set the **LA** to **25**, first convert the decimal number to the hexadecimal value of **19**. Next, set the back switch to **1**, and the front switch to **9**. See Figure 2-1. Two examples are provided below:

Example 1

LA (decimal)	Divide by 16	MSB	LSB	
25	25 / 16	= 1	w/ 9 remaining	Divide the decimal value by 16 to get the MSB and the LSB.
		= 0001	1001	The 1 is the MSB, and the remainder of 9 is the LSB.
		= 1	9	Convert to hexadecimal. Set the back switch to 1 and the front switch to 9.

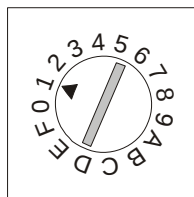BACK



FRONT

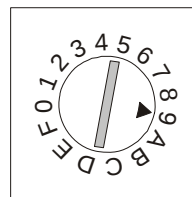
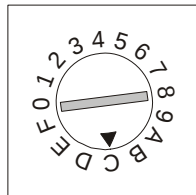
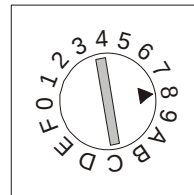


FIGURE 2-1: LOGICAL ADDRESS EXAMPLE 1

Example 2

LA (decimal)	Divide by 16	MSB	LSB	
200	200 / 16 =	12	w/ 8 remaining	Divide by 16.
	=	1100	1000	Convert to MSB and LSB.
	=	C	8	Convert to hexadecimal. Set the back switch to C and the front switch to 8.

BACK**FRONT****FIGURE 2-2: LOGICAL ADDRESS EXAMPLE 2**

Here is another way of looking at the conversion:

$$\begin{aligned} \text{LA} &= (\text{back switch} \times 16) + \text{front switch} \\ \text{LA} &= (1 \times 16) + 9 \\ \text{LA} &= 16 + 9 \\ \text{LA} &= 25 \end{aligned}$$

Set the address switches to **FF** for dynamic configuration. Upon power-up, the resource manager will assign a logical address. See Section F - Dynamic Configuration in the *VXibus Specification* for further information.

There is only one logical address per SMIP II base unit. Address assignments for individual modules are handled through the A24/A32 address space allocation.

SELECTING THE EXTENDED MEMORY SPACE

The Extended Memory Space of the SMIP II is set by a DIP switch that is located on the bottom edge of the interface card. Position 1, located to the left on the DIP switch, selects between A24 and A32 memory address space. In the UP position, the SMIP II will request A24 space. In the DOWN position, the SMIP II will request A32 space. (Position 2 is not currently used.) The selection of the address space should be based upon the memory allocation requirements of the system that the SMIP II module will be installed. The amount of memory allocated to the SMIP II module is independent of the address space selected.

SECTION 3

PROGRAMMING

REGISTER ACCESS

The SMIP *II* modules are VXIbus register-based devices for high-speed data retrieval. Register-based programming is a series of **reads** and **writes** directly to the switch module registers. This eliminates the time for command parsing thus increasing speed.

ADDRESSING

The VTI switching modules utilize either the A24 or A32 space of the shared-memory architecture. To read or write to a module register, a register address needs to be specified. This is done by using the offset value (assigned by the resource manager) and multiplying it by 256 or 64k to get the base address in A24 or A32 address space, respectively

$$\text{A24 Base Address} = \text{Offset value} * 0x00FF \text{ (or 256)}$$

$$\text{A32 Base Address} = \text{Offset value} * 0xFFFF \text{ (or 65,535)}$$

The A24 or A32 offset value, assigned by the resource manager, can also be accessed by reading the A16 Offset Register. To address the A16 Offset Register use the following formula:

$$\text{A16 Base Address} = (\text{Logical Address} * 64) + 0xC000 \text{ (or 49,152)}$$

then

$$\text{A16 Offset Register Address} = \text{A16 Base Address} + 6$$

See following for the A16 Memory Map and the A24/A32 address space allocation.

TABLE 3-1: SMIP II™ REGISTER MAP - A16

OFFSET	WRITE FUNCTION	READ FUNCTION
0x3E	Trace Advance	Board Busy
0x3C	Busy Trigger Control	Busy Trigger Control
0x3A	Trace RAM Control	Trace RAM Control
0x38	TTL Trigger Polarity	Reserved
0x36	Open Trigger Select	Reserved
0x34	Trace ADV Trigger Select	Reserved
0x32	Trace RAM Address LOW	Trace RAM Address LOW
0x30	Trace RAM Address HIGH	Trace RAM Address HIGH
0x2E	Trace RAM End LOW	Trace RAM End LOW
0x2C	Trace RAM End HIGH	Trace RAM End HIGH
0x2A	Trace RAM Start LOW	Trace RAM Start LOW
0x28	Trace RAM Start HIGH	Trace RAM Start HIGH
0x26	Module 5, 4 Used Address	Reserved
0x24	Module 3, 2 Used Address	Reserved
0x22	Module 1, 0 Used Address	Reserved
0x20	NVM Access Register	NVM Access Register
0x1E	Reserved	Subclass Register
0x1C	Interrupt Control	Interrupt Control
0x1A	Reserved	Interrupt Status
0x18	Reserved	Reserved
0x16	Reserved	Reserved
0x14	Reserved	Reserved
0x12	Reserved	Reserved
0x10	Reserved	Reserved
0x0E	Reserved	Version Number
0x0C	Reserved	Serial Number LOW
0x0A	Reserved	Serial Number HIGH
0x08	Reserved	Reserved
0x06	Offset Register	Offset Register
0x04	Control Register	Status Register
0x02	Reserved	Device Type Register
0x00	LA Register	ID Register

NOTE As members of the SMIP II series, the **SM7000N Series** microwave modules allocate for six (6) module boards, but only implement Module 0. Modules 1 - 5 are unused.

DESCRIPTION OF REGISTERS - A16

The following describes the registers shown in the SMIP *II* Register Map for A16 address space.

ID Register (0x00) — Read Only		
D11-D0	Manufacturer's ID	VXI Technology, Inc., set to F4B ₁₆
D13-D12	Address Space	A16/A24 = 00 ₂ A16/A32 = 01 ₂
D15-D14	Device Class	Extended register based device, set to 01 ₂

Logical Address Register (0x00) — Write Only		
D7-D0	Logical Address	Sets the new logical address in a dynamically configured module. When set for dynamic configuration (set to FF ₁₆) a soft reset will not alter the configured logical address, while a hard reset will set the register back to FF ₁₆ .
D15-D8	Reserved	Writing to this range has no effect.

Device Type Register (0x02) — Read Only		
D11-D0	Model Code	Model 277, set to 115 ₁₆
D15-D12	Required Memory	2 Mbytes, set to 2 ₁₆ , for A24 2 Mbytes, set to A ₁₆ , for A32

Status Register (0x04) — Read Only		
D15	A24/A32 Active	1 = indicates that A24/A32 memory space access is enabled 0 = indicates that A24/A32 memory space access is locked out
D14	MODID*	1 = indicates that the module is not selected by the MODID line 0 = indicates that the module is selected by the MODID line.
D13-D4	Reserved	These bits always read as 11,1111,1111 ₂
D3	Ready	This bit always reads as 1 ₂
D2	Passed	This bit always reads as 1 ₂
D1-D0	Reserved	These bits always read as 11 ₂

Control Register (0x04) — Write Only		
D15	A24/A32 Enable	1 = write a 1 to this bit to enable A24/A32 memory access 0 = to disable access
D14-D2	Reserved	Writes to these bits have no effect.
D1	Sysfail Inhibit	Write a 1 to this bit to prevent the module from asserting the SYSFAIL* line.
D0	Reset	1 = write a 1 to this bit to force the module into a reset state 0 = write a 0 to release the reset state

Offset Register (0x06) — Read and Write		
D15-D0	A24/A32 Memory Offset	The value written to this 16-bit register, times 256, sets the base address of the A24 memory space used by the module. The value written to this 16-bit register, times 65,536, sets the base address of the A32 memory space used by the module. A read from this register reflects the previously written value. Because of the required memory size, bits D4 - D0 are disregarded on writes and always read back as 0. Upon receiving a hard reset, all bits in this register are set to 0. A soft reset does not affect the value in this register.

Reserved Register (0x0A) — Read Only		
D15-D0	Not Implemented	Always read back as FFFF ₁₆

Reserved Register (0x0C) — Read Only		
D15-D0	Not Implemented	Always read back as FFFF ₁₆

Version Number Register (0x0E) — Read Only		
D15-D8	Firmware Version Number	Not applicable, reads back as 00 ₁₆
D7-D4	Major Hardware Version Number	Depends on the specific hardware revision of the SMIP II interface board.
D3-D0	Minor Hardware Version Number	Depends on the specific hardware revision of the SMIP II interface board.

Interrupt Status Register (0x1A) — Read Only		
D15	Scan Function done	The latest scan list update is complete.
D14	Openbus Active Event true	The Openbus was activated by one or more programmed inputs. See description of the Openbus in the module register section.
D13-D8	Modules 0 - 5 Busy complete	D13 = Module 5, D12 = Module 4, ... and D8 = Module 0. The programmed Busy signal from one of the modules has timed out. This indicates that the relays actuated for that Busy cycle have settled and a measurement may take place.
D7-D0	Reserved	Always reads back as FFFF ₁₆
NOTE This status register may be used in a polled fashion rather than allowing the events above to generate an Interrupt. A read of this register will clear any active bits. Bits that are not set, or are about to be set are not affected by a read of this register.		

Interrupt Control Register (0x1C) — Read and Write		
D15	Scan Function done mask bit	0 = enabled 1 = disabled
D14	Openbus Active Event true mask bit	0 = enabled 1 = disabled
D13-D8	Module 0 - 5 Busy complete	0 = enabled 1 = disabled D13 = Module 5, D12 = Module 4, ... and D8 = Module 0.
D7	IR ENA*	0 = writing a 0 to this bit enables interrupter capabilities 1 = writing a 1 to this bit disables interrupter capabilities
D6	IH ENA*	The module has no interrupt handler capability; therefore writing a 1 or 0 has no effect. A 1 is always read back for this bit.
D5-D3	Interrupter IRQ Line	The complement of the value programmed into these three bits reflects the selected IRQ line used by the module. A value of 011 ₂ would select IRQ4, a value of 000 ₂ would select IRQ7, and a value of 111 ₂ would disconnect the IRQ lines.
D2-D0	Handler IRQ Line	The module has no interrupt handler capability; therefore writing to these bits has no effect. A 111 ₂ is always read back for these bits.
Note that all bits in this register are set to 1 upon receipt of a hard or soft reset.		

Subclass Register (0x1E) — Read Only		
D15	VXIbus Extended Device	Always reads as 1.
D14-D0	Extended Memory Device	Always reads as 7FFD ₁₆

NVM Access Resister (0x20) — Read Only		
D15-D1	Unused	All Bits are always 1.
D0		Reads back the serial data stream from the selected SMIP <i>II</i> board. Note that only one SMIP <i>II</i> board may be read back at a time.

NVM Access Resister (0x20) — Write Only		
D15-D7	Unused	Data written to these bits have no effect.
D6		Serial clock for module 5; should be a logic 1 when not used.
D5		Serial clock for module 4; should be a logic 1 when not used.
D4		Serial clock for module 3; should be a logic 1 when not used.
D3		Serial clock for module 2; should be a logic 1 when not used.
D2		Serial clock for module 1; should be a logic 1 when not used.
D1		Serial clock for module 0; should be a logic 1 when not used.
D0		Serial data input for all modules; must be a logic 1 when not used.

Board X, Y Used Address Register (0x22, 0x24, 0x26) — Read and Write		
D15-D8		Sets the actual number of words of address space used by the relays on board's X.
D7-D0		Sets the actual number of words of address space used by the relays on board's Y.

Trace RAM Start High Register (0x28) — Read and Write		
D15-D4	Unused	Data written to these bits have no effect and always read back as 1.
D3-D0		Sets the four most significant bits of the starting address of the Trace RAM, allowing the available RAM to be divided into multiple traces.

Trace RAM Start Low Register (0x2A) — Read and Write		
D15-D0		Sets the 16 least significant bits of the starting address of the Trace RAM, allowing the available RAM to be divided into multiple traces.

Trace RAM End High Register (0x2C) — Read and Write		
D15-D4	Unused	Data written to these bits have no effect and always read back as 1.
D3-D0		Sets the four most significant bits of the ending address of the Trace RAM, allowing the available RAM to be divided into multiple traces.

Trace RAM End Low Register (0x2E) — Read and Write		
D15-D0		Sets the 16 least significant bits of the ending address of the Trace RAM, allowing the available RAM to be divided into multiple traces.

Trace RAM Address HIGH Register (0x30) — Read and Write		
D15-D4	Unused	Data written to these bits have no effect and always read back as 1.
D3-D0		Sets and reads back the four most significant bits of the current address of the Trace RAM, allowing the current trace RAM address to be queried and changed.

Trace RAM Address LOW Register (0x32) — Read and Write		
D15-D0		Sets and reads back the sixteen least significant bits of the current address of the Trace RAM, allowing the current trace RAM address to be queried and changed.

Trace Advance Trigger Select Register (0x34) — Write Only		
D15-D8		Sets the TTLTRIG line or lines, which are configured as outputs, and will toggle when Trace Advance condition occurs in the module. D15 corresponds to TTLTRIG7, D14 to TTLTRIG6, ... and D8 to TTLTRIG0. Setting a bit to a 1 enables the trigger line, setting a bit to 0 disables the corresponding line. All bits are set to 0 when either a soft or a hard reset is received by the module.
D7-D0		Sets the TTLTRIG line or lines, which are configured as inputs, and will cause a Trace Advance event to occur in the module. D7 corresponds to TTLTRIG7, D6 to TTLTRIG6, ... and D0 to TTLTRIG0. Setting a bit to a 1 enables the trigger line, setting a bit to 0 disables the corresponding line. All enabled TTLTRIG lines are OR'd together to allow more than one TTLTRIG line to cause a Trace Advance event to occur. All bits are set to 0 when the module receives either a soft or a hard reset.

Open Trigger Select Register (0x36) —Write Only		
D15-D8		Sets the TTLTRIG line or lines, which are configured as outputs, and will toggle when Relay Open condition occurs in the module. D15 corresponds to TTLTRIG7, D14 to TTLTRIG6, ... and D8 to TTLTRIG0. Setting a bit to a 1 enables the trigger line, setting a bit to 0 disables the corresponding line. All bits are set to 0 when either a soft or a hard reset is received by the module.
D7-D0		Sets the TTLTRIG line or lines, which are configured as inputs, and will cause a Relay Open event to occur in the module. D7 corresponds to TTLTRIG7, D6 to TTLTRIG6, ... and D0 to TTLTRIG0. Setting a bit to a 1 enables the trigger line, setting a bit to 0 disables the corresponding line. All enabled TTLTRIG lines are OR'd together to allow more than one TTLTRIG line to cause a Relay Open event to occur. All bits are set to 0 when the module receives either a soft or a hard reset.

TTL Trigger Polarity Register (0x38) —Write Only		
D15-D14	Unused	Data written to these bits have no effect.
D13-D8	FAIL LED Control	D13 is for module 5, D12 is for module 4, ... D8 is for module 0. 0 = Off, 1 = On.
D4	Board Busy Trigger Slope	0 acts on the falling edge, 1 acts on the rising edge.
D3	Relay Open Input Slope	0 acts on the falling edge, 1 acts on the rising edge.
D2	Relay Open Output Slope	0 sets the falling edge active, 1 sets the rising edge active.
D1	Trace Advance Input Slope	0 advances on the falling edge, 1 advances on the rising edge.
D0	Trace Advance Output Slope	0 sets the falling edge active, 1 sets the rising edge active.
NOTE: A hard or a soft reset sets D3 - D0 to 0.		

Trace RAM Control Register (0x3A) — Read and Write		
D15-D10	Modules Installed	D15 is for module 5, D10 is for module 0. Set to 0 if the module is installed or set to a 1 if not installed. These bits are set to 0 at power on. By setting a 1, the SMIP II Interface PCB will generate DTACK for any read or write cycles to the memory space of the uninstalled plug-in modules.
D9-D4	Modules used in trace mode	D9 is for module 5, D4 is for module 0. Set to 1 if the module is used in trace mode, set to 0 if not in trace mode.
D3-D2	Unused	Data written to these bits have no effect. The value written is read back.
D1	LOOP ENABLE	1 = Enabled, 0 = Disabled. If enabled, the trace resumes at the start of active RAM and continues from there. If disabled, the trace stops at the end of active RAM and clears the TRACE ENABLE bit.
D0	TRACE ENABLE	1 = enabled, 0 = disabled. If the LOOP ENABLE bit is set and the end of active trace RAM is reached, this bit will not be reset.

Busy Trigger Control Register (0x3C) — Read and Write		
D15-D8	TTLTRIG Select	Sets the TTLTRIG Line or Lines, which are configured as outputs, and will toggle at the de-assertion of a Board Busy condition sent by the plug-in modules. D15 corresponds to TTLTRIG7, D14 to TTLTRIG6, ... and D8 to TTLTRIG0. Setting a bit to a 1 enables the trigger line, setting a bit to a 0 disables the corresponding line. All bits are set to 0 when either a soft or a hard reset is received by the module.
D7-D6	Unused	Data written to these bits have no effect. The value written is read back.
D5-D0	Busy Trigger Enable	Enables the Board Busy signals received from the plug-in modules to generate a trigger condition on the TTL Trigger Bus. D5 corresponds to Board Busy Module 5, D4 to Board Busy Module 4, ... and D0 to Board Busy Module 0. Setting a bit to a 1 enables the generation of a Trigger condition; setting a bit to a 0 disables the corresponding line. All bits are set to 0 when either a soft or a hard reset is received by the module. Software can be written to enable the last board updated to generate the TTLTrigger condition, alerting any other instruments that the plug-in modules' relays have settled. Alternatively, all of the plug-in modules may be enabled to generate the TTLTrigger condition.

Trigger Advance Register (0x3E) — Write Only		
D15-D0	Unused	The act of writing to this location causes a Trace Advance event to occur in the module. The specific data written to these bits has no effect.

Board Busy Register (0x3E) — Read Only		
D15-D7	Unused	These bits always read back as 1.
D6		Indicates whether the SMIP II platform is a single or double wide. 0 = single wide 1 = double wide
D5		A 0 read from this bit indicates the relays on module 5 have settled, a 1 indicates that the relays on module 5 are still changing state.
D4		A 0 read from this bit indicates the relays on module 4 have settled, a 1 indicates that the relays on module 4 are still changing state.
D3		A 0 read from this bit indicates the relays on module 3 have settled, a 1 indicates that the relays on module 3 are still changing state.
D2		A 0 read from this bit indicates the relays on module 2 have settled, a 1 indicates that the relays on module 2 are still changing state.
D1		A 0 read from this bit indicates the relays on module 1 have settled, a 1 indicates that the relays on module 1 are still changing state.
D0		A 0 read from this bit indicates the relays on module 0 have settled, a 1 indicates that the relays on module 0 are still changing state.

Reserved Registers — Read and Write		
D15-D0	Unused	Writing to these registers has no effect and will always read back as FFFF ₁₆ .

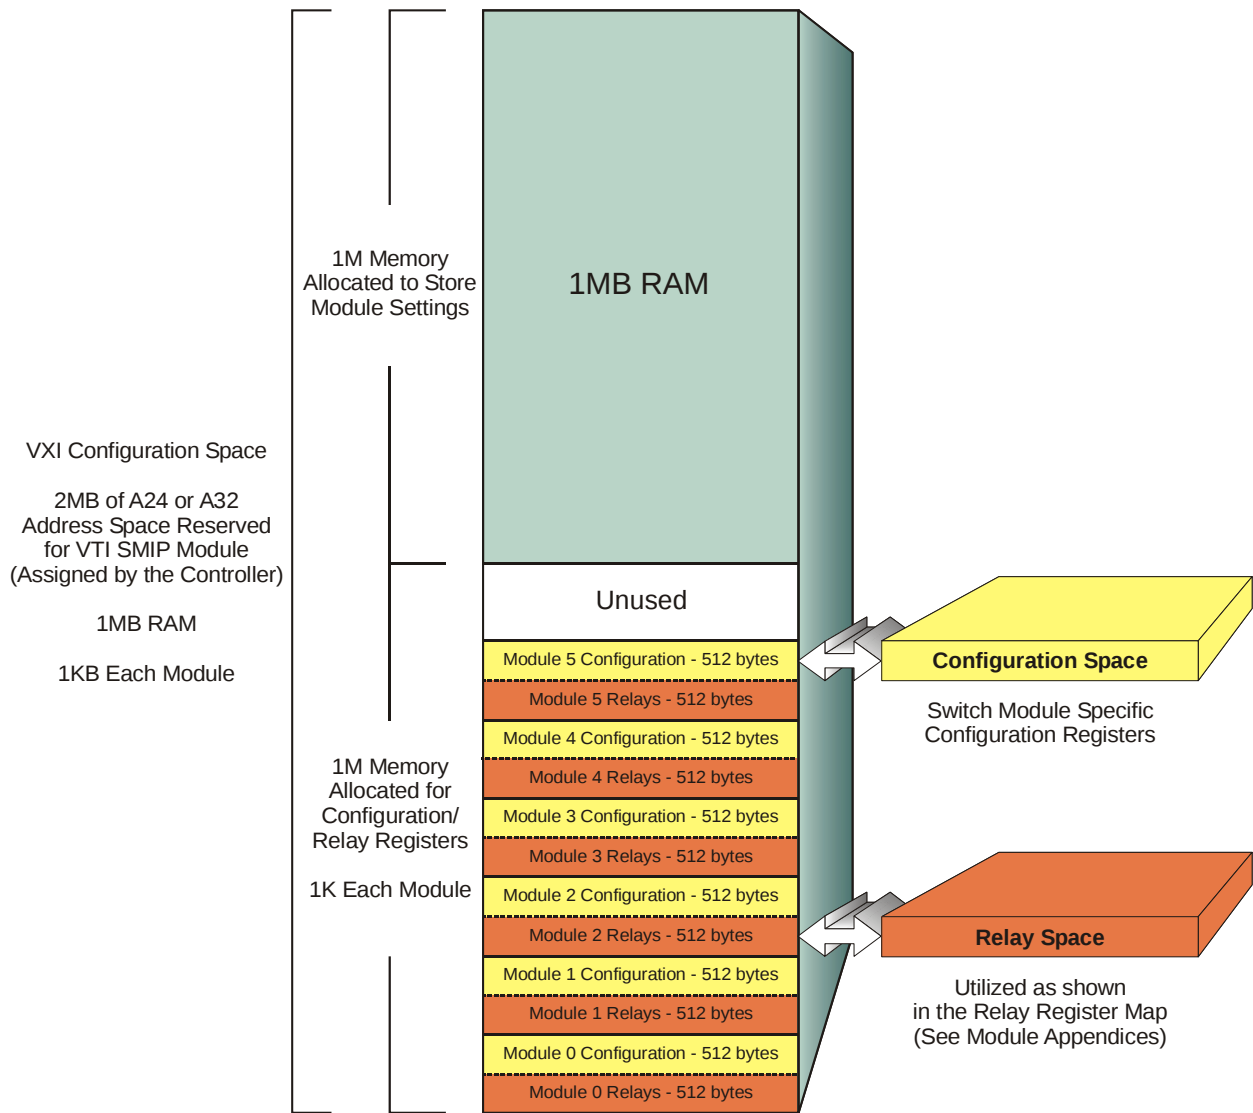


FIGURE 3-1: A24/A32 ADDRESS SPACE

NOTE As members of the SMIP II series, the **SM7000 Series** microwave switch modules allocate for six (6) module boards, but only implement Module 0. Modules 1 - 5 are unused.

DESCRIPTION OF SMIP II MODULE REGISTERS - A24 / A32 - EXTENDED MEMORY

Each module is assigned 1k (1024) bytes of memory as shown in the SMIP II Configuration/Relay Register Map for A24/A32 address space. The upper 512 bytes of memory space is used for module configuration registers. The following describes these registers.

Control Register — Read and Write		
ADDR	Plug-In LA+0x200	
D15-D10	Unused	
D9	Relay Data Read Back Polarity Bit	0 = Normal polarity relay data is read back from this module 1 = Inverted polarity relay data is read back from this module Pon state = 0 This bit may be used to invert the relay data read back from the plug-in module. Control, Delay, and Status Register read backs are not effected by this bit.
D8	ACFAILN Enable Bit	0 = ACFAILN is enabled to reset this module's relays 1 = ACFAILN is disabled from resetting this module's relays Pon state = 0
D7	BBM/MBB Enable Bit	0 = BBM (Break-Before-Make) / MBB (Make-Before-Break) operation on this plug-in module is disabled 1 = BBM/MBB operation on this plug-in module is enabled Pon state = 0 If this bit is set, the relays on this module will be sequenced to effect proper BBM or MBB operation. If this bit is not set, the plug-in module will process the newly written relay data as immediate data, writing it directly to the relay driver ports. No BBM or MBB sequencing will take place. While this feature is enabled, the initial write to the module will start the delay timer running and begin the BBM or MBB operation. Since the relays are controlled by the 16-bit registers, only the effected 16 relays will perform the BBM/MBB operation. To overcome this fact, any subsequent writes to the module, during the initial delay timer time-out period, will be accepted and processed. In addition, the delay time will be reset and begin counting down again. Once the delay timer has timed-out (this indicates that the relays have settled into their BBM/MBB state), writes to the module will not be accepted and may result in a Bus Error depending on the value programmed into the delay timer. This is because the delay timer is reset at the end of the initial time-out and is used to time the final relay closure into their post BBM/MBB state. The module Busy signal will only complete once the final relay closure state is reached. If this bit is set and no value has been loaded into the Delay Register, the plug-in module will act as if this enable bit is not set and load all of the relay drivers with immediate data.
D6	BBM/MBB Select Bit	0 = BBM operation on this plug-in module is selected 1 = MBB operation on this plug-in module is selected Pon state = 0
D5	Access LED Fail Bit	0 = Inactive 1 = Active Pon state = 0 Lights the Access LED red when activated.

Control Register — Read and Write (Continued)		
D4	Relay Reset Enable Bit	0 = The Openbus and Front Panel Open signals are not enabled to reset this module's relays 1 = The Openbus or Front Panel Open signal may be selected to reset this module's relays Pon state = 0
D3	Relay Reset Select Bit	0 = Front Panel Open signal is selected to reset this module's relays 1 = The Openbus signal is selected to reset this module's relays Pon state = 0 Many plug-in modules may be programmed to be listeners on the Openbus.
D2	Openbus Out Enable Bit	0 = Disables this module's Front Panel Open signal from driving the Openbus signal 1 = Enables this module's Front Panel Open signal to drive the Openbus Pon state = 0 Many plug-in modules may be programmed to be talkers on the Openbus.
D1	Front Panel Open Signal Polarity Bit	0 = Non-inverted Front Panel Open signal polarity 1 = Inverted Front Panel Open signal polarity Pon state = 0 Non-inverted: If set in pulse mode, the Front Panel Open signal will generate a reset pulse on a falling edge. If set in level mode, the Front Panel Open signal will generate a reset signal on a low input signal. Inverted: If set in pulse mode, the Front Panel Open signal will generate a reset pulse on a rising edge. If set in level mode, the Front Panel Open signal will generate a reset signal on a high input signal.
D0	Front Panel Open Signal Operation Select Bit	0 = Pulse mode 1 = Level mode Pon state = 0 Pulse mode: An edge seen at the Front Panel Open signal pin will generate a reset pulse that may be used to reset system relays. The pulse is of approximately 300 ns duration. Level mode: A level present on the Front Panel Open signal pin will generate a reset signal that may be used to reset system relays. This signal will remain active as long as the input is active. On the front panel of most SMIP II plug-in modules, there are two pins for access to the module's Front Panel Open signal. These are the Front Panel Open signal pin and a ground reference pin. The purpose of the Front Panel Open signal is to allow user access to a configurable interlock feature that will reset all of the SMIP II system relays. The Front Panel Open signal may be used to reset the relays only on the module, which initiated the Front Panel Open signal fault condition. It also may be used to broadcast to all the other SMIP II plug-in modules installed in a SMIP II Interface Module via what is called the Openbus. Any plug-in module may be programmed to drive and/or listen to the Openbus. The Openbus signal may also be used to generate a wider chassis level fault signal via the TTL Trigger Bus (see the register definitions for A16 address space). The Front Panel Open signal is meant to be driven by either a switch closure or TTL/CMOS logic gate. It is pulled high on the module.

Delay Register — Read and Write		
ADDR	Plug-In LA+0x202	
D15-D0	Data Bus 16 Bit	This register is used to set the time that the plug-in module will hold the Board Busy signal active. The Board Busy signal is set every time the plug-in receives a Write to a relevant Relay Register memory space. The Board Busy signal will be removed at the end of the time out that is set by the value contained in this register. For each count loaded into this register, the Board Busy signal will be held active for 1 μs. The delay may be set from 0 to approximately 65 ms, thus accommodating a wide variation in test station requirements. The Board Busy signal may be monitored by the user, in either a polled or an interrupt fashion, and is to be used as an indication that the relays in the newly actuated path have settled. Alternatively, the Board Busy signal may also be used to drive the TTL Trigger Bus. See the Board Busy, Interrupt Control and Busy Trigger Control Register descriptions in the A16 address space.

Status Register — Read Only		
ADDR	Plug-In LA+0x204	
D15-D13	Hardware Revision Code	
D12-D1	Unused	Reserved for future use.
D0	Front Panel Open signal set by this module	0 = Indicates that this module's Front Panel Open signal was not activated by the user 1 = An indication that this module's Front Panel Open signal was activated as programmed by the user Pon state = 0 A read of this bit location will indicate whether the Front Panel Open signal was triggered from this plug-in module's front panel. In the event that multiple talkers have been programmed to drive the Openbus signal, this bit may be queried by the user to discover which module's Front Panel Open signal caused the Openbus Active Event to occur. A read of this register clears this bit to 0.

DEVICE MEMORY MAP

MODULE RELAY CONTROL ADDRESS

Each module is assigned 1k (1024) bytes of memory as shown in the SMIP II Configuration/Relay Register Map for A24/A32 address space. The lower 512 bytes of each module's memory is used for relay control. Each module is assigned its own base address. These base addresses are in 1K increments as follows:

Module 0 (J100) Base Address = H0000
 Module 1 (J101) Base Address = H0400
 Module 2 (J102) Base Address = H0800
 Module 3 (J103) Base Address = H0C00
 Module 4 (J104) Base Address = H1000
 Module 5 (J105) Base Address = H1400

NOTE The **SM7000N** microwave module, being a member of the SMIP II series, allocates for six (6) module boards, but only implements Module 0. Modules 1 - 5 are unused.

The Module Base Address is then added to the A24/A32 Base Address to access a specific module's relays:

$$\text{Module Relay Address} = \text{A24/A32 Base Address} + \text{Module Base Address}$$

RELAY REGISTER OFFSET

The Relay Register Offset is located within the module's A24/32 address space. When you send data to the register, the relay register offset is added to the A24/A32 base address and module base address:

$$\text{Relay Register Address} = \text{A24/A32 Base Address} + \text{Module Base Address} + \text{Register Offset}$$

or

$$\text{Relay Register Address} = \text{Module Relay Address} + \text{Register Offset}$$

WRITING TO THE RELAYS

Each bit of a 16-bit register represents the state of the relay (1 = closed, 0 = open). To change the state of any relay, it is only necessary to write a 16-bit integer to the specified register with the new configuration:

Relay Register Address, **data**

For example:

- writing a data value of "0" to the register at offset "0" would open the first sixteen relays
- writing a data value of 65535 to the same register would close the first 16 relays
- writing a data value of 65534 to the same register would close all relays except K1, which would be open

PROGRAMMING

With the introduction of VISA, sending a command to a register-based device is as simple as sending a command to a message-based device. Whether the application is graphical or standard, sending commands to the register-based device is just as intuitive. The VISA template for transferring data to a register-based device, utilizing A32 extended memory space, is as follows:

```
viOut16 (Handle, VI_A32_SPACE, Offset, Data)
```

Handle is passed by reference whenever a VISA session to a particular device is opened.

VI_A32_SPACE is defined in the VISA header file. (VI_A16_SPACE and VI_A24_SPACE are also valid.)

Offset is determined from the memory map and is in decimal format.

Data is a 16-bit signed integer value representing the state of the relays.

The following example is for a SM5001, 80 channel SPST relay card utilizing A32 extended memory space. To close relays K1, K33 and K48 while leaving the other relays open, the following commands would be sent:

```
viOut16 (Handle, VI_A32_SPACE, 0, 1)           'closes relay 1
viOut16 (Handle, VI_A32_SPACE, 4, 32769)       'closes relay 33 and 48
```

VISA is the software architecture standard instituted by the *VXIplug&play* Alliance and is at a very high level of communication to a VXIbus device. The same philosophy and simplicity applies if the instrument is being programmed via lower level commands of an API (Application Programmer's Interface).

The individual device Relay Register Maps can be found in Section 1.

SECTION 4

SWITCH CONFIGURATION

FRONT PANEL CONNECTION - SM7000N

As part of the SMIP II family of instruments, the SM7000N can hold a combination of switch options. The following pages list the SM7000N and the switch option relay and connector information. Instructions for replacing non-operational switches are also included in this section.

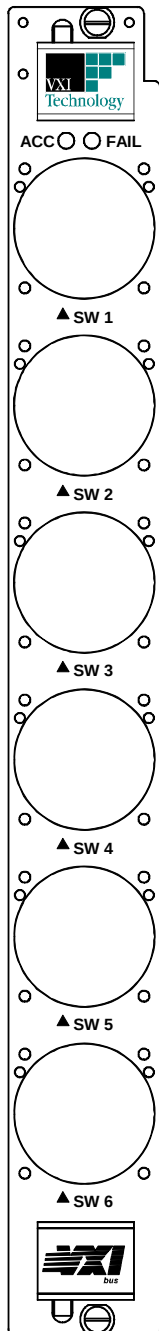


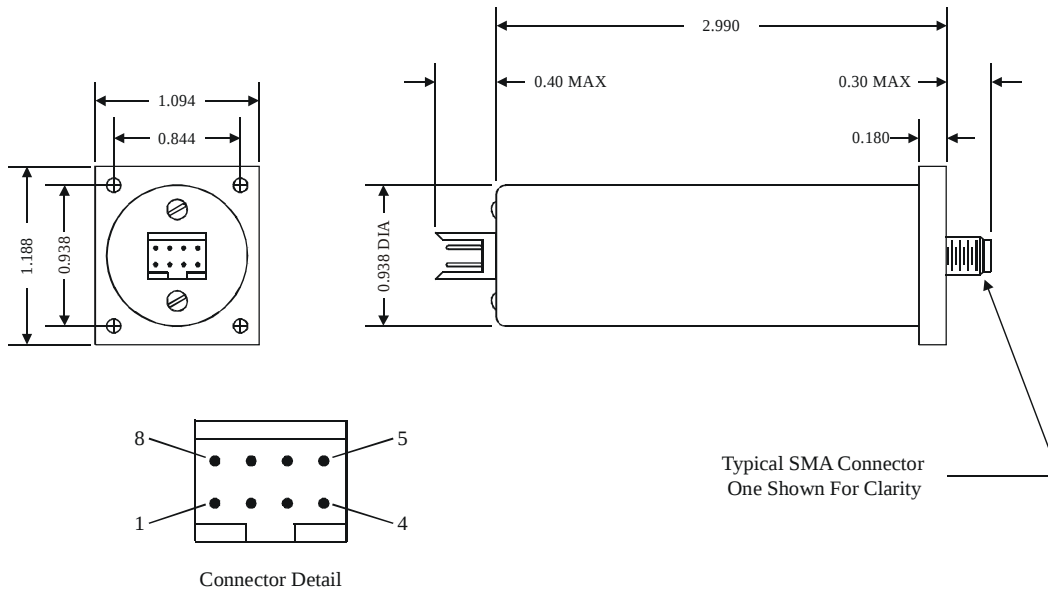
FIGURE 4-1: SM7000N FRONT PANEL

TABLE 4-1: SM7000N RELAY IDENTIFICATION TABLE

Model DC - 18 GHz	Relay Type	ID3	ID2	ID1	ID0	VTI Part No.
SM7270N	Dual SPDT Non-Latching	OPEN	OPEN	COM	OPEN	70-0146-000
SM7272N	SP4T Non-Latching	OPEN	COM	OPEN	OPEN	70-0146-002
SM7274N	SP6T Non-Latching	OPEN	COM	COM	OPEN	70-0146-004
SM7275N	Mini Transfer Switch	OPEN	COM	COM	COM	70-0146-005

Model DC – 26.5 GHz	Relay Type	ID3	ID2	ID1	ID0	VTI Part No.
SM7282N	SP4T Non-Latching	OPEN	COM	OPEN	OPEN	70-0146-012
SM7284N	SP6T Non-Latching	OPEN	COM	COM	OPEN	70-0146-014

The ID is achieved through an internal cable between the switch module and the SM7000N base module. The part numbers listed above are for kits that include an internal cable assembly and mounting hardware with each switch module model. The IDx bits are read only and are available in the Relay Register Map memory space for status information only. See Table 4-2 for further details.


FIGURE 4-2: SWITCH OPTION TO SM7000N CONNECTION

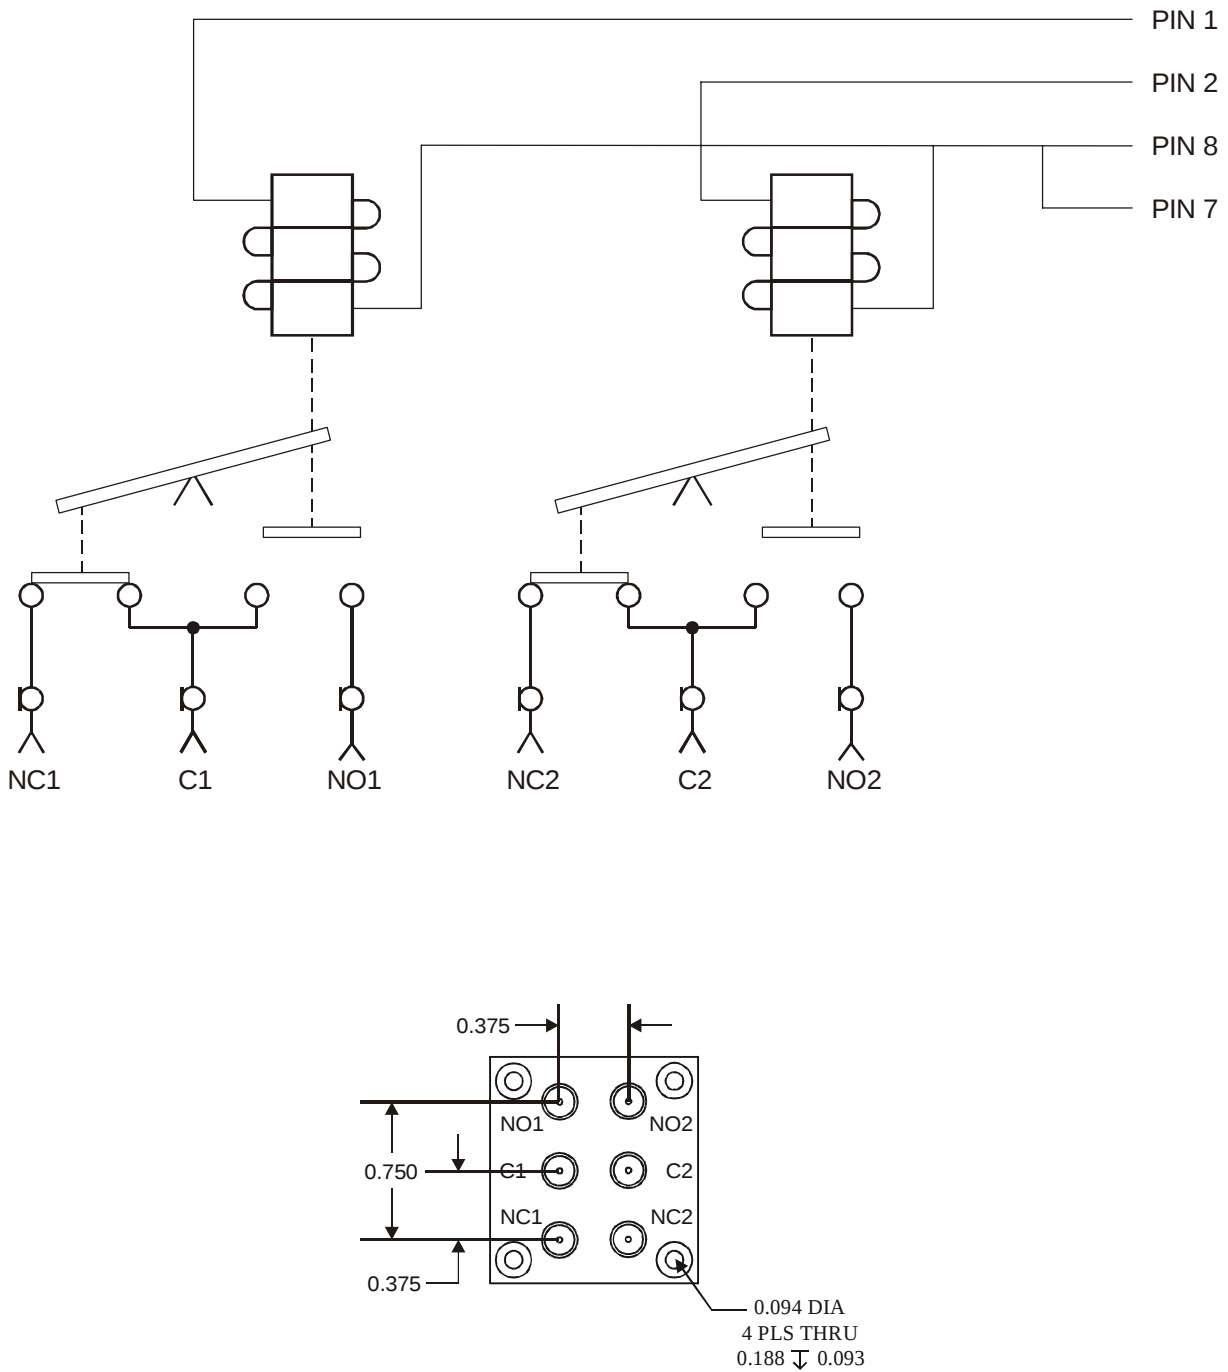


FIGURE 4-3: SM7270N – DUAL SPDT MODULE AND SCHEMATIC

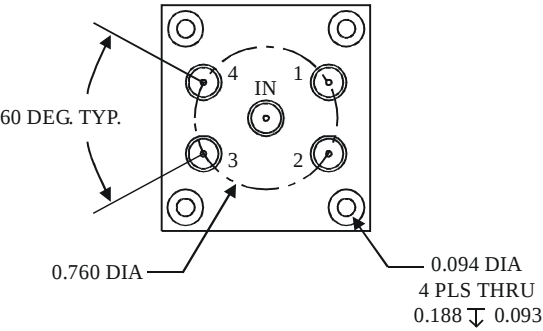
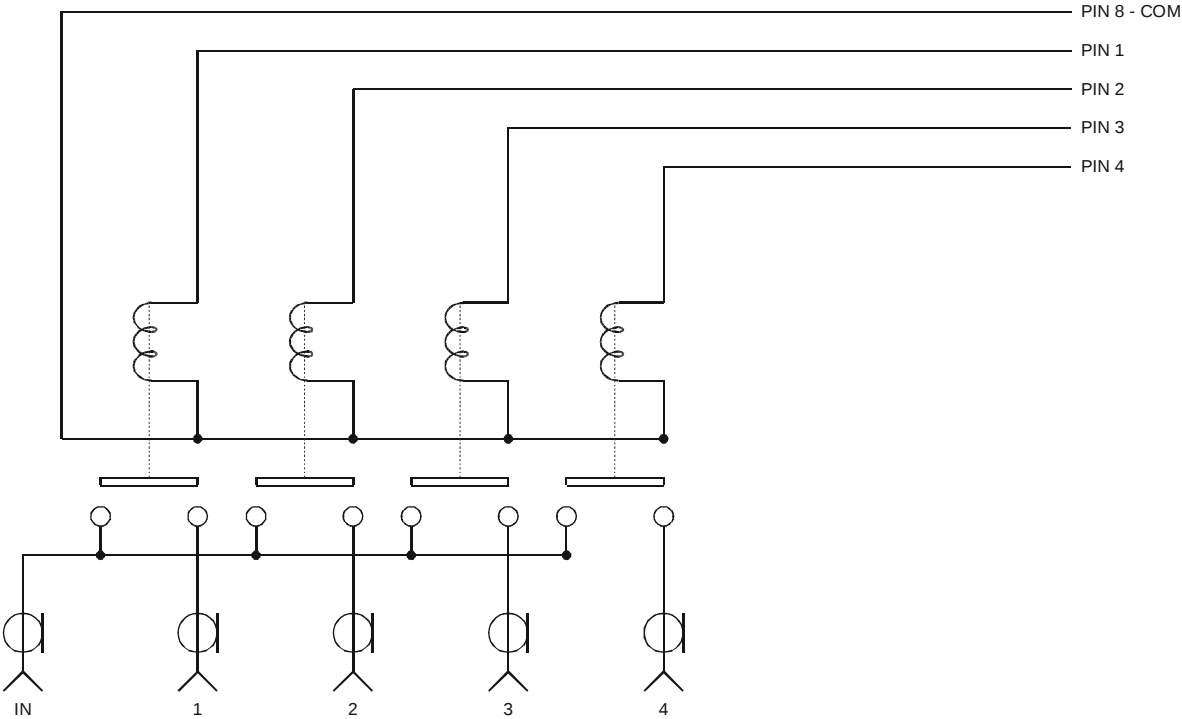


FIGURE 4-4: SM7272N – SP4T MODULE AND SCHEMATIC

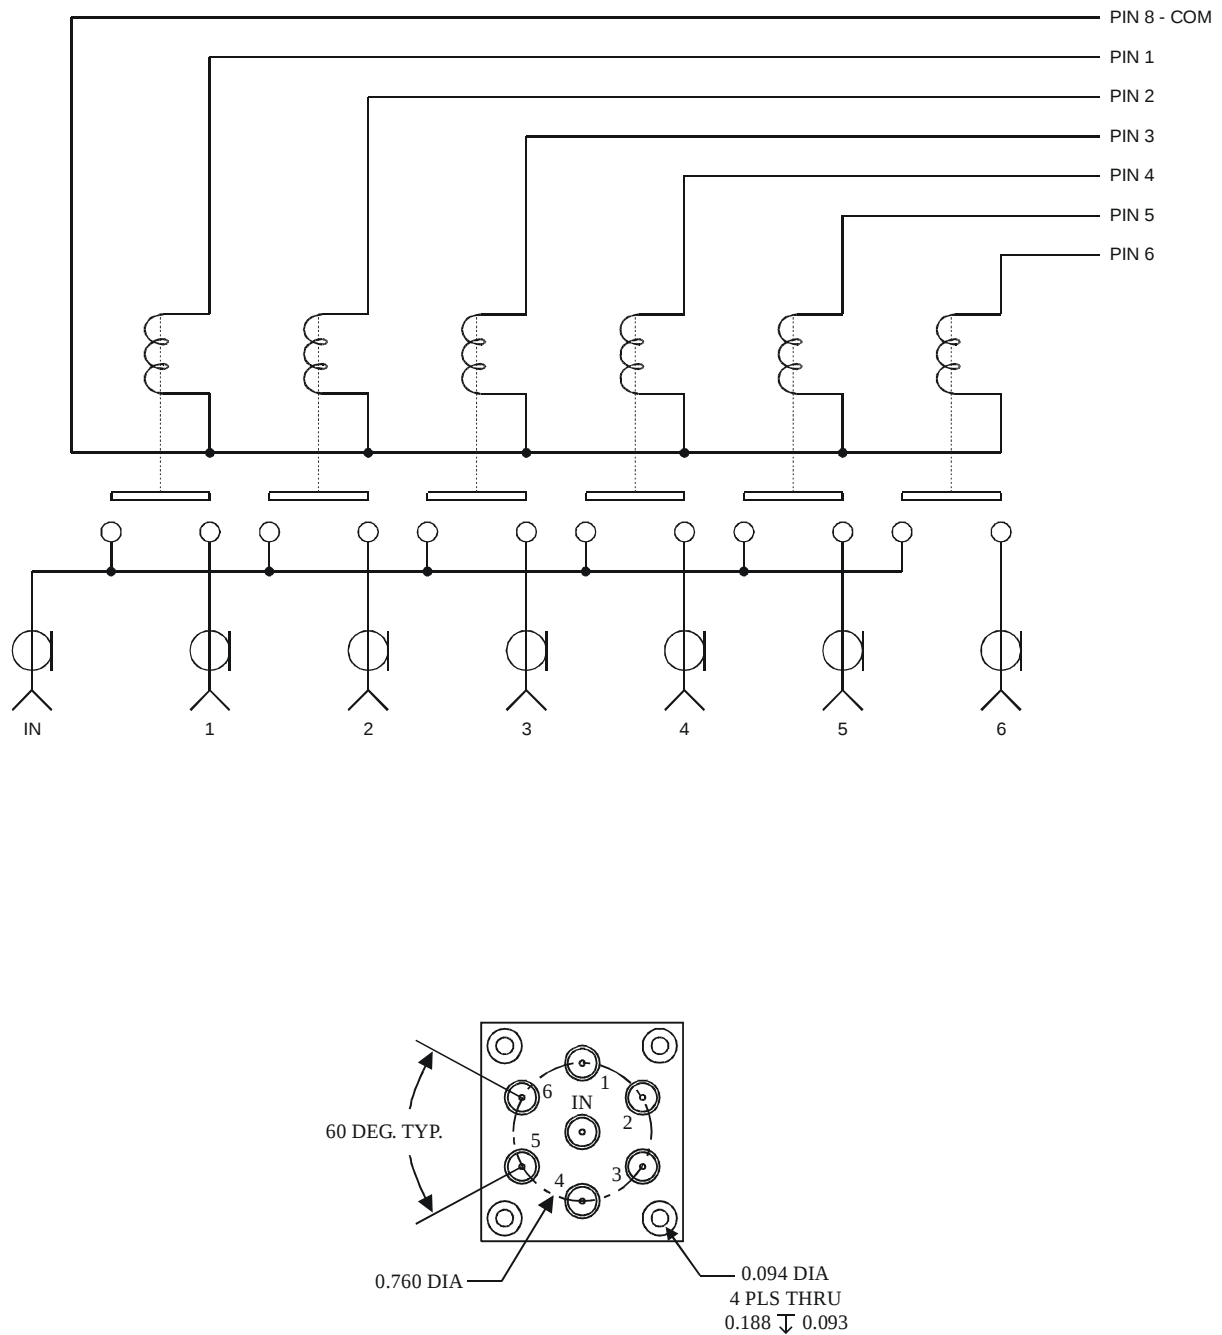


FIGURE 4-5: SM7274N – SP6T MODULE AND SCHEMATIC

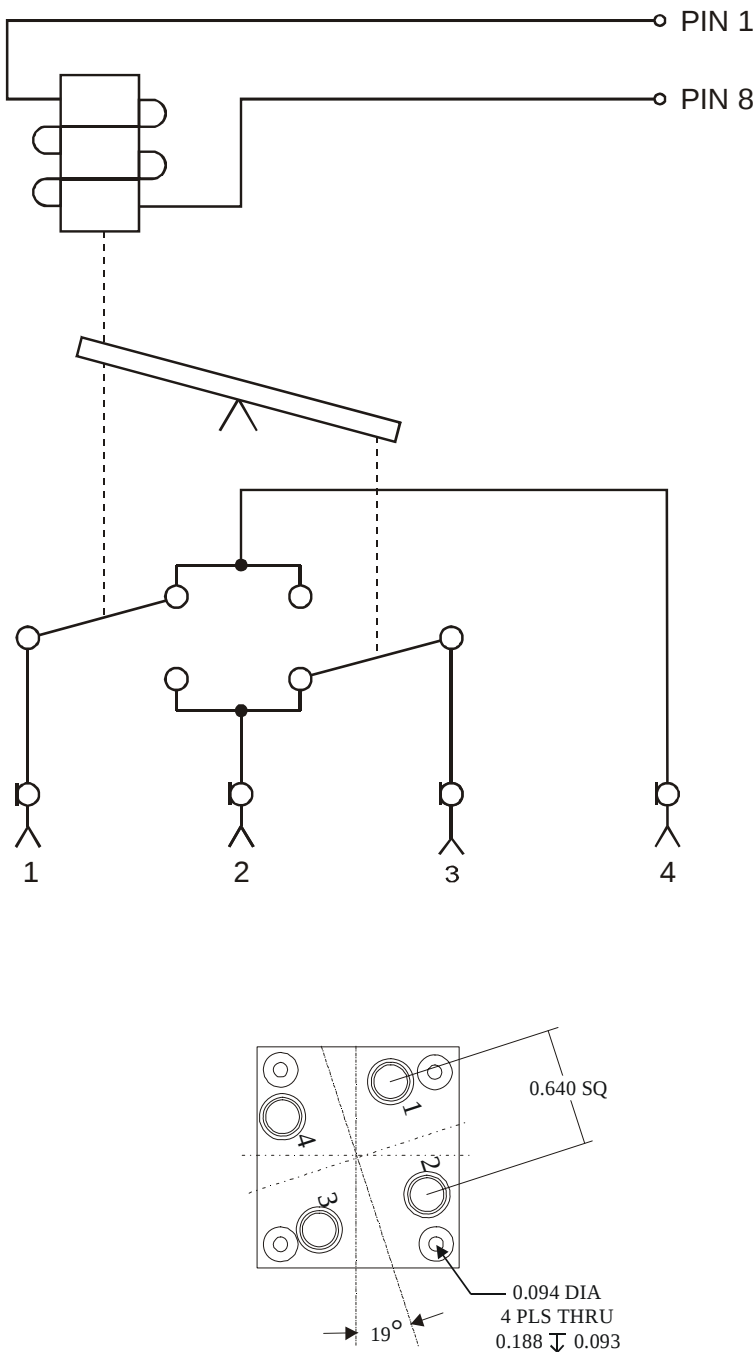


FIGURE 4-6: SM7275N – MINI-TRANSFER SWITCH MODULE AND SCHEMATIC

TABLE 4-2: SM7000N RELAY REGISTER MAP

Offset (Hex)																
12																
10																
E																
C																
A																
8									SW6 ID3	SW6 ID2	SW6 ID1	SW6 IDO	SW5 ID3	SW5 ID2	SW5 ID1	SW5 IDO
6	SW4 ID3	SW4 ID2	SW4 ID1	SW4 IDO	SW3 ID3	SW3 ID2	SW3 ID1	SW3 IDO	SW2 ID3	SW2 ID2	SW2 ID1	SW2 IDO	SW1 ID3	SW1 ID2	SW1 ID1	SW1 IDO
4	K48	K47	K46	K45	K44	K43	K42	K41	K40	K39	K38	K37	K36	K35	K34	K33
2	K32	K31	K30	K29	K28	K27	K26	K25	K24	K23	K22	K21	K20	K19	K18	K17
0	K16	K15	K14	K13	K12	K11	K10	K9	K8	K7	K6	K5	K4	K3	K2	K1

NOTE Switch ID bits are read only. See Table 4-1 for further details.

TABLE 4-3: SM7000N SWITCH / RELAY CHART

SWITCH / ID	RELAY
SW1	K1 - K8
SW2	K9 - K16
SW3	K17 - K24
SW4	K25 - K32
SW5	K33 - K40
SW6	K41 - K48

SWITCH REPLACEMENT

Should a switch become non-functional or damaged, it is possible to replace the switches by using the following protocol.

NOTE

Although switch replacement is possible, it is not possible to insert a switch other than the switch originally found in that slot (i.e. a **SM7270N** *cannot* be replaced with an **SM7274N**). The cables installed in the SM7000N are *specific* to the switch option originally installed.

Procedure

1. Remove the AC power cord from the chassis.



To avoid the possibility of shock, wait a minimum of ten seconds for electricity to dissipate from the mainframe after removing power.

2. Observing proper ESD precautions, remove the SM7000N from the mainframe and lay the chassis down on an antistatic mat. (See Figure 4-7).



FIGURE 4-7: SM7000N CHASSIS (SIDE VIEW)

3. Remove the 5/64" hex screws retaining the switch module to be replaced using an appropriate hex driver.

4. Gently pull the switch forward until the connector is in view. (See Figure 4-8).

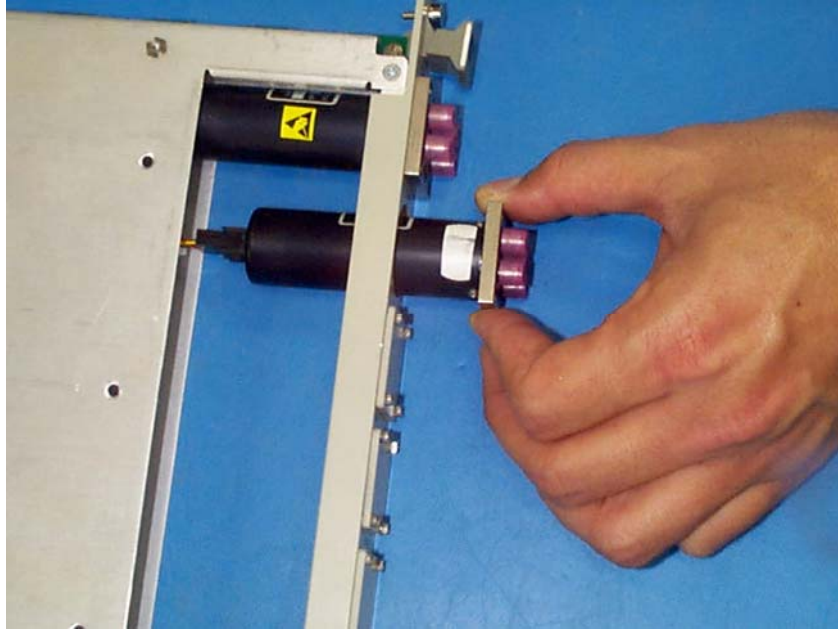


FIGURE 4-8: PARTIAL REMOVAL OF SWITCH

5. Grasp the connector and switch and remove the switch from the connector, ensuring that stress between the connector and chassis is minimized to reduce the possibility of removing the pigtail from its connector in the chassis. (See Figure 4-9).

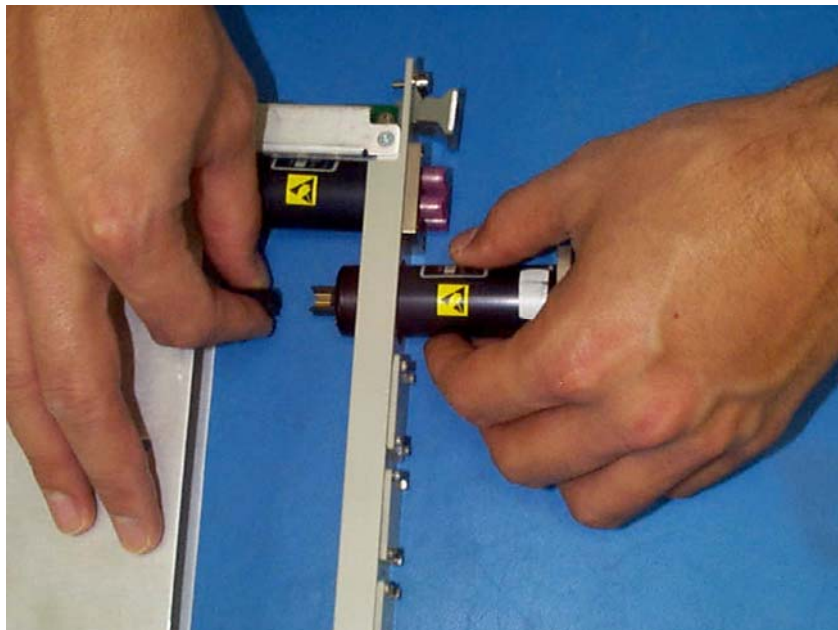


FIGURE 4-9: DISCONNECTING THE SWITCH

NOTE	The remaining switch modules will continue to operate correctly if a switch has been removed from the chassis.
-------------	--

PASS-THROUGH ADAPTERS


INTRODUCTION

The SM7276N pass-through adapter allows the SM7000N modules to control externally mounted relays. The adapter has eight sinking driver outputs, a common ground and +24 V from the VXI back plane to the front panel. Each output is designed to sink up to 500 mA each and provides inductive fly-back protection. Fly-back protection is provided by an internal 56 V Zener diode from each driver output to ground. Each output uses current flow to sense read back and requires a minimum of 5 mA to flow through the driver to indicate a relay operation. This insures that the driver circuit is operating and all the wiring to the remote relay is intact.

Because the driver is a current sinking type, the external relay may be powered from the provided +24 V or from an external power source. The amount of current the +24 V pin can provide is 500 mA maximum and is protected by a self-healing fuse. The total module current draw for +24 V line must be no greater than 1.5 A. If an external power supply is used, the negative side of the supply must be wired to the ground pin to provide a return current path. The total amount of current flowing through the ground return connection must be no greater than 2.0 A. Because each driver output is protected by a 56 V Zener diode, an externally provided power source should not be greater than 48 V.


TABLE 4-4: SM7000N PASS-THROUGH ADAPTER CONNECTOR PIN ASSIGNMENTS

Pin Number	Description
A	Relay Common (+24 V)
B	K1
C	K2
D	K3
E	K4
F	K5
H	K6
J	K7
K	K8
L	Ground
M	N/C
N	N/C
P	N/C
R	N/C

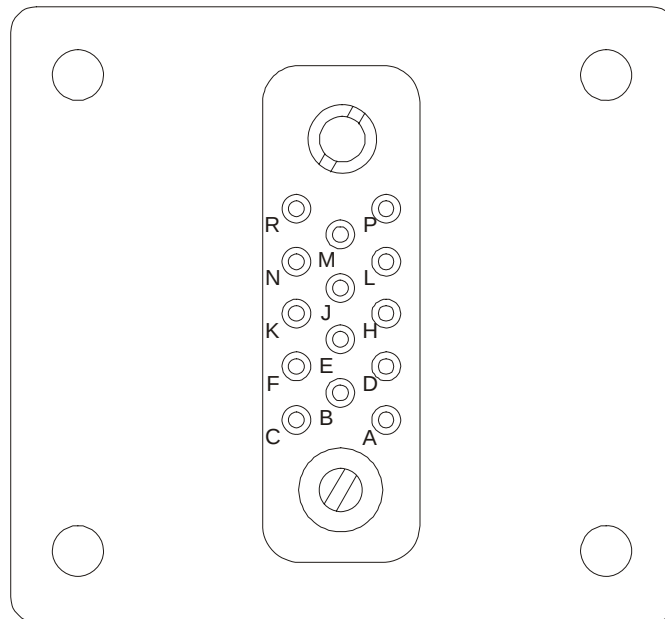**FIGURE 4-10: SM7276N PASS-THROUGH ADAPTER CONNECTOR DETAIL**

PASS-THROUGH ADAPTERS - CONNECTION EXAMPLES

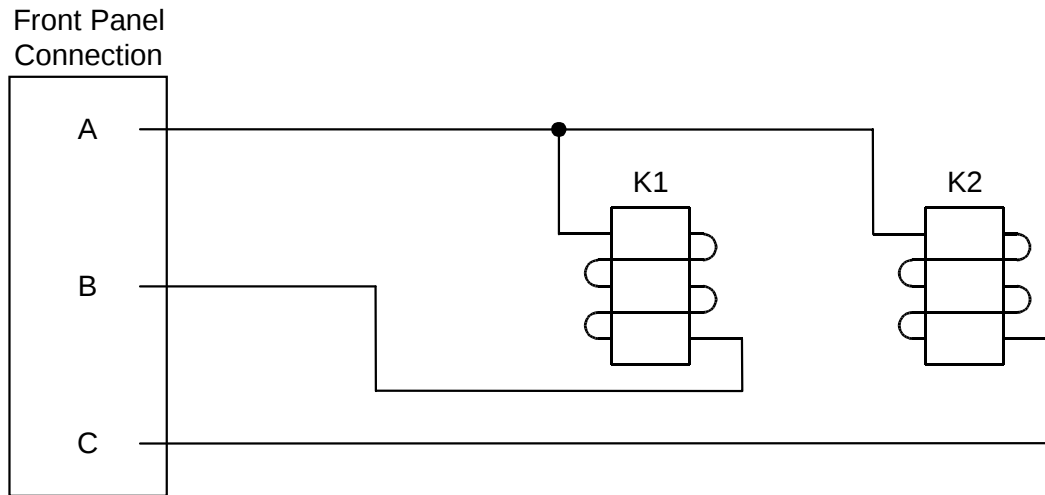The following figures show two examples of using the pass-through adapters. They illustrate wiring external relays both using the internal +24 V power source and using an external source.



Two external relays wired to
use the internal +24 volt power

FIGURE 4-11: PASS-THROUGH ADAPTER - RELAY WIRING W/ INTERNAL POWER SOURCE

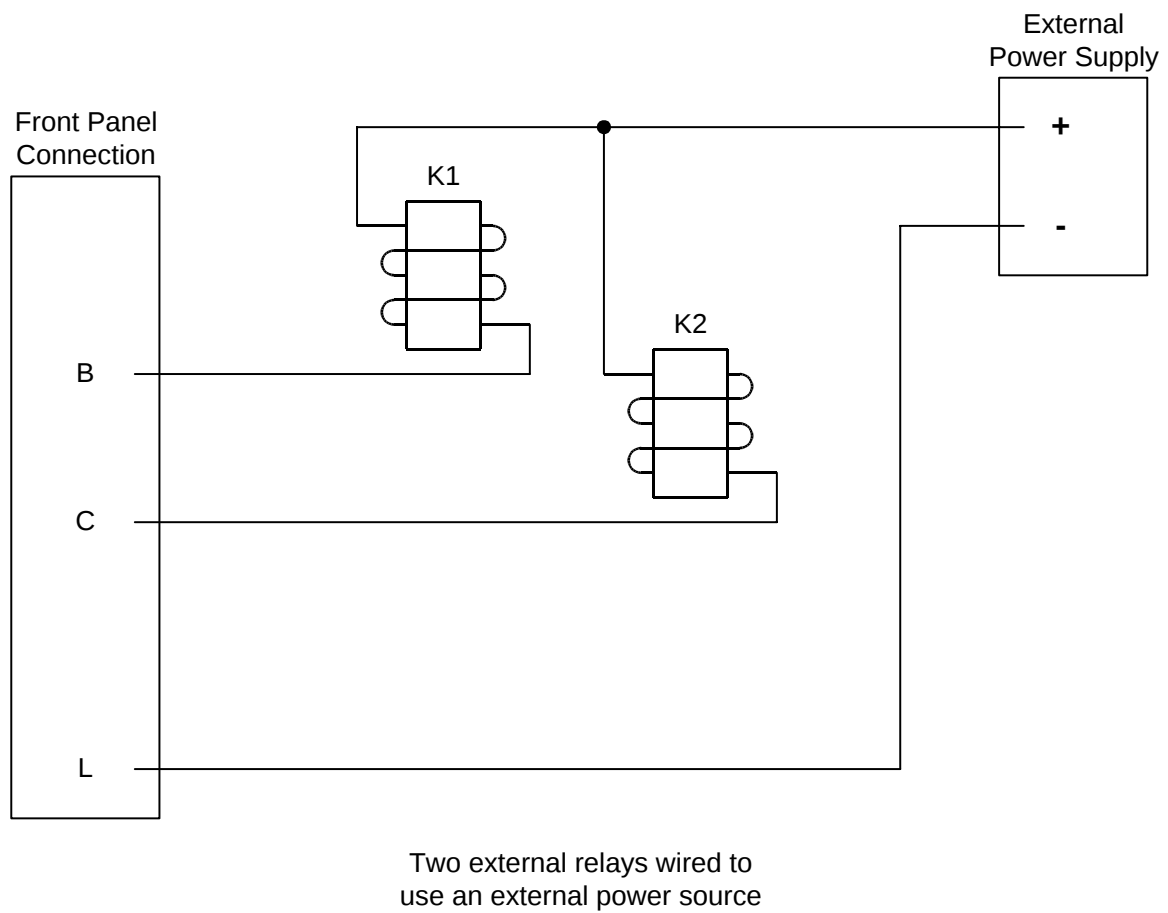


FIGURE 4-12: PASS-THROUGH ADAPTER - RELAY WIRING W/ EXTERNAL POWER SOURCE

INDEX

A

A16 address space.....	23
A16 base address	21
A16 offset register	21
A16 offset register address	21
A24 address space.....	21
A24 base address	21
A24/A32 active.....	23
A24/A32 enable	24
A24/A32 memory offset	24
A32 address space.....	21
A32 base address	21
Access LED Fail bit.....	32
ACFAILN enable bit	32
address space	19, 23

B

backplane jumpers	17
BBM/MBB bit	32
BBM/MBB enable bit.....	32
Break-Before-Make	13

C

Cause/Status.....	25
command parsing.....	21
configuration registers	32
cooling.....	17

D

data bus	34
delay	13
delay timer	32
device class	23
direct register access.....	13
dynamic configuration	23

E

extended memory device	26
extended memory space.....	19

F

firmware version number.....	24
Front Panel Open signal operation select bit	33
Front Panel Open signal polarity bit	33
Front Panel Open signal set by this module.....	34

H

handler IRQ line	25
hardware revision code	34

I

IH ENA*.....	25
interrupt mask	25
interrupter IRQ line	25

IR ENA*	25
IRQ line.....	25

L

logical address.....	17, 18, 19, 23
LSB (least significant bit)	18, 19

M

major hardware version number.....	24
Make-Before-Break.....	13
manufacturer's ID	23
memory space	32
message-based.....	21
minor hardware version number.....	24
model code	23
MODID*	23
module relay address.....	35
MSB (most significant bit).....	18, 19

O

offset register.....	21
offset value	21
Openbus Out enable bit.....	33

P

pass-through adapters.....	46
polled fashion.....	25
power.....	17

R

register address.....	21
register-based device	36
registers	21, 23
relay control	35
relay data dead back polarity bit	32
relay register address.....	35
relay register offset.....	35
relay reset enable bit	33
relay reset select bit.....	33
required memory	23
reset	24

S

scan list.....	13
serial clock	26
switch replacement.....	44
sysfail inhibit.....	24

T

trigger.....	13, 29
--------------	--------

U

utilizing A32 extended memory space	36
---	----

V

VISA.....36
VXIbus17, 21
VXIbus extended device.....26

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisan^{tg}.com](https://www.artisantg.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisan^{tg}.com | [artisan^{tg}.com](https://www.artisantg.com)

