

Rosemount Analytical 8712DR12NAM4

Magnetic Flowmeter Transmitter



Limited Availability
Like-New / Demo

Open Web Page

<https://www.artisanng.com/95834-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.


Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Rosemount Magnetic Flowmeter Systems (Transmitter and Flowtube)

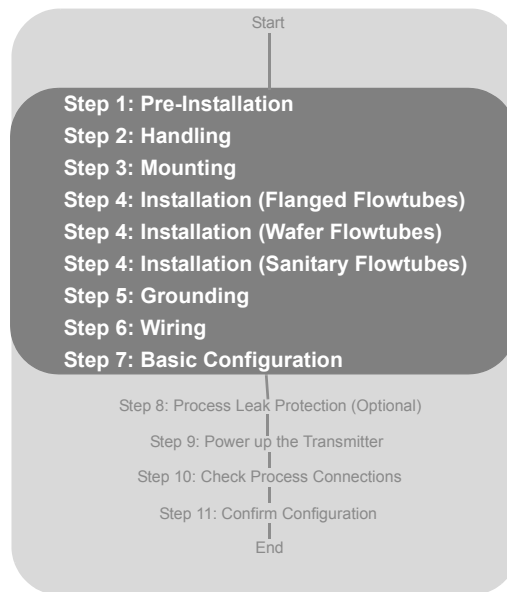

ROSEMOUNT

www.rosemount.com


EMERSON
Process Management

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

© 2015 Rosemount Inc. All rights reserved. All marks property of owner.

IMPORTANT NOTICE

This installation guide provides basic guidelines for the Rosemount® 8712H. It does not provide instructions for detailed configuration, diagnostics, maintenance, service and troubleshooting installations. Refer to the 8712H reference manual (document number 00809-0100-4729) for more instruction. The manual and this QIG are also available electronically on www.rosemount.com.

WARNING

Failure to follow these installation guidelines could result in death or serious injury:

Installation and servicing instructions are for use by qualified personnel only. Do not perform any servicing other than that contained in the operating instructions, unless qualified. Verify that the operating environment of the flowtube and transmitter is consistent with the appropriate FM or CSA approval.

Do not connect a Rosemount 8712H to a non-Rosemount flowtube that is located in an explosive atmosphere.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

WARNING

Explosions could result in death or serious injury:

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the approvals section of the 8712H reference manual for any restrictions associated with a safe installation.

- Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.

In an Explosion-Proof/Flame-Proof installation, do not remove the flowtube cover when power is applied to the unit.

Electrical shock can result in death or serious injury

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

WARNING

The flowtube liner is vulnerable to handling damage. Never place anything through the flowtube for the purpose of lifting or gaining leverage. Liner damage can render the flowtube useless.

To avoid possible damage to the flowtube liner ends, do not use metallic or spiral-wound gaskets. If frequent removal is anticipated, take precautions to protect the liner ends. Short spool pieces attached to the flowtube ends are often used for protection.

Correct flange bolt tightening is crucial for proper flowtube operation and life. All bolts must be tightened in the proper sequence to the specified torque limits. Failure to observe these instructions could result in severe damage to the flowtube lining and possible flowtube replacement.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

STEP 1: PRE-INSTALLATION

Before installing the Rosemount 8712H Magnetic Flowmeter Transmitter, there are several pre-installation steps that should be completed to make the installation process easier:


- Identify the options and configurations that apply to your application
- Set the hardware switches if necessary
- Consider mechanical, electrical, and environmental requirements

Mechanical Considerations

The mounting site for the Rosemount 8712H transmitter should provide enough room for secure mounting, easy access to conduit ports, full opening of the transmitter covers, and easy readability of the LOI screen (see Figure 1). The transmitter should be mounted in an upright position.

If the 8712H is mounted separately from the flowtube, it is not subject to limitations that might apply to the flowtube.

Figure 1. Rosemount 8712H Dimensional Drawing

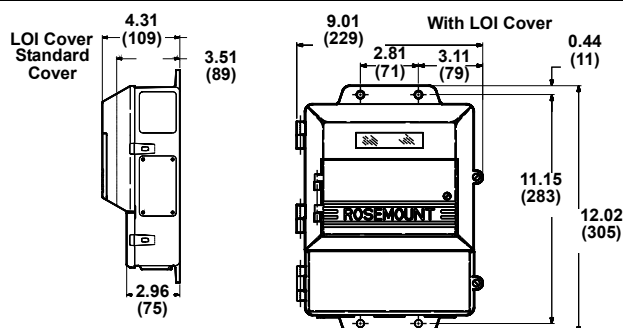

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Environmental Considerations

To ensure maximum transmitter life, avoid excessive heat and vibration. Typical problem areas:

- high-vibration lines with integrally mounted transmitters
- warm-climate installations in direct sunlight
- outdoor installations in cold climates.

Remote-mounted transmitters may be installed in the control room to protect the electronics from the harsh environment and provides easy access for configuration or service.

Both remotely and integrally mounted Rosemount 8712H transmitters require external power and there must be access to a suitable power source.

Installation Procedures

Rosemount 8712H installation includes both detailed mechanical and electrical installation procedures.

Mount the Transmitter

At a remote site the transmitter may be mounted on a pipe up to two inches in diameter or against a flat surface.

Pipe Mounting

To mount the transmitter on a pipe:

1. Attach the mounting plate to the pipe using the mounting hardware.
2. Attach the 8712H to the mounting plate using the mounting screws.

Surface Mounting

To surface mount the transmitter:

1. Attach the 8712H to the mounting location using the mounting screws.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Identify Options and Configurations

The standard application of the 8712H includes a 4–20 mA output and control of the flowtube coils. Other applications may require one or more of the following configurations or options:

- Multidrop Communications
- PZR (Positive Zero Return)
- Ultrasonic Control
- Auxiliary Output
- Pulse Output

Additional options may apply. Be sure to identify those options and configurations that apply to your situation, and keep a list of them nearby for consideration during the installation and configuration procedures.

Hardware Jumpers/Switches

The 8712H electronics board is equipped with three user-selectable hardware switches. These switches set the Failure Alarm Mode, Internal/External Analog Power, and Transmitter Security. The standard configuration for these switches when shipped from the factory are as follows:

Failure Alarm Mode:	HIGH
Internal/External Analog Power:	INTERNAL
Transmitter Security:	OFF

Changing Hardware Switch Settings

In most cases, it is not necessary to change the setting of the hardware switches. If you need to change the switch settings, complete the steps outlined in the manual.

Electrical Considerations

Before making any electrical connections to the 8712H, consider the following standards and be sure to have the proper power supply, conduit, and other accessories.

Quick Installation Guide

00825-0100-4729, Rev BB


August 2015

Rosemount 8712H

STEP 2: HANDLING

Handle all parts carefully to prevent damage. Whenever possible, transport the system to the installation site in the original shipping containers. Teflon[®] lined flowtubes are shipped with end covers that protect it from both mechanical damage and normal unrestrained distortion. Remove the end covers just before installation.

Figure 2. Rosemount 8705 Flowtube Support for Handling

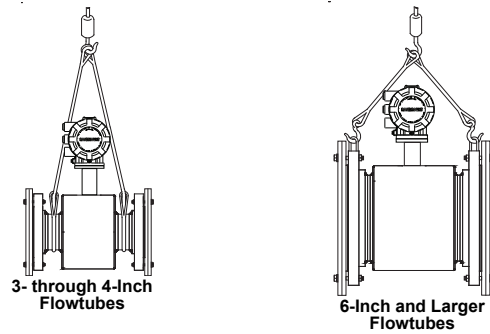

8732-0281B02A, C02A

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015


Rosemount 8712H

STEP 3: MOUNTING

Upstream/Downstream Piping

To ensure specification accuracy over widely varying process conditions, install the flowtube a minimum of five straight pipe diameters upstream and two pipe diameters downstream from the electrode plane (see Figure 3).

Figure 3. Upstream and Downstream Straight Pipe Diameters

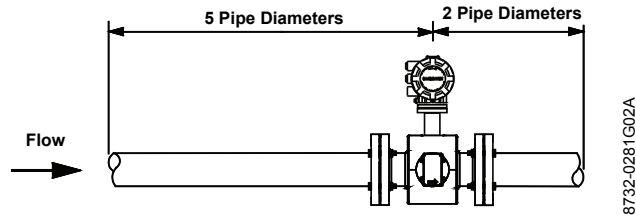

Flow Direction

The flowtube should be mounted so that the FORWARD end of the flow arrow, shown on the flowtube identification tag, points in the direction of flow through the tube.

Flowtube Orientation

The flowtube should be installed in a position that ensures the flowtube remains full during operation. Vertical installation allows upward process fluid flow keeps the cross-sectional area full, regardless of flow rate. Horizontal installation should be restricted to low piping sections that are normally full. In these cases, orient the electrode plane to within 45 degrees of horizontal.


Quick Installation Guide

00825-0100-4729, Rev BB

August 2015


Rosemount 8712H

Figure 4. Flowtube Orientation

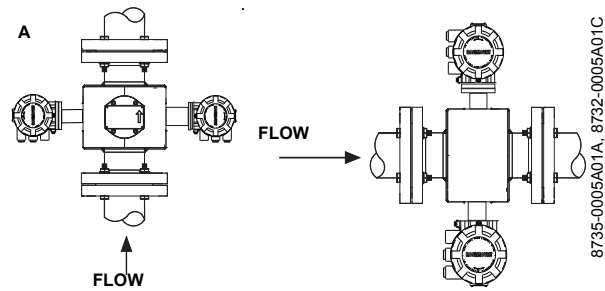

The electrodes in the Rosemount 8705 flowtube are properly orientated when the two measurement electrodes are in the 3 and 9 o'clock positions, as shown on the right of Figure 4.

Figure 5. Rosemount 8711 Mounting Position

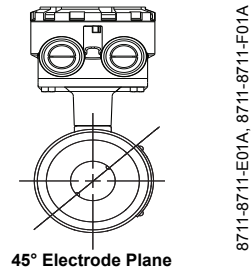

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

STEP 4: INSTALLATION (FLANGED FLOWTUBE)

Gaskets

The flowtube requires a gasket at each of its connections to adjacent devices or piping. The gasket material selected must be compatible with the process fluid and operating conditions. Metallic or spiral-wound gaskets can damage the liner. Gaskets are required on each side of the grounding ring. All other applications (including flowtubes with lining protectors or a grounding electrode) require only one gasket on each end connection.

Flange Bolts

Suggested torque values by flowtube line size and liner type are listed in Table 1 for ASME B16.5 (ANSI) and Table 2 for DIN flanges.

Consult the factory if the flange rating of the flowtube is not listed.

Tighten flange bolts on the upstream side of the flowtube in the incremental sequence shown in Figure 6 to 20% of the suggested torque values. Repeat the process on the downstream side of the flowtube. For flowtubes with more or less flange bolts, tighten the bolts in a similar crosswise sequence. Repeat this entire tightening sequence at 40%, 60%, 80%, and 100% of the suggested torque values or until the leak between the process and flowtube flanges stop.

If leakage has not stopped at the suggested torque values, the bolts can be tightened in additional 10% increments until the joint stops leaking, or until the measured torque value reaches the maximum torque value of the bolts. Practical consideration for the integrity of the liner often leads the user to distinct torque values to stop leakage due to the unique combinations of flanges, bolts, gaskets, and flowtube liner material.

Check for leaks at the flanges after tightening the bolts. Failure to use the correct tightening methods can result in severe damage. Flowtubes require a second tightening 24 hours after the initial installation. Over time, flowtube liner materials may deform under pressure.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Figure 6. Flange Bolt Torquing Sequence

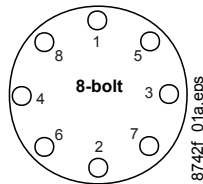


Table 1. Suggested Flange Bolt Torque Values for Rosemount 8705 and 8707 High-Signal Flowtubes

Size Code	Line Size	Teflon/Tefzel/PFA liners		Polyurethane/Neoprene/Linatex liners	
		Class 150 (pound-feet)	Class 300 (pound-feet)	Class 150 (pound-feet)	Class 300 (pound-feet)
005	1/2-inch (15 mm)	8	8	-	-
010	1 inch (25 mm)	8	12	-	-
015	1 1/2 inch (40 mm)	13	25	7	18
020	2 inch (50 mm)	19	17	14	11
030	3 inch (80 mm)	34	35	23	23
040	4 inch (100 mm)	26	50	17	32
060	6 inch (150mm)	45	50	30	37
080	8 inch (200 mm)	60	82	42	55
100	10 inch (250 mm)	55	80	40	70
120	12 inch (300 mm)	65	125	55	105
140	14 inch (350 mm)	85	110	70	95
160	16 inch (400 mm)	85	160	65	140
180	18 inch (450 mm)	120	170	95	150
200	20 inch (500 mm)	110	175	90	150
240	24 inch (600 mm)	165	280	140	250
300	30 inch (750 mm)	195	415	165	375
360	36 inch (900 mm)	280	575	245	525

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Table 2. Flange Bolt Torque and Bolt Load Specifications for 8705

Size Code	Line Size	Teflon/Tefzel liner							
		PN10		PN 16		PN 25		PN 40	
		(Newton-meter)	(Newton)	(Newton-meter)	(Newton)	(Newton-meter)	(Newton)	(Newton-meter)	(Newton)
005	0.5-inch (15 mm)			10	4400			10	4400
010	1 inch (25 mm)			20	10100			20	10100
015	1.5 inch (40 mm)			50	16100			50	16100
020	2 inch (50 mm)			60	20100			60	20100
030	3 inch (80 mm)			50	16800			50	16800
040	4 inch (100 mm)			50	17800			70	19600
060	6 inch (150 mm)			90	24700			130	28700
080	8 inch (200 mm)	130	35200	90	19700	130	29200	170	34400
100	10 inch (250 mm)	100	28000	130	28300	190	38000	250	44800
120	12 inch (300 mm)	120	32000	170	38400	190	38600	270	47700
140	14 inch (350 mm)	160	43800	220	49500	320	57200	410	68100
160	16 inch (400 mm)	220	50600	280	56200	410	68100	610	92900
180	18 inch (450 mm)	190	43200	340	68400	330	55100	420	64000
200	20 inch (500 mm)	230	51100	380	68900	440	73300	520	73900
240	24 inch (600 mm)	290	58600	570	93600	590	90100	850	112000

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Size Code	Line Size	Polyurethane, Linatex, and Neoprene Liners							
		PN 10		PN 16		PN 25		PN 40	
		(Newton-meter)	(Newton)	(Newton-meter)	(Newton)	(Newton-meter)	(Newton)	(Newton-meter)	(Newton)
010	1 inch (25 mm)			20	7040			20	7040
015	1.5 inch (40 mm)			30	10700			30	10700
020	2 inch (50 mm)			40	13400			40	13400
030	3 inch (80 mm)			30	11100			30	11100
040	4 inch (100 mm)			40	11700			50	13200
060	6 inch (150 mm)			60	16400			90	19200
080	8 inch (200 mm)	90	23400	60	13100	90	19400	110	22800
100	10 inch (250 mm)	70	18600	80	18800	130	25400	170	29900
120	12 inch (300 mm)	80	21300	110	25500	130	25800	180	31900
140	14 inch (350 mm)	110	29100	150	33000	210	38200	280	45400
160	16 inch (400 mm)	150	33700	190	37400	280	45400	410	62000
180	18 inch (450 mm)	130	28700	230	45600	220	36800	280	42700
200	20 inch (500 mm)	150	34100	260	45900	300	48800	350	49400
240	24 inch (600 mm)	200	39200	380	62400	390	60100	560	74400

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H


STEP 5: GROUNDING

Use Table 3 to determine which grounding option to follow for proper installation. The flowtube case should always be earth grounded in accordance with national and local electrical codes. Failure to do so may impair the protection provided by the equipment. The Internal Ground Connection (Protective Ground Connection) located in side the junction box is the Internal Ground Connection screw. This screw is identified by the ground symbol.

Table 3. Grounding Installation

Type of Pipe	Grounding Options			
	No Grounding Options	Grounding Rings	Grounding Electrodes	Lining Protectors
Conductive Unlined Pipe	See Figure 7	Not Required	Not Required	See Figure 8
Conductive Lined Pipe	Insufficient Grounding	See Figure 8	See Figure 7	See Figure 8
Non-Conductive Pipe	Insufficient Grounding	See Figure 9	See Figure 10	See Figure 9

Figure 7. No Grounding Options or Grounding Electrode in Lined Pipe

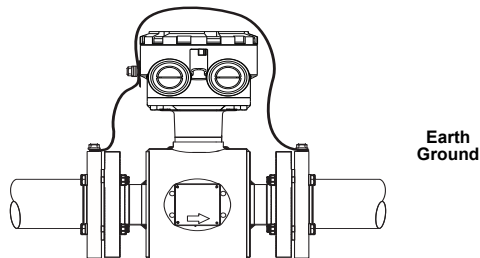

8705-0040C


Quick Installation Guide

00825-0100-4729, Rev BB

August 2015


Rosemount 8712H

Figure 8. Grounding with Grounding Rings or Lining Protectors

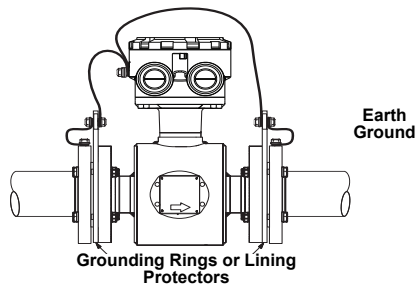

8705-038C

Figure 9. Grounding with Grounding Rings or Lining Protectors

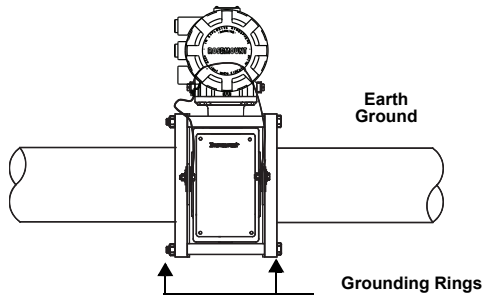

8711-0360a01b


Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Figure 10. Grounding with Grounding Electrodes

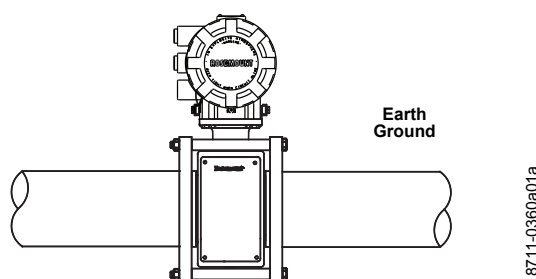

STEP 6: WIRING

Conduit Ports and Connections

Both the flowtube and transmitter junction boxes have ports for 3/4-inch NPT conduit connections. These connections should be made in accordance with local or plant electrical codes. Unused ports should be sealed with metal plugs. Proper electrical installation is necessary to prevent errors due to electrical noise and interference. Separate conduits are not necessary for the two cables, but a dedicated conduit line between each transmitter and flowtube is required. Shielded cable must be used for best results in electrically noisy environments.

Conduit Cables

Run the appropriate size cable through the conduit connections in your magnetic flowmeter system. Run the power cable from the power source to the transmitter. Run the coil drive and electrode cables between the flowmeter and transmitter. Prepare the ends of the coil drive and electrode cables as shown in Figure 11. Limit the unshielded wire length to 1-inch on both the electrode and coil drive cables. Excessive lead length or failure to connect cable shields can create electrical noise resulting in unstable meter readings.


Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H


Figure 11. Cable Preparation Detail

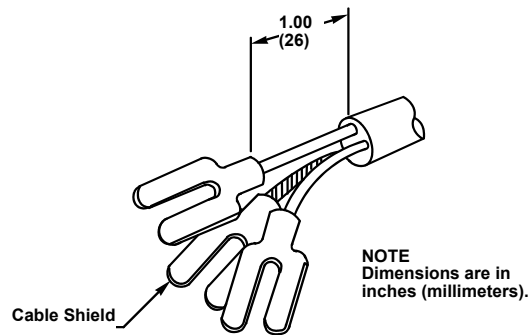

Step 6.1 Transmitter Coil Input

This wiring section covers supplying power to the flowtube coils through the transmitter. The transmitter coil input power sends a pulsed DC frequency to the flowtube.

Figure 12. Transmitter Power Connections

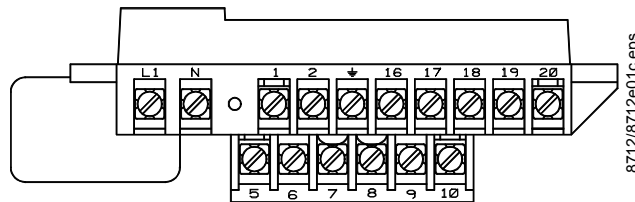

Quick Installation Guide


00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Wire the transmitter according to local electrical requirements. Ground the transmitter cage via the threaded conduit connection (see Figure 11). For ac power applications, connect ac Neutral to terminal N and connect ac Line to terminal L1. For dc power applications, properly connect the positive and negative terminals. Units powered by 10-30 V dc power supply may draw up to 1 amp of current. In addition, follow the supply wire and disconnect requirements below:

Figure 13. Power Supply Current

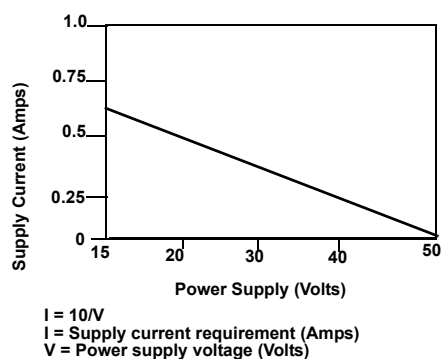

Supply Wire Requirements

Use 12 to 18 AWG wire rated for the proper temperature application. For connections in ambient temperatures above 140 °F (60 °C), use a wire rated for at least 176 °F (80 °C). For ambients greater than 176 °F (80 °C), use a wire rated for at least 230 °F (110 °C).

Disconnects

Connect the device through an external disconnect or circuit breaker. Clearly label the disconnect or circuit breaker and locate it near the transmitter and per local electrical control.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Installation Category

The installation category for the Rosemount 8712H is (Overvoltage) Category II.

Overcurrent Protection

The Rosemount 8712H Flowmeter Transmitter requires overcurrent protection of the supply lines. Maximum ratings of overcurrent devices are as follows:

Power System	Fuse Rating	Manufacturer
110 V ac	250 V; 1 Amp, Quick Acting	Bussman AGCI or Equivalent
220 V ac	250 V; 0.5 Amp, Quick Acting	Bussman AGCI or Equivalent

Requirements for 115 V ac or 230 V ac Power Supply

Wire the transmitter according to local electrical requirements for 115 V ac or 230 V ac. In addition, follow the supply wire and disconnect requirements below:

Requirements for 10–30 V dc Power Supply

Units powered with 10–30 V dc may draw up to 2 amps of current. As a result, the input power wire must meet certain gauge requirements. For combinations not shown, you can calculate the maximum distance given the surge current, the voltage of the source, and the minimum start-up voltage of the transmitter, 10 V dc, using the following equation:

$$\text{MaximumResistance} = \frac{\text{SupplyVoltage} - 10\text{Vdc}}{\text{SurgeCurrent}}$$

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Table 4. Length of Annealed Copper (Cu) Wires

Types of Power Supply Wires		Maximum Length of the Wire for Each Corresponding Power Supply Source			
Wire Gauge	Annealed Cu milliohms/ft (milliohms/m)	30 V Supply ft (m)	24 V Supply ft (m)	20 V Supply ft (m)	14 V Supply ft (m)
20	10.15 (33.29)	1,230 (375)	625 (191)	365 (111)	115 (35)
18	6.385 (20.94)	1,955 (596)	990 (302)	585 (178)	185 (56)
16	4.016 (13.17)	3,110 (948)	1,580 (482)	930 (283)	295 (90)
14	2.525 (8.28)	4,950 (1,509)	2,515 (767)	1,485 (453)	475 (145)
12	1.588 (5.21)	7,870 (2,399)	3,995 (1,218)	2,360 (719)	755 (230)
10	0.999 (3.28)	12,510 (3,813)	6,355 (1,937)	3,750 (1,143)	1,200 (366)

Table 5. Length of Hand-drawn Copper (Cu) Wires

Types of Power Supply Wires		Maximum Length of the Wire for Each Corresponding Power Supply Source			
Wire Gauge	Hand-drawn Cu milliohms/ft (milliohms/m)	30 V Supply ft (m)	24 V Supply ft (m)	20 V Supply ft (m)	14 V Supply ft (m)
18	6.640 (21.78)	1,880 (573)	955 (291)	565 (172)	180 (55)
16	4.176 (13.70)	2,990 (911)	1,520 (463)	895 (273)	285 (87)
14	2.626 (8.61)	4,760 (1,451)	2,415 (736)	1,425 (434)	455 (139)
12	1.652 (5.42)	7,565 (2,306)	3,840 (1,170)	2,270 (692)	725 (221)
10	1.039 (3.41)	12,030 (3,667)	6,110 (1,862)	3,605 (1,099)	1,155 (352)

Quick Installation Guide


00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Options, Considerations, and Procedures

Figure 14. Supply Current versus Input Voltage

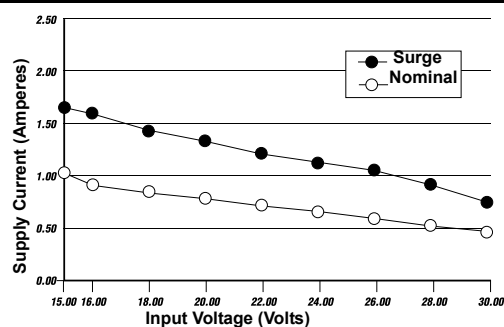

8712-0388A

Step 6.2 Transmitter Communication Input

Connect 4–20 mA Loop External Power Source

The 4–20 mA output loop signal may be powered internally or externally. The default position of the internal/external analog power jumper is in the *internal* position. The user-selectable power supply jumper is located on the electronics board.

Internal

The 4–20 mA analog power loop may be powered from the transmitter itself. Resistance in the loop must be 1,000 ohms or less. If a HART Communicator or control system will be used, it must be connected across a minimum of 250 ohms resistance in the loop.

External

HART multidrop installations require a 10–30 V dc external analog power source. If a HART Communicator or control system is to be used, it must be connected across a minimum of 250 ohms resistance in the loop.

To connect external power to the 4–20 mA loop, connect -dc to Terminal 8 and +dc to Terminal 7. (See Figure 12)

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

NOTE

To connect any of the other output options (pulse output for totalizing, auxiliary output for switch closure, or positive zero return), consult the comprehensive product manual.

Step 6.3 Transmitter to Flowtube Wiring

A single dedicated conduit run for the coil drive and electrode cables is needed between a flowtube and a remote transmitter. Bundled cables in a single conduit are likely to create interference and noise problems in your system. Use one set of cables per conduit run.

Figure 15. Conduit Preparation

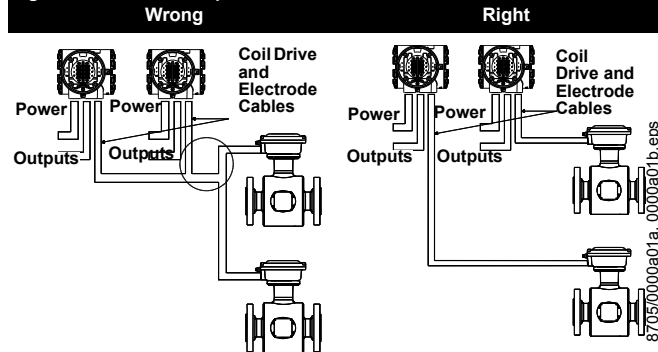


Table 6. Cable Requirements

Description	Length	Part Number
Signal Cable (20 AWG) Belden 8762, Alpha 2411 equivalent	ft	08712-0061-0001
	m	08712-0061-0003
Coil Drive Cable (14 AWG) Belden 8720, Alpha 2442 equivalent	ft	08712-0060-0001
	m	08712-0060-0003
Combination Signal and Coil Drive Cable (18 AWG) ⁽¹⁾	ft	08712-0752-0001
	m	08712-0752-0003

(1) Combination signal and coil drive cable is not recommended for high-signal magmeter system. For remote mount installations, combination signal and coil drive cable should be limited to less than 100 ft. (30 m).

Quick Installation Guide


00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

High-Signal Flowtube to High-Signal Transmitter

Figure 16. Wiring Diagram

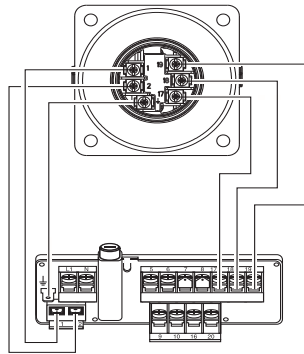

8712-03A

Step 7: Basic Configuration

Once the magnetic flowmeter is installed and power has been supplied, transmitter must be configured through the basic setup. These parameters can be configured through either a local operator interface, a HART Communicator or AMS. A table of all the parameters are on page 25. Descriptions of the more advanced functions are included in the comprehensive product manual.

Basic Setup

Tag

Tag is the quickest and shortest way of identifying and distinguishing between transmitters. Transmitters can be tagged according to the requirements of your application. The tag may be up to eight characters long.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Flow Rate Units

The *flow rate units* variable specifies the format in which the flow rate will be displayed. Units should be selected to meet your particular metering needs.

URV (Upper Range Value)

The *upper range value* (URV), or analog output range, is preset to 30 ft/s at the factory. The units that appear will be the same as those selected under the units parameter.

LRV (Lower Range Value)

Reset the *lower range value* (LRV), or analog output zero, to change the size of the range (or span) between the URV and LRV. Under normal circumstances, the LRV should be set to a value near the minimum expected flow rate to maximize resolution. The LRV must be between -30 ft/s to 30 ft/s.

Line Size

The *line size* (tube size) must be set to match the actual flowtube connected to the transmitter. The size must be specified in inches according to the available sizes listed below.

Calibration Number

The tube *calibration number* is a 16-digit number used to identify flowtubes calibrated at the Rosemount factory.

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Function	HART Fast Keys	LOI Key
PROCESS VARIABLES	1, 1	
DIAGNOSTICS AND SERVICE		
Analog Output Test	1, 1, 3	Aux. function
Pulse Output Test	1, 2, 3	Aux. Function
Self Test	1, 2, 1, 2	Aux. Function
D/A Trim and (4-20 mA Output Trim	1, 2, 4, 1	Aux. Function
Scaled D/A Trim	1, 2, 4, 2	
Electronics Trim	1, 2, 4, 3	Aux. Function
Auto Zero Trim	1, 2, 4, 4	Aux. Function
Universal Auto Trim (8712U Only)	1, 2, 4, 5	Aux. Function
BASIC SETUP		
Tag	1, 3, 1	XMTR Info
Flow Rate Units	1, 3, 2, 1	Units
URV (Upper Range Value)	1, 3, 3	Analog Output Range
LRV (Lower Range Value)	1, 3, 4	Aux. Function
Line Size	1, 3, 5	Tube Size
Calibration Number	1, 3, 6	Tube Cal No.
Damping	1, 3, 7	Damping
DETAILED SETUP		
Pulse Output Scaling	1, 4, 3, 2, 1	Aux. Function
Pulse Width	1, 4, 3, 2, 2	Aux. Function
Special Units	1, 3, 2, 2	Aux. Function
User-Defined Volume Unit	1, 3, 2, 2, 1	Aux. Function
Base Volume Unit	1, 3, 2, 2, 2	Aux. Function
Conversion Number	1, 3, 2, 2, 3	Aux. Function
Base Tim Unit	1, 3, 2, 2, 4	Aux. Function
User-Defined Flow Unit	1, 3, 2, 2, 5	Aux. Function
Auxiliary Output	1, 4, 3, 3	Aux. Function
Totalizer	1, 1, 4	Totalizer
Measure Gross Total	1, 1, 4, 1	Totalizer
Start Totalizer	1, 1, 4, 4	Totalizer
Stop Totalizer	1, 1, 4, 5	Totalizer
Reset Totalizer	1, 1, 4, 6	Totalizer
Low Flow Cutoff	1, 4, 4, 1	Aux. Function
Coil Dive Frequency	1, 4, 1, 3	Aux. Function
Control Status	1, 4, 4, 4	Aux. Function

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Function	HART Fast Keys	LOI Key
Signal Processing Control	1, 4, 4	Aux. Function
Number of Samples	1, 4, 4, 5	Aux. Function
Maximum Percent Limit	1, 4, 4, 6	Aux. Function
Time Limit	1, 4, 4, 7	Aux. Function
REVIEW VARIABLES		
Review	1, 5	
MISCELLANEOUS FUNCTIONS		
Coil Current (8712U Only)	1, 4, 1, 7	Aux. Function
Transmitter Gain (8712U Only)	1, 4, 1, 8	Aux. Function
Flowtube Gain (8712U Only)	1, 4, 1, 9	Aux. Function
Message	1, 4, 5, 4	XMTR Info
Date	1, 4, 5, 5	XMTR Info
Flowtube Tag	1, 4, 5, 8	XMTR Info
Flowtube Serial Number	1, 4, 5, 7	XMTR Info
Liner Material		XMTR Info
Electrode Type		XMTR Info
Electrode Material		XMTR Info

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Product Certificates

Approved Manufacturing Locations

Rosemount Inc. — Eden Prairie, Minnesota, USA

Fisher-Rosemount Tecnologias de Flujo, S.A. de C.V. —
Chihuahua, Chihuahua, Mexico

Other important guidelines

Only use new, original parts.

To prevent the process medium escaping, do not unscrew or remove
process flange bolts, adapter bolts or bleed screws during operation.

Maintenance shall only be done by qualified personnel.

Hazardous Location Certifications

North American Certifications

Factory Mutual (FM)

N0 Division 2 Approval (All transmitters)

Class I, Division 2, Groups A, B, C, D

Temp Codes – T4 (at 40°C),

Dust-ignition proof Class II/III, Division 1, Groups E, F, G

Temp Codes – T4 (at 40°C),

Enclosure Type 4X

Canadian Standards Association (CSA)

N0 Suitable for Class I, Division 2, Groups A, B, C, D

Temp Codes – T4 (at 60°C)

Dust-ignition proof Class II/III, Division 1, Groups E, F, G

Enclosure Type 4X

Quick Installation Guide

00825-0100-4729, Rev BB

August 2015

Rosemount 8712H

Factory Mutual (FM)

N0 Division 2 Approval for Non-Flammable Fluids (8707)

Class I, Division 2, Groups A, B, C, D

Temp Code – T5 (8705/8711 at 60°C)

Temp Code – T3C (8707 at 60°C)

Dust-Ignition proof Class II/III, Division 1, Groups E, F, G

Temp Code – T6 (8705/8711 at 60°C)

Temp Code – T5 (8707 at 60°C)

Enclosure Type 4X

Canadian Standards Association (CSA)

N0 Suitable for Class I, Division 2, Groups A, B, C, D

Temp Code – T5 (8705/8711 at 60°C)

Temp Code – T3C (8707 at 60°C)

Dust-Ignition proof Class II/III, Division 1, Groups E, F, G

Enclosure Type 4X



Quick Start Guide
00825-0100-4729, Rev. BB
August 2015

Global Headquarters

Emerson Process Management

6021 Innovation Blvd
Shakopee, MN 55379, USA
☎ +1 800 522 6277 or +1 303 527 5200
☎ +1 303 530 8459
✉ Flow.Support@Emerson.com

North America Regional Office

Emerson Process Management
7070 Winchester Circle
Boulder, CO 80301 USA
☎ +1 800 522 6277 or +1 303 527 5200
☎ +1 303 530 8459
✉ Flow.Support@Emerson.com

Latin America Regional Office

Emerson Process Management
Multipark Office Center
Turubares Building, 3rd & 4th floor
Guachipelin de Escazu, Costa Rica
☎ +1 506 2505-6962
☎ +1 954 846 5121
✉ Flow.Support@Emerson.com

Europe Regional Office

Emerson Process Management Flow B.V.
Neonstraat 1
6718 WX Ede
The Netherlands
☎ +31 (0) 318 495555
☎ +31 (0) 318 495556
✉ Flow.Support@Emerson.com

Asia Pacific Regional Office

Emerson Process Management Asia Pacific Pte Ltd
1 Pandan Crescent
Singapore 128461
☎ +65 6777 8211
☎ +65 6777 0947
✉ APflow.support@emerson.com

Middle East and Africa Regional Office

Emerson Process Management
Emerson FZE P.O. Box 17033,
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
☎ +971 4 8118100
☎ +971 4 8865465
✉ FlowTechnicalSupport@emerson.com

Standard Terms and Conditions of Sale can be found at: www.rosemount.com/terms_of_sale.
The Emerson logo is a trademark and service mark of Emerson Electric Co.
Rosemount and Rosemount logotype are registered trademarks of Rosemount Inc.
All other marks are the property of their respective owners.
© 2015 Rosemount Inc. All rights reserved.

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisanth.com](https://www.artisanth.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanth.com | [artisanth.com](https://www.artisanth.com)

