

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

INSTALLATION MANUAL

PMAC2A-PC/104

Compact Version of PMAC Family

4xx-603670-xHxx

January 29, 2003

DELTA TAU
Data Systems, Inc.
NEW IDEAS IN MOTION ...

Single Source Machine Control *Power // Flexibility // Ease of Use*
21314 Lassen Street Chatsworth, CA 91311 // Tel. (818) 998-2095 Fax. (818) 998-7807 // www.deltatau.com

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

TABLE OF CONTENTS

INTRODUCTION 1

OVERVIEW 1
BOARD CONFIGURATION 1
Base Version 1
Option 2A: PC/104 bus stack interface 1
Option 5xF: CPU Speed Options 1
Option 6: Extended Firmware Algorithm 2
Option 6L: Multi-block lookahead firmware 2
Option 10: Firmware Version Specification 2
Option 12: Analog-to-Digital Converters 2
ACC-1P: Axis expansion piggyback board 2
ACC-1P Option 1: I/O ports 2
ACC-1P Option 2: Analog-to-Digital Converters 2
ACC-2P: Communications Board 3
ACC-2P Option 1A: USB Interface 3
ACC-2P Option 1B: Ethernet Interface 3
ACC-2P Option 2: DPRAM circuitry 3
ACC-2P Option 3: I/O ports 4
ACC-8TS connections board 4
ACC-8ES Four channel dual-DAC analog stack board 4
ACC-8FS Four channel direct PWM stack breakout board 4

BASE BOARD HARDWARE SETUP 5

CLOCK CONFIGURATION JUMPERS 5
BOARD RESET JUMPERS 5
CPU JUMPER CONFIGURATION 6
COMMUNICATION JUMPERS 6
I/O CONFIGURATION JUMPERS 6
RESISTOR PACKS CONFIGURATION 6
Differential or Single-Ended Encoder selection 6

ACC-1P HARDWARE SETUP 9

I/O CONFIGURATION JUMPERS 9
RESERVED CONFIGURATION JUMPERS 9
RESISTOR PACKS CONFIGURATION 9
Differential or Single-Ended Encoder selection 9
Handwheel Encoder Termination Resistors 10

ACC-2P HARDWARE SETUP 11

I/O CONFIGURATION JUMPERS 11
COMMUNICATION JUMPERS 11
RESISTOR PACKS CONFIGURATION 11
Differential or Single-Ended Handwheel Encoder selection 11
Handwheel Encoder Termination Resistors 12

MACHINE CONNECTIONS 13

MOUNTING 13
POWER SUPPLIES 13
Digital Power Supply 13
DAC Outputs Power Supply 14
Flags Power Supply 14
OVER-TRAVEL LIMITS AND HOME SWITCHES 14
Types of overtravel limits 14

Downloaded from www.Manualslib.com manuals search engine

Home switches *14*
MOTOR SIGNALS CONNECTIONS 15
Incremental Encoder Connection *15*
DAC Output signals *15*
Pulse and Direction (Stepper) Drivers *16*
Amplifier Enable Signal (AENAx/DIRn) *16*
Amplifier Fault Signal (FAULT-) *16*
ACC-1P GENERAL-PURPOSE DIGITAL INPUTS AND OUTPUTS (J7 PORT) 16
ACC-2P GENERAL-PURPOSE DIGITAL INPUTS AND OUTPUTS (JOPT PORT) 17
ACC-1P THUMBWHEEL MULTIPLEXER PORT (J2 PORT) 17
ACC-2P THUMBWHEEL MULTIPLEXER PORT (JTHW PORT) 18
ACC-1P OR ACC-2P HANDWHEEL PORT (JHW / PD PORT) 18
OPTIONAL ANALOG INPUTS 18
COMPARE EQUAL OUTPUTS 18
SERIAL PORT (JRS232 PORT) 19
ACC-2P ETHERNET RJ45 CONNECTOR (J10 PORT) 19
ACC-2P USB CONNECTOR (J1 PORT) 19
MACHINE CONNECTIONS EXAMPLE: USING ANALOG ±10 VOLTS AMPLIFIER 20
MACHINE CONNECTIONS EXAMPLE: USING PULSE AND DIRECTION DRIVERS 21

PMAC2A-PC/104 SOFTWARE SETUP 22

COMMUNICATIONS 22
PMAC I-VARIABLES 22
OPERATIONAL FREQUENCY AND BAUD RATE SETUP 22
DAC OUTPUTS CONFIGURATION 23
USING FLAG I/O AS GENERAL-PURPOSE I/O 24
GENERAL-PURPOSE DIGITAL INPUTS AND OUTPUTS 24
ACC-1P with jumper E6 on position 1-2 ..... *24*
ACC-2P with jumper E5 in position 2-3 ..... *25*
THUMBWHEEL PORT DIGITAL INPUTS AND OUTPUTS 26
ACC-1P with jumper E6 in position 1-2 ..... *26*
ACC-2P with jumper E5 in position 2-3 ..... *26*
ANALOG INPUTS SETUP 27
Base Board Analog Inputs *27*
ACC-1P Analog Inputs *27*

BASE BOARD HARDWARE REFERENCE SUMMARY 29

BOARD DIMENSIONS 29
BOARD LAYOUT 29
CONNECTORS AND INDICATORS 30
J3 - Machine Connector (JMACH1 Port) *30*
J4 - Machine Connector (JMACH2 Port) *30*
J8 - Serial Port (JRS232 Port) *30*
TB1 – Power Supply Terminal Block (JPWR Connector) *31*
LED Indicators *31*

ACC-1P HARDWARE REFERENCE SUMMARY 32

BOARD DIMENSIONS 32
BOARD LAYOUT 32
CONNECTORS AND INDICATORS 33
J2 - Thumbwheel Multiplexer Port (JTHW Port) *33*
J3 - Machine Connector (JMACH1 Port) *33*
J4 - Machine Connector (JMACH2 Port) *34*
J7 - General-Purpose Digital Inputs and Outputs (JOPT Port) *34*
J8 – Handwheel / Pulse and Direction Port (JHW / PD Port) *34*
TB1 – Power Supply Terminal Block (JPWR Connector) *34*

Downloaded from www.Manualslib.com manuals search engine

LED Indicators *34*

ACC-2P HARDWARE REFERENCE SUMMARY **36**

BOARD DIMENSIONS 36
BOARD LAYOUT 36
CONNECTORS AND INDICATORS 37
J1 – USB Communications Port *37*
J2 - Thumbwheel Multiplexer Port (JTHW Port) *37*
J7 - General-Purpose Digital Inputs and Outputs (JOPT Port) *37*
J8 – Handwheel / Pulse and Direction Port (JHW / PD Port) *38*
J10 – Ethernet Communications Port *38*
TB1 – Power Supply Terminal Block (JPWR Connector) *39*
LED Indicators *39*

BASE BOARD E-POINT JUMPER DESCRIPTIONS **40**

E0: FORCED RESET CONTROL 40
E1: SERVO AND PHASE CLOCK DIRECTION CONTROL 40
E2: CPU FREQUENCY SELECT 41
E3: NORMAL/RE-INITIALIZING POWER-UP/RESET 41
E4: CPU FREQUENCY SELECT 41
E8: PHASE CLOCK LINES OUTPUT ENABLE 42
E9: SERVO CLOCK LINES OUTPUT ENABLE 42
E10 – E12: POWER-UP STATE JUMPERS 42
E13: POWER-UP/RESET LOAD SOURCE 43
E14: WATCHDOG DISABLE JUMPER 43
E15A, B, C: FLASH MEMORY BANK SELECT 43
E16: ADC INPUTS ENABLE 44
E18 – E19: PC/104 BUS ADDRESS 44

ACC-1P E-POINT JUMPER DESCRIPTIONS **46**

E0: RESERVED FOR FUTURE USE 46
E1 - E2: MACHINE OUTPUT SUPPLY VOLTAGE CONFIGURE 46
E3 – E4: JHW, PD FUNCTION SELECT 47
E5: SERVO GATE ADDRESS SELECT 47
E6: I/O GATE ADDRESS SELECT 47
E7: MACHINE INPUT SOURCE/SINK CONTROL 47
E16: ADC INPUTS ENABLE 48

ACC-2P E-POINT JUMPER DESCRIPTIONS **50**

E3 – E4: JHW, PD FUNCTION SELECT 50
E5: I/O GATE ADDRESS SELECT 50
E6: COMMUNICATIONS PORT SELECT 50
E7- E10: PORTS DIRECTION CONTROL 50

BASE BOARD CONNECTOR PINOUTS **52**

TB1 (JPWR): POWER SUPPLY 52
J4 (JRS232) SERIAL PORT CONNECTOR 52
J3 (JMACH1): MACHINE PORT CONNECTOR 53
J4 (JMACH2): MACHINE PORT CONNECTOR 54

ACC-1P CONNECTOR PINOUTS **56**

TB1 (JPWR): POWER SUPPLY 56
J2 (JTHW): MULTIPLEXER PORT CONNECTOR 56
J3 (JMACH1): MACHINE PORT CONNECTOR 57
J4 (JMACH2): MACHINE PORT CONNECTOR 59
J7 (JOPTO): I/O PORT CONNECTOR 60

Downloaded from www.Manualslib.com manuals search engine

J8 (JHW) HANDWHEEL ENCODER CONNECTOR 61

ACC-2P CONNECTOR PINOUTS 63

TB1 (JPWR): POWER SUPPLY 63
J1 (USB) UNIVERSAL SERIAL BUS PORT (OPTIONAL) 63
J2 (JTHW): MULTIPLEXER PORT CONNECTOR 64
J7 (JOPT): I/O PORT CONNECTOR 64
J8 (JHW) HANDWHEEL ENCODER CONNECTOR 65
J10 ETHERNET PORT (OPTIONAL) 66

Downloaded from www.Manualslib.com manuals search engine

INTRODUCTION

Overview

The PMAC2A-PC/104 motion controller is a compact, cost-effective version of the Delta Tau's PMAC2 family of controllers. The PMAC2A-PC/104 can be composed of three boards in a stack configuration. The base board provides four channels of either DAC ±10V or pulse and direction command outputs. The optional axis expansion board provides a set of four additional servo channels and I/O ports. The optional communications board provides extra I/O ports and either the USB or Ethernet interface for faster communications.

Board Configuration

Base Version

The base version of the PMAC2A-PC/104 ordered with no options provides a 90mm x 95mm board with:

- 40 MHz DSP563xx CPU (80 MHz 560xx equivalent)
- 128k x 24 internal zero-wait-state SRAM
- 512k x 8 flash memory for user backup & firmware
- Latest released firmware version
- RS-232 serial interface
- 4 channels axis interface circuitry, each including:
- 12-bit ±10V analog output
- Pulse-&-direction digital outputs
- 3-channel differential/single-ended encoder input
- 4 input flags, 2 output flags
- 3 PWM top-and-bottom pairs (unbuffered)
- 50-pin IDC header for amplifier/encoder interface
- 34-pin IDC header for flag interface
- PID/notch/feedforward servo algorithms
- 1-year warranty from date of shipment
- One CD-ROM per set of 1 to 4 PMACs in shipment (Cables, mounting plates, mating connectors not included)



PMAC2A-PC/104 Base Board shown

Option 2A: PC/104 bus stack interface

Option 2A provides the PC/104 bus interface allowing bus communications between a PC/104 type computer and the PMAC2A-PC/104 motion controller.

Option 5xF: CPU Speed Options

- Option 5CF: 80 MHz DSP563xx CPU (160 MHz 56002 equivalent).
- Option 5EF: 160 MHz DSP563xx CPU (320 MHz 56002 equivalent).

Downloaded from www.Manualslib.com manuals search engine

Option 6: Extended Firmware Algorithm

Option 6 provides an Extended (Pole-Placement) Servo Algorithm firmware instead of the regular servo algorithm firmware. This is only required in difficult-to-control systems (resonances, backlash, friction, disturbances, changing dynamics).

Option 6L: Multi-block lookahead firmware

Option 6L provides a special lookahead firmware for sophisticated acceleration and cornering profiles execution. With the lookahead firmware PMAC automatically controls the speed along the path (but without changing the path) to ensure that axis limits are not violated.

Option 10: Firmware Version Specification

Normally the PMAC PCI-Lite is provided with the newest released firmware version. A label on the memory IC shows the firmware version loaded at the factory. Option 10 provides for a user-specified firmware version.

Option 12: Analog-to-Digital Converters

Option 12 permits the installation of 2 channels of on-board analog-to-digital converters with ±10V input range and 12-bits resolution. The key component installed with this option is U20.

ACC-1P: Axis expansion piggyback board

ACC-1P provides 4 additional channels axis interface circuitry for a total of 8 servo channels, each including:

- 12-bit ±10V analog output
- Pulse-&-direction digital outputs
- 3-channel differential/single-ended encoder input
- 4 input flags, 2 output flags
- 3 PWM top-and-bottom pairs (unbuffered)



PMAC2A-PC/104 Base Board shown stack with the ACC-1P

ACC-1P Option 1: I/O ports

Option 1 provides the following ports on the ACC-1P axes expansion board for digital I/O connections.

- Multiplexer Port: this connector provides eight input lines and eight output lines at TTL levels. When using the PMAC ACC-34x type boards these lines allow multiplexing large numbers of inputs and outputs on the port. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.
- I/O Port: this port provides eight general-purpose digital inputs and eight general-purpose digital outputs at 5 to 24 VDC levels. This 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules when different voltage levels or opto-isolation to the PMAC2A-PC/104 is necessary.
- Handwheel port: this port provides 2 extra channels, each jumper selectable between encoder input or pulse output.

ACC-1P Option 2: Analog-to-Digital Converters

Option 2 permits the installation on the ACC-1P of 2 channels of analog-to-digital converters with ±10V input range and 12-bits resolution. The key component installed with this option is U20.

Downloaded from www.Manualslib.com manuals search engine

ACC-2P: Communications Board

Without any options the PMAC2A-PC/104 communicates through the RS-232 serial interface using the optional ACC-3L flat cable. Only one method of communication is allowed at a time.



PMAC2A-PC/104 Base Board shown stack with the Option-1P and Option-2P boards

ACC-2P Option 1A: USB Interface

Option 1A it provides a 12 Mbit/sec USB interface allowing USB communications with the PMAC2A-PC/104 motion controller.

ACC-2P Option 1B: Ethernet Interface

Option 1B provides a 10 Mbit/sec Ethernet interface allowing Ethernet communications with the PMAC2A-PC/104 motion controller.

ACC-2P Option 2: DPRAM circuitry

Option 2 provides an 8K x 16 dual-ported RAM for USB, Ethernet or PC/104 ports on board of the ACC-2P communications board. If using for USB or Ethernet communications, ACC-2P-Opt-1A or ACC-2P-Opt-1B must be ordered. If used for PC/104-bus communications, PMAC2A-PC/104-Opt-2A must be ordered. The key component installed with this option is U17.

Downloaded from www.Manualslib.com manuals search engine

ACC-2P Option 3: I/O ports

Option 3 provides the following ports on the ACC-2P communications board for digital I/O connections.

- Multiplexer Port: this connector provides eight input lines and eight output lines at TTL levels. When using the PMAC ACC-34x type boards these lines allow multiplexing large numbers of inputs and outputs on the port. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.
- I/O Port: this port provides eight general-purpose digital inputs and eight general-purpose digital outputs at 5 to 24 VDC levels. This 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules when different voltage levels or opto-isolation to the PMAC2A-PC/104 is necessary.
- Handwheel port: this port provides 2 extra channels, each jumper selectable between encoder input or pulse output.

ACC-8TS connections board

ACC-8TS is a stack interface board to for the connection of either one or two ACC-28B A/D converter boards. When a digital amplifier with current feedback is used the analog inputs provided by the ACC-28B cannot be used.

ACC-8ES Four channel dual-DAC analog stack board

ACC-8ES provides four channels of 18-bit dual-DAC with four DB-9 connectors. This accessory stack to the PMAC2A-PC/104 board and it is mostly used with amplifiers that require two ±10 V command signals for sinusoidal commutation.

ACC-8FS Four channel direct PWM stack breakout board

ACC-8FS it is a 4-channel direct PWM stack breakout board for PMAC2A-PC/104. This is used for controlling digital amplifiers that require direct PWM control signals. When a digital amplifier with current feedback is used the analog inputs provided by the Opt-12 of the PMAC2A-PC/104, the Opt-2 of the ACC-1P or the ACC-28B could not be used.

Downloaded from www.Manualslib.com manuals search engine

BASE BOARD HARDWARE SETUP

On the PMAC2-PC/104 base board, you will see many jumpers (pairs of metal prongs), called E-points or W-points. Some have been shorted together; others have been left open. These jumpers customize the hardware features of the base board for a given application and must be setup appropriately. The following is an overview of the several jumpers grouped in appropriate categories. For a complete description of the jumper setup configuration please refer to the "PMAC2A-PC/104 E-POINT DESCRIPTIONS" chapter.

Clock configuration jumpers

E1: Servo & Phase Clock Direction Control – Jumper E1 should be OFF if the board is to use its own internally generated phase and servo clock signals. In this case, these signals are output on spare pins on the J8 RS-232 serial-port connector, where they can be used by other PMAC controllers set up to take external phase and servo clock signals.
Jumper E1 should be ON if the board is to use externally generated phase and servo clock signals brought in on the J8 RS-232 serial port connector. In this case, the clock signals are typically generated by another PMAC controller, and output on its serial port connector.
If E1 is ON for external phase and clock signals, and these clock signals are not brought in on the serial port connector, the watchdog timer will trip almost immediately and shut down the board.
E2 and E4: CPU Frequency Control Jumpers – When the PMAC I46 I- variable is set to zero jumpers E2 and E4 on the base PMAC2A-PC/104 board control the frequency at which the CPU will operate (or attempt to operate). Generally this will be the highest frequency at which the CPU is rated to operate. Note that it is always possible to operate a CPU at a frequency lower than its maximum rating. While it may be possible to operate an individual processor at a frequency higher than its maximum rating, particularly at low ambient temperatures, performance cannot be guaranteed at such a setting, and this operation is done completely at the user's own risk.

- If jumpers E2 and E4 are both OFF, the CPU will operate at a 40 MHz frequency.
- If E2 is ON and E4 is OFF, the CPU will operate at a 60 MHz frequency.
- If E2 is OFF and E4 is ON, the CPU will operate at an 80 MHz frequency.

If I46 is set to a value greater than 0, the operational frequency is set to 10MHz * (I46 + 1), regardless of the jumper setting. See the *Software Setup* section for details on this.
E8: phase clock lines output enable – Jump pin 1 to 2 to enable the PHASE clock line on the J8 connector. Remove jumper to disconnect the PHASE clock line on the J8 connector.
E9: servo clock lines output enable – Jump pin 1 to 2 to enable the SERVO clock line on the J8 connector. Remove jumper to disconnect the SERVO clock line on the J8 connector.

Board Reset Jumpers

E0: Forced Reset Control – Remove E0 for normal operation. Installing E0 forces PMAC to a reset state, and this configuration is for factory use only; the board will not operate with E0 installed.
E3: Re-Initialization on Reset Control – If E3 is OFF (default), PMAC executes a normal reset, loading active memory from the last saved configuration in non-volatile flash memory. If E3 is ON, PMAC re-initializes on reset, loading active memory with the factory default values.
E13: Firmware Load Jumper – If jumper E13 is ON during power-up/reset, the board comes up in "bootstrap mode", which permits the loading of new firmware into the flash-memory IC on the board. When the PMAC Executive program tries to establish communications with a board in this mode, it will automatically detect that the board is in bootstrap mode and ask you what file you want to download as the new firmware.
Jumper E13 must be OFF during power-up/reset for the board to come up in normal "operational mode".

Downloaded from www.Manualslib.com manuals search engine

CPU Jumper Configuration

E15A-E15C: Flash Memory Bank Select Jumpers – The flash-memory IC in location U10 on the PMAC2A-PC/104 base board has the capacity for eight separate banks of firmware, only one of which can be used at any given time. The eight combinations of settings for jumpers E15A, E15B, and E15C select which bank of the flash memory is used. In the factory production process, firmware is loaded only into Bank 0, which is selected by having all of these jumpers OFF.
E10-E12: Power-Up State Jumpers – Jumper E10 must be OFF, jumper E11 must be ON, and jumper E12 must be ON, in order for the CPU to copy the firmware from flash memory into active RAM on power-up/reset. This is necessary for normal operation of the card. (Other settings are for factory use only.)
E14: Watchdog Timer Jumper – Jumper E14 must be OFF for the watchdog timer to operate. This is a very important safety feature, so it is vital that this jumper be OFF in normal operation. E14 should only be put ON to debug problems with the watchdog timer circuit.
W1: Flash chip select – Jumper W1 in position 1-2 selects a 28F320J3A part for the U10 flash chip. Jumper W1 in position 2-3 selects a 28F320J5A part for the U10 flash chip. This jumper is installed in factory and must not be changed from its default state.

Communication Jumpers

E18-E19: PC/104 Bus Base Address Control – Jumpers E18 and E19 on the PMAC2A-PC/104 base board determine the base address of the card in the I/O space of the host PC's bus. Together, they specify 4 consecutive addresses on the bus where the card can be found. The jumpers form the base address in the following fashion:

E18	E19	Address (hex)	Address (dec)
OFF	OFF	$200	512
OFF	ON	$210	528
ON	OFF	$220	544
ON	ON	$230	560

The default base address is 528 ($210) formed with jumper E18 removed and E19 installed. This configuration is necessary for using the USB or Ethernet ports of the ACC-2P communications board.

I/O Configuration Jumpers

E16: ADC Enable Jumper – Install E16 to enable the analog-to-digital converter circuitry ordered through Option-12. Remove this jumper to disable this option, which might be necessary to control motor 1 through a digital amplifier with current feedback.

Resistor Packs Configuration

Differential or Single-Ended Encoder Selection

The differential input signal pairs to the PMAC have user-configurable pull-up/pull-down resistor networks to permit the acceptance of either single-ended or differential signals in one setting, or the detection of lost differential signals in another setting.
The '+' inputs of each differential pair each have a hard-wired 1 kΩ pull-up resistor to +5V. This cannot be changed.

Downloaded from www.Manualslib.com manuals search engine

The '-' inputs of each differential pair each have a hard-wired 2.2 kΩ resistor to +5V; each also has another 2.2 kΩ resistor as part of a socketed resistor pack that can be configured as a pull-up resistor to +5V, or a pull-down resistor to GND.
If this socketed resistor is configured as a pull-down resistor (the default configuration), the combination of pull-up and pull-down resistors on this line acts as a voltage divider, holding the line at +2.5V in the absence of an external signal. This configuration is *required* for single-ended inputs using the '+' lines alone; it is desirable for unconnected inputs to prevent the pick-up of spurious noise; it is permissible for differential line-driver inputs.
If this socketed resistor is configured as a pull-up resistor (by reversing the SIP pack in the socket), the two parallel 2.2 kΩ resistors act as a single 1.1 kΩ pull-up resistor, holding the line at +5V in the absence of an external signal. This configuration is *required* if complementary open-collector drivers are used; it is permissible for differential line-driver inputs.
If Pin 1 of the resistor pack, marked by a dot on the pack, matches Pin 1 of the socket, labeled by a white square, then the pack is configured as a bank of pull-down resistors. If the pack is reversed in the socket, it is configured as a bank of pull-up resistors.
The following table lists the pull-up/pull-down resistor pack for each input device:

Device	Resistor Pack	Pack Size
Encoder 1	RP30	6-pin
Encoder 2	RP31	6-pin
Encoder 3	RP36	6-pin
Encoder 4	RP37	6-pin

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

ACC-1P HARDWARE SETUP

On the ACC-1P, you will see many jumpers (pairs of metal prongs), called E-points. Some have been shorted together; others have been left open. These jumpers customize the hardware features of the ACC-1P for a given application and must be setup appropriately. The following is an overview of the several jumpers grouped in appropriate categories. For a complete description of the jumper setup configuration please refer to the "ACC-1P E-POINT DESCRIPTIONS" chapter.

I/O Configuration Jumpers

E1-E2: Machine Output Supply Configure – With the default sinking output driver IC (ULN2803A or equivalent) in U7 for the J7 JOPT port outputs, these jumpers must connect pins 1 and 2 to supply the IC correctly. If this IC is replaced with a sourcing output driver IC (UDN2981A or equivalent), these jumpers must be changed to connect pins 2 and 3 to supply the new IC correctly. *A wrong setting of these jumpers will damage the associated output IC.*
E3-E4: JHW, PD Function Select – When jumper E3 connects pins 1 and 2, a set of pulse and direction signals can be output on channel 1 (pins 2 to 5) of the JHW, PD port. If E3 connects pins 2 and 3 then channel 1 is configured as a handwheel encoder input. When jumper E4 connects pins 1 and 2, a set of pulse and direction signals can be output on channel 2 (pins 6 to 9) of the JHW, PD port. If E4 connects pins 2 and 3 then channel 2 is configured as a handwheel encoder input.
E5: Servo Gate address select – If jumper E5 connects pins 1 and 2 (default) the servo channels on the ACC-1P will be accessed at the regular addresses for motors 5 to 8. When E5 connects pins 2 and 3 the servo channels on the ACC-1P board will be accessed at the regular addresses for motors 5 to 8 plus $40, and this is useful only when two ACC-1P are used with the same PMAC2A-PC/104 base board.
E6: I/O Gate address select – If jumper E6 connects pins 1 and 2 (default) the I/O features on the ACC-1P will be accessed at the regular addresses and the JTHW port can be used as a multiplexer port. When E6 connects pins 2 and 3 the I/O features on the ACC-1P board will be accessed at the regular addresses plus $40, and this is useful only when two ACC-1P are used with the same PMAC2A-PC/104 base board.
E7: Machine Input Source/Sink Control – With this jumper connecting pins 1 and 2 (default) the machine input lines on the J7 JOPT port are pulled up to +5V or the externally provided supply voltage for the port. This configuration is suitable for sinking drivers. If the jumper is changes to connect pins 2 and 3, these lines are pulled down to GND – this configuration is suitable for sourcing drivers.
E16: ADC Enable Jumper – Install E16 to enable the analog-to-digital converter circuitry ordered through Option-2. Remove this jumper to disable this option, which might be necessary to control motor 5 through a digital amplifier with current feedback.

Reserved Configuration Jumpers

E0: Reserved for future use

Resistor Packs Configuration

Differential or Single-Ended Encoder Selection

The differential input signal pairs to the PMAC have user-configurable pull-up/pull-down resistor networks to permit the acceptance of either single-ended or differential signals in one setting, or the detection of lost differential signals in another setting.
The '+' inputs of each differential pair each have a hard-wired 1 kΩ pull-up resistor to +5V. This cannot be changed.

Downloaded from www.Manualslib.com manuals search engine

The '-' inputs of each differential pair each have a hard-wired 2.2 kΩ resistor to +5V; each also has another 2.2 kΩ resistor as part of a socketed resistor pack that can be configured as a pull-up resistor to +5V, or a pull-down resistor to GND.
If this socketed resistor is configured as a pull-down resistor (the default configuration), the combination of pull-up and pull-down resistors on this line acts as a voltage divider, holding the line at +2.5V in the absence of an external signal. This configuration is *required* for single-ended inputs using the '+' lines alone; it is desirable for unconnected inputs to prevent the pick-up of spurious noise; it is permissible for differential line-driver inputs.
If this socketed resistor is configured as a pull-up resistor (by reversing the SIP pack in the socket), the two parallel 2.2 kΩ resistors act as a single 1.1 kΩ pull-up resistor, holding the line at +5V in the absence of an external signal. This configuration is *required* if complementary open-collector drivers are used; it is permissible for differential line-driver inputs.
If Pin 1 of the resistor pack, marked by a dot on the pack, matches Pin 1 of the socket, labeled by a white square, then the pack is configured as a bank of pull-down resistors. If the pack is reversed in the socket, it is configured as a bank of pull-up resistors. The following table lists the pull-up/pull-down resistor pack for each input device:

Device	Resistor Pack	Pack Size
Encoder 1	RP30	6-pin
Encoder 2	RP31	6-pin
Encoder 3	RP36	6-pin
Encoder 4	RP37	6-pin
Handwheel Encoder	RP55	6-pin

Handwheel Encoder Termination Resistors

The PMAC provides a socket for termination resistors on the handwheel encoder differential input pairs coming into the board. As shipped, there is no resistor pack in the RP56 socket. If these signals are brought long distances into the PMAC board and ringing at signal transitions is a problem, a SIP resistor pack may be mounted on the RP56 socket to reduce or eliminate the ringing. The 6-pin termination resistor pack is the type that has independent resistors (no common connection) with each resistor using 2 adjacent pins.

Downloaded from www.Manualslib.com manuals search engine

ACC-2P HARDWARE SETUP

On the ACC-2P, you will see many jumpers (pairs of metal prongs), called E-points. Some have been shorted together; others have been left open. These jumpers customize the hardware features of the ACC-2P for a given application and must be setup appropriately. The following is an overview of the several jumpers grouped in appropriate categories. For a complete description of the jumper setup configuration please refer to the "ACC-2P E-POINT DESCRIPTIONS" chapter.

I/O Configuration Jumpers

E3-E4: JHW, PD Function Select – When jumper E3 connects pins 1 and 2, a set of pulse and direction signals can be output on channel 1 (pins 2 to 5) of the JHW, PD port. If E3 connects pins 2 and 3 then channel 1 is configured as a handwheel encoder input. When jumper E4 connects pins 1 and 2, a set of pulse and direction signals can be output on channel 2 (pins 6 to 9) of the JHW, PD port. If E4 connects pins 2 and 3 then channel 2 is configured as a handwheel encoder input.
E5: I/O Gate address select – If jumper E5 connects pins 1 and 2 the I/O features on the ACC-2P will be accessed at the regular addresses and the JTHW port can be used as a multiplexer port. When E5 connects pins 2 and 3 the I/O features on the ACC-2P board will be accessed at the regular addresses plus $40, and this is necessary only when both ACC-2P and ACC-1P are used with the same PMAC2A-PC/104 base board.
E7-E10: Ports Direction Control – These jumpers select the I/O lines direction of the JTHW and the JOPT connectors. This allows configuring these ports as all inputs, all outputs or half inputs and half outputs according to the following tables:

JTHW Connector			
E7	**E8**	**DATx lines**	**SELx lines**
OFF	OFF	Output	Output
OFF	ON	Output	Input
ON	OFF	Input	Output
ON	ON	Input	Input

JOPT Connector			
E9	**E10**	**MOx lines**	**MIx Lines**
OFF	OFF	Output	Output
OFF	ON	Output	Input
ON	OFF	Input	Output
ON	ON	Input	Input

If E7 is removed or E8 is installed then the multiplexing feature if the JTHW port cannot be used.

Communication Jumpers

E6: Communications Port Selection – When jumper E6 connects pins 1 and 2 the PC/104 communications port is enabled. If E6 connects pins 2 and 3 the Ethernet or USB ports are enabled. Only one port can be used at a time. If either the Ethernet or USB ports are used then jumper E19 on the base board must be installed and jumper E18 on the base board must be removed. In order to communicate through the RS-232 serial port jumper E6 must be installed, either in position 1-2 or 2-3.

Resistor Packs Configuration

Differential or Single-Ended Handwheel Encoder Selection

The handwheel encoder differential input signal pairs to the PMAC have user-configurable pull-up/pull-down resistor networks to permit the acceptance of either single-ended or differential signals in one setting, or the detection of lost differential signals in another setting.

Downloaded from www.Manualslib.com manuals search engine

The '+' inputs of each differential pair each have a hard-wired 1 kΩ pull-up resistor to +5V. This cannot be changed.
The '-' inputs of each differential pair each have a hard-wired 2.2 kΩ resistor to +5V; each also has another 2.2 kΩ resistor as part of a socketed resistor pack that can be configured as a pull-up resistor to +5V, or a pull-down resistor to GND.
If this socketed resistor is configured as a pull-down resistor (the default configuration), the combination of pull-up and pull-down resistors on this line acts as a voltage divider, holding the line at +2.5V in the absence of an external signal. This configuration is *required* for single-ended inputs using the '+' lines alone; it is desirable for unconnected inputs to prevent the pick-up of spurious noise; it is permissible for differential line-driver inputs.
If this socketed resistor is configured as a pull-up resistor (by reversing the SIP pack in the socket), the two parallel 2.2 kΩ resistors act as a single 1.1 kΩ pull-up resistor, holding the line at +5V in the absence of an external signal. This configuration is *required* if complementary open-collector drivers are used; it is permissible for differential line-driver inputs.
If Pin 1 of the resistor pack, marked by a dot on the pack, matches Pin 1 of the socket, labeled by a white square, then the pack is configured as a bank of pull-down resistors. If the pack is reversed in the socket, it is configured as a bank of pull-up resistors.
RP22 is the 6-pin pull-up/pull-down resistor pack for the handwheel encoder input.

Handwheel Encoder Termination Resistors

The PMAC provides a socket for termination resistors on the handwheel encoder differential input pairs coming into the board. As shipped, there is no resistor pack in the RP23 socket. If these signals are brought long distances into the PMAC board and ringing at signal transitions is a problem, a SIP resistor pack may be mounted on the RP23 socket to reduce or eliminate the ringing. The 6-pin termination resistor pack is the type that has independent resistors (no common connection) with each resistor using 2 adjacent pins.

Downloaded from www.Manualslib.com manuals search engine


MACHINE CONNECTIONS

Typically, the user connections are actually made to terminal blocks that are attached to the JMACH connectors by a flat cable. The following are the terminal blocks recommended for connections:

- 34 PIN IDC header to terminal block breakouts (Phoenix part number 2281063) Delta Tau part number 100-FLKM34-000.
- 50 PIN IDC header to terminal block breakouts (Phoenix part number 2281089) Delta Tau part number 100-FLKM50-000.

Mounting

The PMAC2A-PC/104 is always installed using standoffs, either when it is stack to a PC/104 computer or used as a stand-alone controller. At each of the 4 corners of the PMAC2A-PC/104 board there are mounting holes that can be used to mount the board on standoffs.
The PMAC2A-PC/104 base board is always placed at the bottom of the stack. The order of the ACC-1P or ACC-2P with respect to the base board does not matter.

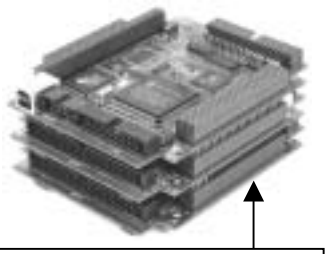

Base board mounted at the bottom of the stack

Power Supplies

Digital Power Supply

3A @ +5V (±5%) (15 W)
(Eight-channel configuration, with a typical load of encoders)
The PMAC2A-PC/104, the ACC-1P and the ACC-2P each require a 1A @ 5 VDC power supply for operation. Therefore, a 3A @ 5 VDC power supply is recommended for a PMAC2A-PC/104 board stack with ACC-1P and ACC-2P boards.

- The host computer provides the 5 Volts power supply in the case PMAC is installed in the PC/104 bus. With the board stack into the bus, it will automatically pull +5V power from the bus and it cannot be disconnected. In this case, there must be no external +5V supply, or the two supplies will "fight" each other, possibly causing damage. This voltage could be measured on the TB1 terminal block or the JMACH1 connector.
- In a stand-alone configuration, when PMAC is not plugged in a computer bus, it will need an external five-volt supply to power its digital circuits. The 5V power supply can be brought in either from the TB1 terminal block or from the JMACH1 connector.

Downloaded from www.Manualslib.com manuals search engine

DAC Outputs Power Supply

0.3A @ +12 to +15V (4.5W)
0.25A @ -12 to -15V (3.8W)
(Eight-channel configuration)

- The host computer provides the ±12 Volts power supply in the case PMAC is installed in the PC/104 bus. With the board stack into the bus, it will automatically pull ±12V power from the bus and it cannot be disconnected. In this case, there must be no external ±12V supply, or the two supplies will "fight" each other, possibly causing damage. This voltage could be measured on the TB1 terminal block.
- **In a stand-alone configuration, when PMAC is not plugged in a computer bus, it will need an external ±12 Volts supply only when the digital-to-analog converter (DAC) outputs are used**. The ±12V lines from the supply, including the ground reference, can be brought in either from the TB1 terminal block or from the JMACH1 connector.

Flags Power Supply


Each channel of PMAC has five dedicated digital inputs on the machine connector: PLIMn, MLIMn (overtravel limits), HOMEn (home flag), FAULTn (amplifier fault), and USERn. A power supply from 5 to 24 Volts must be used to power the circuits related to these inputs. This power supply can be the same used to power PMAC and can be connected from the TB1 terminal block or the JMACH1 connector.

Over-travel Limits and Home Switches


When assigned for the dedicated uses, these signals provide important safety and accuracy functions. PLIMn and MLIMn are direction-sensitive over-travel limits that must conduct current to permit motion in that direction. If no over-travel switches will be connected to a particular motor this feature must be disabled in the software setup through the PMAC Ix25 variable.

Types of overtravel Limits

PMAC expects a closed-to-ground connection for the limits to not be considered on fault. This arrangement provides a failsafe condition. Usually, a passive normally close switch is used. If a proximity switch is needed instead, use a 5 to 24 Volts normally closed to ground NPN sinking type sensor.

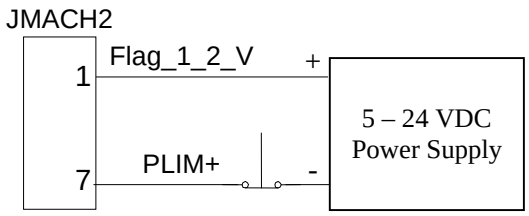

Dry Contact

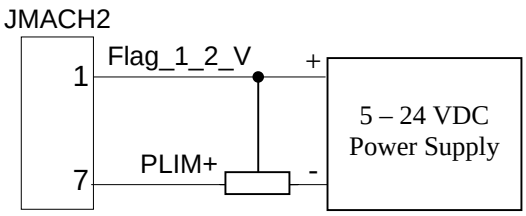

5-24 Volts proximity

Home switches

While normally closed-to-ground switches are required for the overtravel limits inputs, the home switches could be either normally close or normally open types. The polarity is determined by the home sequence

Downloaded from www.Manualslib.com manuals search engine


setup, through the I-variables I9n2. However, for the following reasons, the same type of switches used for over-travel limits are recommended:

- Normally closed switches are proven to have greater electrical noise rejection than normally open types.
- Using the same type of switches for every input flag simplifies maintenance stock and replacements.

Motor signals connections


Incremental Encoder Connection

Each JMACH1 connector provides two +5V outputs and two logic grounds for powering encoders and other devices. The +5V outputs are on pins 1 and 2; the grounds are on pins 3 and 4. The encoder signal pins are grouped by number: all those numbered 1 (CHA1+, CHA1-, CHB1+, CHC1+, etc.) belong to encoder #1. *The encoder number does not have to match the motor number, but usually does.* Connect the A and B (quadrature) encoder channels to the appropriate terminal block pins. For encoder 1, the CHA1+ is pin 5, CHB1+ is pin 9. *If you have a single-ended signal, leave the complementary signal pins floating -- do not ground them.* However, if single-ended encoders are used, please check the settings of the resistor packs (see the *Hardware Setup* section for details). For a differential encoder, connect the complementary signal lines -- CHA1- is pin 7, and CHB1- is pin 11. The third channel (index pulse) is optional; for encoder 1, CHC1+ is pin 13, and CHC1- is pin 15.
Example: differential quadrature encoder connected to channel #1:

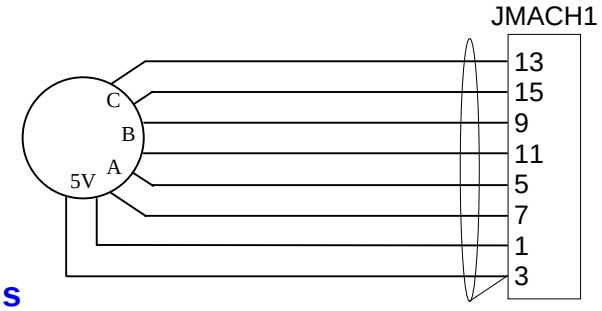

DAC Output signals


If PMAC is not performing the commutation for the motor, only one analog output channel is required to command the motor. This output channel can be either single-ended or differential, depending on what the amplifier is expecting. For a single-ended command using PMAC channel 1, connect DAC1+ (pin 29) to the command input on the amplifier. Connect the amplifier's command signal return line to PMAC's GND line (pin 48). *In this setup, leave the* DAC1- *pin floating; do not ground it.*
For a differential command using PMAC channel 1, connect DAC1 (pin 29) to the plus-command input on the amplifier. Connect DAC1- (pin 31) to the minus-command input on the amplifier. PMAC's GND should still be connected to the amplifier common.
If you need to limit the range of each signal to ±5V, you will do so with parameter Ix69. Any analog output not used for dedicated servo purposes may be utilized as a general-purpose analog output. Usually this is done by defining an M-variable to the digital-to-analog-converter register (suggested M-variable definitions M102, M202, etc.), then writing values to the M-variable. The analog outputs are intended to drive high-impedance inputs with no significant current draw. The 220Ω output resistors will keep the current draw lower than 50 mA in all cases and prevent damage to the output circuitry, but any current draw above 10 mA can result in noticeable signal distortion.
Example:

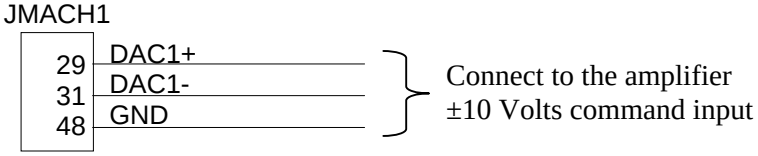

Downloaded from www.Manualslib.com manuals search engine


Pulse and Direction (Stepper) Drivers

The channels provided by the PMAC2A-PC/104 board or the ACC-1P board can output pulse and direction signals for controlling stepper drivers or hybrid amplifiers. These signals are at TTL levels.

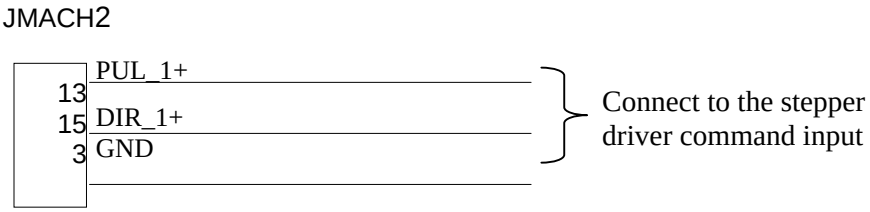


Amplifier Enable Signal (AENAx/DIRn)

Most amplifiers have an enable/disable input that permits complete shutdown of the amplifier regardless of the voltage of the command signal. PMAC's AENA line is meant for this purpose. AENA1- is pin 33. This signal is an open-collector output and an external 3.3 kΩ pull-up resistor can be used if necessary.

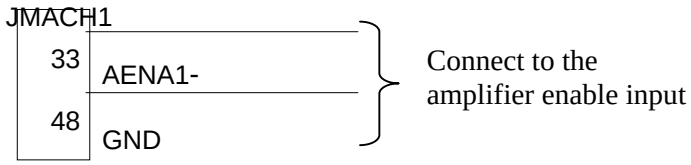

Amplifier Fault Signal (FAULT-)

This input can take a signal from the amplifier so PMAC knows when the amplifier is having problems, and can shut down action. The polarity is programmable with I-variable Ix25 (I125 for motor #1) and the return signal is ground (GND). FAULT1- is pin 35. With the default setup, this signal must actively be pulled low for a fault condition. In this setup, if nothing is wired into this input, PMAC will consider the motor not to be in a fault condition.

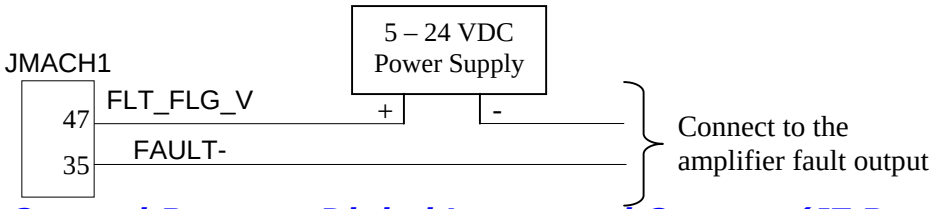

ACC-1P General-Purpose Digital Inputs and Outputs (J7 Port)

ACC-1P J7 connector provides eight general-purpose digital inputs and eight general-purpose digital outputs. Each input and each output has its own corresponding ground pin in the opposite row. The 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules. Delta Tau's Accessory 21F is a six-foot cable for this purpose. Characteristics of the JOPTO port on the PMAC:

- 16 I/O points. 100 mA per channel, up to 24V
- Hardware selectable between sinking and sourcing in groups of 8; default is all sinking (inputs can be changed simply by moving a jumper; sourcing outputs must be special-ordered or field-configured)
- 8 inputs, 8 outputs only; no changes. Parallel (fast) communications to PMAC CPU
- Not opto-isolated; easily connected to Opto-22 (PB16) or similar modules through ACC-21F cable

Downloaded from www.Manualslib.com manuals search engine

Jumper E7 on the ACC-1P board controls the configuration of the eight inputs. If it connects pins 1 and 2 (the default setting), the inputs are biased to +5V for the "OFF" state, and they must be pulled low for the "ON" state. If E7 connects pins 2 and 3, the inputs are biased to ground for the "OFF" state, and must be pulled high for the "ON" state. In either case, a high voltage is interpreted as a '0' by the PMAC software, and a low voltage is interpreted as a '1'.

PMAC is shipped standard with a ULN2803A sinking (open-collector) output IC for the eight outputs. These outputs can sink up to 100 mA and have an internal 3.3 kΩ pull-up resistor to go high (RP18). **Do not connect these outputs directly to the supply voltage, or damage to the PMAC will result from excessive current draw.** The user can provide a high-side voltage (+5 to +24V) into Pin 33 of the J7 connector, and allow this to pull up the outputs by connecting pins 1 and 2 of Jumper E1. Jumper E2 must also connect pins 1 and 2 for a ULN2803A sinking output.


It is possible for these outputs to be sourcing drivers by substituting a UDN2981A IC for the ULN2803A. This U7 IC is socketed, and so may easily be replaced. Usually the U7 IC is offset by two pins on its socket, and so pins 1 and 2 usually remain open.

WARNING

Having Jumpers E1 and E2 set wrong can damage the IC. The +V output on this connector has a 2 A fuse, F1, for excessive current protection.

For this driver, the internal resistor packs pull-down instead. With a UDN2981A driver IC, Jumper E1 must connect pins 2 and 3, and Jumper E2 must connect pins 2 and 3.

Example: Standard configuration using the ULN2803A sinking (open-collector) output IC

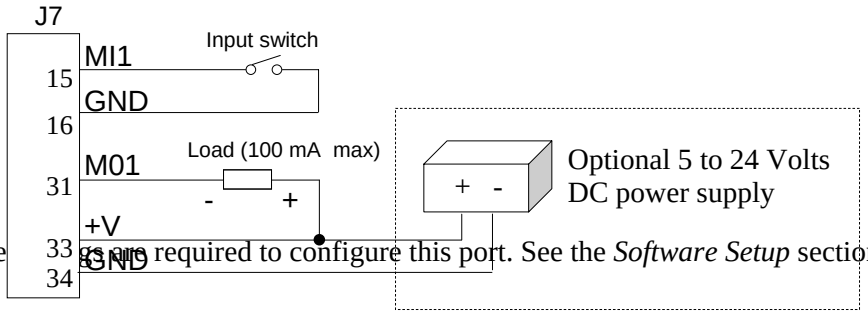

Further software settings are required to configure this port. See the *Software Setup* section for details on this.

ACC-2P General-Purpose Digital Inputs and Outputs (JOPT Port)

ACC-2P JOPT connector provides sixteen lines of general-purpose I/O. In contrast with the ACC-1P J7 connector, the lines on the ACC-2P JOPT connector are limited to TTL levels and are usually used with external I/O modules. Each I/O line has its own corresponding ground pin in the opposite row. The 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules. Delta Tau's Accessory 21F is a six-foot cable for this purpose.

Jumpers E9 and E10 on the ACC-2P board select the I/O lines direction of the JOPT connector. This allows configuring this port as all inputs, all outputs or half inputs and half outputs. Further software settings are required to configure this port. See the *Software Setup* section for details on this.

ACC-1P Thumbwheel Multiplexer Port (J2 Port)

The Thumbwheel Multiplexer Port, or Multiplexer Port, on the J2 connector has eight input lines and eight output lines. The output lines can be used to multiplex large numbers of inputs and outputs on the port, and Delta Tau provides accessory boards and software structures (special M-variable definitions) to capitalize on this feature. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination. Either the ACC-1P or the ACC-2P boards, but not both, can use this connector as a

Downloaded from www.Manualslib.com manuals search engine

multiplexing port. This is selected by jumper E6 on the ACC-1P board and jumper E5 on the ACC-2P board.
Alternatively, the inputs and outputs on this port may be used as discrete, non-multiplexed I/O. In this case these I/O lines can be accessed through M-variables. See the *Software Setup* section for details on this.

ACC-2P Thumbwheel Multiplexer Port (JTHW Port)


The Thumbwheel Multiplexer Port, or Multiplexer Port, on the JTHW connector has sixteen lines. These lines can be used to multiplex large numbers of inputs and outputs on the port, and Delta Tau provides accessory boards and software structures (special M-variable definitions) to capitalize on this feature. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination. Either the ACC-1P or the ACC-2P boards, but not both, can use this connector as a multiplexing port. This is selected by jumper E6 on the ACC-1P board and jumper E5 on the ACC-2P board.
Alternatively, the inputs and outputs on this port may be used as discrete, non-multiplexed I/O. In this case these I/O lines can be accessed through M-variables. See the *Software Setup* section for details on this.
When used as non-multiplexed I/O jumpers E7 and E8 on the ACC-2P board select the I/O lines direction of the JTHW connector. This allows configuring this port as all inputs, all outputs or half inputs and half outputs. If E7 is removed or E8 is installed then the multiplexing feature if the JTHW port cannot be used.

ACC-1P or ACC-2P Handwheel Port (JHW / PD Port)

This port provides an extra encoder input or a set of pulse and direction outputs. Jumpers E3 and E4 on either the ACC-1P or ACC-2P boards select the function of this connector between encoder input or pulse and direction outputs. The handwheel encoder input can be linked to a servomotor for manual displacement or used by a motor as a secondary encoder for dual-feedback applications. There is no 'C' index channel input on the handwheel encoder port. The pulse and direction outputs can be used, for example, to control an external laser device but not a stepper driver\motor, since this would require more than eight axes of motion control.


Optional Analog Inputs

The optional analog-to-digital converter inputs are ordered either through Option-12 on the base board or Option-2 on the axes expansion board. Each option provides two 12-bit analog inputs analog inputs with a ±10 VDC range.

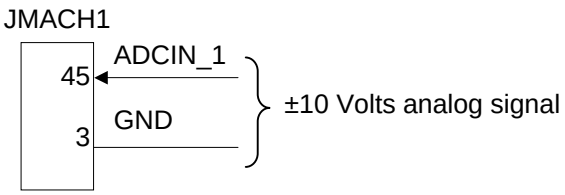

Compare Equal Outputs


The compare-equals (EQU) outputs have a dedicated use of providing a signal edge when an encoder position reaches a pre-loaded value. This is very useful for scanning and measurement applications. Instructions for use of these outputs are covered in detail in the PMAC2's User Manual.

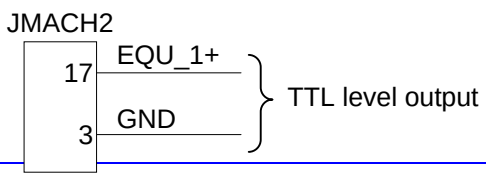

Downloaded from www.Manualslib.com manuals search engine

Serial Port (JRS232 Port)

For serial communications, use a serial cable to connect your PC's COM port to the J8 serial port connector present on the PMAC2A-PC/104 base board. Delta Tau provides the Accessory 3L cable for this purpose that connects the PMAC to a DB-9 connector. Standard DB-9-to-DB-25 or DB-25-to-DB-9 adapters may be needed for your particular setup. If a cable needs to be made, the easiest approach is to use a flat cable prepared with flat-cable type connectors as indicated in the following diagram:

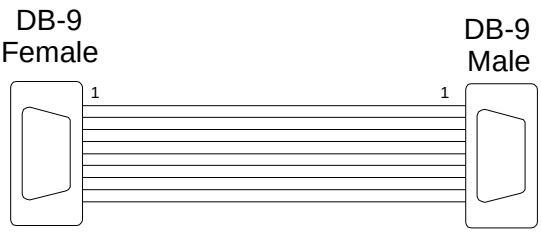

PMAC (DB-9S)	PC (DB-9)
1 (No connect)	1 (No connect)
2 (TXD/)	2 (RXD)
3 (RXD/)	3 (TXD)
4 (DSR)	4 (DTR)
5 (Gnd)	5 (Gnd)
6 (DTR)	6 (DSR)
7 (CTS)	7 (RTS)
8 (RTS)	8 (CTS)
9 (No connect)	9 (No connect)

ACC-2P Ethernet RJ45 Connector (J10 Port)

This connector is used for Ethernet communications from the ACC-2P to a PC, and it is provided when ACC-2P Option 1B is ordered. The PC must have a card dedicated solely to the PMAC network. The appropriate Category 5 10/100-Base T network cable that mates to this connector can be readily purchased from any local computer store. The type of network cable to purchase depends on the configuration to the host PC.

When making a **direct** connection to a Host communication Ethernet card in a PC a "cat 5 networking crossover cable" **must** be used. A standard cat 5 straight through networking cable cannot be used in this scenario. When using a connection to a network hub or switch, the standard cat 5 straight through networking cable must be used, and not a crossover cable.


Performance can be degraded seriously by the use of a hub or switch. Network hubs or the more intelligent network switches have processors inside them, which can add delays of at least 15msec to the PMAC communications.

ACC-2P USB Connector (J1 Port)

This connector is to be used in conjunction with USB A-B cable, which can be purchased from any local computer store, and it is provided when ACC-2P Option 1A is ordered. The A connector is connected to a PC or Hub device; the B connector plugs into the ACC-2P J1 port.

Downloaded from www.Manualslib.com manuals search engine

Machine Connections Example: Using Analog ±10 Volts AmplifieR

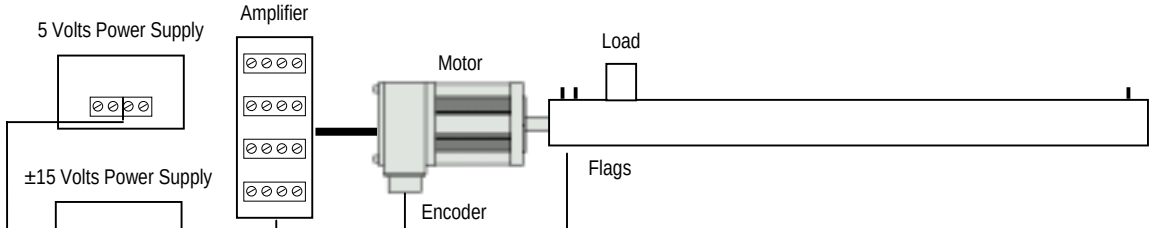


#1 Pin #	#2 Pin #	#3 Pin #	#4 Pin #	SYMBOL	
5	6	19	20	HOMEn	JMACH2
7	8	21	22	PLIMn	
9	10	23	24	MLIMn	
1	1	2	2	Flag_V	
3	3	4	4	Gnd	

#1 Pin #	#2 Pin #	#3 Pin #	#4 Pin #	SYMBOL	
1	2	1	2	+5V	JMACH1
3	4	3	4	GND	
5	6	17	18	CHAn+	
7	8	19	20	CHAn-	
9	10	21	22	CHBn+	
11	12	23	24	CHBn-	
13	14	25	26	CHCn+	
15	16	27	28	CHCn-	
29	30	37	38	DACn+	
31	32	39	40	DACn-	
33	34	41	42	AENAn	
35	36	43	44	FAULTn	
47				FLT_FLG_V	
48				GND	
49				+12 to +15V	
50				-12 to -15V	
48				Gnd	
3				Gnd	
1				5V	

Note: The 5V and ±12V external power supplies are only required when PMAC is not installed in a PC/104

Downloaded from www.Manualslib.com manuals search engine

Machine Connections Example: using pulse and direction drivers

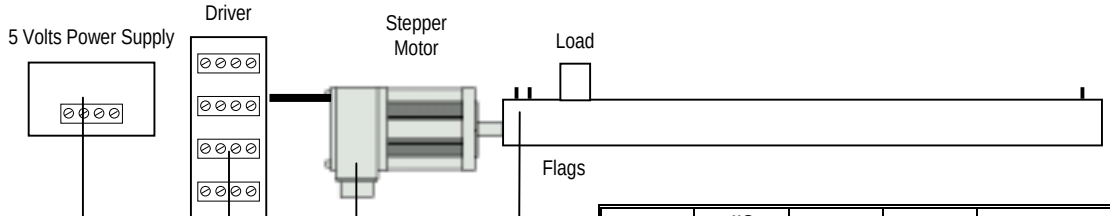

#1 Pin #	#2 Pin #	#3 Pin #	#4 Pin #	SYMBOL	
5	6	19	20	HOMEn	JMACH2
7	8	21	22	PLIMn	
9	10	23	24	MLIMn	
1	1	2	2	Flag_V	
3	3	4	4	Gnd	

#1 Pin #	#2 Pin #	#3 Pin #	#4 Pin #	SYMBOL	
1	2	1	2	+5V	JMACH1
3	4	3	4	GND	
5	6	17	18	CHAn+	
7	8	19	20	CHAn-	
9	10	21	22	CHBn+	
11	12	23	24	CHBn-	
13	14	25	26	CHCn+	
15	16	27	28	CHCn-	

Note: The 5V external power supply is only required when PMAC is not installed in a PC/104

#1 Pin #	#2 Pin #	#3 Pin #	#4 Pin #	SYMBOL	
13	14	27	28	PUL_n+	JMACH2
15	16	29	30	DIR_n+	
3	4	3	4	GND	

Pin #	SYMBOL	
1	5V	JMACH1
3	Gnd	

Downloaded from www.Manualslib.com manuals search engine

PMAC2A-PC/104 SOFTWARE SETUP

Note:

The PMAC2A-PC/104 requires the use of V1.17 or newer firmware. There are few differences between the previous V1.16H firmware and the V1.17 firmware other than the addition of internal support for the Flex CPU design.

Communications

Delta Tau provides software tools that allow communicating with of the PMAC2A-PC/104 board either by its standard RS-232 port or the optional USB or Ethernet ports. PEWIN is the most important in the series of software accessories, and it allows configuring and programming the PMAC for any particular application.

PMAC I-Variables

PMAC has a large set of Initialization parameters (I-variables) that determine the "personality" of the card for a specific application. Many of these are used to configure a motor properly. Once set up, these variables may be stored in non-volatile EAROM memory (using the **SAVE** command) so the card is always configured properly (PMAC loads the EAROM I-variable values into RAM on power-up). The programming features and configuration variables for the PMAC2A-PC/104 are fully described in the PMAC2 User's and Software manuals.

Operational Frequency and Baud Rate Setup

Note:

Older PMAC boards required a start-up PLC for setting the operational frequency at 80 MHz. **That method is not compatible with the PMAC2A-PC/104 board and will shutdown the board when used.**

The operational frequency of the CPU can be set in software by the variable I46. If this variable is set to 0, PMAC firmware looks at the jumpers E2 and E4 to set the operational frequency for 40, 60, and 80 MHz operation. If I46 is set to a value greater than 0, the operational frequency is set to 10MHz * (I46 + 1), regardless of the jumper setting. If the desired operational frequency is higher than the maximum rated frequency for that CPU, the operational frequency will be reduced to the rated maximum. It is always possible to operate the Flex CPU board at a frequency below its rated maximum.

I46 is only used at power-up/reset, so to change the operational frequency, set a new value of I46, issue a **SAVE** command to store this value in non-volatile flash memory, then issue a **$$$** command to reset the controller.

To determine the frequency at which the CPU is actually operating, issue the **TYPE** command to the PMAC. The PMAC will respond with five data items, the last of which is "CLK X*n*", where "*n*" is the multiplication factor from the 20 MHz crystal frequency (not 10 MHz). "*n*" should be equivalent to (I46+1)/2 if I46 is not requesting a frequency greater than the maximum rated for that CPU board. "*n*" will be "2" for 40 MHz operation, "4" for 80 MHz operation, and "8" for 160 MHz operation.

If the CPU's operational frequency has been determined by (a non-zero setting of) I46, the serial communications baud rate is determined at power-up/reset by variable I54 alone according to the

Downloaded from www.Manualslib.com manuals search engine

following table:

I54	Baud Rate	I54	Baud Rate
0	600	8	9600
1	900	9	14,400
2	1200	10	19,200
3	1800	11	28,800
4	2400	12	38,400
5	3600	13	57,600
6	4800	14	76,800
7	7200	15	115,200

For a saved value of 0 for I46, the serial baud rate is determined by the combination of I54 and the CPU frequency as shown in the following table.

I54	Baud Rate for 40 MHz CPU	Baud Rate for 60 MHz CPU	Baud Rate for 80 MHz CPU
0	600	DISABLED	1200
1	900* (-0.05%)	900	1800* (-0.1%)
2	1200	1200	2400
3	1800* (-0.1%)	1800	3600* (-0.19%)
4	2400	2400	4800
5	3600* (-0.19%)	3600	7200* (-0.38%)
6	4800	4800	9600
7	7200* (-0.38%)	7200	14,400*(-0.75%)
8	9600	9600	19,200
9	14,400*(-0.75%)	14,400	28,800*(-1.5%)
10	19,200	19,200	38,400
11	28,800*(-1.5%)	28,800	57,600*(-3.0%)
12	38,400	38,400	76,800
13	57,600*(-3.0%)	57,600	115,200*(-6.0%)
14	76,800	76,800	153,600
15	DISABLED	115,200	DISABLED
* Not an exact baud rate			

DAC Outputs Configuration

The following I-variables has to be properly set for using the digital-to-analog (DAC) outputs:

```
I900   =   1001
I901   =   2
I902   =   3
I906   =   1001
I9n6   =   0          ; n = channel number from 1 to 8
Ix69   =   1024       ; x = motor number from 1 to 8
```


Downloaded from www.Manualslib.com manuals search engine

```
I10    =    1710933
```

Using Flag I/O as General-Purpose I/O

Either the “user flags” or other not assigned axes flag on the base board can be used as general-purpose I/O for up to 20 inputs and 4 outputs at 5-24 VDC levels. The indicated suggested M-variables definitions, which are defined in the PMAC2 Software reference, allows accessing each particular line according to the following table:

Flag	Type	Channel Number			
		#1	#2	#3	#4
HOME	5-24 VDC Input	M120	M220	M320	M420
PLIM	5-24 VDC Input	M121	M221	M321	M421
MLIM	5-24 VDC Input	M122	M222	M322	M422
USER	5-24 VDC Input	M115	M215	M315	M415
AENA	5-24 VDC Output	M114	M214	M314	M414

Note

When using these lines as regular I/O points the appropriate setting of the Ix25 variable must be used to enable or disable the safety flags feature.

General-Purpose Digital Inputs and Outputs

If one ACC-1P is present on the PMAC2A-PC/104 stack configuration then its jumpers E5 and E6 should be set at the default position 1-2. In this case the lines on its J7 general-purpose I/O connector will be mapped into PMAC's address space in register Y:$C080. Jumpers E5 and E6 should be configured on position 2-3 only when two ACC-1P are used. In this case, the I/O lines can be accessed at address Y:$C0C0.
If no ACC-1P is present on the PMAC2A-PC/104 stack configuration, and only ACC-2P is used, then jumper E5 on the ACC-2P board should connect pins 1 and 2. In this case the lines on its JOPT general-purpose I/O connector will be mapped into PMAC's address space in register Y:$C080.

If both ACC-1P and ACC-2P are used then jumper E5 on the ACC-2P board should connect pins 2 and 3 and its I/O lines can be accessed at address Y:$C0C0.
Typically these I/O lines are accessed individually with M-variables. Following is a suggested set of M-variable definitions to use these data lines.

ACC-1P with jumper E6 on position 1-2

```
M0->Y:$C080,0          ; Digital Output M00
M1->Y:$C080,1          ; Digital Output M01
M2->Y:$C080,2          ; Digital Output M02
M3->Y:$C080,3          ; Digital Output M03
M4->Y:$C080,4          ; Digital Output M04
M5->Y:$C080,5          ; Digital Output M05
M6->Y:$C080,6          ; Digital Output M06
M7->Y:$C080,7          ; Digital Output M07
```


Downloaded from www.Manualslib.com manuals search engine

```
M8->Y:$C080,8          ; Digital Input MI0
M9->Y:$C080,9          ; Digital Input MI1
M10->Y:$C080,10        ; Digital Input MI2
M11->Y:$C080,11        ; Digital Input MI3
M12->Y:$C080,12        ; Digital Input MI4
M13->Y:$C080,13        ; Digital Input MI5
M14->Y:$C080,14        ; Digital Input MI6
M15->Y:$C080,15        ; Digital Input MI7
M32->X:$C080,0,8       ; Direction Control (1=output,  0 = input)
M34->X:$C080,8,8       ; Direction Control (1=output,  0 = input)
M40->X:$C084,0,24      ; Inversion control (0 = 0V, 1 = 5V)
M42->Y:$C084,0,24      ; J7 port data type control (1 = I/O)
```

In order to properly setup the digital outputs an initialization PLC must be written scanning through once on power-up/reset, then disabling itself:

```
OPEN PLC1 CLEAR
      M32=$FF          ;BITS 0-8 are assigned as output
      M34=$0           ;BITS 9-16 are assigned as input
      M40=$FF00        ;Define inputs and outputs voltages
      M42=$FFFF        ;All lines are I/O type
      DIS PLC1         ;Disable PLC1 (scanning through once on power-up/reset)
CLOSE
```

Note

After loading this program you must set I5=2 or 3 and ENABLE PLC 1.

ACC-2P with jumper E5 in position 2-3

```
M0->Y:$C0C0,0          ; Digital Output M00
M1->Y:$C0C0,1          ; Digital Output M01
M2->Y:$C0C0,2          ; Digital Output M02
M3->Y:$C0C0,3          ; Digital Output M03
M4->Y:$C0C0,4          ; Digital Output M04
M5->Y:$C0C0,5          ; Digital Output M05
M6->Y:$C0C0,6          ; Digital Output M06
M7->Y:$C0C0,7          ; Digital Output M07
M8->Y:$C0C0,8          ; Digital Input MI0
M9->Y:$C0C0,9          ; Digital Input MI1
M10->Y:$C0C0,10        ; Digital Input MI2
M11->Y:$C0C0,11        ; Digital Input MI3
M12->Y:$C0C0,12        ; Digital Input MI4
M13->Y:$C0C0,13        ; Digital Input MI5
M14->Y:$C0C0,14        ; Digital Input MI6
M15->Y:$C0C0,15        ; Digital Input MI7
M32->X:$C0C0,0,8       ; Direction Control (1=output,  0 = input)
M34->X:$C0C0,8,8       ; Direction Control (1=output,  0 = input)
M40->X:$C0C4,0,24      ; Inversion control (0 = 0V, 1 = 5V)
M42->Y:$C0C4,0,24      ; JI/O port data type control (1 = I/O)
```


Downloaded from www.Manualslib.com manuals search engine

In order to properly setup the digital outputs an initialization PLC must be written scanning through once on power-up/reset, then disabling itself:

```
OPEN PLC1 CLEAR
      M32=$FF                ;BITS 0-8 are assigned as output
      M34=$0                 ;BITS 9-16 are assigned as input
      M40=$FFFF              ;Define inputs and outputs voltages
      M42=$FFFF              ;All lines are I/O type
      DIS PLC1               ;Disable PLC1 (scanning through once on power-up/reset)
CLOSE
```

Note

After loading this program you must set I5=2 or 3 and ENABLE PLC 1

Thumbwheel Port Digital Inputs and Outputs

The inputs and outputs on the thumbwheel multiplexer port of either the ACC-1P or ACC-2P boards may be used as discrete, non-multiplexed I/O. In this case these I/O lines can be accessed through M-variables that are defined according to the setup of the address selection jumpers. Jumper E6 on the ACC-1P or E5 on the ACC-2P determine which set of the following M-variables are used:

ACC-1P with Jumper E6 in Position 1-2

```
M40->Y:$C082,8,1       ; SEL0 Output
M41->Y:$C082,9,1       ; SEL1 Output
M42->Y:$C082,10,1      ; SEL2 Output
M43->Y:$C082,11,1      ; SEL3 Output
M44->Y:$C082,12,1      ; SEL4 Output
M45->Y:$C082,13,1      ; SEL5 Output
M46->Y:$C082,14,1      ; SEL6 Output
M47->Y:$C082,15,1      ; SEL7 Output
M48->Y:$C082,8,8,U     ; SEL0-7 Outputs treated as a byte
M50->Y:$C082,0,1       ; DAT0 Input
M51->Y:$C082,1,1       ; DAT1 Input
M52->Y:$C082,2,1       ; DAT2 Input
M53->Y:$C082,3,1       ; DAT3 Input
M54->Y:$C082,4,1       ; DAT4 Input
M55->Y:$C082,5,1       ; DAT5 Input
M56->Y:$C082,6,1       ; DAT6 Input
M57->Y:$C082,7,1       ; DAT7 Input
M58->Y:$C082,0,8,U     ; DAT0-7 Inputs treated as a byte
```

ACC-2P with Jumper E5 in Position 2-3

```
M40->Y:$C0C2,8,1       ; SEL0 I/O Line
M41->Y:$C0C2,9,1       ; SEL1 I/O Line
M42->Y:$C0C2,10,1      ; SEL2 I/O Line
M43->Y:$C0C2,11,1      ; SEL3 I/O Line
M44->Y:$C0C2,12,1      ; SEL4 I/O Line
M45->Y:$C0C2,13,1      ; SEL5 I/O Line
```


Downloaded from www.Manualslib.com manuals search engine

```
M46->Y:$C0C2,14,1        ; SEL6 I/O Line
M47->Y:$C0C2,15,1        ; SEL7 I/O Line
M48->Y:$C0C2,8,8,U       ; SEL0-7 I/O Lines treated as a byte
M50->Y:$C0C2,0,1         ; DAT0 I/O Line
M51->Y:$C0C2,1,1         ; DAT1 I/O Line
M52->Y:$C0C2,2,1         ; DAT2 I/O Line
M53->Y:$C0C2,3,1         ; DAT3 I/O Line
M54->Y:$C0C2,4,1         ; DAT4 I/O Line
M55->Y:$C0C2,5,1         ; DAT5 I/O Line
M56->Y:$C0C2,6,1         ; DAT6 I/O Line
M57->Y:$C0C2,7,1         ; DAT7 I/O Line
M58->Y:$C0C2,0,8,U       ; DAT0-7 I/O Lines treated as a byte
```

Analog Inputs Setup

The optional analog-to-digital converter inputs are ordered either through Option-12 on the base board or Option-2 on the axes expansion board. Each option provides two 12-bit analog inputs with a ±10 VDC range. The M-variables associated with these inputs provided a range of values between +2048 and –2048 for the respective ±10 VDC input range. The following is the software procedure to setup and read these ports.

Base Board Analog Inputs

```
I903 = 1746                ; Set ADC clock frequency at 4.9152 MHz
WX:$C014, $1FFFFF          ; Clock strobe set for bipolar inputs
M105->X:$0710,12,12,S      ; ADCIN_1 on JMACH1 connector pin 45
M205->X:$0711,12,12,S      ; ADCIN_2 on JMACH1 connector pin 46
```

ACC-1P Analog Inputs

```
I903 = 1746                ; Set ADC clock frequency at 4.9152 MHz
WX:$C034, $1FFFFF          ; Clock strobe set for bipolar inputs
M505->X:$0714,12,12,S      ; ADCIN_1 on JMACH1 connector pin 45
M205->X:$0715,12,12,S      ; ADCIN_2 on JMACH1 connector pin 46
```



Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine


BASE BOARD HARDWARE REFERENCE SUMMARY

The following information is based on the PMAC2A-PC/104 board Part Number 603670-100

Board Dimensions

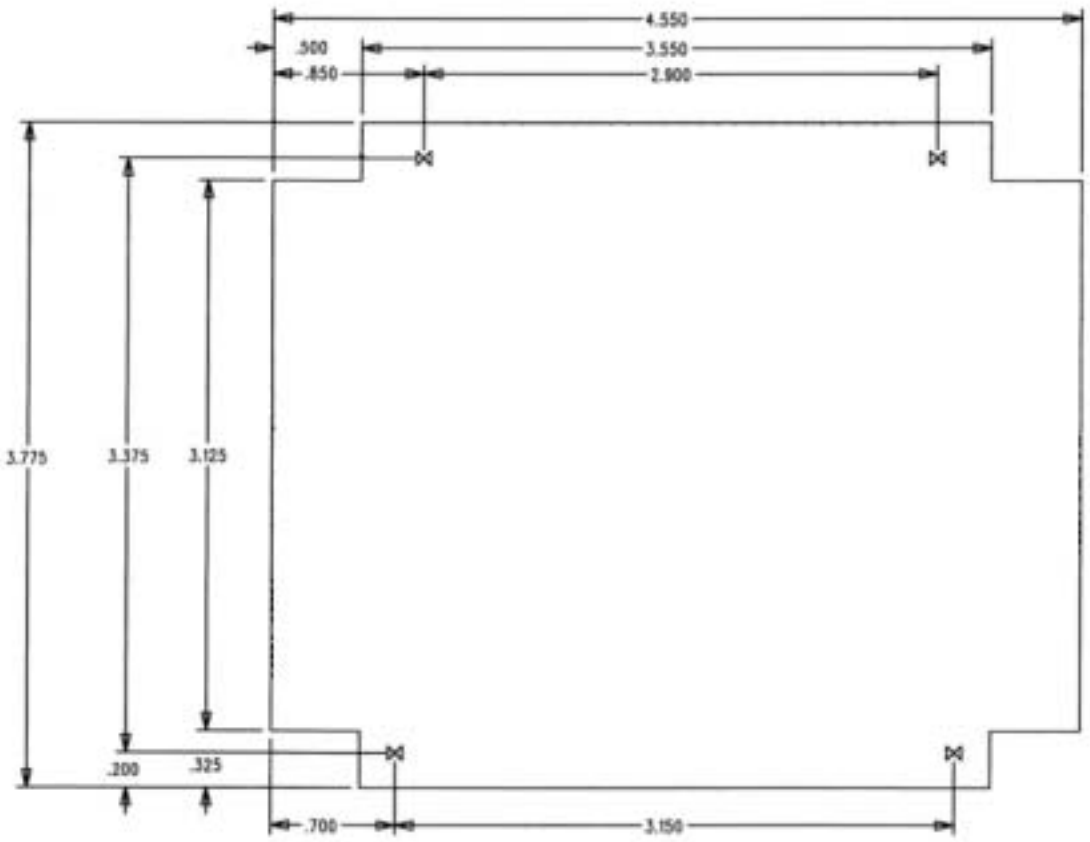

Board Layout

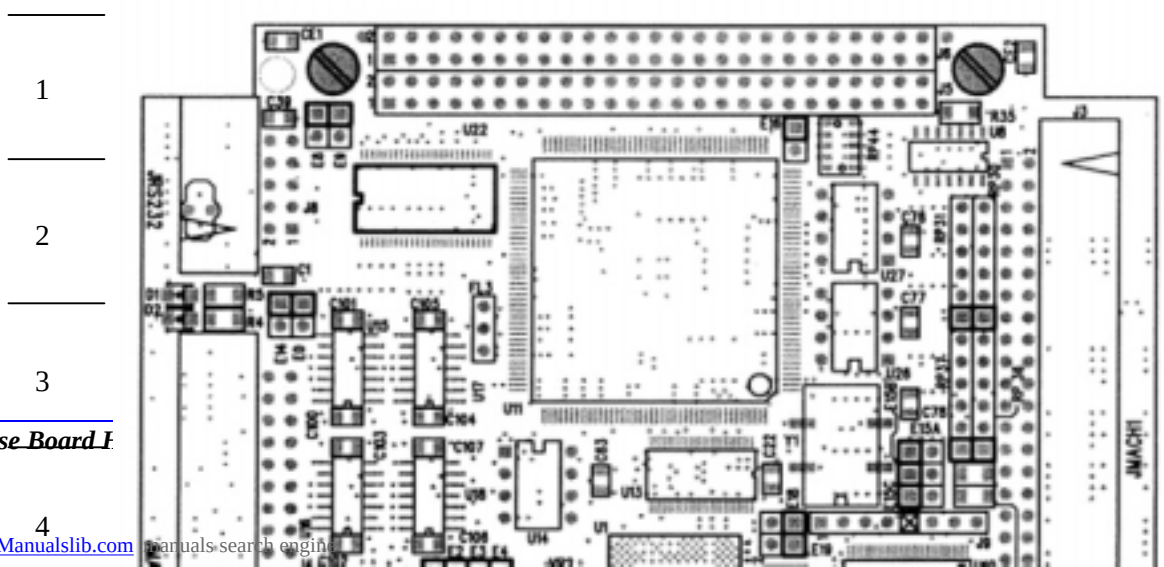

Downloaded from www.Manualslib.com manuals search engine

Feature	Location	Feature	Location	Feature	Location
E0	B3	**E13**	E5	**RP30**	E2
E1	B4	**E14**	B3	**RP31**	E2
E2	B4	**E15A**	E4	**RP36**	E3
E3	C4	**E15B**	E4	**RP37**	E3
E4	C4	**E15C**	E4	**D1**	A2
E8	B1	**E16**	D1	**D2**	A3
E9	B1	**E18**	D4	**TB1**	B6
E10	E5	**E19**	D4	**JRS232**	A2
E11	E5	**W1**	E6	**JMACH1**	F3
E12	E5			**JMACH2**	A4

Connectors and Indicators

J3 - Machine Connector (JMACH1 Port)

The primary machine interface connector is JMACH1, labeled J3 on the PMAC. It contains the pins for four channels of machine I/O: analog outputs, incremental encoder inputs, amplifier fault and enable signals and power-supply connections.

1. 50-pin female flat cable connector. T&B Ansley P/N 609-5041
2. Standard flat cable stranded 50-wire. T&B Ansley P/N 171-50
3. Phoenix varioface module type FLKM 50 (male pins) P/N 22 81 08 9

J4 - Machine Connector (JMACH2 Port)

This machine interface connector is labeled JMACH2 or J4 on the PMAC. It contains the pins for four channels of machine I/O: end-of-travel input flags, home flag and pulse-and-direction output signals. In addition, the B_WDO output allows monitoring the state of the Watchdog safety feature.

1. 34-pin female flat cable connector. T&B Ansley P/N 609-3441
2. Standard flat cable stranded 34-wire. T&B Ansley P/N 171-34
3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

J8 - Serial Port (JRS232 Port)

This connector allows communicating with PMAC from a host computer through a RS-232 port. Delta Tau provides the Accessory 3L cable for this purpose that connects the PMAC to a DB-9 connector.

1. 10-pin female flat cable connector. T&B Ansley P/N 609-1041
2. Standard flat cable stranded 10-wire. T&B Ansley P/N 171-10

Downloaded from www.Manualslib.com manuals search engine

TB1 – Power Supply Terminal Block (JPWR Connector)

In almost in all cases the PMAC2A-PC/104 will be powered from the PC/104 bus, when it is installed in a host computer's bus, or from the JMACH1 connector. This terminal block may be used as an alternative power supply connector or to easily measure the voltages applied to the board.

1. 4-pin terminal block, 0.150 pitch

LED Indicators


D1: when this red LED is lit it indicates that the watchdog timer has tripped and shut down the PMAC.
D2: when this green LED is lit it indicates that power is applied to the +5V input.

Downloaded from www.Manualslib.com manuals search engine


ACC-1P HARDWARE REFERENCE SUMMARY

The following information is based on the ACC-1P board Part Number 603671-100

Board Dimensions

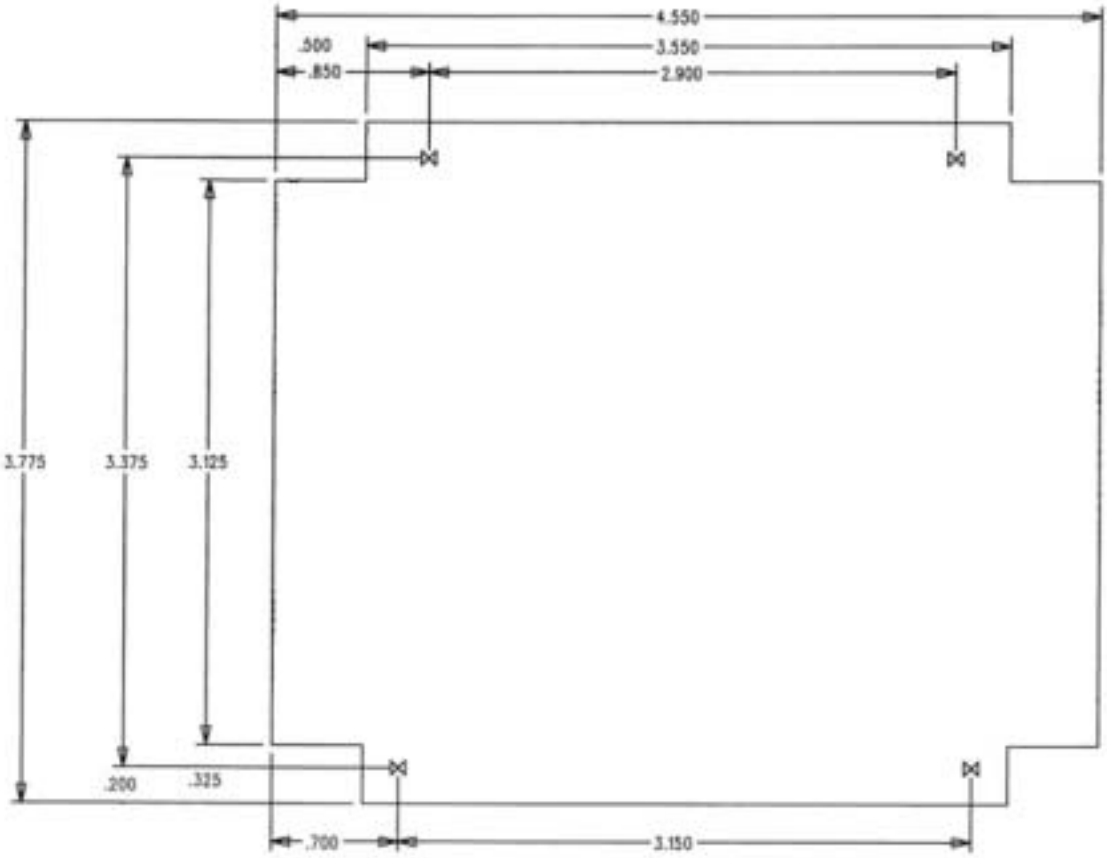

Board Layout

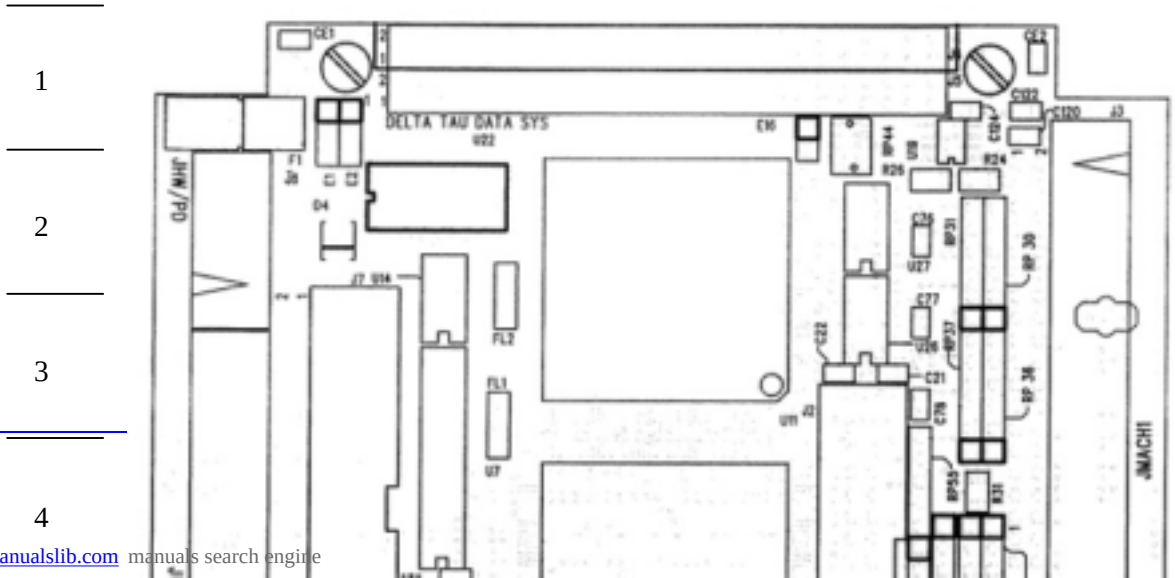

Downloaded from www.Manualslib.com manuals search engine

Feature	Location	Feature	Location
E0	C6	**RP30**	E2
E1	B2	**RP31**	E2
E2	B2	**RP36**	E3
E3	E4	**RP37**	E3
E4	E4	**RP55**	E4
E5	E5	**RP56**	E5
E6	E5	**TB1**	B6
E7	E5	**JMACH1**	F4
E16	D1	**JMACH2**	A4
D6	F6	**JHW / PD**	A2
F1	A1	**J7**	A3
		J2	E4

Connectors and Indicators

J2 - Thumbwheel Multiplexer Port (JTHW Port)

The Thumbwheel Multiplexer Port, or Multiplexer Port, on the JTHW connector has eight input lines and eight output lines. The output lines can be used to multiplex large numbers of inputs and outputs on the port, and Delta Tau provides accessory boards and software structures (special M-variable definitions) to capitalize on this feature. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.

1. 26-pin female flat cable connector. T&B Ansley P/N 609-2641
2. Standard flat cable stranded 26-wire. T&B Ansley P/N 171.26
3. Phoenix varioface module type FLKM 26 (male pins) P/N 22 81 05 0

J3 - Machine Connector (JMACH1 Port)

The primary machine interface connector is JMACH1, labeled J3 on the PMAC. It contains the pins for four channels of machine I/O: analog outputs, incremental encoder inputs, amplifier fault and enable signals and power-supply connections.

1. 50-pin female flat cable connector. T&B Ansley P/N 609-5041
2. Standard flat cable stranded 50-wire. T&B Ansley P/N 171-50
3. Phoenix varioface module type FLKM 50 (male pins) P/N 22 81 08 9

Downloaded from www.Manualslib.com manuals search engine

J4 - Machine Connector (JMACH2 Port)

This machine interface connector is labeled JMACH2 or J4 on the PMAC. It contains the pins for four channels of machine I/O: end-of-travel input flags, home flag and pulse-and-direction output signals. In addition, the B_WDO output allows monitoring the state of the Watchdog safety feature.

1. 34-pin female flat cable connector. T&B Ansley P/N 609-3441
2. Standard flat cable stranded 34-wire. T&B Ansley P/N 171-34
3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

J7 - General-Purpose Digital Inputs and Outputs (JOPT Port)

ACC-1P's JOPT connector provides eight general-purpose digital inputs and eight general-purpose digital outputs. Each input and each output has its own corresponding ground pin in the opposite row. The 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules. Delta Tau's Accessory 21F is a six-foot cable for this purpose.

1. 34-pin female flat cable connector. T&B Ansley P/N 609-3441
2. Standard flat cable stranded 34-wire. T&B Ansley P/N 171-34
3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

J8 – Handwheel / Pulse and Direction Port (JHW / PD Port)

This port provides an extra encoder input or a set of pulse and direction outputs, and its function is selectable by jumpers.

1. 10-pin female flat cable connector. T&B Ansley P/N 609-1041
2. Standard flat cable stranded 10-wire. T&B Ansley P/N 171-10
3. Phoenix varioface module type FLKM 10 (male pins) P/N 22 81 01 8

TB1 – Power Supply Terminal Block (JPWR Connector)

In almost in all cases the PMAC2A-PC/104 will be powered from the PC/104 bus when it is installed in a host computer's bus, or from the JMACH1 connector. This terminal block may be used as an alternative power supply connector or to easily measure the voltages applied to the board.

1. 4-pin terminal block, 0.150 pitch

LED Indicators

D6: when this green LED is lit it indicates that the watchdog timer has tripped and shut down the PMAC.


Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine


ACC-2P HARDWARE REFERENCE SUMMARY

The following information is based on the ACC-2P board Part Number 603672-100

Board Dimensions

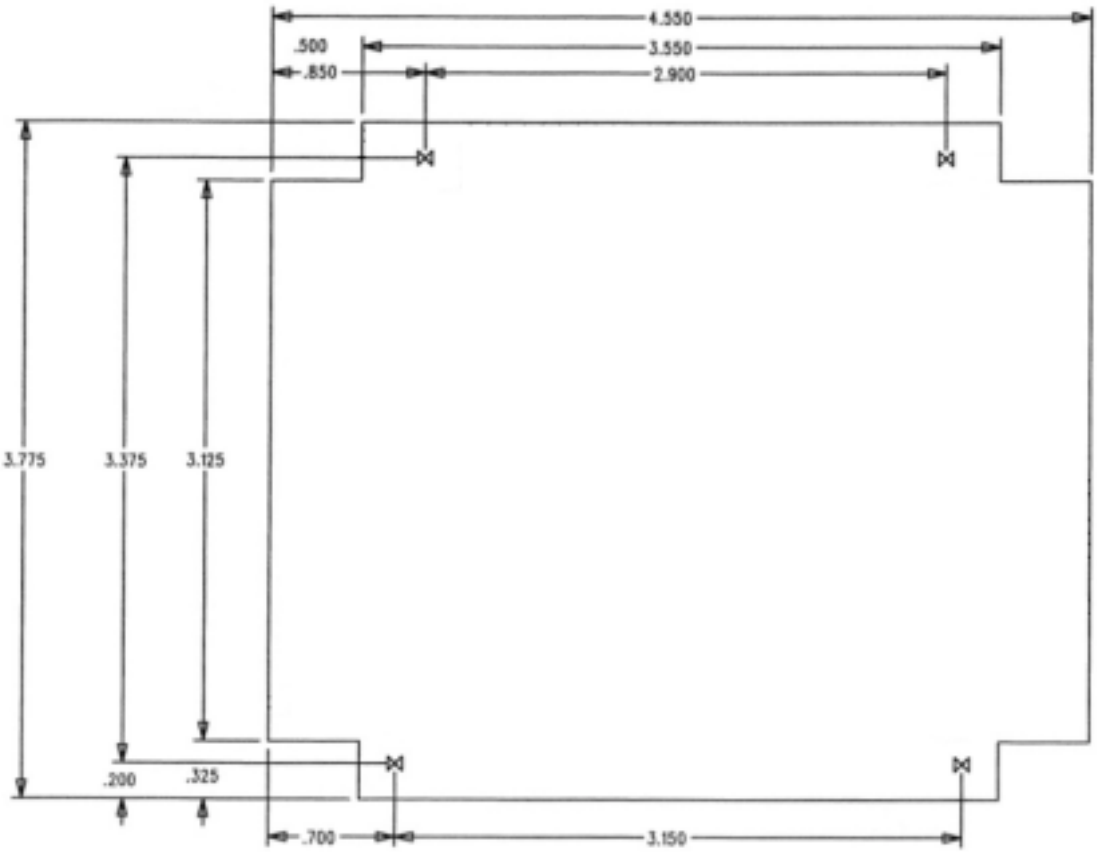

Board Layout

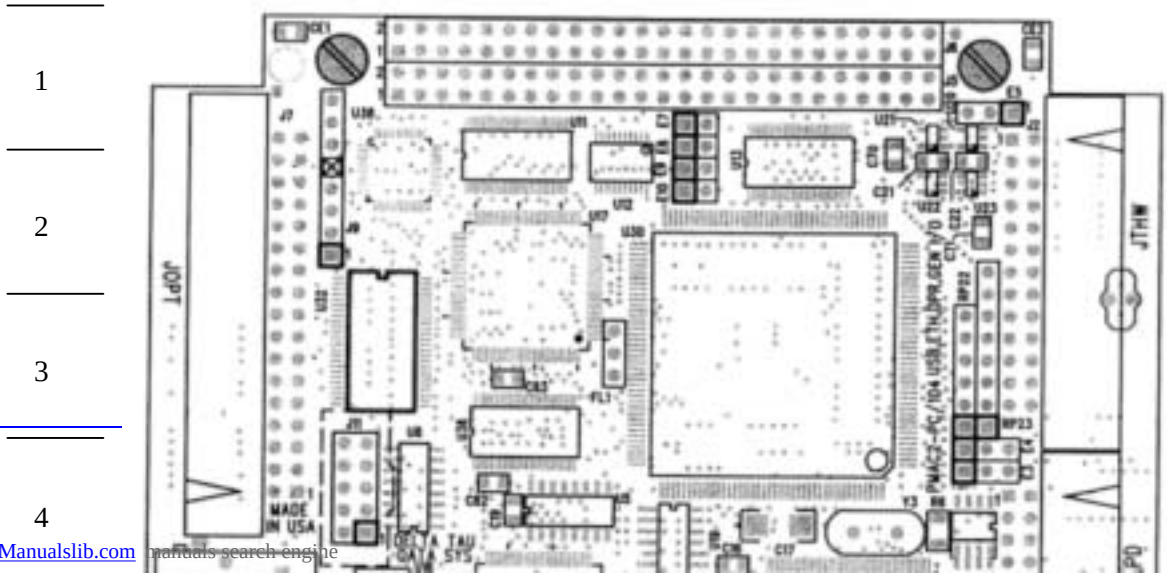

Downloaded from www.Manualslib.com manuals search engine

Feature	Location	Feature	Location
E3	F4	**D2**	C6
E4	F3	**D6**	A5
E5	F1	**D7**	A6
E6	E6	**TB1**	B6
E7	D1	**J1**	F6
E8	D1	**JTHW**	F2
E9	D2	**JOPT**	A2
E10	D2	**JHW / PD**	F4
RP22	E3	**J10**	B5
RP23	E3		

Connectors and indicators

J1 – USB Communications Port

This connector provides access to the USB communications feature ordered through Option-1A. See the *Machine Connections* chapter for details on using this port.

J2 - Thumbwheel Multiplexer Port (JTHW Port)

The Thumbwheel Multiplexer Port, or Multiplexer Port, on the JTHW connector has eight input lines and eight output lines. The output lines can be used to multiplex large numbers of inputs and outputs on the port, and Delta Tau provides accessory boards and software structures (special M-variable definitions) to capitalize on this feature. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.

1. 26-pin female flat cable connector. T&B Ansley P/N 609-2641
2. Standard flat cable stranded 26-wire. T&B Ansley P/N 171.26
3. Phoenix varioface module type FLKM 26 (male pins) P/N 22 81 05 0

J7 - General-Purpose Digital Inputs and Outputs (JOPT Port)

ACC-2P's JOPT connector provides eight general-purpose digital inputs and eight general-purpose digital outputs. Each input and each output has its own corresponding ground pin in the opposite row. The 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules. Delta Tau's Accessory 21F is a six-foot cable for this purpose.

1. 34-pin female flat cable connector. T&B Ansley P/N 609-3441

Downloaded from www.Manualslib.com manuals search engine

2. Standard flat cable stranded 34-wire. T&B Ansley P/N 171-34
3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

J8 – Handwheel / Pulse and Direction Port (JHW / PD Port)

This port provides an extra encoder input or a set of pulse and direction outputs, and its function is selectable by jumpers.

1. 10-pin female flat cable connector. T&B Ansley P/N 609-1041
2. Standard flat cable stranded 10-wire. T&B Ansley P/N 171-10
3. Phoenix varioface module type FLKM 10 (male pins) P/N 22 81 01 8

J10 – Ethernet Communications Port

This connector provides access to the Ethernet communications feature ordered through Option-1B. See the *Machine Connections* chapter for details on using this port.

Downloaded from www.Manualslib.com manuals search engine

TB1 – Power Supply Terminal Block (JPWR Connector)

In almost in all cases the PMAC2A-PC/104 will be powered from the PC/104 bus when it is installed in a host computer's bus, or from the JMACH1 connector. This terminal block may be used as an alternative power supply connector or to easily measure the voltages applied to the board.

1) 4-pin terminal block, 0.150 pitch

LED Indicators

D2: when this green LED is lit it indicates that power is applied to the +5V input.
D6 – D7: these two LEDs monitor the operation of the Ethernet communications circuitry.

Downloaded from www.Manualslib.com manuals search engine

BASE BOARD E-POINT JUMPER DESCRIPTIONS

E0: Forced Reset Control

E Point and Physical Layout	Location	Description	Default
E0 	B3	Factory use only; the board will not operate with E0 installed.	No jumper

E1: Servo and Phase Clock Direction Control

E Point and Physical Layout	Location	Description	Default
E1 	B4	Remove jumper for PMAC to use its internally generated servo and phase clock signals and to output these signals on the J8 serial port connector Jump pins 1 and 2 for PMAC to expect to receive its servo and phase clock signals on the J8 serial port connector	No jumper installed

Note

If the E1 jumper is ON and the servo and phase clocks are not brought in on the J8 serial port, the watchdog timer will trip immediately.

Downloaded from www.Manualslib.com manuals search engine

E2: CPU Frequency Select

E Point and Physical Layout	Location	Description	Default
E2 	B4	Remove jumper for 40 MHz operation (E4 OFF also) or for 80 MHz operation (E4 ON) Jump pin 1 to 2 for 60 MHz operation (E4 OFF)	No jumper installed

E3: Normal/Re-initializing Power-Up/Reset

E Point and Physical Layout	Location	Description	Default
E3 	C4	Jump pin 1 to 2 to re-initialize on power-up/reset, loading factory default settings. Remove jumper for normal power-up/reset, loading user-saved settings.	No jumper installed

E4: CPU Frequency Select

E Point and Physical Layout	Location	Description	Default
E4 	C4	Remove jumper for 40 MHz operation (E2 OFF also) or for 60 MHz operation (E4 ON) Jump pin 1 to 2 for 80 MHz operation (E2 OFF)	No jumper installed (standard or Option 5EF) Jumper installed (Option 5CF)

Downloaded from www.Manualslib.com manuals search engine


E8: Phase Clock Lines Output Enable

E Point and Physical Layout	Location	Description	Default
E8 	B1	Jump pin 1 to 2 to enable the PHASE clock line on the J8 connector, allowing synchronization with another PMAC. Remove jumper to disable the PHASE clock line on the J8 connector.	No Jumper

E9: Servo Clock Lines Output Enable

E Point and Physical Layout	Location	Description	Default
E9 	B1	Jump pin 1 to 2 to enable the SERVO clock line on the J8 connector, allowing synchronization with another PMAC. Remove jumper to disable the SERVO clock line on the J8 connector.	No Jumper

E10 – E12: Power-Up State Jumpers

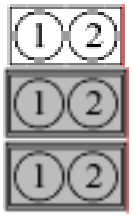E Point and Physical Layout	Location	Description	Default
E10  **E12**	E5	Remove jumper E10; jump E11; jump E12; to read flash IC on power-up/reset Other combinations are for factory use only; the board will not operate in any other configuration	No E10 jumper installed; jump E11 and E12

Downloaded from www.Manualslib.com manuals search engine


E13: Power-Up/Reset Load Source

E Point and Physical Layout	Location	Description	Default
E13  	E5	Jump pin 1 to 2 to reload firmware through serial or bus port. Remove jumper for normal operation.	No jumper

E14: Watchdog Disable Jumper

E Point and Physical Layout	Location	Description	Default
E14  	B3	Jump pin 1 to 2 to disable WATCHDOG timer (for test purposes only!!). Remove jumper to enable WATCHDOG timer.	No jumper

E15A, B, C: Flash Memory Bank Select

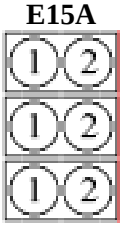
E Point and Physical Layout	Location	Description	Default
E15A  **E15C**	E4	Remove all 3 jumpers to select flash memory bank with factory-installed firmware. Use other configuration to select one of the 7 other flash memory banks	No jumpers installed

Downloaded from www.Manualslib.com manuals search engine

E16: ADC Inputs Enable

E Point and Physical Layout	Location	Description	Default
E16 	D1	Jump pin 1 to 2 to enable the Option-12 ADC inputs. Remove jumper to disable the ADC inputs, which might be necessary for reading current feedback signals from digital amplifiers.	No jumper

E18 – E19: PC/104 Bus Address

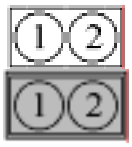E Point and Physical Layout	Location	Description				Default
E18  **E19**	D4	Jumpers E18 and E19 select the PC/104 bus address for communications according to the following table:				No E18 jumper installed; jumper E19 installed
		E18	E19	Address (Hex)	Address (Dec)	
		OFF	OFF	$200	512	
		OFF	ON	$210	528	
		ON	OFF	$220	544	
		ON	ON	$230	560	

Note

Jumper E18 must be removed and jumper E19 must be installed for using either the Ethernet or USB optional methods of communication.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

ACC-1P E-POINT JUMPER DESCRIPTIONS

E0: Reserved for Future Use

E Point and Physical Layout	Location	Description	Default
E0 	C6	For future use.	No jumper

E1 - E2: Machine Output Supply Voltage Configure

E Point and Physical Layout	Location	Description	Default
E1 	B2	Jump pin 1 to 2 to apply +V (+5V to 24V) to pin 10 of "U7" (should be ULN2803A for sink output configuration) JOPTO "MACHINE" outputs M01-M08. Jump pin 2 to 3 to apply GND to pin 10 of "U7" (should be UDN2981A for source output configuration). WARNING; *The jumper setting must match the type of driver IC, or damage to the IC will result.*	1-2 Jumper installed
E2 	B2	Jump pin 1 to 2 to apply GND to pin 10 of "U7" (should be ULN2803A for sink output configuration). Jump pin 2 to 3 to apply +V (+5V to 24V) to pin 10 of "U7" (should be UDN2981A for source output configuration). WARNING; *The jumper setting must match the type of driver IC, or damage to the IC will result.*	1-2 Jumper installed

Downloaded from www.Manualslib.com manuals search engine

E3 – E4: JHW, PD Function Select

E Point and Physical Layout	Location	Description	Default
E3 	E4	Jump pin 1 to 2 to enable handwheel channel 1 inputs. Jump pin 2 to 3 to enable pulse and direction channel 1outputs.	1-2 Jumper installed
E4 	E4	Jump pin 1 to 2 to enable handwheel channel 2 inputs. Jump pin 2 to 3 to enable pulse and direction channel 2 outputs.	1-2 Jumper installed

E5: Servo Gate Address Select

E Point and Physical Layout	Location	Description	Default
E5 	E5	Jump pin 1 to 2 to address ACC-1P channels at the regular addresses for channels 5 to 8. Jump pin 2 to 3 to address ACC-1P channels at the regular addresses for channels 5 to 8 plus $40.	1-2 Jumper installed

E6: I/O Gate Address Select

E Point and Physical Layout	Location	Description	Default
E6 	E5	Jump pin 1 to 2 to address ACC-1P I/O ports at the regular addresses. Jump pin 2 to 3 to address ACC-1P I/O ports at the regular addresses plus $40.	1-2 Jumper installed

E7: Machine Input Source/Sink Control

E Point and Physical Layout	Location	Description	Default

Downloaded from www.Manualslib.com manuals search engine

E7  	E5	Jump pin 1 to 2 to apply +5V to input reference resistor sip pack; this will bias MI1 to MI8 inputs to +5V for "OFF" state; input must then be grounded for "ON" state. Jump pin 2 to 3 to apply GND to input reference resistor sip pack; this will bias MI1 to MI8 inputs to GND for "OFF" state; input must then be pulled up for "ON" state (+5V to +24V).	1-2 Jumper installed

E16: ADC Inputs Enable

E Point and Physical Layout	Location	Description	Default
E16  	D1	Jump pin 1 to 2 to enable the Option-12 ADC inputs. Remove jumper to disable the ADC inputs, which might be necessary for reading current feedback signals from digital amplifiers.	No jumper

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

ACC-2P E-POINT JUMPER DESCRIPTIONS

E3 – E4: JHW, PD Function Select

E Point and Physical Layout	Location	Description	Default
E3 	F4	Jump pin 1 to 2 to enable handwheel channel 1 inputs. Jump pin 2 to 3 to enable pulse and direction channel 1outputs.	1-2 Jumper installed
E4 	F3	Jump pin 1 to 2 to enable handwheel channel 2 inputs. Jump pin 2 to 3 to enable pulse and direction channel 2 outputs.	1-2 Jumper installed

E5: I/O Gate Address Select

E Point and Physical Layout	Location	Description	Default
E5 	F1	Jump pin 1 to 2 to address ACC-2P I/O ports at the regular addresses. Jump pin 2 to 3 to address ACC-2P I/O ports at the regular addresses plus $40.	1-2 Jumper installed


E6: Communications Port Select

E Point and Physical Layout	Location	Description	Default
E6 	E6	Jump pin 1 to 2 to enable the PC/104 communications port. Jump pin 2 to 3 to enable either the USB or Ethernet communications port.	1-2 Jumper installed

E7- E10: Ports Direction Control

E Point and Physical Layout	Location	Description	Default

Downloaded from www.Manualslib.com manuals search engine


E7 	D1	Install jumper to make DATx lines inputs. No jumper to make DATx lines outputs.	Jumper installed
E8 	D1	Install jumper to make SELx lines inputs. No jumper to make SELx lines outputs.	No jumper
E9 	D2	Install jumper to make MOx lines inputs. No jumper to make MOx lines outputs.	No jumper
E10 	D2	Install jumper to make MIx lines inputs. No jumper to make MIx lines outputs.	Jumper installed

Downloaded from www.Manualslib.com manuals search engine

BASE BOARD CONNECTOR PINOUTS

TB1 (JPWR): Power Supply

(4-Pin Terminal Block)

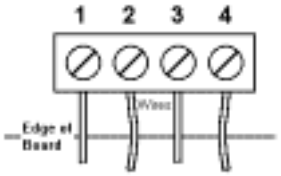

Top View

Pin#	Symbol	Function	Description	Notes
1	GND	Common	Reference Voltage	
2	+5V	input	Positive Supply Voltage	Supplies all PMAC digital circuits
3	+12V	input	Positive Supply Voltage	Ref to digital GND
4	-12V	input	Negative Supply Voltage	Ref to Digital GND

This terminal block can be used to provide the input for the power supply for the circuits on the PMAC board when it is not in a bus configuration. When the PMAC is in a bus configuration, these supplies automatically come through the bus connector from the bus power supply; in this case, this terminal block should not be used.

J4 (JRS232) Serial Port Connector

(10-Pin Connector)




Front View

Pin#	Symbol	Function	Description	Notes
1	PHASE	Output	Phasing Clock	
2	DTR	Bidirect	Data Terminal Ready	Tied to "DSR"
3	TXD/	Input	Receive Data	Host transmit data
4	CTS	Input	Clear to Send	Host ready bit
5	RXD/	Output	Send Data	Host receive data
6	RTS	Output	Request to Send	PMAC ready bit
7	DSR	Bidirect	Data Set Ready	Tied to "DTR"
8	SERVO	Output	Servo Clock	
9	GND	Common	PMAC Common	
10	+5V	Output	+5VDC Supply	Power supply out

Downloaded from www.Manualslib.com manuals search engine


J3 (JMACH1): Machine Port Connector


(50-Pin Header)



Pin#	Symbol	Function	Description	Notes
1	+5V	Output	+5V Power	For encoders, 1
2	+5V	Output	+5V Power	For encoders, 1
3	GND	Common	Digital Common	
4	GND	Common	Digital Common	
5	CHA1	Input	Encoder A Ch. Pos	2
6	CHA2	Input	Encoder A Ch. Pos	2
7	CHA1/	Input	Encoder A Ch. Neg	2,3
8	CHA2/	Input	Encoder A Ch. Neg	2,3
9	CHB1	Input	Encoder B Ch. Pos	2
10	CHB2	Input	Encoder B Ch. Pos	2
11	CHB1/	Input	Encoder B Ch. Neg	2,3
12	CHB2/	Input	Encoder B Ch. Neg	2,3
13	CHC1	Input	Encoder C Ch. Pos	2
14	CHC2	Input	Encoder C Ch. Pos	2
15	CHC1/	Input	Encoder C Ch. Neg	2,3
16	CHC2/	Input	Encoder C Ch. Neg	2,3
17	CHA3	Input	Encoder A Ch. Pos	2
18	CHA4	Input	Encoder A Ch. Pos	2
19	CHA3/	Input	Encoder A Ch. Neg	2,3
20	CHA4/	Input	Encoder A Ch. Neg	2,3
21	CHB3	Input	Encoder B Ch. Pos	2
22	CHB4	Input	Encoder B Ch. Pos	2
23	CHB3/	Input	Encoder B Ch. Neg	2,3
24	CHB4/	Input	Encoder B Ch. Neg	2,3
25	CHC3	Input	Encoder C Ch. Pos	2
26	CHC4	Input	Encoder C Ch. Pos	2
27	CHC3/	Input	Encoder C Ch. Neg	2,3
28	CHC4/	Input	Encoder C Ch. Neg	2,3
29	DAC1	Output	Analog Output Pos. 1	4
30	DAC2	Output	Analog Output Pos. 2	4
31	DAC1/	Output	Analog Output Neg. 1	4,5
32	DAC2/	Output	Analog Output Neg. 2	4,5
33	AENA1/	Output	Amp-Enable 1	
34	AENA2/	Output	Amp-Enable 2	
35	FAULT1/	Input	Amp-Fault 1	6
36	FAULT2/	Input	Amp-Fault 2	6
37	DAC3	Output	Analog Output Pos. 3	4
38	DAC4	Output	Analog Output Pos. 4	4
39	DAC3/	Output	Analog Output Neg. 3	4,5

Downloaded from www.Manualslib.com manuals search engine

J3 JMACH1 **(50-Pin Header)** *(Continued)*			 Top View	
Pin#	**Symbol**	**Function**	**Description**	**Notes**
40	DAC4/	Output	Analog Output Neg. 4	4,5
41	AENA3/	Output	Amp-Enable 3	
42	AENA4/	Output	Amp-Enable 4	
43	FAULT3/	Input	Amp-Fault 3	6
44	FAULT4/	Input	Amp-Fault 4	6
45	ADCIN_1	Input	Analog Input 1	Option-12 required
46	ADCIN_2	Input	Analog Input 2	Option-12 required
47	FLT_FLG_V	Input	Amp. Fault pull-up V+	
48	GND	Input	Analog Common	
49	A+15V	Input	DACs +15V Supply	
50	A-15V	Input	DACs -15V Supply	
The J3 connector is used to connect PMAC to the first 4 channels (Channels 1, 2, 3, and 4) of servo amps and encoders.				
Note 1: In standalone applications, these lines can be used as +5V power supply inputs to power PMAC's digital circuitry. **Note 2**: Referenced to digital common (GND). Maximum of ±12V permitted between this signal and its complement. **Note 3**: Leave this input floating if not used (i.e. digital single-ended encoders). **Note 4**: ±10V, 10 mA max, referenced to common ground (GND). **Note 5**: Leave floating if not used; do not tie to GND. **Note 6**: Functional polarity controlled by variable Ix25. Must be conducting to 0V (usually GND) to produce a '0' in PMAC software. Automatic fault function can be disabled with Ix25.				

J4 (JMACH2): Machine Port Connector (34-Pin Header)			 Front View	
Pin#	**Symbol**	**Function**	**Description**	**Notes**
1	FLG_1_2_V	Input	Flags 1-2 Pull-Up	
2	FLG_3_4_V	Input	Flags 3-4 Pull-Up	

Downloaded from www.Manualslib.com manuals search engine

3	GND	Common	Digital Common	
4	GND	Common	Digital Common	
5	HOME1	Input	Home-Flag 1	10
6	HOME2	Input	Home-Flag 2	10
7	PLIM1	Input	Negative End Limit 1	8,9
8	PLIM2	Input	Negative End Limit 2	8,9
9	MLIM1	Input	Positive End Limit 1	8,9
10	MLIM2	Input	Positive End Limit 2	8,9
11	USER1	Input	User Flag 1	
12	USER2	Input	User Flag 2	
13	PUL_1	Input	Pulse Output 1	
14	PUL_2	Input	Pulse Output 2	
15	DIR_1	Input	Direction Output 1	
16	DIR_2	Input	Direction Output 2	
17	EQU1	Output	Enc. Comp-Equal 1	
18	EQU2	Output	Enc. Comp-Equal 2	
19	HOME3	Input	Home-Flag 3	10
20	HOME4	Input	Home-Flag 4	10
21	PLIM3	Input	Negative End Limit 3	8,9
22	PLIM4	Input	Negative End Limit 4	8,9
23	MLIM3	Input	Positive End Limit 3	8,9
24	MLIM4	Input	Positive End Limit 4	8,9
25	USER1	Input	User Flag 1	
26	USER2	Input	User Flag 2	
27	PUL_1	Input	Pulse Output 1	
28	PUL_2	Input	Pulse Output 2	
29	DIR_1	Input	Direction Output 1	
30	DIR_2	Input	Direction Output 2	
31	EQU1	Output	Enc. Comp-Equal 1	
32	EQU2	Output	Enc. Comp-Equal 2	
33	B_WDO	Output	Watchdog Out	Indicator/driver
34	No Connect			

Note 1: Pins marked *PLIMn* should be connected to switches at the *positive* end of travel. Pins marked *MLIMn* should be connected to switches at the *negative* end of travel.

Note 2: Must be conducting to 0V (usually GND) for PMAC to consider itself not into this limit. Automatic limit function can be disabled with Ix25.


Note 3: Functional polarity for homing or other trigger use of HOMEn controlled by Encoder/Flag Variable I9n2. HMFLn selected for trigger by Encoder/Flag Variable I9n3. Must be conducting to 0V (usually GND) to produce a '0' in PMAC software.

Downloaded from www.Manualslib.com manuals search engine

ACC-1P CONNECTOR PINOUTS

TB1 (JPWR): Power Supply

(4-Pin Terminal Block)

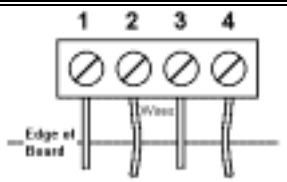


Top View

Pin#	Symbol	Function	Description	Notes
1	GND	Common	Reference Voltage	
2	+5V	Input	Positive Supply Voltage	Supplies all PMAC digital circuits
3	+12V	Input	Positive Supply Voltage	REF to digital GND
4	-12V	Input	Negative Supply Voltage	REF to digital GND

This terminal block can be used to provide the input for the power supply for the circuits on the PMAC board when it is not in a bus configuration. When the PMAC is in a bus configuration, these supplies automatically come through the bus connector from the bus power supply; in this case, this terminal block should not be used.

J2 (JTHW): Multiplexer Port Connector

(26-Pin Connector)



Front View

Pin#	Symbol	Function	Description	Notes
1	GND	Common	PMAC Common	
2	GND	Common	PMAC Common	


Downloaded from www.Manualslib.com manuals search engine

3	DAT0	Input	Data-0 Input	Data input from multiplexed accessory
4	SEL0	Output	Select-0 Output	Multiplexer select output
5	DAT1	Input	Data -1 Input	Data input from multiplexed accessory
6	SEL1	Output	Select -1 Output	Multiplexer select output
7	DAT2	Input	Data -2 Input	Data input from multiplexed accessory
8	SEL2	Output	Select -2 Output	Multiplexer select output
9	DAT3	Input	Data -3 Input	Data input from multiplexed accessory
10	SEL3	Output	Select -3 Output	Multiplexer select output
11	DAT4	Input	Data -4 Input	Data input from multiplexed accessory
12	SEL4	Output	Select -4 Output	Multiplexer select output
13	DAT5	Input	Data -5 Input	Data input from multiplexed accessory
14	SEL5	Output	Select -5 Output	Multiplexer select output
15	DAT6	Input	Data -6 Input	Data input from multiplexed accessory
16	SEL6	Output	Select -6 Output	Multiplexer select output
17	DAT7	Input	Data -7 Input	Data input from multiplexed accessory
18	SEL7	Output	Select -7 Output	Multiplexer select output
19	N.C.	N.C.	No Connection	
20	GND	Common	PMAC Common	
21	BRLD/	Output	Buffer Request	Low is "BUFFER REQ."
22	GND	Common	PMAC Common	
23	IPLD/	Output	In Position	Low is "IN POSITION"
24	GND	Common	PMAC Common	
25	+5V	Output	+5VDC Supply	Power supply out
26	INIT/	Input	PMAC Reset	Low is "RESET"

The JTHW multiplexer port provides 8 inputs and 8 outputs at TTL levels. While these I/O can be used in unmultiplexed form for 16 discrete I/O points, most users will utilize PMAC software and accessories to use this port in multiplexed form to greatly multiply the number of I/O that can be accessed on this port. In multiplexed form, some of the SELn outputs are used to select which of the multiplexed I/O are to be accessed.

J3 (JMACH1): Machine Port Connector

(50-Pin Header)




Pin#	Symbol	Function	Description	Notes
1	+5V	Output	+5V Power	FOR ENCODERS, 1
2	+5V	Output	+5V Power	FOR ENCODERS, 1
3	GND	COMMON	Digital Common	
4	GND	COMMON	Digital Common	
5	CHA5	Input	Encoder A Ch. Pos	2

Downloaded from www.Manualslib.com manuals search engine

6	CHA6	Input	Encoder A Ch. Pos	2
7	CHA5/	Input	Encoder A Ch. Neg	2,3
8	CHA6/	Input	Encoder A Ch. Neg	2,3
9	CHB5	Input	Encoder B Ch. Pos	2
10	CHB6	Input	Encoder B Ch. Pos	2
11	CHB5/	Input	Encoder B Ch. Neg	2,3
12	CHB6/	Input	Encoder B Ch. Neg	2,3
13	CHC5	Input	Encoder C Ch. Pos	2
14	CHC6	Input	Encoder C Ch. Pos	2
15	CHC5/	Input	Encoder C Ch. Neg	2,3
16	CHC6/	Input	Encoder C Ch. Neg	2,3
17	CHA7	Input	Encoder A Ch. Pos	2
18	CHA8	Input	Encoder A Ch. Pos	2
19	CHA7/	Input	Encoder A Ch. Neg	2,3
20	CHA8/	Input	Encoder A Ch. Neg	2,3
21	CHB7	Input	Encoder B Ch. Pos	2
22	CHB8	Input	Encoder B Ch. Pos	2
23	CHB7/	Input	Encoder B Ch. Neg	2,3
24	CHB8/	Input	Encoder B Ch. Neg	2,3
25	CHC7	Input	Encoder C Ch. Pos	2
26	CHC8	Input	Encoder C Ch. Pos	2
27	CHC7/	Input	Encoder C Ch. Neg	2,3
28	CHC8/	Input	Encoder C Ch. Neg	2,3
29	DAC5	Output	Analog Out Pos. 5	4
30	DAC6	Output	Analog Out Pos. 6	4
31	DAC5/	Output	Analog Out Neg. 5	4,5
32	DAC6/	Output	Analog Out Neg. 6	4,5
33	AENA5/	Output	AMP-ENABLE 5	
34	AENA6/	Output	AMP-ENABLE 6	
35	FAULT5/	Input	Amp-Fault 5	6
36	FAULT6/	Input	Amp-Fault 6	6
37	DAC7	Output	Analog Out Pos. 7	4
38	DAC8	Output	Analog Out Pos. 8	4
39	DAC7/	Output	Analog Out Neg. 7	4,5

J3 JMACH1
(50-Pin-Header)
(Continued)

Top View 

Pin#	Symbol	Function	Description	Notes
40	DAC8/	Output	Analog Out Neg. 8	4,5
41	AENA7/	Output	Amp-Enable 7	
42	AENA8/	Output	Amp-Enable 8	
43	FAULT7/	Input	Amp-Fault 7	6
44	FAULT8/	Input	Amp-Fault 8	6

Downloaded from www.Manualslib.com manuals search engine


45	ADCIN_1	Input	Analog Input 1	Option-2 required
46	ADCIN_2	Input	Analog Input 2	Option-2 required
47	FLT_FLG_V	Input	Amp. Fault pull-up V+	
48	GND	Input	Analog Common	
49	A+15V	Input	DACs +15V Supply	
50	A-15V	Input	DACs -15V Supply	

The J3 connector is used to connect PMAC to the second 4 channels (Channels 5, 6, 7, and 8) of servo amps and encoders.

Note 1: In standalone applications, these lines can be used as +5V power supply inputs to power PMAC's digital circuitry.
Note 2: Referenced to digital common (GND). Maximum of ±12V permitted between this signal and its complement.
Note 3: Leave this input floating if not used (i.e. digital single-ended encoders).
Note 4: ±10V, 10 mA max, referenced to common ground (GND).
Note 5: Leave floating if not used; do not tie to GND.
Note 6: Functional polarity controlled by variable Ix25. Must be conducting to 0V (usually GND) to produce a '0' in PMAC software. Automatic fault function can be disabled with Ix25.

J4 (JMACH2): Machine Port Connector

(34-Pin Header)



Front View

Pin#	Symbol	Function	Description	Notes
1	FLG_5_6_V	Input	Flags 5-6 Pull-Up	
2	FLG_7_8_V	Input	Flags 7-8 Pull-Up	
3	GND	Common	Digital Common	
4	GND	Common	Digital Common	
5	HOME5	Input	Home-Flag 5	10
6	HOME6	Input	Home-Flag 6	10
7	PLIM5	Input	Negative End Limit 5	8,9
8	PLIM6	Input	Negative End Limit 6	8,9
9	MLIM5	Input	Positive End Limit 5	8,9
10	MLIM6	Input	Positive End Limit 6	8,9
11	USER5	Input	User Flag 5	
12	USER6	Input	User Flag 6	
13	PUL_5	Input	Pulse Output 5	


Downloaded from www.Manualslib.com manuals search engine

14	PUL_6	Input	Pulse Output 6	
15	DIR_5	Input	Direction Output 5	
16	DIR_6	Input	Direction Output 6	
17	EQU5	Output	Enc. Comp-Equal 5	
18	EQU6	Output	Enc. Comp-Equal 6	
19	HOME7	Input	Home Flag 7	10
20	HOME8	Input	Home Flag 8	10
21	PLIM7	Input	Negative End Limit 7	8,9
22	PLIM8	Input	Negative End Limit 8	8,9
23	MLIM7	Input	Positive End Limit 7	8,9
24	MLIM8	Input	Positive End Limit 8	8,9
25	USER7	Input	User Flag 7	
26	USER8	Input	User Flag 8	
27	PUL_7	Input	Pulse Output 7	
28	PUL_8	Input	Pulse Output 8	
29	DIR_7	Input	Direction Output 7	
30	DIR_8	Input	Direction Output 8	
31	EQU7	Output	Enc. Comp-Equal 7	
32	EQU8	Output	Enc. Comp-Equal 8	
33	B_WDO	Output	Watchdog Out	Indicator/Driver
34	No Connect			

Note 1: Pins marked *PLIMn* should be connected to switches at the *positive* end of travel. Pins marked *MLIMn* should be connected to switches at the *negative* end of travel.
Note 2: Must be conducting to 0V (usually GND) for PMAC to consider itself not into this limit. Automatic limit function can be disabled with Ix25.
Note 3: Functional polarity for homing or other trigger use of HOMEn controlled by Encoder/Flag Variable I9n2. HMFLn selected for trigger by Encoder/Flag Variable I9n3. Must be conducting to 0V (usually GND) to produce a '0' in PMAC software.

J7 (JOPTO): I/O Port Connector

(34-Pin Connector)



Front View

Pin#	Symbol	Function	Description	Notes
1	MI8	Input	Machine Input 8	Low is TRUE
2	GND	Common	PMAC Common	
3	MI7	Input	Machine Input 7	Low is TRUE
4	GND	Common	PMAC Common	
5	MI6	Input	Machine Input 6	Low is TRUE
6	GND	Common	PMAC Common	
7	MI5	Input	Machine Input 5	Low is TRUE
8	GND	Common	PMAC Common	
9	MI4	Input	Machine Input 4	Low is TRUE
10	GND	Common	PMAC Common	
11	MI3	Input	Machine Input 3	Low is TRUE
12	GND	Common	PMAC Common	
13	MI2	Input	Machine Input 2	Low is TRUE
14	GND	Common	PMAC Common	
15	MI1	Input	Machine Input 1	Low is TRUE
16	GND	Common	PMAC Common	

Downloaded from www.Manualslib.com manuals search engine

17	MO8	Output	Machine Output 8	Low-TRUE (Sinking) High-TRUE (Sourcing)
18	GND	Common	PMAC Common	
19	MO7	Output	Machine Output 7	" "
20	GND	Common	PMAC Common	
21	MO6	Output	Machine Output 6	" "
22	GND	Common	PMAC Common	
23	MO5	Output	Machine Output 5	" "
24	GND	Common	PMAC Common	
25	MO4	Output	Machine Output 4	" "
26	GND	Common	PMAC Common	
27	MO3	Output	PMAC Common	" "
28	GND	Common	PMAC COMMON	
29	MO2	Output	Machine Output 2	" "
30	GND	Common	PMAC Common	
31	MO1	Output	Machine Output 1	" "
32	GND	Common	PMAC Common	
33	+V	Input/Output	+V Power I/O	+V = +5V TO +24V +5V out from PMAC, +5 TO +24V in from external source, DIODE isolation from PMAC
34	GND	Common	PMAC COMMON	
This connector provides means for 8 general-purpose inputs and 8 general-purpose outputs. Inputs and outputs may be configured to accept or provide either +5 volt or +24 volt signals. Outputs can be made sourcing with an IC (U7 to UDN2981) and jumper (E1 & E2) change. E7 controls whether the inputs are pulled up or down internally. Outputs are rated at 100mA per channel.				

J8 (JHW) Handwheel Encoder Connector

Pin#	Symbol	Function	Description
1	GND	Common	Ref. voltage
2	HWA1+ / PUL1+	Input/Output	HW1 Channel A or pulse output selected by jumpers E3 and E4
3	HWA1- / PUL1-	Input/Output	HW 1 Channel A or pulse output selected by jumpers E3 and E4
4	HWB1+ / DIR1+	Input/Output	HW 1 Channel B or direction output selected by jumpers E3 and E4
5	HWB1- / DIR1-	Input/Output	HW 1 Channel B or direction output selected by jumpers E3 and E4
6	HWA2+ / PUL2+	Input/Output	HW 2 Channel A or pulse output selected by jumpers E3 and E4
7	HWA2- / PUL2-	Input/Output	HW 2 Channel A or pulse output selected by jumpers E3 and E4
8	HWB2+ / DIR2+	Input/Output	HW 2 Channel B or direction output selected by E3 and E4
9	HWB2- / DIR2-	Input/Output	HW 2 Channel B or direction output selected by E3 and E4
10	+5V	Output	Supply voltage


Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

ACC-2P CONNECTOR PINOUTS

TB1 (JPWR): Power Supply

(4-Pin Terminal Block)

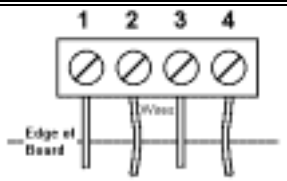

Top View

Pin#	Symbol	Function	Description	Notes
1	GND	Common	Reference Voltage	
2	+5V	Input	Positive Supply Voltage	Supplies all PMAC digital circuits
3	+12V	Input	Positive Supply Voltage	Ref to digital GND
4	-12V	Input	Negative Supply Voltage	Ref TO Digital GND

This terminal block can be used to provide the input for the power supply for the circuits on the PMAC board when it is not in a bus configuration. When the PMAC is in a bus configuration, these supplies automatically come through the bus connector from the bus power supply; in this case, this terminal block should not be used.

J1 (USB) Universal Serial Bus Port (Optional)


Pin #	Symbol	Function
1	VCC	N.C.
2	D-	DATA-
3	D+	DATA+
4	GND	GND
5	SHELL	SHIELD
6	SHELL	SHIELD

This connector is to be used in conjunction with USB A-B cable, which can be purchased from any local computer store, and it is provided when ACC-2P Option 1A is ordered. The A connector is connected to a PC or Hub device; the B connector plugs into this port.

Downloaded from www.Manualslib.com manuals search engine

J2 (JTHW): Multiplexer Port Connector

(26-Pin Connector)



Front View

Pin#	Symbol	Function	Description	Notes
1	GND	Common	PMAC Common	
2	GND	Common	PMAC Common	
3	DAT0	Input	Data-0 Input	Data input from multiplexed accessory
4	SEL0	Output	Select-0 Output	Multiplexer select output
5	DAT1	Input	Data -1 Input	Data input from multiplexed accessory
6	SEL1	Output	Select -1 Output	Multiplexer select output
7	DAT2	Input	Data -2 Input	Data input from multiplexed accessory
8	SEL2	Output	Select -2 Output	Multiplexer select output
9	DAT3	Input	Data -3 Input	Data input from multiplexed accessory
10	SEL3	Output	Select -3 Output	Multiplexer select output
11	DAT4	Input	Data -4 Input	Data input from multiplexed accessory
12	SEL4	Output	Select -4 Output	Multiplexer select output
13	DAT5	Input	Data -5 Input	Data input from multiplexed accessory
14	SEL5	Output	Select -5 Output	Multiplexer select output
15	DAT6	Input	Data -6 Input	Data input from multiplexed accessory
16	SEL6	Output	Select -6 Output	Multiplexer select output
17	DAT7	Input	Data -7 Input	Data input from multiplexed accessory
18	SEL7	Output	Select -7 Output	Multiplexer select output
19	N.C.	N.C.	No Connection	
20	GND	Common	PMAC Common	
21	BRLD/	Output	Buffer Request	Low is "BUFFER REQ."
22	GND	Common	PMAC Common	
23	IPLD/	Output	In Position	Low is "IN POSITION"
24	GND	Common	PMAC Common	
25	+5V	Output	+5VDC Supply	Power supply out
26	INIT/	Input	PMAC Reset	Low is "RESET"

The JTHW multiplexer port provides 8 inputs and 8 outputs at TTL levels. While these I/O can be used in unmultiplexed form for 16 discrete I/O points, most users will utilize PMAC software and accessories to use this port in multiplexed form to greatly multiply the number of I/O that can be accessed on this port. In multiplexed form, some of the SELn outputs are used to select which of the multiplexed I/O are to be accessed.

The direction of the input and output lines on this connector are set by jumpers E7 and E8. If E7 is removed or E8 is installed then the multiplexing feature if the JTHW port cannot be used.

J7 (JOPT): I/O Port Connector

(34-Pin Connector)



Front View

Pin#	Symbol	Function	Description	Notes

Downloaded from www.Manualslib.com manuals search engine

1	MI8	Input	Machine Input 8	Direction selectable
2	GND	Common	PMAC Common	
3	MI7	Input	Machine Input 7	Direction selectable
4	GND	Common	PMAC Common	
5	MI6	Input	Machine Input 6	Direction selectable
6	GND	Common	PMAC Common	
7	MI5	Input	Machine Input 5	Direction selectable
8	GND	Common	PMAC Common	
9	MI4	Input	Machine Input 4	Direction selectable
10	GND	Common	PMAC Common	
11	MI3	Input	Machine Input 3	Direction selectable
12	GND	Common	PMAC Common	
13	MI2	Input	Machine Input 2	Direction selectable
14	GND	Common	PMAC Common	
15	MI1	Input	Machine Input 1	Direction selectable
16	GND	Common	PMAC Common	
17	MO8	Output	Machine Output 8	Direction selectable
18	GND	Common	PMAC Common	
19	MO7	Output	Machine Output 7	Direction selectable
20	GND	Common	PMAC Common	
21	MO6	Output	Machine Output 6	Direction selectable
22	GND	Common	PMAC Common	
23	MO5	Output	Machine Output 5	Direction selectable
24	GND	Common	PMAC Common	
25	MO4	Output	Machine Output 4	Direction selectable
26	GND	Common	PMAC Common	
27	MO3	Output	Machine Output 3	Direction selectable
28	GND	Common	PMAC Common	
29	MO2	Output	Machine Output 2	Direction selectable
30	GND	Common	PMAC Common	
31	MO1	Output	Machine Output 1	Direction selectable
32	GND	Common	PMAC Common	
33	+5	Output	+5 Power I/O	
34	GND	Common	PMAC Common	
This connector provides means for 16 general-purpose inputs or outputs at TTL levels. The direction of the input and output lines on this connector are set by jumpers E9 and E10. Further software settings are required to configure this port. See the *Software Setup* section for details on this.				

J8 (JHW) Handwheel Encoder Connector

Pin#	Symbol	Function	Description
1	GND	Common	Ref. voltage
2	HWA1+ / PUL1+	Input/Output	HW1 channel A or pulse output selected by jumpers E3 and E4
3	HWA1- / PUL1-	Input/Output	hw1 channel a or pulse output selected by jumpers E3 and E4
4	HWB1+ / DIR1+	Input/Output	hw1 channel b or direction output selected by jumpers E3 and E4

Downloaded from www.Manualslib.com manuals search engine

5	HWB1- / DIR1-	Input/Output	hw1 channel b or direction output selected by jumpers E3 and E4
6	HWA2+ / PUL2+	Input/Output	hw2 channel a or pulse output selected by jumpers E3 and E4
7	HWA2- / PUL2-	Input/Output	hw2 channel a or pulse output selected by jumpers E3 and E4
8	HWB2+ / DIR2+	Input/Output	hw2 channel b or direction output selected by jumpers E3 and E4
9	HWB2- / DIR2-	Input/Output	hw2 channel b or direction output selected by jumpers E3 and E4
10	+5V	Output	Supply voltage

J10 Ethernet Port (Optional)

Pin #	Function
1	TXD+
2	TXD-
3	RXD+
4	NO CONNECT
5	NO CONNECT
6	RXD-
7	NO CONNECT
8	NO CONNECT
9	NO CONNECT
10	NO CONNECT

This connector is used for Ethernet communications from the ACC-2P to a PC, and it is provided when ACC-2P Option 1B is ordered. The appropriate Category 5 10/100-Base T network cable that mates to this connector can be readily purchased from any local computer store. The type of network cable to purchase depends on the configuration to the host PC.
When making a **direct** connection to a Host communication Ethernet card in a PC a "cat 5 networking crossover cable" **must** be used. A standard cat 5 straight through networking cable cannot be used in this scenario. When using a connection to a network hub or switch, the standard cat 5 straight through networking cable must be used, and not a crossover cable.

Downloaded from www.Manualslib.com manuals search engine

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP