


CSBC1200 Series SBC QuickStart™

1902065, Rev A, April, 2002. © Copyright Carlo Gavazzi Mupac, Inc., All Rights Reserved, Printed in USA. Specifications subject to change without notice.



This QuickStart card provides information to help you identify components and configure and install your CSBC1200 Single Board Computer. This document assumes that you have a working knowledge of electronic safety and ESD control procedures and that you have some experience in configuring and installing SBCs, software drivers, and electronic components. To download the complete User's Manual or software drivers from our website, or to contact our Product Support Group, see the reverse side of this card for instructions.

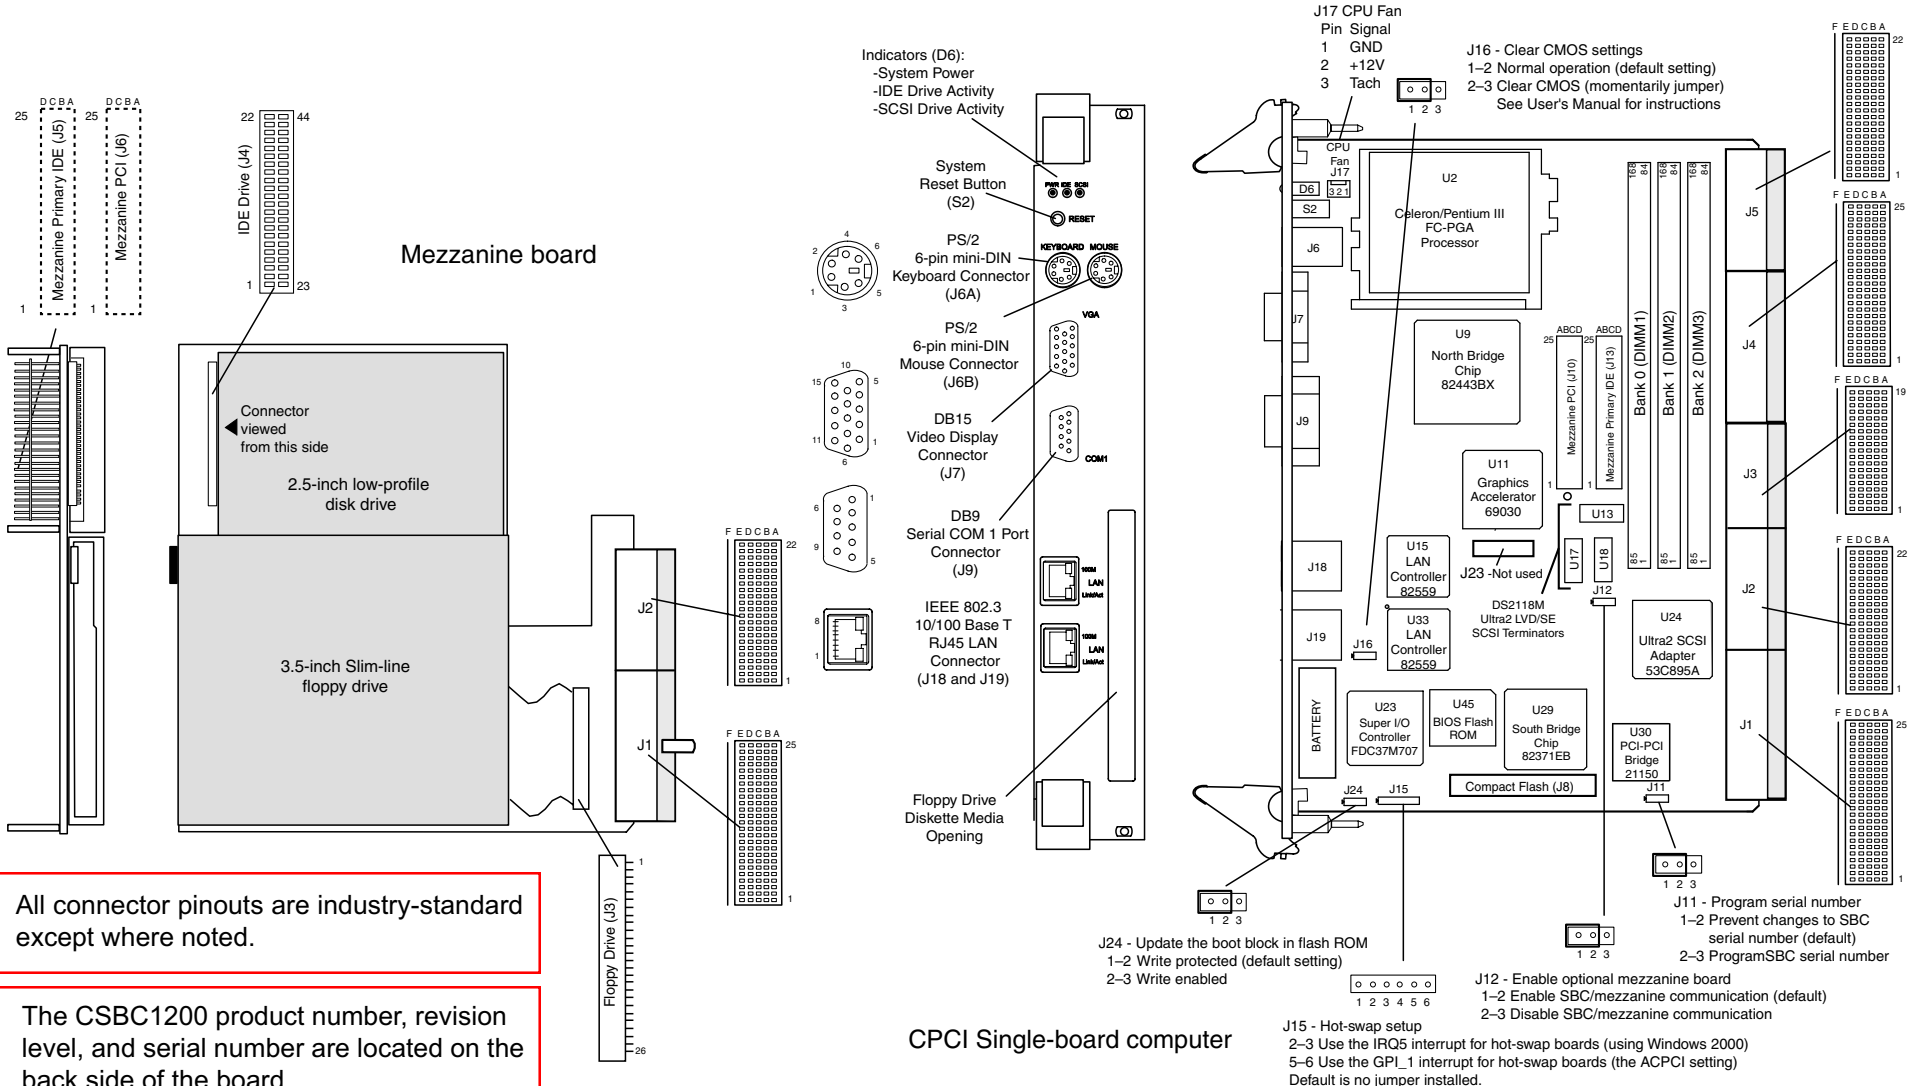

All connector pinouts are industry-standard except where noted.

The CSBC1200 product number, revision level, and serial number are located on the back side of the board.

CPCI Single-board computer

Installing and Configuring the SBC

CAUTION: Follow standard ESD control procedures when handling the board. If needed, download the User's Manual and read the "Preventing ESD Damage" section.

WARNING: Make sure the computer is turned off and its power cord is disconnected from both the power source and the back of the computer chassis before you install the SBC. Failure to unplug the computer from the power source may cause personal injury and equipment damage and could void the product warranty.

Follow these general instructions to install your SBC:

1. Check the board's jumper settings to ensure proper configuration.
2. Locate the slot in the chassis for the SBC. Ensure that there are no bent or broken pins, which could prevent proper SBC operation.
3. Ensure that the board's two ejector handles are in the outward (ejected) position.
4. Align the edges of the SBC with the chassis' slot guides and gently push the SBC into the chassis until the ejector latches seat in the chassis' slot rails. Carefully push the board into the chassis until it seats in the backplane's connectors.
5. Press both ejector handles inward to lock the board in place.
6. Tighten the four captive screws on the board's front panel to secure the board in the chassis.
7. Attach desired cables to the board's front panel (or, if available, to the optional rear I/O transition board's rear panel).
8. Make sure the computer is turned off and then reconnect the power cord to the back of the chassis and the power source.
9. Power-up the chassis and video display and verify that the SBC is working properly.
10. If desired, access the CMOS Setup Utility by pressing the Delete key immediately after power-up. Setup defaults are provided in the table at right. If these values do not match your requirements, access the appropriate menus and change the values to the desired settings.
11. If desired, access the SCSI Configuration Utility by pressing Ctrl-C when prompted after power-up. This utility allows you to change SCSI hardware settings.
12. Download and install appropriate drivers (see the following procedure). Installation is now complete. Save the shipping carton and packing materials in case you need to re-ship the SBC.

Downloading the User's Manual and Drivers from our Website

To download the user's manual or the latest software drivers, follow these steps:

1. Go to www.gavazzi-mupac.com.
2. Click on the "Support" link.
3. Click on either the "Documentation" or "Drivers" link.
4. To download a manual in .pdf format, click on the icon to the left of your selection. To download a software driver, click on the filename for the driver you want.

Instructions for installing software drivers are available on the Drivers download page. We also post Technical Notices, Manual Updates/Errata, and other information on our Documentation page. Check back periodically for the latest product information and drivers.

Technical Assistance

Western U.S. Region (WA, OR, CA, UT, NV, AZ, or CO): 1-800-968-7220.
For all other U.S. or Canada locations: 1-800-926-8722.
1902065, Rev. A

CMOS Setup Utility Defaults

The following table provides default settings for the CMOS Setup Utility. These settings were tested for best system performance and loaded at the factory.

Menu	Option	Default	Menu	Option	Default
Standard CMOS Setup	Date	Current Date	Chipset Features (cont.)	8 Bit I/O Recovery Time	1
	Time	Current Time		16 Bit I/O Recovery Time	1
	Hard Disks	Auto		Memory Hole At 15M-16M	Disabled
	Drive A Drive B	1.44M, 3.5in None		Passive Release	Enabled
	Video	EGA/VGA		Delayed Transaction	Disabled
	Halt On	All, But Keyboard		AGP Aperture Size (MB)	64
	SBC Serial #	Reports serial #		CPU High Temp Limit	85°C/185°F
BIOS Features	Total Memory	Reports base memory	LM87 CPU Temp. LM87 Curr. Sys. Temp.	_ °C / _ °F	
	Virus Warning	Disabled	LM87 Curr. CPUFAN1 Spd LM87 Curr. CPUFAN2 Spd	RPM	
	CPU Internal Cache	Enabled	2.5V: 3.3V: 5.0V: 12V: -12V:	_ V (LM87)	
	External Cache	Enabled	Power Management	ACPI Function	Enabled
	CPU L2 Cache ECC Checking	Enabled	Power Management	Power Management	User Define
	Processor Number Feature	Enabled	PM Control by APM	PM Control by APM	Yes
	Quick Power On Self Test	Disabled	Video Off Method	Video Off Method	V/H SYNC+Blank
	Boot Sequence	A, C, SCSI	Video Off After	Video Off After	Standby
	Swap Floppy Drive	Disabled	Doze Mode	Doze Mode	Disable
	Boot Up Floppy Seek	Enabled	Standby Mode	Standby Mode	Disable
	Boot Up NumLock Status	On	Suspend Mode	Suspend Mode	Disable
	Gate A20 Option	Fast	HDD Power Down	HDD Power Down	Disable
	Typematic Rate Setting	Disabled	Throttle Duty Cycle	Throttle Duty Cycle	62.5%
	Typematic Rate (Chars/Sec)	6	PCI/VGA Act-Monitor	PCI/VGA Act-Monitor	Disabled
	Typematic Delay (Msec)	250	IRQ[3-7, 9-15], NMI	IRQ[3-7, 9-15], NMI	Disabled
	Security Option	Setup	Primary IDE 0 Primary IDE 1	Primary IDE 0 Primary IDE 1	Disabled
	PCI/VGA Palette Snoop	Disabled	Secondary IDE 0 Secondary IDE 1	Secondary IDE 0 Secondary IDE 1	Disabled
	OS Select for DRAM >64MB	Non-OS2	Floppy Disk Serial Port Parallel Port	Floppy Disk Serial Port Parallel Port	Disabled
	Report No FDD for WIN 95	Yes	PNP/PCI Configuration	PNP OS Installed	No
Video BIOS Shadow	Enabled	Resources Controlled By	Resources Controlled By	Auto	
C8000-CBFFF Shadow CC000-CFFFF Shadow D0000-D3FFF Shadow D4000-D7FFF Shadow D8000-DBFFF Shadow DC000-DFFFF Shadow	Disabled	Reset Configuration Data	Reset Configuration Data	Disabled	
Show CG Logo	Disabled	PIRQ x Use IRQ No.	PIRQ x Use IRQ No.	Auto	
LAN1 Front/Rear LAN2 Front/Rear COM1 Front/Rear	Front	Integrated Peripherals	IDE HDD Block Mode	Enabled	
SCSI Term Control	Terminated	IDE Primary Master PIO IDE Primary Slave PIO IDE Secondary Master PIO IDE Secondary Slave PIO	IDE Primary Master PIO IDE Primary Slave PIO IDE Secondary Master PIO IDE Secondary Slave PIO	Auto	
RTC Date Alarm	Disabled	IDE Primary Master UDMA IDE Primary Slave UDMA IDE Secondary Master UDMA IDE Secondary Slave UDMA	IDE Primary Master UDMA IDE Primary Slave UDMA IDE Secondary Master UDMA IDE Secondary Slave UDMA	Auto	
Auto Configuration	Enabled	On-Chip Primary PCI IDE On-Chip Secondary PCI IDE Onboard PCI SCSI Chip	On-Chip Primary PCI IDE On-Chip Secondary PCI IDE Onboard PCI SCSI Chip	Enabled	
EDO DRAM Speed Selection	60 ns	USB Keyboard Support	USB Keyboard Support	Disabled	
EDO CASx# MA Wait State	2	Init Display First	Init Display First	AGP	
EDO RASx# Wait State	1	Onboard FDC Controller	Onboard FDC Controller	Enabled	
SDRAM Control by	SPD	Onboard Serial Port 1 Onboard Serial Port 2	Onboard Serial Port 1 Onboard Serial Port 2	Auto	
SDRAM RAS-to-CAS Delay SDRAM RAS Precharge Time SDRAM CAS Latency Time	2	UART2 Mode	UART2 Mode	Standard	
SDRAM Precharge Control	Disabled	Onboard Parallel Port	Onboard Parallel Port	378/IRQ7	
System BIOS Cacheable Video BIOS Cacheable Video RAM Cacheable	Disabled	Parallel Port Mode	Parallel Port Mode	SPP	