

Ziatech ZT 4804

## Rear Transition Module



**In Stock**

**Used and in Excellent Condition**

**Open Web Page**

<https://www.artisanng.com/70856-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source  
for quality pre-owned  
equipment.

**Artisan Technology Group**

(217) 352-9330 | [sales@artisanng.com](mailto:sales@artisanng.com) | [artisanng.com](http://artisanng.com)

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

Performance Technologies

# **ZT 4804**

Rear Transition Module

## User's and System Integrator's Guide



**Revision Date: 10/11/04**

## **Copyright Notice**

© 2002-2004 by Performance Technologies, Inc.  
1050 Southwood Drive  
San Luis Obispo, CA 93401

The IPnexus and Performance Technologies logos are trademarks of Performance Technologies, Inc.

CompactPCI® is a registered trademark of the PCI Industrial Computer Manufacturers Group. All other brands or names are trademarks of their respective holders.

All rights reserved. This document is the sole property of Performance Technologies, Inc.

## **Errors and Omissions**

Although diligent efforts are made to supply accurate technical information to the user, occasionally errors and omissions occur in manuals of this type. Refer to the Performance Technologies, Inc. Web site to obtain manual revisions or current customer information: <http://www.pt.com>.

Performance Technologies, Inc., reserves its right to change product specifications without notice.

## **Symbols and Conventions in this Manual**

The following symbols appear in this document:



**Caution:** There is risk of equipment damage. Follow the instructions.



**Warning:** Hazardous voltages are present. To reduce the risk of electrical shock and danger to personal health, follow the instructions.

## **Electrostatic Discharge**



**Caution:** Electronic components on printed circuit boards are extremely sensitive to static electricity. Ordinary amounts of static electricity generated by your clothing or work environment can damage the electronic equipment. It is recommended that anti-static ground straps and anti-static mats are used when installing the board in a system to help prevent damage due to electrostatic discharge.

# Contents

<b>Tables.....</b>	<b>5</b>
<b>Figures .....</b>	<b>5</b>
<b>1 Introduction .....</b>	<b>6</b>
1.1 Product Definition.....	6
1.2 Features.....	6
1.3 Functional Blocks.....	8
Rear-Panel I/O .....	9
Dual Ethernet Channels .....	9
SMBus Interface.....	10
Isolated User Inputs .....	10
Alarm Relay Outputs .....	10
Serial I/O .....	10
ACO Switch.....	10
Reset Switch .....	10
Hot Swap Activation .....	11
EIDE Interface.....	11
Floppy Drive Interface .....	11
PS/2 Keyboard Port .....	11
PS/2 Mouse Port.....	11
LED Indicators.....	12
<b>2 Configuration .....</b>	<b>13</b>
2.1 SMBus Registers .....	13
2.2 Jumper Options and Locations .....	14
2.3 Jumper Descriptions .....	16
W1—W6 (Alarm Relay Outputs) .....	16
W7 (External User Input 1: DC Voltage Selection).....	16
W8 (External User Input 2: DC Voltage Selection).....	17
2.4 Cuttable Trace Definitions.....	17
<b>3 Connectors .....</b>	<b>18</b>
3.2 Backplane Connectors.....	20
J1 (User Input/Alarm Relay Output Connector).....	20
3.3 Front Panel Connectors .....	21
J2, J4 (COM1, COM2 Serial Ports) .....	21
J3 (Rear-Panel User I/O Connector) .....	21
J5 (Keyboard Connector) .....	22

---

J6 (Mouse Port Connector) .....	22
J7, J8 (Ethernet A, B Connectors) .....	22
3.4 Internal Connectors .....	23
J9 (EIDE Connector) .....	23
J10 (Floppy Drive Connector) .....	24
J11 (Reserved).....	25
<b>4 Specifications.....</b>	<b>26</b>
4.1 Electrical Specifications .....	26
4.2 Environmental Specifications .....	26
4.3 Reliability .....	27
4.4 Mechanical Specifications.....	27
Board Dimensions and Weight.....	27
Connectors.....	27
<b>5 In Case of Difficulty .....</b>	<b>28</b>

# Tables

Table 1. SMBus Output Register .....	13
Table 2. SMBus Input Register .....	14
Table 3. Jumper Cross-Reference .....	14
Table 4. Cuttable Trace Definitions.....	17
Table 5. Connector Assignments .....	18
Table 6. J1 User Input/Alarm Relay Output Connector Pinout.....	20
Table 7. J2, J4 (COM1, COM2 Serial Ports) Pinout.....	21
Table 8. J3 Rear-Panel User I/O Connector Pinout.....	21
Table 9. J5 Keyboard Connector Pinout .....	22
Table 10. J6 Mouse Port Connector .....	22
Table 11. J7, J8 (Ethernet A, B Connectors) Pinout .....	22
Table 12. J9 EIDE Connector Pinout .....	23
Table 13. J10 Floppy Drive Connector Pinout .....	24
Table 14. J11 Reserved Connector Pinout .....	25

# Figures

Figure 1. Faceplate .....	8
Figure 2. Functional Block Diagram .....	9
Figure 3. Factory Default and Customer Jumper Configuration.....	15
Figure 4. Connector Locations .....	19
Figure 5. Board Dimensions.....	27

This section provides a brief introduction to the ZT 4804 Rear Transition Module (RTM). It includes a product definition, a list of product features, a “Faceplate” figure, a functional block diagram, and a description of each block.

See Section 2, “Configuration,” for configuration details and Section 3, “Specifications,” for complete power and temperature requirements, as well as connector locations, descriptions, and pinout tables.

## 1.1 Product Definition


The ZT 4804 is a single slot, 6U rear-panel transition board providing rear-panel access to the I/O functions of specific Performance Technologies processor boards. The ZT 4804 also provides interfaces for two user inputs and six alarm relay outputs. It is designed to function only in the rear-panel slot of a 6U CompactPCI\* system (such as a ZT 5411 enclosure).

## 1.2 Features

- SMBus interface for alarm control
- Six single-pole normally open or normally closed (jumper-selectable) relay outputs (critical, major and minor; audible and visual)
- Two optically-isolated debounced user inputs (5 V or 60 V input range, jumper-selectable)
- Host hot-swap activation via bottom ejector latch circuitry
- Rear-panel interface connectors for host:
  - COM 1 micro-miniature (MDSM) DB-9 serial
  - COM 2 micro-miniature (MDSM) DB-9 serial
  - PS/2 Keyboard
  - PS/2 Mouse
  - Ethernet A
  - Ethernet B (in non-High Availability systems only)
- Internal interfaces (i.e., not on the faceplate):
  - Floppy Interface
  - IDE Interface (Host secondary channel only)

- Rear-panel switches:
  - ACO Switch
  - Reset Switch
  - Hot-Swap Initiate (integrated in the bottom ejector lever)
- Rear-panel LEDs indicate:
  - Critical, Major, and Minor Alarms
  - Floppy drive active
  - IDE drive active
  - Alarm Cut-off (ACO)
  - Hot Swap LED (indicates when it's OK to remove the board)
- Five-year warranty

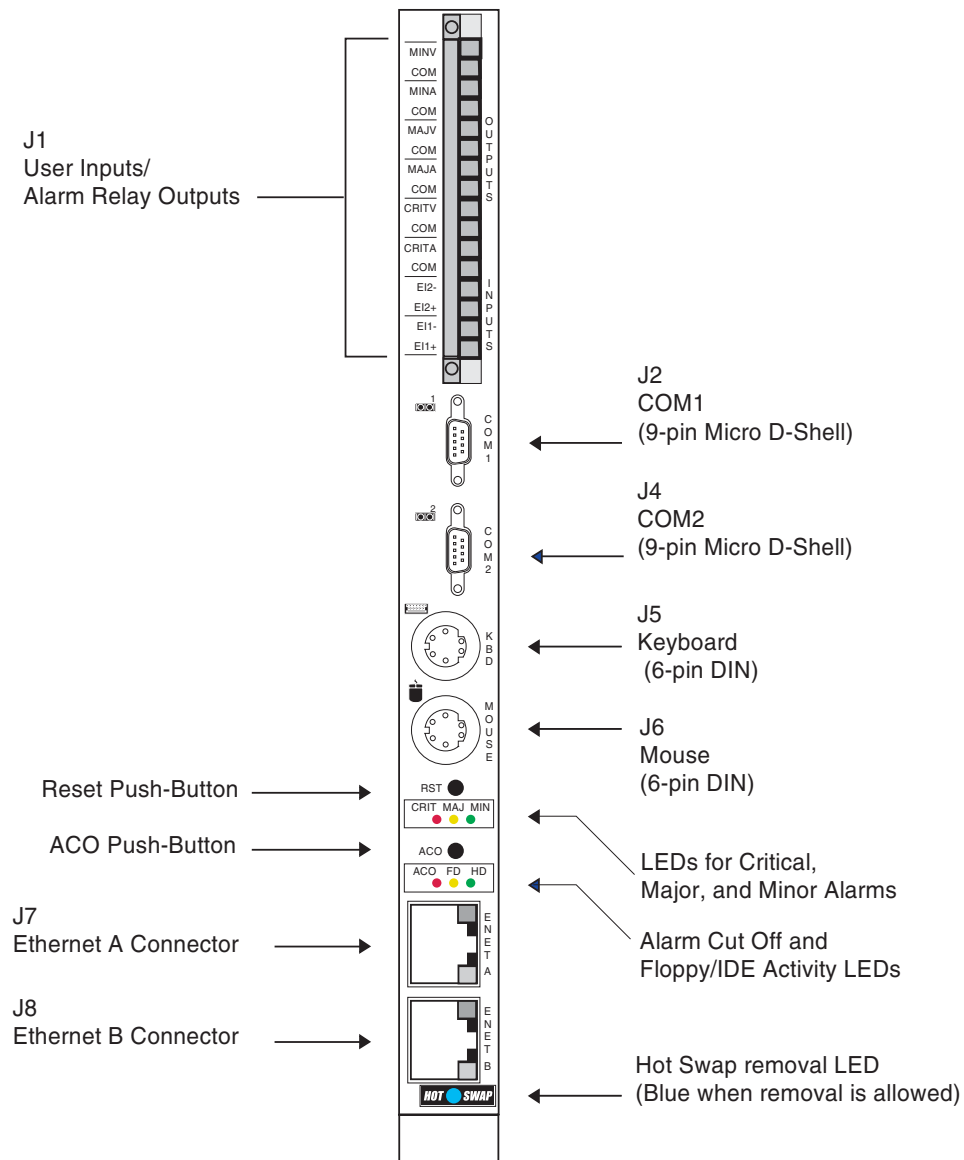


**Figure 1. Faceplate**

## 1.3 Functional Blocks

Below is a functional block diagram of the ZT 4804. The following topics provide overviews of the functional blocks.

Figure 2. Functional Block Diagram

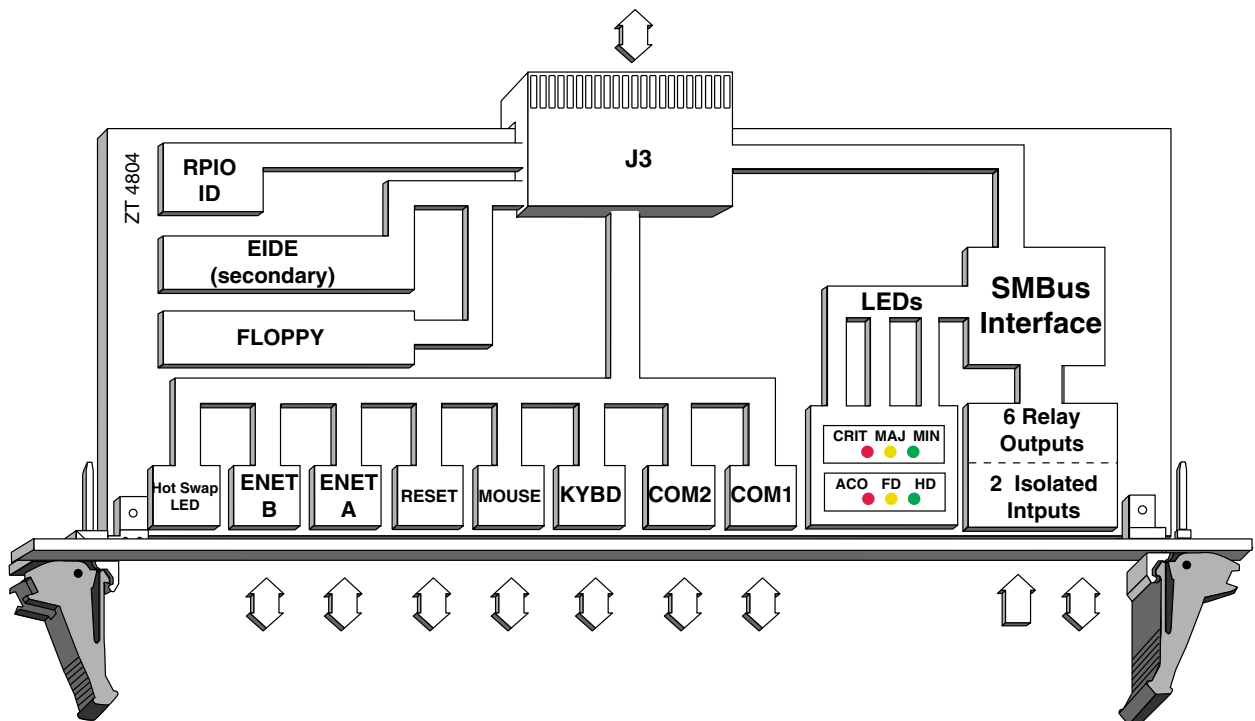

## Rear-Panel I/O

The ZT 4804 transitions I/O signals from the processor board for rear-panel use via a 95-pin, 2 mm x 2 mm, female connector (J3).

## Dual Ethernet Channels

The ZT 4804 transitions the processor board's Ethernet channels A and B for rear-panel access. Both 10 Mbit/s and 100 Mbit/s Ethernet protocols are provided through each of two RJ-45 rear-panel connectors.

## SMBus Interface

The ZT 4804 incorporates an SMBus interface between the processor board and the ZT 4804 to provide access to alarm and system monitoring functions. The ZT 4804 provides isolation of the local SMBus from the processor board during Hot Swap cycles. All SMBus devices are accessed via a Performance Technologies device driver. The ZT 4804 SMBus implementation provides two 8-bit registers for I/O and control functions. Refer to “[SMBus Registers](#)” in Section 3 for register information.

## Isolated User Inputs

The ZT 4804 provides two optically isolated debounced inputs for application use. These inputs are available on J1, a 16-pin, 150 mil connector. The inputs must be biased from an external source and are configurable through jumpers (W7 and W8) to sense either 0-5 VDC or 0-60 VDC input levels. Reverse polarity and over-voltage protection are provided. These inputs are available as rear-panel inputs only; no provision is made for front-panel (processor board) connections.

## Alarm Relay Outputs

The ZT 4804 provides six alarm relay outputs. These outputs are available on J1, a 16-pin, 150 mil connector. J1 provides one output pole per relay. The ZT 4804 allows configuration of the output pin pair as either a normally open or normally closed pole through jumpers (W1 - W6).

## Serial I/O

The ZT 4804's two serial port connectors, J2 (COM1) and J4 (COM2), provide an alternative means of accessing the processor board's COM1 and COM2 serial ports. The optional ZT 90248 adapter cable is available for use with J2 and J4. Contact [Performance Technologies](#) for more information.

## ACO Switch

The ZT 4804 provides an Alarm Cut Off (ACO) push button switch (S2) for defeating the three audible alarm output signals. Under software control, an LED indicator is illuminated when the ACO switch is activated.

## Reset Switch

The ZT 4804 features a reset push-button switch (S1) on the faceplate. When S1 is pressed, a System Reset is issued to the host processor board to force the processor to restart program execution. No local debounce is implemented.

## Hot Swap Activation

The ZT 4804 provides an ejector sense mechanism for triggering a Hot Swap event. Opening the ZT 4804's lower ejector handle initiates a Hot Swap event to begin the extraction process; closing the handle signals an insertion request. A change in the ejector position causes the PCI signal ENUM# to be asserted, which in turn signals the Hot Swap Manager to begin handling the event. A blue LED indicator on the faceplate illuminates when board removal is permitted.

For a complete definition of CompactPCI Hot Swap, obtain a copy of the *CompactPCI Hot Swap Specification, PICMG 2.1, Version 1.0*. The document is available for a nominal fee from PICMG at:

<http://www.picmg.org>

## EIDE Interface

The ZT 4804 provides access to the processor board's secondary EIDE channel through an internal connector (J9), a 40-pin 0.1" vertical header.

## Floppy Drive Interface

The ZT 4804 provides access to the processor board's floppy controller through an internal connector (J10), a 34-pin 0.1" vertical header.



**Caution:** Do not connect the floppy drive directly to system power. Floppy disks in the drive may become corrupted. Power the floppy drive from the host processor board. This causes the floppy drive power and control lines to become active at the same time, thereby maintaining signal integrity. For development purposes floppy power may be sourced from J11.

## PS/2 Keyboard Port

The ZT 4804 provides a PS/2 style keyboard port (J5) that duplicates the processor board's keyboard connector. Either the ZT 4804 keyboard port or the processor board keyboard connector, but not both, may be used at any one time.

## PS/2 Mouse Port

The ZT 4804 provides a PS/2 style mouse port (J6) that duplicates the processor board's mouse connector. Either the ZT 4804 mouse port or the processor board mouse connector, but not both, may be used at any one time.

## LED Indicators

As shown in the “Faceplate” figure, the ZT 4804 provides several LEDs indicating the following:

- Floppy access
- IDE access
- Alarm Cut-off
- Alarm Conditions
  - Critical (red)
  - Major (yellow)
  - Minor (green)
- Hot Swap Removal Indicator

## Section

# 2

## Configuration

The ZT 4804 RTM's SMBus implementation provides two 8-bit registers for I/O and control functions.

Several jumper options on the ZT 4804 tailor its operation to meet the requirements of specific applications. In most cases, the default jumper settings are appropriate for normal operation. However, some applications may require different settings. Jumper options are made by installing and removing shorting receptacles.

The ZT 4804's cuttable traces are reserved and should not be modified by the user. This section describes SMBus registers and jumper options and lists the cuttable traces on the ZT 4804. An illustration showing jumper locations is also provided.

### 2.1 SMBus Registers

Table 1. SMBus Output Register

Bit	Description
7	Control the ACO LED state
6	Clear the ACO switch latch state
5	Control the Minor Visual relay state
4	Control the Minor Audible relay state
3	Control the Major Visual relay state
2	Control the Major Audible relay state
1	Control the Critical Visual relay state
0	Control the Critical Audible relay state

**Table 2. SMBus Input Register**

Bit	Description
7	Read the state of option strap bit ID1
6	Read the state of option strap bit ID0
5	Read the status of the local 3.3V DC-DC converter
4	Read the state of the ACO switch latch
3	Not used
2	Not used
1	Read the state of the EXT2 input
0	Read the state of the EXT1 input


## 2.2 Jumper Options and Locations

The ZT 4804's eight jumpers are listed and briefly described in the "Jumper Cross-Reference" table below. Factory default jumper configuration is shown in the figure "Factory Default and Customer Jumper Configuration". The customer portion of the figure provides a blank jumper layout; use this to document your configuration if it differs from the factory default. This will allow you to easily restore the configuration if it is changed for any reason.

**Table 3. Jumper Cross-Reference**

Function	Jumper
Alarm Relay Outputs	W1-W6
External User Inputs	W7, W8

Figure 3. Factory Default and Customer Jumper Configuration

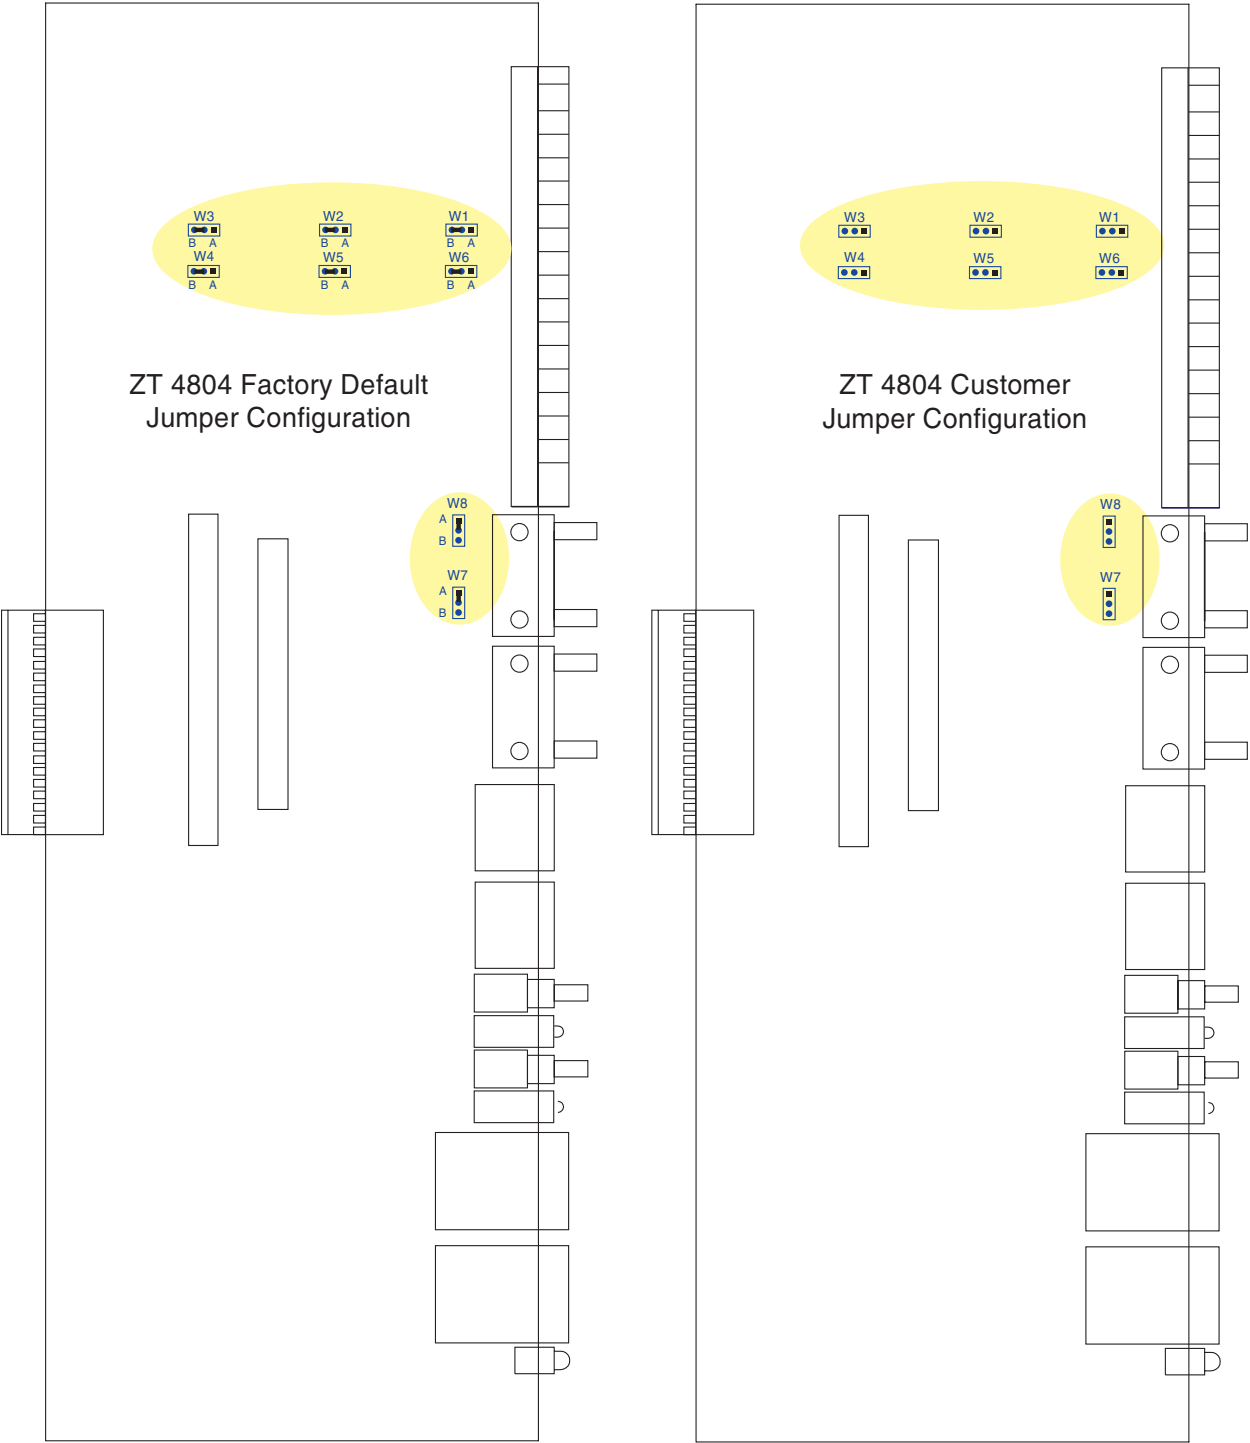



## 2.3 Jumper Descriptions

The following topics present the jumpers in numerical order and provide a detailed description of each jumper.

### W1—W6 (Alarm Relay Outputs)

The ZT 4804 provides six alarm relay outputs. These outputs are available on J1, a 16-pin, 150 mil connector. J1 provides two output terminals per relay. The ZT 4804 allows configuration of the output terminal pair as either a normally open (default) or normally closed connection, as defined in the following table.

Alarm Relay	Normally Open (1)	Normally Closed	J1 Common Terminal	J1 Switched Terminal
Critical audible	W6B	W6A	Pin 5	Pin 6
Critical visual	W5B	W5A	Pin 7	Pin 8
Major audible	W4B	W4A	Pin 9	Pin 10
Major visual	W3B	W3A	Pin 11	Pin 12
Minor audible	W2B	W2A	Pin 13	Pin 14
Minor visual	W1B	W1A	Pin 15	Pin 16

**NOTE:**

1. Factory Default

### W7 (External User Input 1: DC Voltage Selection)

W7 is used to select the DC voltage level of **external user input 1** (EI1+ and EI1-). The voltage level is configurable to be either 0-5 VDC or 0-60 VDC, as shown in the table below. This input is available on connector J1. The factory default is position A.

Position	User Input 1: DC Voltage Selection	J1
W7B	0 - 5 VDC	Pin 1, EI1+
W7A    Default	0 - 60 VDC	Pin 2, EI1-

## W8 (External User Input 2: DC Voltage Selection)

W8 is used to select the DC voltage level of **external user input 2** (EI2+ and EI2-). The voltage level is configurable to be either 0-5 VDC or 0-60 VDC, as shown in the table below. This input is available on connector J1. The factory default is position A.

Position	User Input 2: DC Voltage Selection	J1
W8B	0 - 5 VDC	Pin 3, EI2+
W8A      Default	0 - 60 VDC	Pin 4, EI2-

## 2.4 Cuttable Trace Definitions

The ZT 4804 contains several cuttable traces (zero  $\Omega$  shorting resistors) listed in the “ZT 4804 Cuttable Trace Definitions” table below.



**Caution:** The ZT 4804's cuttable traces are reserved and should not be modified by the user. The product warranty is voided if the board is damaged by customer modifications.

**Table 4. Cuttable Trace Definitions**

CT#	Default	Description
CT1	In	Configure Input circuits for 12.5 ms debounce delay (319 Hz)
CT2	Out	Configure Input circuits for 125.2 us debounce delay (31.9 kHz)
CT3	Out	Reserved — Do not modify
CT4	In	Reserved — Do not modify
CT5	In	Reserved — Do not modify
CT7	In	Reserved — Do not modify
CT8	In	Reserved — Do not modify
CT9	In	Connect Floppy Activity LED to MTR0
CT10	Out	Reserved — Do not modify
CT11	In	Reserved — Do not modify
CT12	In	Reserved — Do not modify
CT13	In	Reserved — Do not modify
CT14	In	Reserved — Do not modify
CT15	Out	Reserved — Do not modify

## Section

# 3


## Connectors

As shown in the “[Connector Locations](#)” figure, the ZT 4804 includes several connectors to interface to application-specific devices. A brief description of each connector is given in the “ZT 4804 Connector Assignments” table below. A detailed description and pinout for each connector is given in the following topics.

**Table 5. Connector Assignments**

Connector	Function
J1	User Input/Alarm Relay Output Connector (16-position)
J2	COM1 Serial Port (9-pin, D-Shell)
J3	Rear-Panel User I/O Connector (95-pin 2 mm x 2 mm, female)
J4	COM2 Serial Port (9-pin, D-Shell)
J5	PS/2 Keyboard Connector (6-pin, DIN)
J6	PS/2 Mouse Port Connector (6-pin, DIN)
J7	Ethernet Connector A (8-pin, RJ-45)
J8	Ethernet Connector B (8-pin, RJ-45)
J9	EIDE Connector (40-pin)
J10	Floppy Drive Connector (34-pin)
J11	Reserved

Figure 4. Connector Locations

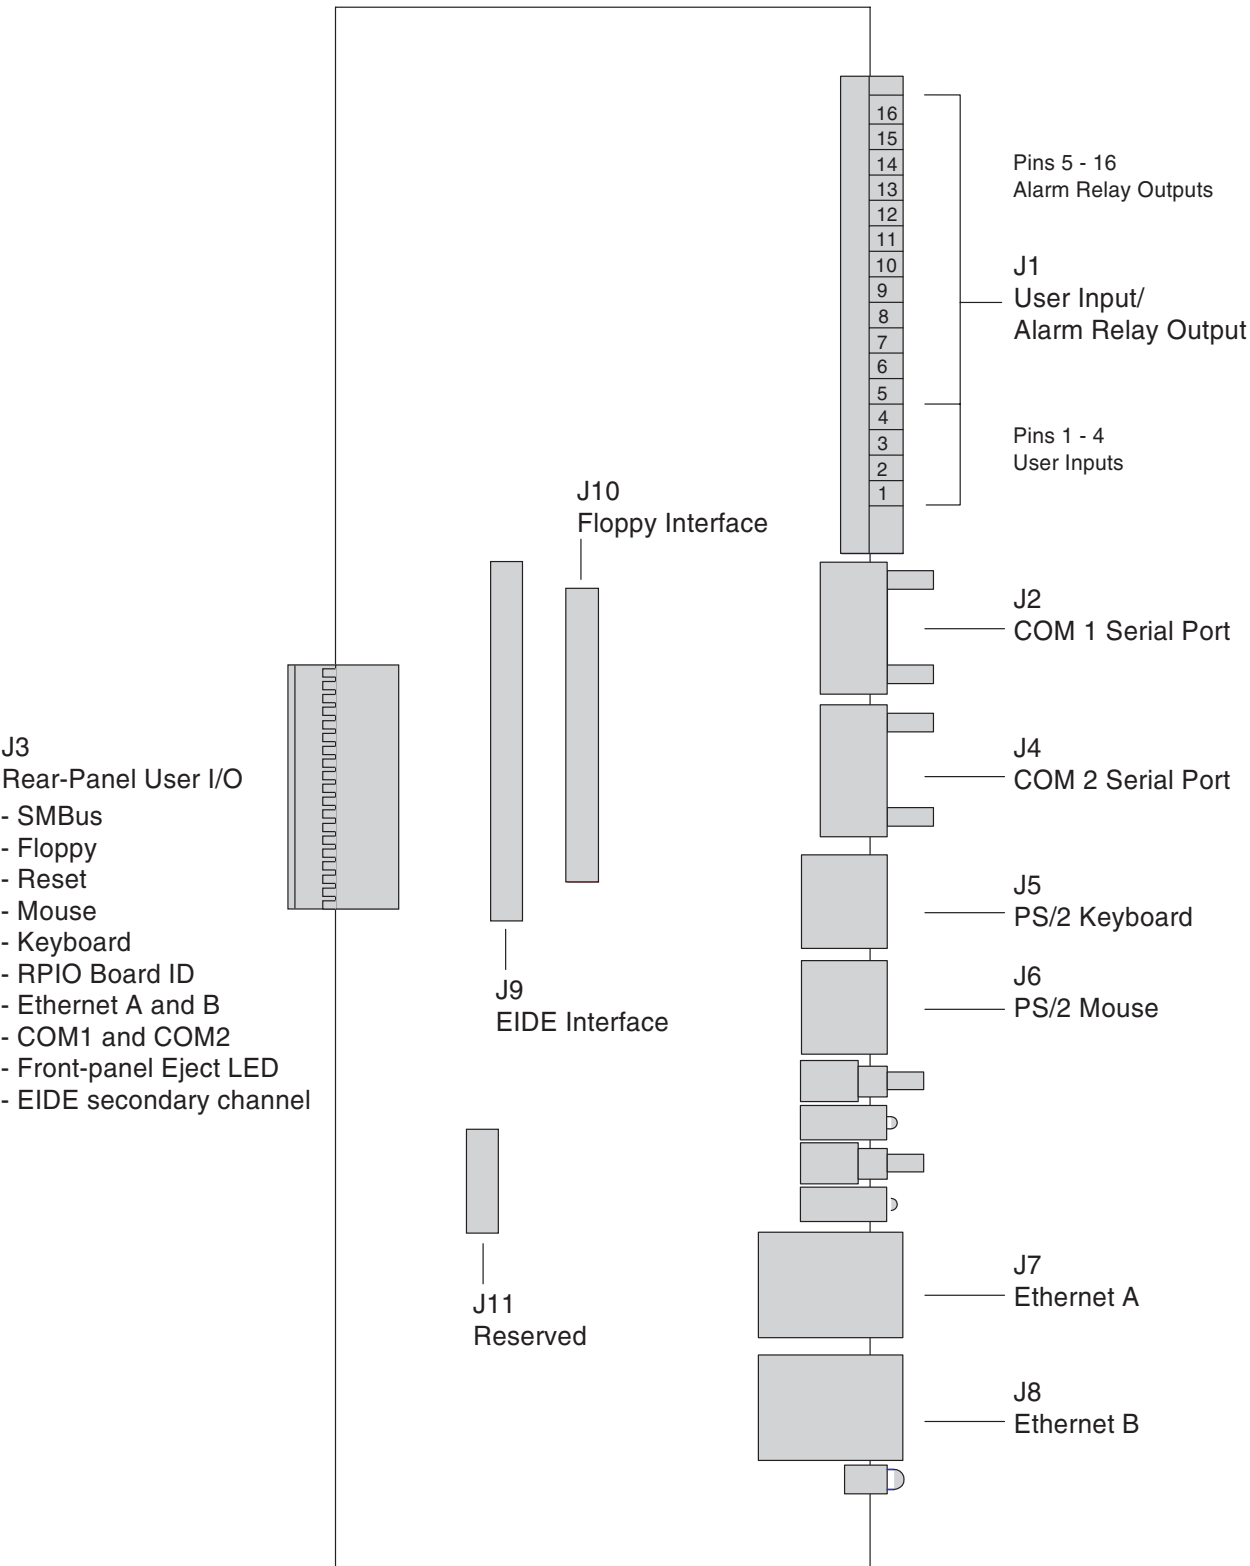

## 3.2 Backplane Connectors

### J1 (User Input/Alarm Relay Output Connector)

J1 is a 16-position, 3.81 mm pitch connector (Phoenix Contact type MC 1,5/16-GF-3,81; order # 18 28 00 03) providing an interface for two user inputs and six alarm relay outputs. The corresponding Phoenix Contact mating connector is order # 18 27 84 02.

User inputs must be biased from an external source and are configurable through jumpers (W7 and W8) on the processor board to sense either 0-5 VDC or 0-60 VDC input levels. There are two output terminals per alarm relay (one each for visual and audible). Jumpers (W1-W6) are used to configure the output pin pair as either a normally open or normally closed connection.

See the “J1 User Input/Alarm Relay Output Connector Pinout” table below for pin definitions.

**Table 6. J1 User Input/Alarm Relay Output Connector Pinout**

Pin #	Alarm Relay Outputs	Normally Open	Normally Closed
16	Minor Visual (Switched)	W1B	W1A
15	Minor Visual (Common)		
14	Minor Audible (Switched)	W2B	W2A
13	Minor Audible (Common)		
12	Major Visual (Switched)	W3B	W3A
11	Major Visual (Common)		
10	Major Audible (Switched)	W4B	W4A
9	Major Audible (Common)		
8	Critical Visual (Switched)	W5B	W5A
7	Critical Visual (Common)		
6	Critical Audible (Switched)	W6B	W6A
5	Critical Audible (Common)		
Pin #	User Inputs	Input Range Selection	
4	External Input 2 (-)	W8A = 0-5 VDC / W8B = 0-60 VDC	
3	External Input 2 (+)		
2	External Input 1 (-)	W7A = 0-5 VDC / W7B = 0-60 VDC	
1	External Input 1 (+)		

## 3.3 Front Panel Connectors

### J2, J4 (COM1, COM2 Serial Ports)

J2 and J4 are 9-pin Micro D-shell connectors (ITT/Cannon MDSM-9PE-Z10-VR25 or equivalent) providing rear-panel interfaces to the processor board's COM1 and COM2 serial channels. See the "J2/J4 COM1/COM2 Serial Ports Pinout" table below for pin definitions.

**Table 7. J2, J4 (COM1, COM2 Serial Ports) Pinout**

Pin #	Function	Pin #	Function	Pin #	Function
1	DCD	4	DTR	7	RTS
2	RXD	5	GND	8	CTS
3	TXD	6	DSR	9	RIN

### J3 (Rear-Panel User I/O Connector)

J3 is a 95-pin, 2 mm x 2 mm, female connector (AMP 646488-1 or equivalent) transitioning I/O signals from the processor board for rear-panel use. See the "J3 Rear-Panel User I/O Interface Pinout" table below for pin definitions.

**Table 8. J3 Rear-Panel User I/O Connector Pinout**

Pin #	Z	A	B	C	D	E	F
19	(GND)	PWRGD	IOCS16#	IORDY	<b>SMALRT#</b>	<b>IRQ15</b>	GND
18	(GND)	<b>SMDATA</b>	<b>SMCLK</b>	<b>CS3S#</b>	<b>CS1S#</b>	<b>RPID</b>	GND
17	(GND)	DD15	DD14	DD13	DD12	<b>EJECT#</b>	GND
16	(GND)	DD11	DD10	DD9	DD8	SDDAK#	GND
15	(GND)	DA0	DA1	<b>J3VCC</b>	DA2	SDDRQ	GND
14	(GND)	DD7	DD6	DD5	DD4	SDIOW#	GND
13	(GND)	DD3	DD2	DD1	DD0	SDIOR#	GND
12	(GND)	DR0#	MSEN0	MTR0#	INDEX#	WDATA#	GND
11	(GND)	DR1#	DSKCHG#	MTR1#	DENSL	RDATA#	GND
10	(GND)	WP#	HDSEL#	DIR#	TRK0#	STEP#	GND
9	(GND)	WGATE#	<b>RXA-</b>	<b>GND</b>	<b>HSLED</b>	NC	GND
8	(GND)	<b>GND</b>	<b>RXA+</b>	<b>J3VCC</b>	<b>CTB</b>	NC	GND
7	(GND)	<b>RXB-</b>	<b>GND</b>	<b>TXB-</b>	<b>CTA</b>	<b>GND</b>	GND
6	(GND)	<b>RXB+</b>	<b>GND</b>	<b>TXB+</b>	<b>GND</b>	<b>TXA-</b>	GND
5	(GND)	NC	MSDAT	SPKR	KBDAT	<b>TXA+</b>	GND
4	(GND)	PRST#	MSCLK	<b>J3VCC</b>	KBCLK	S1RXD	GND
3	(GND)	S1CTS	S1RTS	S1DSR	S1DCD	S1TXD	GND
2	(GND)	S2RIN	S2DTR	S1RIN	S1DTR	S2RXD	GND
1	(GND)	S2CTS	S2RTS	S2DSR	S2DCD	S2TXD	GND
<b>Pin #</b>	<b>Z</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>

## J5 (Keyboard Connector)

J5 is a 6-pin D-shell connector (AMP 749180-1 or equivalent) transitioning the processor board's keyboard signals for rear-panel access. See the "J5 Keyboard Connector Pinout" table below for pin definitions.

**Table 9. J5 Keyboard Connector Pinout**

Pin#	Function	Pin#	Function
1	KBDAT	4	Vcc (PTC)
2	No Connect	5	KBCLK
3	GND	6	No Connect

## J6 (Mouse Port Connector)

J6 is a 6-pin PS/2 mouse port connector (AMP 749180-1 or equivalent). See the "J6 Mouse Port Connector Pinout" table below for pin definitions.

**Table 10. J6 Mouse Port Connector**

Pin#	Function	Pin#	Function
1	MSDAT	4	VCC (PTC)
2	No Connect	5	MSCLK
3	GND	6	No Connect

## J7, J8 (Ethernet A, B Connectors)

J7 (ENET A) and J8 (ENET B) are RJ-45 connectors (Stewart SI-40231) transitioning the processor board's Ethernet signals to the rear panel. Depending on the application's Ethernet requirements (front panel/rear-panel access; HA/non-HA system), configuration of switches on the processor board may be necessary. See the processor board manual for details. See the "J7/J8 Ethernet A/B Connectors Pinout" table for pin definitions.

### NOTES:

1. J8 ENET B is not available in a High Availability system.
2. The two LEDs located inside the ZT 4804's RJ-45 connectors are non-functional.

**Table 11. J7, J8 (Ethernet A, B Connectors) Pinout**

Pin#	Function	Pin#	Function
1	TX+	5	GND
2	TX-	6	RX-
3	RX+	7	GND
4	GND	8	GND

## 3.4 Internal Connectors

### J9 (EIDE Connector)

J9 is an internal (not on the faceplate) 40-pin male connector (unshrouded 0.025" square posts on 0.1" 2 x 20 grid) providing access to the processor board's secondary EIDE channel. See the "J9 EIDE Connector Pinout" table below for pin definitions.

**Table 12. J9 EIDE Connector Pinout**

Pin #	Function	Pin #	Function
1	PWRGD	21	SDDRQ
2	GND	22	GND
3	DD7	23	SDIOW#
4	DD8	24	GND
5	DD6	25	SDIOR#
6	DD9	26	GND
7	DD5	27	IORDY
8	DD10	28	10K PULL UP
9	DD4	29	SDDAK#
10	DD11	30	N/C
11	DD3	31	IRQ15
12	DD12	32	ISAIO16#
13	DD2	33	DA1
14	DD13	34	N/C
15	DD1	35	DA0
16	DD14	36	DA2
17	DD0	37	CS1S#
18	DD15	38	CS3S#
19	GND	39	IDELED#
20	N/C	40	GND



## J10 (Floppy Drive Connector)

J10 is an internal (not on the faceplate) 34-pin male connector (unshrouded 0.025" square posts on 0.1" 2 x 17 grid) providing access to the processor board's floppy signals. See the "J10 Floppy Drive Connector Pinout" table below for pin definitions.



**Caution:** Do not connect the floppy drive directly to system power. Floppy disks in the drive may become corrupted. Power the floppy drive from the host processor board. This causes the floppy drive power and control lines to become active at the same time, thereby maintaining signal integrity. For development purposes floppy power may be sourced from J11.

**Table 13. J10 Floppy Drive Connector Pinout**

Pin #	Function	Pin #	Function
1	GND	18	DIR#
2	DENSL	19	GND
3	GND	20	STEP#
4	N/C	21	GND
5	GND	22	WDATA#
6	MSEN0	23	GND
7	GND	24	WGATE#
8	INDEX#	25	GND
9	GND	26	TRK0#
10	MTR0#	27	GND
11	GND	28	WP#
12	DR1#	29	GND
13	GND	30	RDATA#
14	DR0#	31	GND
15	GND	32	HDSEL#
16	MTR1#	33	GND
17	GND	34	DSKCHG#

## J11 (Reserved)

J11 is an internal (not on the faceplate) 5-pin male connector (unshrouded 0.025" square posts on a 0.1" 1 x 5 grid) providing access to the ZT 4804 local isolated SMBus signals. VCC and Logic Ground are also provided. Note that VCC may or may not be switched from a host Hot Swap processor board, depending on the backplane used. The VCC pin (pin 5) is fused for 1A DC. See the "J11 Reserved Connector Pinout" table below for pin definitions.

**Table 14. J11 Reserved Connector Pinout**

Pin	Function
1	Logic Ground
2	SMB Clock
3	SMB Data
4	SMB Alert
5	VCC

## Section

# 4

# Specifications

This section describes the electrical, environmental, and mechanical specifications of the ZT 4804 Rear-Panel I/O Transition Board. It includes connector descriptions and pinouts, as well as illustrations of the board dimensions and connector locations.

## 4.1 Electrical Specifications

Power Requirements	Minimum	Typical	Maximum
Supply Voltage, VCC	4.75 V	5.00 V	5.25 V
Supply Current, VCC = 5.0 V	0 mA	—	500 mA

Each ZT 4804 relay output offers a normally open and normally closed pole position, with the following maximum contact ratings:

- Rated Resistive Load: 0.4 A @ 125 VAC, 2.0 A @ 30 VDC
- Rated Inductive Load: 0.2 A @ 125 VAC, 1.0 A at 30 VDC
- Operating voltage: 250 VAC, 220 VDC
- Operating current: 3.0 A (AC resistive), 3.0 A (DC resistive)  
1.5 A (AC inductive), 1.5 A (DC inductive)
- Switching capacity: 50 VA, 60 W (resistive)  
25 AV, 30 W (inductive)
- Minimum load: 10  $\mu$ A at 10 mVDC

Power is supplied to an external keyboard and mouse via J5 and J6, respectively.

## 4.2 Environmental Specifications

- Operating Temperature: 0° to +65° Celsius
- Storage Temperature: -40° to +85° Celsius
- Relative Humidity: < 95% at 40° Celsius, non-condensing

## 4.3 Reliability

- MTBF: 24.9 years at 40° Celsius
- MTTR: 3 min (based on hot-swap board replacement) plus system startup

## 4.4 Mechanical Specifications

The topics listed below provide the following mechanical specifications:


- Board dimensions and weight
- Connectors (including connector locations, descriptions, and pinouts)

### Board Dimensions and Weight

Mechanical dimensions for the ZT 4804 are shown in the “Board Dimensions” illustration and outlined below.

- Board Length: 80 mm (3.150 inches)
- Board Width: 233.35 mm (9.187 inches)
- Board Thickness: 1.6 mm (0.063 inches)
- Board Weight: 236 grams (8.00 ounces)

**Figure 5. Board Dimensions**

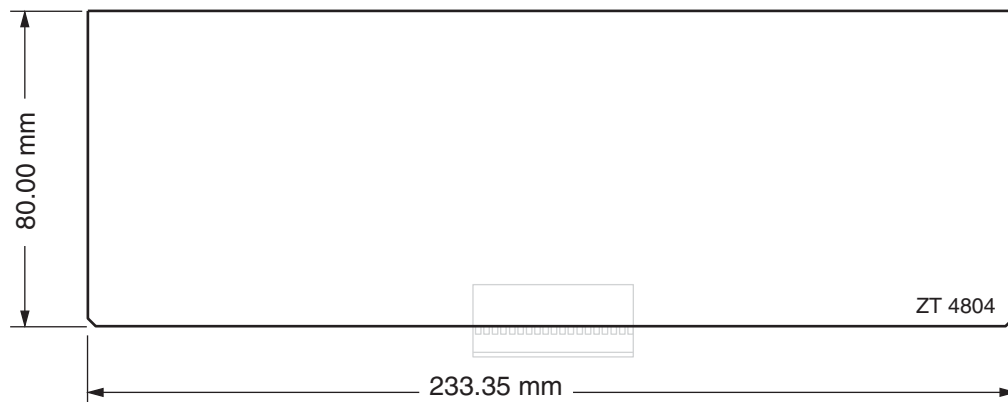

### Connectors

The ZT 4804 includes several connectors to interface to application-specific devices. A detailed description and pinout for each connector is given in Section 3, “[Connectors](#).”

## Section

# 5

## *In Case of Difficulty*

If you encounter difficulty in using this Performance Technologies product, you can contact our support personnel in several ways. Please have the product model and serial number handy before contacting Product Support.

### **Internet**

[www.pt.com](http://www.pt.com)

### **Email**

[support@pt.com](mailto:support@pt.com)

Describe your problem in detail. Please include your return email address and telephone number.

### **FAX**

(805) 541-5088

Mark your FAX "Attention: Product Support." Describe your problem in detail. Please include your return FAX number and telephone number.

### **Telephone**

(805) 541-0488

Request Product Support. Our offices are open between 8:00 am and 5:00 pm Pacific Time, Monday through Friday.

If you are located outside North America, we encourage you to contact the local Performance Technologies distributor or agent for support. Many of our distributors or agents maintain technical support staffs.

### **Performance Technologies**

1050 Southwood Drive  
San Luis Obispo, CA 93401 USA

# Artisan Technology Group is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at [artisanTG.com](https://www.artisanTG.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

**We're here to make your life easier. How can we help you today?**

(217) 352-9330 | [sales@artisanTG.com](mailto:sales@artisanTG.com) | [artisanTG.com](https://www.artisanTG.com)

