



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com

» User Guide «

CP6012

**6U CompactPCI Processor Board based on
the Intel® Core™ Duo Processor and
the Intel® Core™ 2 Duo Processor with
the Intel® E7520 Chipset**

Doc. ID: 33274, Rev. 5.0
September 18, 2009



Revision History

Publication Title:		CP6012: 6U CompactPCI Processor Board based on the Intel® Core™ Duo Processor and the Intel® Core™ 2 Duo Processor with the Intel® E7520 Chipset
Doc. ID:		33274
Rev.	Brief Description of Changes	Date of Issue
1.0	Initial issue	25-Aug-2006
2.0	General update	21-Dec-2006
3.0	General update, deletion of appendix C, AMIBIOS8	23-Aug-2007
4.0	General update; added new narrow heat sink as a replacement for the wide heat sink	27-Feb-2008
5.0	General update	18-Sep-2009

Imprint

Kontron Modular Computers GmbH may be contacted via the following:

MAILING ADDRESS

Kontron Modular Computers GmbH
Sudetenstraße 7
D - 87600 Kaufbeuren Germany

TELEPHONE AND E-MAIL

+49 (0) 800-SALESKONTRON
sales@kontron.com

For further information about other Kontron products, please visit our Internet web site: www.kontron.com.

Disclaimer

Copyright © 2009 Kontron AG. All rights reserved. All data is for information purposes only and not guaranteed for legal purposes. Information has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. Kontron and the Kontron logo and all other trademarks or registered trademarks are the property of their respective owners and are recognized. Specifications are subject to change without notice.



Table of Contents

<i>Revision History</i>	<i>ii</i>
<i>Imprint</i>	<i>ii</i>
<i>Disclaimer</i>	<i>ii</i>
<i>Table of Contents</i>	<i>iii</i>
<i>List of Tables</i>	<i>ix</i>
<i>List of Figures</i>	<i>xiii</i>
<i>Proprietary Note</i>	<i>xv</i>
<i>Trademarks</i>	<i>xv</i>
<i>Environmental Protection Statement</i>	<i>xv</i>
<i>Explanation of Symbols</i>	<i>xvi</i>
<i>For Your Safety</i>	<i>xvii</i>
<i>High Voltage Safety Instructions</i>	<i>xvii</i>
<i>Special Handling and Unpacking Instructions</i>	<i>xvii</i>
<i>General Instructions on Usage</i>	<i>xviii</i>
<i>Two Year Warranty</i>	<i>xix</i>
1. Introduction	1 - 3
1.1 <i>Board Overview</i>	1 - 3
1.2 <i>Board-Specific Information</i>	1 - 4
1.3 <i>System Expansion Capabilities</i>	1 - 5
1.3.1 <i>PMC Modules</i>	1 - 5
1.3.2 <i>XMC Modules</i>	1 - 5
1.3.3 <i>CTM80-3 Rear I/O Module</i>	1 - 5
1.3.4 <i>CP6012-MK2.5SATA Assembly Kit</i>	1 - 5
1.4 <i>System Relevant Information</i>	1 - 6
1.5 <i>Board Diagrams</i>	1 - 7
1.5.1 <i>Functional Block Diagram</i>	1 - 7
1.5.2 <i>Front Panel</i>	1 - 8
1.5.3 <i>Board Layout</i>	1 - 9
1.6 <i>Technical Specification</i>	1 - 11
1.7 <i>Kontron Software Support</i>	1 - 17
1.8 <i>Standards</i>	1 - 17
1.9 <i>Related Publications</i>	1 - 18



2. Functional Description	2 - 3
2.1 CPU, Memory and Chipset	2 - 3
2.1.1 CPU	2 - 3
2.1.2 Memory	2 - 5
2.1.3 Intel® E7520 Chipset Overview	2 - 6
2.1.3.1 Memory Controller Hub E7520	2 - 6
2.1.3.2 I/O Controller Hub 6300ESB	2 - 6
2.2 Peripherals	2 - 7
2.2.1 Timer	2 - 7
2.2.2 Watchdog Timer	2 - 7
2.2.3 Battery	2 - 7
2.2.4 Reset	2 - 8
2.2.5 SMBus Devices	2 - 8
2.2.6 Thermal Management/System Monitoring	2 - 8
2.2.7 Serial EEPROM	2 - 9
2.2.8 FLASH Memory	2 - 9
2.2.8.1 BIOS FLASH (Firmware Hub)	2 - 9
2.2.8.2 CompactFlash	2 - 9
2.3 Board Interfaces	2 - 10
2.3.1 Front Panel LEDs	2 - 10
2.3.1.1 IPMI LEDs	2 - 10
2.3.1.2 Watchdog and Overtemperature LEDs	2 - 10
2.3.1.3 Front-I and Front-II General Purpose LEDs	2 - 11
2.3.1.4 Hot Swap LED	2 - 11
2.3.2 USB Interfaces	2 - 12
2.3.3 Graphics Controller	2 - 12
2.3.3.1 Video Resolution	2 - 13
2.3.3.2 CRT Interface and Connector J10	2 - 13
2.3.4 COM Ports	2 - 14
2.3.5 Floppy Drive Interface	2 - 14
2.3.6 Gigabit Ethernet	2 - 15
2.3.7 EIDE Interfaces	2 - 16
2.3.7.1 CompactFlash Socket	2 - 16
2.3.8 Extension Connector J12	2 - 18

2.3.9	<i>Keyboard/Mouse Interface</i>	2 - 18
2.3.10	<i>Serial ATA Interface</i>	2 - 19
2.3.11	<i>Serial ATA Connector J22</i>	2 - 19
2.3.12	<i>2.5" SATA HDD Extension Connectors J23</i>	2 - 20
2.3.13	<i>PMC Interface</i>	2 - 21
2.3.13.1	<i>PMC Connectors J25, J26, J27 and J28 Pinouts</i>	2 - 22
2.3.14	<i>XMC Interface</i>	2 - 24
2.3.15	<i>CompactPCI Interface</i>	2 - 25
2.3.15.1	<i>System Master Configuration</i>	2 - 25
2.3.15.2	<i>Peripheral Master Configuration (Passive Mode)</i>	2 - 25
2.3.15.3	<i>Packet Switching Backplane (PICMG 2.16)</i>	2 - 25
2.3.15.4	<i>Hot Swap Support</i>	2 - 25
2.3.15.5	<i>Power Ramping</i>	2 - 25
2.3.15.6	<i>Precharge</i>	2 - 25
2.3.15.7	<i>Handle Switch</i>	2 - 26
2.3.15.8	<i>ENUM# Interrupt</i>	2 - 26
2.3.15.9	<i>Hot Swap LED</i>	2 - 26
2.3.16	<i>CompactPCI Bus Connector</i>	2 - 27
2.3.16.1	<i>CompactPCI Connector Keying</i>	2 - 27
2.3.16.2	<i>CompactPCI Connectors J1 and J2 Pinouts</i>	2 - 28
2.3.16.3	<i>CompactPCI Rear I/O Connectors J3-J5 and Pinouts</i>	2 - 32
2.3.16.4	<i>Rear I/O Configuration</i>	2 - 36
2.4	<i>Intelligent Platform Management Interface</i>	2 - 37
2.4.1	<i>Technical Background of IPMI</i>	2 - 37
2.4.2	<i>IPMI Glossary</i>	2 - 38
2.4.3	<i>IPMI Implementation on the CP6012</i>	2 - 39
2.4.3.1	<i>Sensors Implemented on the CP6012</i>	2 - 40
2.4.4	<i>Data Repositories</i>	2 - 41
3.	<i>Installation</i>	3 - 3
3.1	<i>Safety Requirements</i>	3 - 3
3.2	<i>CP6012 Initial Installation Procedures</i>	3 - 4
3.3	<i>Standard Removal Procedures</i>	3 - 5



- 3.4 Hot Swap Procedures 3 - 5
 - 3.4.1 System Master Hot Swap 3 - 5
 - 3.4.2 Peripheral Hot Swap Procedure 3 - 6
- 3.5 Installation of CP6012 Peripheral Devices 3 - 7
 - 3.5.1 CompactFlash Installation 3 - 7
 - 3.5.2 USB Device Installation 3 - 7
 - 3.5.3 Rear I/O Device Installation 3 - 8
 - 3.5.4 Battery Replacement 3 - 8
 - 3.5.5 Hard Disk Installation 3 - 8
- 3.6 Software Installation 3 - 9

4. Configuration 4 - 3

- 4.1 Jumper Description 4 - 3
 - 4.1.1 Clearing BIOS CMOS Setup 4 - 3
 - 4.1.2 Shorting Chassis GND (Shield) to Logic GND 4 - 3
 - 4.1.3 BIOS Firmware Hub Flash Configuration 4 - 4
 - 4.1.4 M66EN Configuration 4 - 4
- 4.2 Interrupts 4 - 5
- 4.3 Onboard PCI Interrupt Routing 4 - 6
- 4.4 Memory Map 4 - 7
 - 4.4.1 Memory Map for the 1st Megabyte 4 - 7
 - 4.4.2 I/O Address Map 4 - 8
- 4.5 CP6012-Specific Registers 4 - 9
 - 4.5.1 BIOS Boot Order Control Register 4 - 9
 - 4.5.2 Watchdog Timer Control Register 4 - 10
 - 4.5.3 Geographic Addressing Register 4 - 12
 - 4.5.4 Hardware and Logic Revision Index Register 4 - 12
 - 4.5.5 CPCI Reset Status Register 4 - 13
 - 4.5.6 I/O Status Register 4 - 14
 - 4.5.7 I/O Configuration Register 4 - 15
 - 4.5.8 Board ID Register 4 - 16
 - 4.5.9 Board Interrupt Configuration Register 4 - 17
 - 4.5.10 Hot Swap Status Register 4 - 18



4.5.11	<i>Board-Specific LED Control Register</i>	4 - 19
4.5.12	<i>Delay Timer Control/Status Register</i>	4 - 20
4.6	<i>BMC-Specific Registers</i>	4 - 21
4.6.1	<i>BMC Configuration Register</i>	4 - 21
4.6.1.1	<i>BMC Interrupt Configuration Register</i>	4 - 22
4.6.2	<i>IPMI Keyboard Control Style Interface</i>	4 - 23
5.	<i>Power Considerations</i>	5 - 3
5.1	<i>System Power</i>	5 - 3
5.1.1	<i>CP6012 Baseboard</i>	5 - 3
5.1.2	<i>Backplane</i>	5 - 4
5.1.3	<i>Power Supply Units</i>	5 - 4
5.1.3.1	<i>Start-Up Requirement</i>	5 - 4
5.1.3.2	<i>Power-Up Sequence</i>	5 - 5
5.1.3.3	<i>Tolerance</i>	5 - 5
5.1.3.4	<i>Regulation</i>	5 - 6
5.1.3.5	<i>Rise Time Diagram</i>	5 - 6
5.2	<i>Power Consumption</i>	5 - 7
5.2.1	<i>Power Consumption of the CP6012 Accessories</i>	5 - 9
5.2.2	<i>Power Consumption of the Dual Gigabit Ethernet Controller</i>	5 - 9
5.3	<i>Start-Up Currents of the CP6012</i>	5 - 10
5.4	<i>Power Available for PMC Devices</i>	5 - 10
6.	<i>Thermal Considerations</i>	6 - 3
6.1	<i>Board Internal Thermal Regulation</i>	6 - 3
6.1.1	<i>CPU Internal Thermal Supervision</i>	6 - 3
6.1.2	<i>CPU Emergency Thermal Supervision (Thermtrip)</i>	6 - 4
6.2	<i>Thermal Management Recommendations</i>	6 - 4
6.3	<i>External Thermal Regulation</i>	6 - 5
6.3.1	<i>Heat Sink</i>	6 - 5
6.3.2	<i>Forced Airflow</i>	6 - 5
6.3.3	<i>Thermal Characteristic Graphs</i>	6 - 6
6.3.4	<i>Peripherals</i>	6 - 10



A. CTM80-3 RIO Module	A - 3
A.1 Introduction	A - 3
B. CP6012-MK2.5SATA Assembly Kit	B - 3
B.1 CP6012-EXT-SATA Module Overview	B - 3
B.2 Technical Specifications	B - 3
B.3 CP6012-EXT-SATA Functional Block Diagram	B - 3
B.4 CP6012-EXT-SATA Module Layout	B - 4
B.4.1 CP6012-EXT-SATA Module Layout	B - 4
B.5 Module Interfaces	B - 5
B.5.1 Board-to-Board Connectors J1 and J3	B - 5
B.5.2 SATA Connector J2	B - 6



List of Tables

1-1	<i>System Relevant Information</i>	1 - 6
1-2	<i>CP6012 Main Specifications</i>	1 - 11
1-3	<i>Standards</i>	1 - 17
1-4	<i>Additional Standards for Boards Ordered with Ruggedized Service</i>	1 - 18
1-5	<i>Related Publications</i>	1 - 18
2-1	<i>Processors Supported on the CP6012</i>	2 - 4
2-2	<i>Maximum Power Dissipation of Processors (CPU only)</i>	2 - 4
2-3	<i>CPU Frequency in the Various SpeedStep® Modes</i>	2 - 4
2-4	<i>Memory Options Utilizing SODIMM Sockets</i>	2 - 5
2-5	<i>SMBus Device Addresses</i>	2 - 8
2-6	<i>EEPROM Address Map</i>	2 - 9
2-7	<i>IPMI LEDs Function</i>	2 - 10
2-9	<i>Front-I and Front-II LEDs Function</i>	2 - 11
2-8	<i>Watchdog and Overtemperature LEDs Function</i>	2 - 11
2-10	<i>USB Connectors J7 and J8 Pinout</i>	2 - 12
2-11	<i>Partial List of Display Modes Supported</i>	2 - 13
2-12	<i>D-Sub CRT Connector J10 Pinout</i>	2 - 13
2-13	<i>Serial Port Con. J9 (COM1) Pinout</i>	2 - 14
2-14	<i>Pinouts of J6A/B Based on the Implementation</i>	2 - 15
2-15	<i>CompactFlash Connector J17 Pinout</i>	2 - 17
2-16	<i>Keyboard Connector J21 Pinout</i>	2 - 18
2-17	<i>SATA Connector J22 Pinout</i>	2 - 19
2-18	<i>SATA Extension Connector J23 Pinout</i>	2 - 20
2-19	<i>Onboard PCI Configuration</i>	2 - 21
2-20	<i>PMC Connectors J26 and J28 Pinouts</i>	2 - 22
2-21	<i>PMC Connectors J25 and J27 Pinouts</i>	2 - 23
2-22	<i>XMC Connector J15 Pinout</i>	2 - 24
2-23	<i>Coding Key Colors on J1</i>	2 - 27
2-24	<i>CompactPCI Bus Connector J1 System Slot Pinout</i>	2 - 28
2-25	<i>CompactPCI Bus Connector J1 Peripheral Slot Pinout</i>	2 - 29
2-26	<i>64-bit CompactPCI Bus Connector J2 System Slot Pinout</i>	2 - 30
2-27	<i>64-bit CompactPCI Bus Connector J2 Peripheral Slot Pinout</i>	2 - 31



2-28 CompactPCI Rear I/O Connector J3 Pinout 2 - 32

2-29 CompactPCI Rear I/O Connector J3 Signals 2 - 33

2-30 CompactPCI Rear I/O Connector J4 Pinout 2 - 34

2-32 CompactPCI Rear I/O Connector J5 Signals 2 - 35

2-31 CompactPCI Rear I/O Connector J5 Pinout 2 - 35

2-33 Rear I/O Configuration 2 - 36

2-34 Processor and Chipset Supervision 2 - 40

2-35 CompactPCI Sensors 2 - 40

2-36 Onboard Power Supply Supervision 2 - 40

2-37 Reset Control 2 - 40

2-38 Onboard Voltage Sensors 2 - 41

2-39 Temperature Sensors 2 - 41

2-40 Fan Sense Sensors 2 - 41

3-1 ATA Channel Routing 3 - 9

4-1 Clearing BIOS CMOS Setup 4 - 3

4-2 BIOS Firmware Hub Flash Configuration 4 - 4

4-3 M66EN Configuration 4 - 4

4-4 Interrupt Setting 4 - 5

4-5 PCI Interrupt Routing 4 - 6

4-6 Memory Map for the 1st Megabyte 4 - 7

4-7 I/O Address Map 4 - 8

4-8 BIOS Boot Order Control Register 4 - 9

4-9 Watchdog Timer Control Register 4 - 11

4-10 Geographic Addressing Register 4 - 12

4-11 Hardware and Logic Revision Index Register 4 - 12

4-12 CPCI Reset Status Register 4 - 13

4-13 I/O Status Register 4 - 14

4-14 I/O Configuration Register 4 - 15

4-15 Board ID Register 4 - 16

4-16 Board Interrupt Configuration Register 4 - 17

4-17 Hot Swap Status Register 4 - 18

4-18 Board-Specific LED Control Register 4 - 19

4-19 Delay Timer Control/Status Register 4 - 20

4-20 BMC Configuration Register 4 - 21



4-21	<i>COM Port Routing for the Firmware Update</i>	4 - 22
4-22	<i>BMC Interrupt Configuration Register</i>	4 - 22
5-1	<i>Maximum Input Power Voltage Limits</i>	5 - 3
5-2	<i>DC Operational Input Voltage Ranges</i>	5 - 3
5-3	<i>Input Voltage Characteristics</i>	5 - 5
5-4	<i>Power Consumption: CP6012 with DOS</i>	5 - 8
5-5	<i>Power Consumption: CP6012 with Linux/Win. XP in IDLE Mode</i>	5 - 8
5-6	<i>Power Consumption: CP6012's TDP at 75%</i>	5 - 8
5-7	<i>Power Consumption: CP6012's TDP at 100%</i>	5 - 8
5-8	<i>Power Consumption of CP6012 Accessories</i>	5 - 9
5-9	<i>Intel® 82571EB Dual Gigabit Ethernet Controller Power Supply</i>	5 - 9
5-10	<i>Start-Up Currents of the CP6012</i>	5 - 10
5-11	<i>Maximum Output Power Limits</i>	5 - 10
B-1	<i>CP6012-EXT-SATA Main Specifications</i>	B - 3
B-2	<i>Board-to-Board Connector J1 Pinout</i>	B - 5
B-3	<i>SATA Connector J2 Pinout</i>	B - 6



This page has been intentionally left blank.



List of Figures

1-1	<i>CP6012 Functional Block Diagram</i>	1 - 7
1-2	<i>CP6012 Front Panel</i>	1 - 8
1-3	<i>CP6012 Board Layout (Front View)</i>	1 - 9
1-4	<i>CP6012 Board Layout (Reverse View)</i>	1 - 10
2-1	<i>USB Connectors J7 and J8</i>	2 - 12
2-2	<i>D-Sub CRT Connector J10</i>	2 - 13
2-3	<i>Serial Port Connector J9 (COM1)</i>	2 - 14
2-4	<i>Dual Gigabit Ethernet Connector J6A/B</i>	2 - 15
2-5	<i>Extension Connector J12</i>	2 - 18
2-6	<i>Keyboard Connector J21</i>	2 - 18
2-7	<i>SATA Connector J22</i>	2 - 19
2-8	<i>SATA Extension Connector J23</i>	2 - 20
2-9	<i>Connecting an Onboard 2.5" SATA HDD to CP6012-EXT-SATA</i>	2 - 20
2-10	<i>PMC Connectors J25, J26, J27 and J28</i>	2 - 21
2-11	<i>CPCI Connectors J1-J5</i>	2 - 27
6-1	<i>Start-Up Ramp of the CP3-SVE180 AC Power Supply</i>	5 - 6
6-1	<i>Operating Limits: Core™ Duo 1.66 GHz, Narrow Heat Sink</i>	6 - 7
6-2	<i>Operating Limits: Core™ Duo 2.0 GHz, Wide Heat Sink</i>	6 - 7
6-3	<i>Operating Limits: Core™ 2 Duo 1.5 GHz, Narrow Heat Sink</i>	6 - 8
6-4	<i>Operating Limits: Core™ 2 Duo 2.16 GHz, Wide Heat Sink</i>	6 - 8
6-5	<i>Operating Limits: Core™ 2 Duo 2.16 GHz, Narrow Heat Sink</i>	6 - 9
6-6	<i>Operating Limits: Core™ Duo 2.0 GHz, Narrow Heat Sink</i>	6 - 9
A-1	<i>CTM80-3 RIO Module with SCSI Configuration</i>	A - 4
A-2	<i>CTM80-3 RIO Module with PATA or SATA Configuration</i>	A - 5
B-1	<i>CP6012-EXT-SATA Functional Block Diagram</i>	B - 3
B-2	<i>CP6012-EXT-SATA Module Layout</i>	B - 4
B-3	<i>SATA Connector J2</i>	B - 6



This page has been intentionally left blank.





Proprietary Note

This document contains information proprietary to Kontron. It may not be copied or transmitted by any means, disclosed to others, or stored in any retrieval system or media without the prior written consent of Kontron or one of its authorized agents.

The information contained in this document is, to the best of our knowledge, entirely correct. However, Kontron cannot accept liability for any inaccuracies or the consequences thereof, or for any liability arising from the use or application of any circuit, product, or example shown in this document.

Kontron reserves the right to change, modify, or improve this document or the product described herein, as seen fit by Kontron without further notice.

Trademarks

Kontron, the *PEP* logo and, if occurring in this manual, “CXM” are trademarks owned by Kontron, Kaufbeuren (Germany). In addition, this document may include names, company logos and trademarks, which are registered trademarks and, therefore, proprietary to their respective owners.

Environmental Protection Statement

This product has been manufactured to satisfy environmental protection requirements where possible. Many of the components used (structural parts, printed circuit boards, connectors, batteries, etc.) are capable of being recycled.

Final disposition of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.



Explanation of Symbols



Caution, Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60V) when touching products or parts of them. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.

Please refer also to the section “High Voltage Safety Instructions” on the following page.



Warning, ESD Sensitive Device!

This symbol and title inform that electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Please read also the section “Special Handling and Unpacking Instructions” on the following page.



Warning!

This symbol and title emphasize points which, if not fully understood and taken into consideration by the reader, may endanger your health and/or result in damage to your material.



Note ...

This symbol and title emphasize aspects the reader should read through carefully for his or her own advantage.



For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions



Warning!

All operations on this device must be carried out by sufficiently skilled personnel only.



Caution, Electric Shock!

Before installing a not hot-swappable Kontron product into a system always ensure that your mains power is switched off. This applies also to the installation of piggybacks.

Serious electrical shock hazards can exist during all installation, repair and maintenance operations with this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing work.

Special Handling and Unpacking Instructions



ESD Sensitive Device!

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the board is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the board.



General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the device, which are not explicitly approved by Kontron and described in this manual or received from Kontron's Technical Support as a special handling instruction, will void your warranty.

This device should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This applies also to the operational temperature range of the specific board version, which must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, please follow only the instructions supplied by the present manual.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the board, please re-pack it as nearly as possible in the manner in which it was delivered.

Special care is necessary when handling or unpacking the product. Please consult the special handling and unpacking instruction on the previous page of this manual.



Two Year Warranty

Kontron grants the original purchaser of Kontron's products a **TWO YEAR LIMITED HARDWARE WARRANTY** as described in the following. However, no other warranties that may be granted or implied by anyone on behalf of Kontron are valid unless the consumer has the express written consent of Kontron.

Kontron warrants their own products, excluding software, to be free from manufacturing and material defects for a period of 24 consecutive months from the date of purchase. This warranty is not transferable nor extendible to cover any other users or long-term storage of the product. It does not cover products which have been modified, altered or repaired by any other party than Kontron or their authorized agents. Furthermore, any product which has been, or is suspected of being damaged as a result of negligence, improper use, incorrect handling, servicing or maintenance, or which has been damaged as a result of excessive current/voltage or temperature, or which has had its serial number(s), any other markings or parts thereof altered, defaced or removed will also be excluded from this warranty.

If the customer's eligibility for warranty has not been voided, in the event of any claim, he may return the product at the earliest possible convenience to the original place of purchase, together with a copy of the original document of purchase, a full description of the application the product is used on and a description of the defect. Pack the product in such a way as to ensure safe transportation (see our safety instructions).

Kontron provides for repair or replacement of any part, assembly or sub-assembly at their own discretion, or to refund the original cost of purchase, if appropriate. In the event of repair, refunding or replacement of any part, the ownership of the removed or replaced parts reverts to Kontron, and the remaining part of the original guarantee, or any new guarantee to cover the repaired or replaced items, will be transferred to cover the new or repaired items. Any extensions to the original guarantee are considered gestures of goodwill, and will be defined in the "Repair Report" issued by Kontron with the repaired or replaced item.

Kontron will not accept liability for any further claims resulting directly or indirectly from any warranty claim, other than the above specified repair, replacement or refunding. In particular, all claims for damage to any system or process in which the product was employed, or any loss incurred as a result of the product not functioning at any given time, are excluded. The extent of Kontron liability to the customer shall not exceed the original purchase price of the item for which the claim exists.

Kontron issues no warranty or representation, either explicit or implicit, with respect to its products' reliability, fitness, quality, marketability or ability to fulfil any particular application or purpose. As a result, the products are sold "as is," and the responsibility to ensure their suitability for any given task remains that of the purchaser. In no event will Kontron be liable for direct, indirect or consequential damages resulting from the use of our hardware or software products, or documentation, even if Kontron were advised of the possibility of such claims prior to the purchase of the product or during any period since the date of its purchase.

Please remember that no Kontron employee, dealer or agent is authorized to make any modification or addition to the above specified terms, either verbally or in any other form, written or electronically transmitted, without the company's consent.



This page has been intentionally left blank.





Chapter

1

Introduction



This page has been intentionally left blank.





1. Introduction

1.1 Board Overview

The CP6012 is a highly integrated 6U CompactPCI system controller board based on the Intel® Core™ Duo and the Intel® Core™2 Duo microprocessors combined with the high-performance Intel® E7520 and Intel® 6300ESB server-class chipsets.

The board is capable of supporting the Intel® Core™ Duo and the Intel® Core™2 Duo processor versions in 65 nm technology with 64 kB L1 and up to 4 MB L2 cache in a 479 µFCBGA package with frequencies ranging from 1.5 GHz up to 2.16 GHz providing up to 667 MHz front side bus speed.

The Intel® Core™ Duo and the Intel® Core™2 Duo are low-power dual-core processors supporting Intel's Virtualization Technology (VT). The Intel® Core™ Duo consists of two cores and up to 2 MB L2 cache shared by both cores. The Intel® Core™2 Duo consists of two cores, up to 4 MB L2 cache shared by both cores, Intel® Extended Memory 64 Technology (Intel® EM64T), and enhanced address range for up to 64 GB memory. The Intel® Core™ Duo and the Intel® Core™ 2 Duo processors deliver optimized power-efficient computing and outstanding dual-core performance with low power consumption.

The board includes two SODIMM sockets to provide up to 4 GB dual-channel, registered, second-generation Double Data Rate (DDR2) memory with Error Checking and Correcting (ECC) running at 400 MHz (PC3200). Two Intel® 82571EB Dual Gigabit Ethernet controllers, each utilizing a x4 lane PCI Express interconnection to the E7520 chipset, ensure maximum data throughput between processor and memory.

The CP6012 offers more features and expandability than other CompactPCI boards in its class. The board comes with four Gigabit Ethernet ports, up to four USB 2.0 ports, two Ultra ATA/100 interfaces with one of them connected to a CompactFlash type II socket, two onboard Serial ATA interfaces, one PMC interface with 64-bit/66 MHz on the PCI bus, one XMC interface utilizing a x8 lane PCI Express interconnection, rear I/O with several interfaces, and an ATI ES1000 2D Graphics accelerator with 64 MB of DDR2 memory for enhanced graphics performance with a VGA CRT-display interface. Several onboard connectors provide additional expansion capability.

The board supports a configurable 64-bit/66 MHz, hot swap CompactPCI interface. In the System Master slot the interface is enabled, and if installed in a peripheral slot, the CP6012 is isolated from the CompactPCI bus.

A further feature of the CP6012 is its support of the PICMG CompactPCI Packet Switching Backplane Specification 2.16. When installed in a backplane which supports packet switching, the CP6012 can communicate via two Gigabit Ethernet interfaces with other peripherals.

Designed for stability, the board fits into all applications situated in industrial environments, including I/O intensive applications where only one slot is available for the CPU, making it a perfect core technology for long-life applications. Components with high temperature tolerance have been selected from embedded technology programs, and therefore offer long-term availability.

The board is offered with Linux®, Microsoft® Windows® XP, Windows® XP Embedded and Microsoft® Windows® Server 2003, and VxWorks® operating systems. Please contact Kontron for further information concerning the operation of the CP6012 with other operating systems.



1.2 Board-Specific Information

The CP6012 is a CompactPCI single-board computer based on the Intel® Core™ Duo and the Intel® Core™2 Duo processors and specifically designed for use in highly integrated platforms with solid mechanical interfacing for a wide range of industrial environment applications.

Some of the CP6012's outstanding features are:

- Supports all Intel® Core™ Duo and Intel® Core™2 Duo microprocessors with up to 667 MHz FSB
- 479-pin µFCBGA package
- 64 kB L1 and up to 4 MB L2 cache on-die, running at CPU speed
- Intel® E7520 and Intel® 6300ESB chipset
- Up to 4GB registered DDR2 SDRAM registered memory with ECC
- 2D high performance VGA controller, 32-bit/33 MHz PCI
- Analog display support up to 1600 x 1200 pixels at 16-bit and 75 Hz
- 64-bit / 66 MHz CompactPCI interface in accordance with the CompactPCI Spec. Rev 3.0
- PMC interface with rear I/O support and bezel cutout on front panel and PCI functionality, 64-bit/66 MHz PCI, 3.3V only
- XMC interface utilizing a x8 lane PCI Express
- Four Gigabit Ethernet interfaces utilizing a x4 lane PCI Express per Gigabit Ethernet controller
 - Two Gigabit Ethernet interfaces on the front panel
 - Two Gigabit Ethernet interfaces on rear I/O (PICMG 2.16)
- Two EIDE Ultra ATA/100 interfaces
- Two Serial ATA interfaces
- Socket for Serial ATA 2.5" hard disk for boards equipped with a narrow heat sink
- Onboard CompactFlash type II socket (True IDE)
- Up to four USB ports
 - Two USB 2.0 ports on the front panel
 - Two USB 2.0 ports on rear I/O
- AMI BIOS
- Two 1 MB onboard FWH for redundant BIOS
- Floppy disk interface on rear I/O
- Watchdog Timer
- Real-time clock
- Two COM ports (RS-232):
 - One COM port either on the front panel or on the rear I/O
 - One COM port on the rear I/O
- I/O extension connector (LPC)
- 4HP, 6U CompactPCI
- Jumperless board configuration
- Passive heat sink solution for forced-airflow cooling
- Hot swap capability: as system controller or as peripheral device
- Supports PICMG Packet Switching Backplane Specification 2.16
- Several rear I/O configurations
- Rear I/O on J3 and J5; optionally on J4
- IPMI compliant Baseboard Management Controller



1.3 System Expansion Capabilities

1.3.1 PMC Modules

The CP6012 has one PCI, 64-bit/66 MHz, 3.3V, rear I/O capable, PMC mezzanine interface. This interface supports a wide range of available PMC modules with PCI interface including all of Kontron's PMC modules and provides an easy and flexible way to configure the CP6012 for various application requirements.

For information on the PMC interface, refer to chapter 2.3.13, "PMC Interface".

1.3.2 XMC Modules

The CP6012 has one XMC mezzanine interface for support of x1, x2, x4 and x8 PCI Express XMC modules providing an easy and flexible way to configure the CP6012 for various application requirements.

For information on the XMC interface, refer to chapter 2.3.14, "XMC Interface".

1.3.3 CTM80-3 Rear I/O Module

The CTM80-3 rear I/O module has been designed for use with the CP6012 6U CompactPCI board from Kontron. This module provides comprehensive rear I/O functionality and may also be configured for use in other applications.

For further information concerning the CTM80-3 module, please refer to Appendix A.

1.3.4 CP6012-MK2.5SATA Assembly Kit

The CP6012 comes with an optional CP6012-MK2.5SATA assembly kit comprised of one CP6012-EXT-SATA module and the necessary components needed for mounting the module on the board. the CP6012-EXT-SATA module is required for connecting an onboard 2.5" Serial ATA HDD or SSD to the CP6012.

For further information concerning the CP6012-EXT-SATA module, please refer to Appendix B.



1.4 System Relevant Information

The following system relevant information is general in nature but should still be considered when developing applications using the CP6012.

Table 1-1: System Relevant Information

SUBJECT	INFORMATION
System Slot/System Master Functionality	<p>The CP6012 is designed for use as a System Master board whereby it can support up to 7 peripheral boards with up to 64-bit/66 MHz.</p> <p>It may, however, be operated in a peripheral slot in which case it does not support the CompactPCI bus interface.</p>
Peripheral Slot Functionality	<p>When installed in a peripheral slot, the CP6012 is electrically isolated from the CompactPCI bus. It receives power from the backplane and supports rear I/O and, if the system supports it, packet switching (in this case up to two channels of Gigabit Ethernet).</p>
Hot Swap Compatibility	<p>When operated as a System Master, the CP6012 supports individual clocks for each slot and ENUM signal handling is in compliance with the PICMG 2.1 Hot Swap Specification.</p> <p>When operated in a peripheral slot the CP6012 supports basic hot swap.</p>
Operating Systems	<p>The CP6012 can be operated under the following operating systems:</p> <ul style="list-style-type: none"> • Microsoft® Windows® XP with Service Pack 1 or higher • Microsoft® Windows® XP Embedded • Microsoft® Windows® Server 2003 • Linux® • VxWorks® <p>Please contact Kontron for further information concerning the operation of the CP6012 with other operating systems.</p>




1.5 Board Diagrams

The following diagrams provide additional information concerning board functionality and component layout.

1.5.1 Functional Block Diagram

Figure 1-1: CP6012 Functional Block Diagram

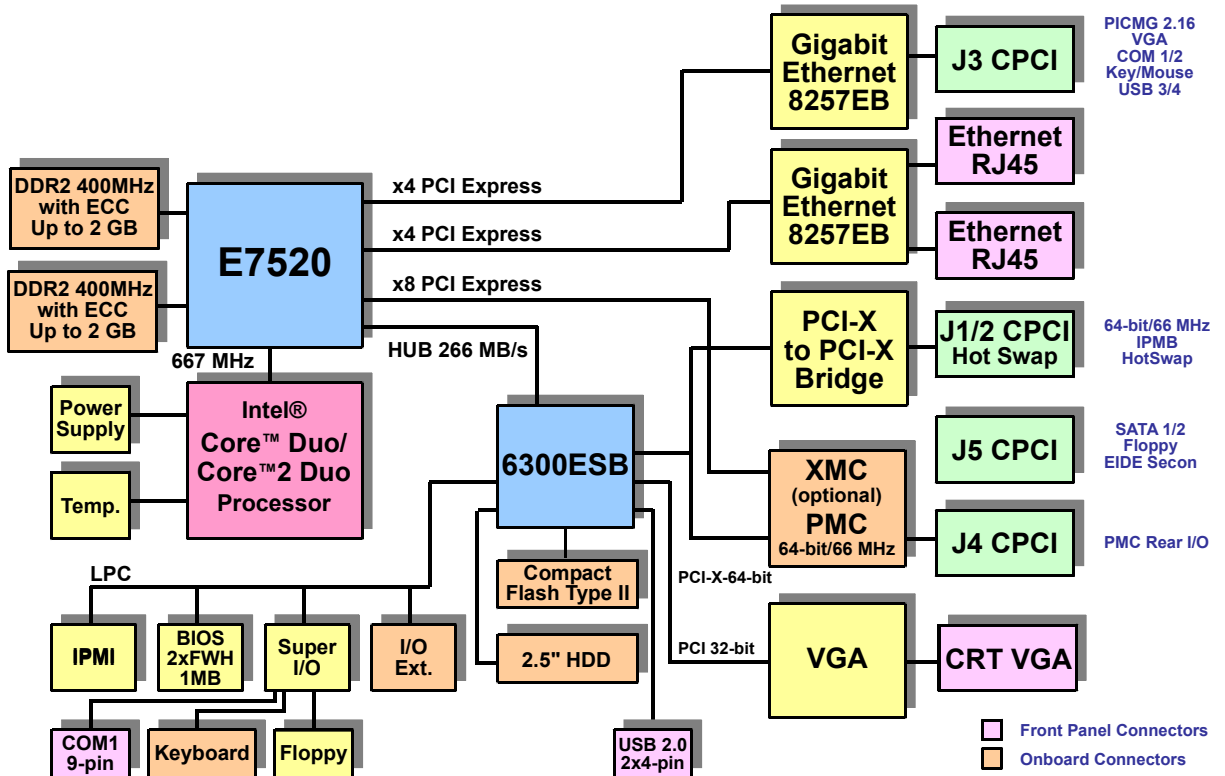



1.5.2 Front Panel

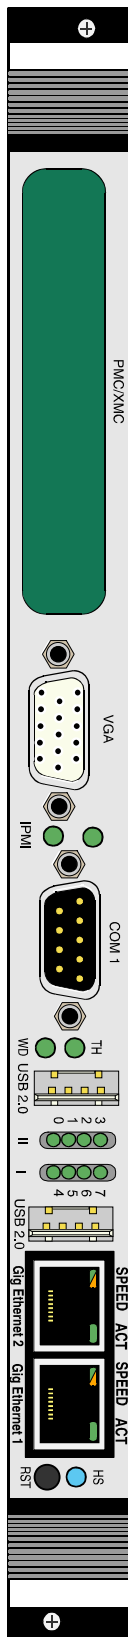


Figure 1-2: CP6012 Front Panel

Legend:

IPMI LEDs

IPMI (green): Indicate the software status of the IPMI controller

General Purpose LEDs

WD (green): Watchdog Status

TH (green): Overtemperature Status

HS (blue): Hot Swap Control

Front-I: General Purpose/POST code or board-specific

Front-II: General Purpose/POST code or board-specific

Integral Ethernet LEDs

ACT (green): Ethernet Link/Activity

SPEED (green/orange): Ethernet Speed

SPEED ON (orange): 1000 Mbit

SPEED ON (green): 100 Mbit

SPEED OFF: 10 Mbit



Note ...

If the TH LED and the WD LED are flashing during boot-up, a failure is indicated before the BIOS has started.

For further information, contact Kontron's Technical Support.

1.5.3 Board Layout

Figure 1-3: CP6012 Board Layout (Front View)


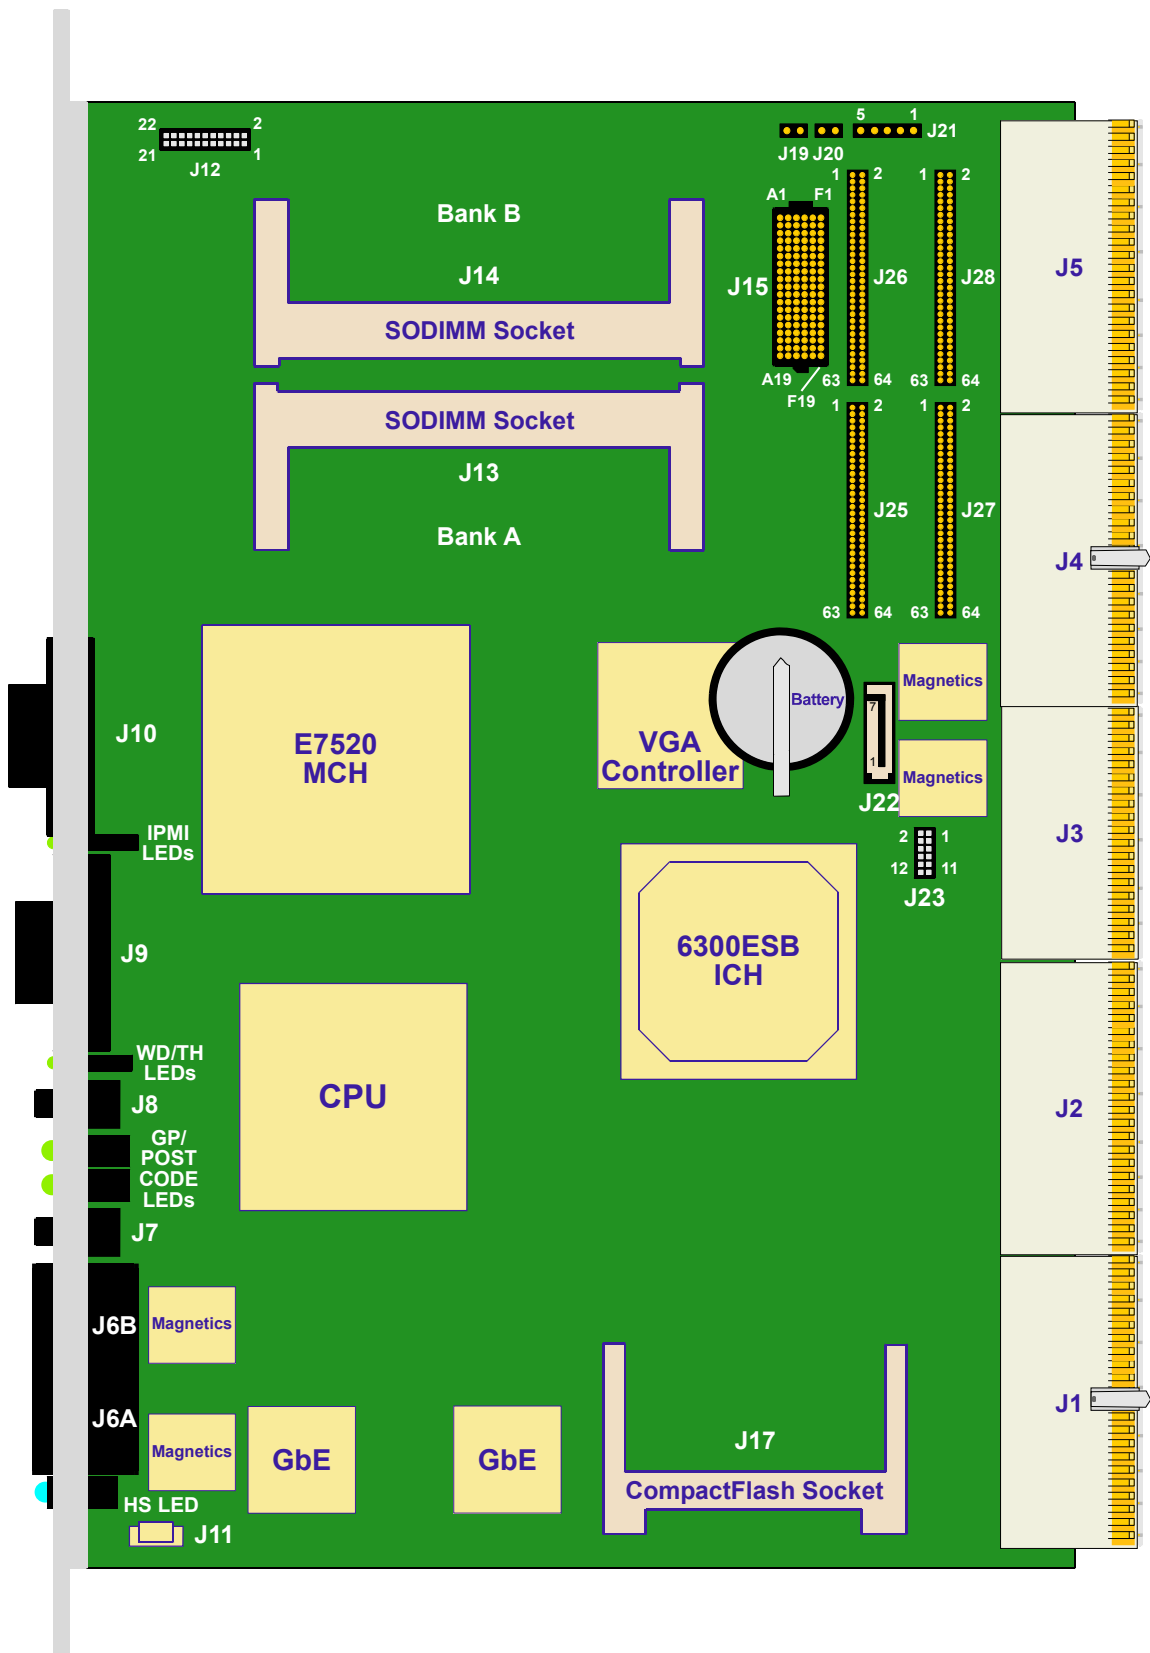




Figure 1-4: CP6012 Board Layout (Reverse View)



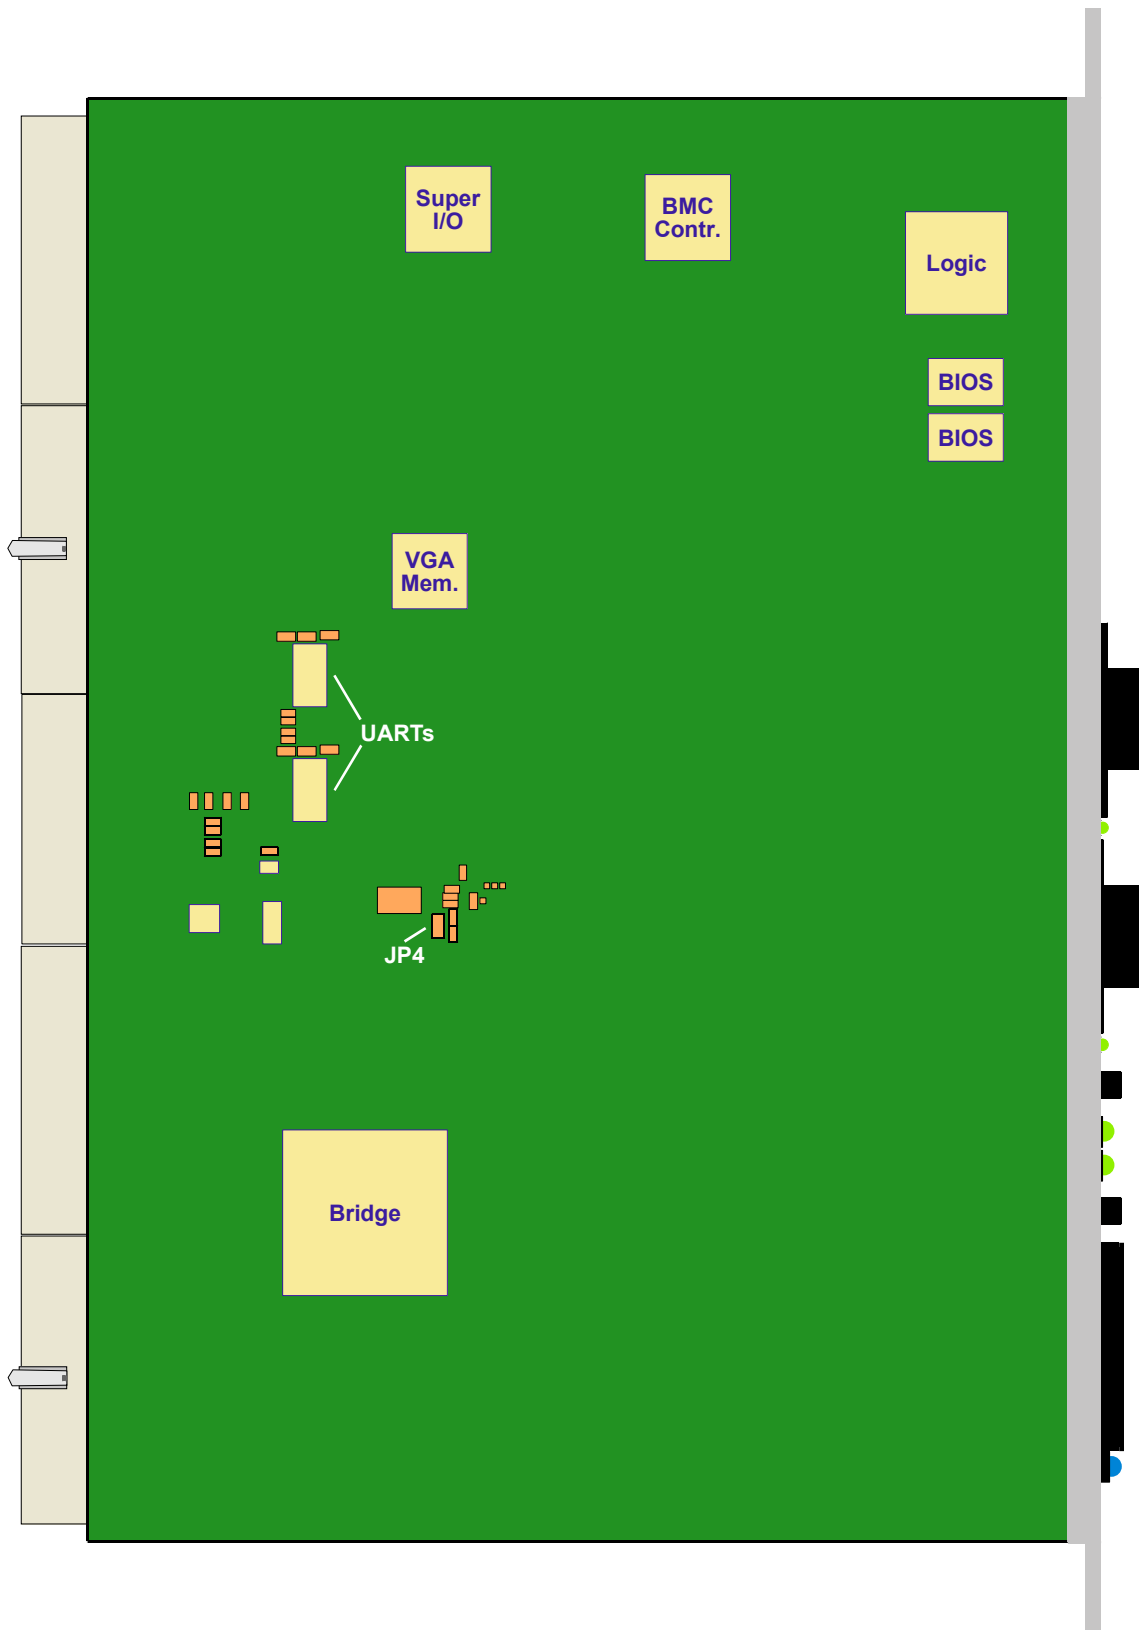

1.6 Technical Specification

Table 1-2: CP6012 Main Specifications

CP6012		SPECIFICATIONS
Processor and Memory	CPU	<p>The CP6012 supports the following microprocessors:</p> <ul style="list-style-type: none"> • Intel® Core™ Duo, T2500 (SV), 2.0 GHz, 667 MHz FSB, 2 MB L2 cache • Intel® Core™ Duo, L2400 (LV), 1.66 GHz, 667 MHz FSB, 2 MB L2 cache • Intel® Core™2 Duo, T7400 (SV), 2.16 GHz, 667 MHz FSB, 4 MB L2 cache • Intel® Core™2 Duo, L7400 (LV), 1.5 GHz, 667 MHz FSB, 4 MB L2 cache <p>All microprocessors are provided in a 479 µFCBGA packaging.</p>
	Memory	<p>Main Memory:</p> <ul style="list-style-type: none"> • Up to 4 GB dual-channel, registered DDR2 memory with Error Checking and Correcting (ECC) running at 400 MHz (PC3200) <p>Cache structure:</p> <ul style="list-style-type: none"> • 64 kB L1 on-die full speed processor cache <ul style="list-style-type: none"> • 32 kB for instruction cache • 32 kB for data cache • Up to 4 MB L2 on-die full speed processor cache <p>FLASH Memory:</p> <ul style="list-style-type: none"> • Two 1 MB FLASH for redundant BIOS <p>Memory Extension:</p> <ul style="list-style-type: none"> • CompactFlash socket type II (true IDE mode) <p>Serial EEPROM:</p> <ul style="list-style-type: none"> • 24LC64 (64 kbit)



Table 1-2: CP6012 Main Specifications (Continued)

CP6012		SPECIFICATIONS
Chipset	Intel® E7520	Intel® E7520 Memory Controller Hub: <ul style="list-style-type: none"> • Support for a single Intel® Core™ Duo or Intel® Core™2 Duo microprocessor • 64-bit AGTL/AGTL+ based System Bus interface up to 667 MHz • System Memory interface with optimized support for dual-channel, registered DDR2 SDRAM memory at 400 MHz with ECC • Two x4 PCI Express ports for Gigabit Ethernet interface • One x8 PCI Express port for XMC interface • RASUM (Reliability, Availability, Serviceability, Usability, and Manageability) features: <ul style="list-style-type: none"> • Memory error detection and reporting of 1- and 2-bit errors including correction of 1-bit failures • Integrated Memory Scrub Engine, which logs any uncorrectable memory errors • Support for automatic read retry on uncorrectable errors
	Intel® 6300ESB	Intel® 6300ESB I/O Controller Hub: <ul style="list-style-type: none"> • Dual channel SATA 150 interface • Integrated IDE controller Ultra ATA/100/66/33 • USB host interface with up to four USB 1.1 or USB 2.0 ports • Firmware Hub interface support • Low pin count interface • PCI Rev. 2.2 compliant with support for 64-bit/66 MHz PCI operations • PCI Rev. 2.2 compliant with support for 32-bit/33 MHz PCI operations • Power management logic support • Enhanced DMA controller, interrupt controller, and timer functions • System Management Bus (SMBus) compatible with most I²C™ devices • Hub interface for the E7520 MCH • RTC controller



Table 1-2: CP6012 Main Specifications (Continued)

CP6012		SPECIFICATIONS
Interfaces	CompactPCI	<p>Compliant with CompactPCI Specification PICMG® 2.0 R 3.0</p> <ul style="list-style-type: none"> • System Master operation • 64-bit/66 MHz master interface • 3.3V or 5V compliant <p>When the CP6012 is operated in a peripheral slot, the CompactPCI bus is electrically isolated (passive mode).</p>
	Rear I/O	<p>The following interfaces are routed to the rear I/O connector J3, J4 and J5:</p> <ul style="list-style-type: none"> • COM1 and COM2 (RS-232 signaling); no buffer on the rear I/O module is necessary • 2 x USB 2.0 • CRT VGA • PS/2 (Mouse/Keyboard) • 2 x Gigabit Ethernet (compliant with PICMG 2.16, R 1.0) • Secondary EIDE (ATA 100) • 2 x SATA 150 • PMC rear I/O • Floppy disk interface
	Hot Swap Compatible	<p>The CP6012 supports System Master hot swap functionality and application dependent hot swap functionality when used in a peripheral slot.</p> <p>When used as a System Master the CP6012 supports individual clocks for each slot and ENUM signal handling is in compliance with the PICMG 2.1 Hot Swap Specification.</p>
	VGA	<p>ATI ES1000 2D Graphics accelerator for enhanced graphics performance.</p> <ul style="list-style-type: none"> • Supports resolutions of up to 1600 x 1200 by 16-bit color resolution at a 75 Hz refresh rate or up to 1280 x 1024 by 32-bit color resolution at an 75 Hz refresh rate. • The graphics controller provides 64 MB video memory. • One CRT controller capable of supporting two identical simultaneous display paths.
	Gigabit Ethernet	<p>Up to four 10 Base-T/100 Base-TX/1000 Base-T Gigabit Ethernet interfaces based on two Intel® 82571EB Ethernet PCI Express bus controllers.</p> <ul style="list-style-type: none"> • Two channels on rear I/O • Two RJ45 connectors on the front panel • Automatic mode recognition (Auto-Negotiation) • Automatic cabling configuration recognition (Auto-MDI/X) <p>Cabling requirement: Category 5, UTP, four-pair cabling</p>
	USB	<p>Four USB ports supporting UHCI and EHCI:</p> <ul style="list-style-type: none"> • Two USB 2.0 connectors on the front panel • Two USB 2.0 on the rear I/O interface

Table 1-2: CP6012 Main Specifications (Continued)


CP6012		SPECIFICATIONS
Interfaces	Serial	Two 16C550-compatible UARTs on the rear I/O interface (RS-232 signaling), one thereof can be routed to the front panel
	PMC	CMC/PMC P1386/Draft 2.4a compliant mezzanine interface <ul style="list-style-type: none"> • Jn1, Jn2, Jn3 and Jn4 PCI mezzanine connectors for standard PMC modules • 64-bit/66 MHz PCI interface • Only 3.3V PCI signalling voltage • Rear I/O supported through the CompactPCI connector J4 • Supported voltages: 3.3 V, 5 V, +12 V, and -12 V
	XMC	XMC interface <ul style="list-style-type: none"> • Onboard XMC connector J15 • Up to x8 lanes PCI Express • Rear I/O supported through the PMC connector Jn4 (J27) to the CompactPCI connector J4
	Keyboard and Mouse	Keyboard and mouse are supported <ul style="list-style-type: none"> • USB Support on 4HP • PS/2 (keyboard and mouse) with rear I/O module (e.g. CTM80-3) • Onboard keyboard pinrow connector for debug purposes requiring an adapter in order to be connected to a regular keyboard
	Mass Storage	EIDE Ultra ATA/100/66/33: <ul style="list-style-type: none"> • Two onboard Ultra ATA/100 interfaces, one on CompactFlash and one on Rear I/O • Up to three devices (one CompactFlash and up to two hard disks or CD-ROMs) Onboard 2.5" hard disk: <ul style="list-style-type: none"> • Onboard 2.5" hard disk is supported on J23, a 12-pin Serial ATA interface (only for boards equipped with a narrow heat sink) • For this Serial ATA interface, the CP6012-EXT-SATA module is used CompactFlash: <ul style="list-style-type: none"> • CompactFlash type II socket (true IDE mode and DMA support) • Supports type I and II CompactFlash cards and Microdrive™ SATA: Integrated Serial ATA Host Controllers <ul style="list-style-type: none"> • Provide independent DMA operation on 2 channels: <ul style="list-style-type: none"> • One SATA channel switchable to rear I/O via BIOS (for standard HDDs) • One SATA channel routed either to the SATA connector J22 or to rear I/O (for 2.5" HDDs) • Data transfer rates up to 150 MB/s Floppy Disk (only with rear I/O module): <ul style="list-style-type: none"> • Supports 5.25" or 3.5" floppy drives • 1.44 or 2.88 MB, 3.5" floppy disks
	I/O Extension Interface	I/O extension interface: <ul style="list-style-type: none"> • LPC devices



Table 1-2: CP6012 Main Specifications (Continued)

CP6012		SPECIFICATIONS
Sockets	Front Panel Connectors	<ul style="list-style-type: none"> VGA: 15-pin, D-Sub connector USB: two 4-pin connectors Ethernet: two RJ-45 connectors COM: 9-pin, D-Sub connector PMC/XMC front panel
	Onboard Connectors	<ul style="list-style-type: none"> CompactFlash socket for type I, II and Microdrive™ devices (primary EIDE interface) I/O extension connector PMC connectors J25 - J28 (Jn1 - Jn4) XMC connector, J15 Two SATA connectors <ul style="list-style-type: none"> one 7-pin, standard SATA connector one 12-pin, SATA extension connector CompactPCI Connector J1 and J2 (J3 - J5 optional) Two 200-pin SODIMM sockets
HW Monitoring	LEDs	<p>System status:</p> <ul style="list-style-type: none"> TH (green): Overtemperature Status WD (green): Watchdog Status IPMI: Control information <p>Gigabit Ethernet status:</p> <ul style="list-style-type: none"> ACT (green): network activity SPEED (green/orange): network speed <p>General Purpose LEDs:</p> <ul style="list-style-type: none"> I (green): General Purpose/POST code or board-specific II (green): General Purpose/POST code or board-specific
	Watchdog	Software configurable Watchdog generates IRQ, NMI, or hardware reset.
	Thermal Management	<p>CPU overtemperature protection is provided by:</p> <ul style="list-style-type: none"> Internal processor temperature control unit CPU shut down via hardware monitor
	System Monitor	<p>In SCH3112 integrated hardware monitor for supervision of:</p> <ul style="list-style-type: none"> Several system power voltages Two fan speed inputs Board temperature
	IPMI	<p>Baseboard Management Controller (BMC) that supports two keyboard controller-style interfaces (KCS) compliant with:</p> <ul style="list-style-type: none"> IPMI specification 1.5, revision 1.5 PICMG 2.9 specification <p>IPMI supports two IPMB busses via the J1 and J2 connectors.</p>

Table 1-2: CP6012 Main Specifications (Continued)

CP6012		SPECIFICATIONS
Software	Software BIOS	AMI BIOS with 1 MB Flash memory with the following features: <ul style="list-style-type: none"> • QuickBoot • QuietBoot • BootBlock • LAN boot capability for diskless systems (standard PXE) • Boot from USB floppy disk drive • BIOS boot support for USB keyboards • Plug and Play capability • BIOS parameters are saved in the EEPROM • Board serial number is saved within the EEPROM • PC Health Monitoring
	Operating Systems	Operating systems supported: <ul style="list-style-type: none"> • Microsoft® Windows® XP • Microsoft® Windows® XP Embedded • Microsoft® Windows® Server 2003 • Linux • VxWorks
General	Mechanical	6U, 4HP, CompactPCI compliant form factor
	Power Consumption	See Chapter 5 for details
	Temperature Ranges	Operational: 0°C to +60°C Standard Storage: -55°C to +85°C Without hard disk and without battery -40°C to +65°C With hard disk and without battery  <p>Note ... When a battery is installed, refer to the operational specifications of the battery as this determines the storage temperature of the CP6012 (See "Battery" below).</p>
	Battery	3.0V lithium battery for RTC with battery socket. Recommended types: <ul style="list-style-type: none"> • VARTA CR2025 • PANASONIC BR2020 Temperature ranges: Operational: -20°C to +70°C typical (refer to the battery manufacturer's specifications for exact range) Storage: -55°C to +70°C typical (no discharge)
	Heat Sink	The following heat sink types are used on the CP6012: <ul style="list-style-type: none"> • Narrow heat sink • Wide heat sink (obsolete)
	Climatic Humidity	93% RH at 40 °C, non-condensing (acc. to IEC 60068-2-78)
	Dimensions	233.35 mm x 160 mm
	Board Weight	560 g (boards with low voltage processor and without mezzanine cards) 680 g (boards with standard voltage processor and without mezzanine cards) 690 g (boards with standard voltage processor and wide heat sink and without mezzanine cards)



1.7 Kontron Software Support

Kontron is one of the few CompactPCI and VME manufacturers providing inhouse support for most of the industry-proven real-time operating systems that are currently available. Due to its close relationship with the software manufacturers, *Kontron* is able to produce and support BSPs and drivers for the latest operating system revisions thereby taking advantage of the changes in technology.

Finally, customers possessing a maintenance agreement with *Kontron* can be guaranteed hotline software support and are supplied with regular software updates. A dedicated web site is also provided for online updates and release downloads.

1.8 Standards

This product complies with the requirements of the following standards:

Table 1-3: Standards

TYPE	ASPECT	STANDARD
CE	Emission	EN55022 EN61000-6-3
	Immission	EN55024 EN61000-6-2
	Electrical Safety	EN60950-1
Mechanical	Mechanical Dimensions	IEEE 1101.10
Environmental	Climatic Humidity	IEC60068-2-78
	WEEE	Directive 2002/96/EC Waste electrical and electronic equipment
	RoHS	Directive 2002/95/EC Restriction of the use of certain hazardous substances in electrical and electronic equipment

In addition, boards ordered with the ruggedized service comply with the following standards as well.

Table 1-4: Additional Standards for Boards Ordered with Ruggedized Service

TYPE	ASPECT	STANDARD	REMARKS
Environmental	Vibration (Sinusoidal)	IEC60068-2-6	Ruggedized version test parameters: <ul style="list-style-type: none"> • 10-300 (Hz) frequency range • 2 (g) acceleration • 1 (oct/min) sweep rate • 10 cycles/axis • 3 axis
	Random Vibration (Broadband)	IEC60068-2-64	Ruggedized version test parameters: <ul style="list-style-type: none"> • 20-500Hz, 0.05 (g²/Hz) PSD • 500-2000Hz, 0.005 (g²/Hz) PSD • 3.5 (g RMS) acceleration • 30 (min) test time/axis • 3 axis
	Permanent Shock	IEC60068-2-29	Ruggedized version test parameters: <ul style="list-style-type: none"> • 15 (g) acceleration • 11 (ms) pulse duration • 500 bumps per direction • 6 directions • 1 (s) recovery time
	Single Shock	IEC60068-2-27	Ruggedized version test parameters: <ul style="list-style-type: none"> • 30 (g) acceleration • 9 (ms) pulse duration • 3 shocks per direction • 6 directions • 5 (s) recovery time

1.9 Related Publications

The following publications contain information relating to this product.

Table 1-5: Related Publications

PRODUCT	PUBLICATION
CompactPCI Systems and Boards	CompactPCI Specification 2.0, Rev. 3.0 CompactPCI Packet Switching Backplane Specification PICMG 2.16 Rev. 2.0 CompactPCI System Management Specification PICMG 2.9 Rev. 1.0 CompactPCI Hot Swap Specification PICMG 2.1 Rev. 2.0
	Kontron CompactPCI Backplane Manual, ID 24229
CompactFlash Cards	CF+ and CompactFlash Specification Revision 2.1
PMC Modules	IEEE 1386-2001, IEEE Standard for a Common Mezzanine Card (CMC) Family IEEE 1386.1-2001, IEEE Standard Physical and Environmental Layers for PCI Mezzanine Cards (PMC)



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com