



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com

Connection Information

User Serial Ports

All Processor module ports except for the port labeled "PROGRAMMER/PORT B" on the leftmost Processor in the rack are available to the user to connect to an external device which will be controlled by application tasks running on the Processor. Refer to the Enhanced BASIC Language Instruction Manual (J-3675) for more information. Note that with AutoMax Processor modules, you can use the statements OPEN "PORTA" or OPEN "PORTB".

Note: If you do not enable bit 15 (hardware handshaking) in the SETUP parameter of the OPEN statement, only pins 2, 3, and 7 of the port you OPEN will be meaningful.

Pin#/I/O	Function
2 O	This signal contains transmitted data.
3 I	This signal contains received data.
4 O	Transmit status. This signal is true whenever the transmitter is sending characters. It is used to "bracket" a character transmission. It can be used to enable/disable any type of external equipment, such as a tri-state transmit modem, which requires an enable signal to output characters. This signal is meaningful only if hardware handshaking has been enabled.
5 I	This signal enables the transmitter. It must be true for the transmitter to send a character. This signal is typically used for hardware flow control. It is meaningful only if hardware handshaking has been enabled.
6 I	This signal enables the receiver. It must be true in order for the receiver to accept characters. If the signal becomes false while a message is being received, any characters being received will be deleted and an error will be reported to the application software. This signal is meaningful only if hardware handshaking has been enabled.
7	Signal ground.
10 O	This signal is an isolated + 12 Volt which can be used as an enable or equipment ready indicator. The signal is always on whenever power is applied to the Processor.
20 O	This signal indicates receiver status. The signal is true whenever the receiver can accept characters, i.e., when the receive buffer is not full. When the receive buffer fills to within a specified limit, the signal is turned off. The signal can be used to disable another transmitter. It is meaningful only when hardware handshaking has been enabled.

AutoMax Processor
(M/N 57C430A)
(M/N 57C431)
(M/N 57C435)

Module Specifications

Module Number 57C430A Contains: One (1) AutoMax Processor Module (256K)

Module Number 57C431 Contains: One (1) AutoMax Processor Module (512K)

Module Number 57C435 Contains: One (1) AutoMax Processor Module (512K)

Ambient Conditions

- Storage temperature: -40°C – 85°C
- Operating temperature: 0°C – 60°C
- Humidity: 5-90% non-condensing

Maximum Module Power Dissipation

- 15 Watts average

Dimensions

- Height: 11.75 inches
- Width: 1.25 inches
- Depth: 7.375 inches

System Power Requirements

- 5 Volts: 3000 ma average
- -12 Volts: 100 ma average
- +12 Volts: 100 ma average

Battery Specifications

- Type: Lithium
- Size: AA
- Voltage: 3.6 Volts
- Amp. Hrs.: 2.0


Memory Retention

	57C430A/57C431	57C435
• Minimum hold-up with battery:	42 days	186 days
• Typical hold-up with battery:	333 days	8.2 years
• Minimum hold-up without battery:	10 minutes	10 minutes
• Typical hold-up without battery:	10 hours	10 hours
• Maximum charge-up time:	15 minutes	15 minutes

Serial Port Specifications

- Type: RS-232C
- Electrical Isolation: 450 Volts
- Voltage: \pm 12 Volts
- Maximum current per channel: \pm 30 ma

Processor Module Faceplate

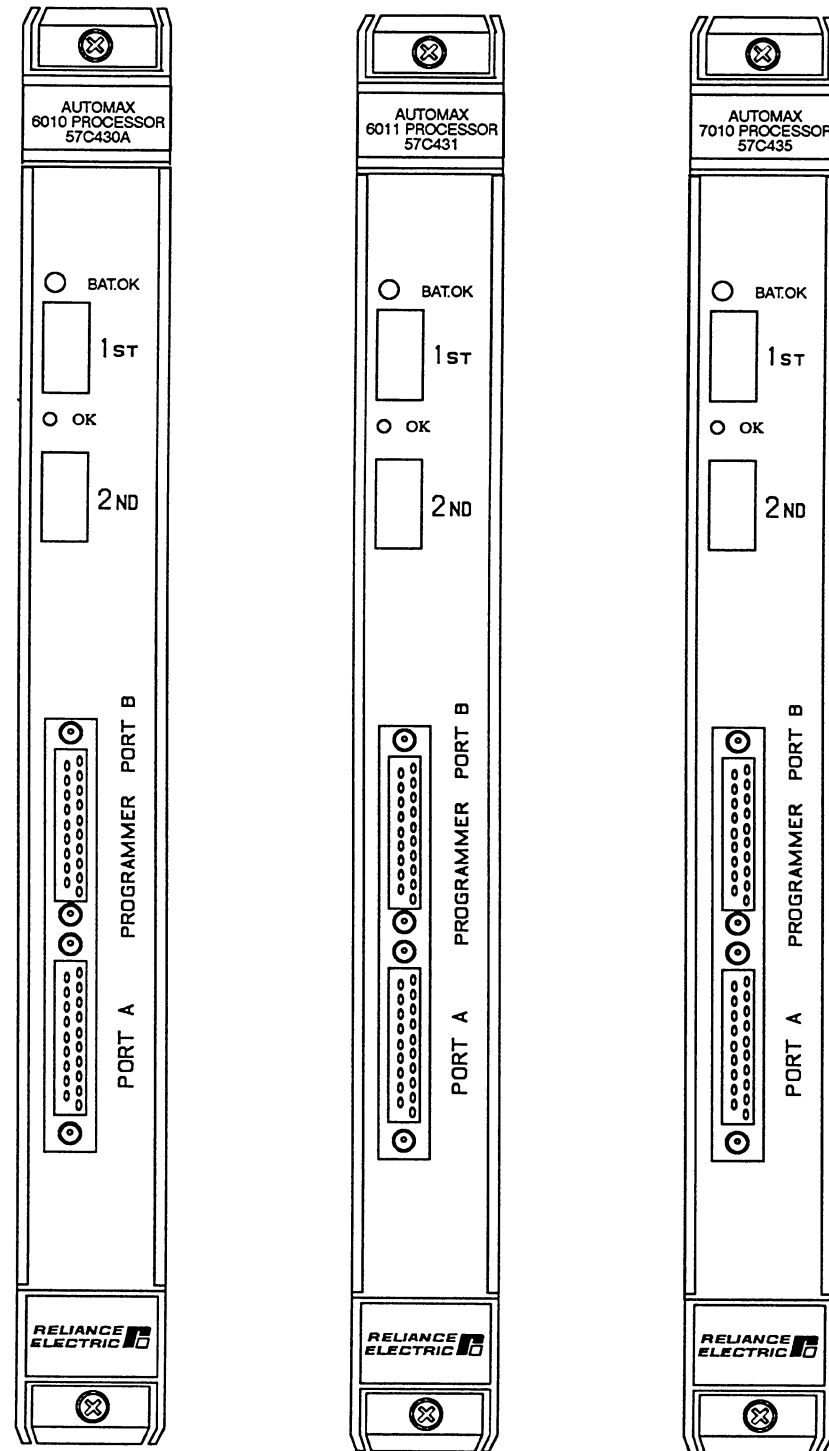

Connection Information

Programmer/Port B

If the personal computer that will be used as a programming terminal for the Processor module was purchased from Reliance, you will receive with the computer the proper cable to connect the computer and the Processor module through the port labeled "Programmer/Port B."

WARNING

THE FOLLOWING INSTRUCTIONS ARE INTENDED ONLY TO ALLOW FABRICATION OF PROPER CONNECTIONS BETWEEN RELIANCE EQUIPMENT AND USER-PROVIDED PROGRAMMING DEVICES. THE USER MUST READ AND UNDERSTAND ALL APPLICABLE INSTRUCTION MANUALS PRIOR TO OPERATING THE EQUIPMENT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.

If it is necessary to prepare a cable to connect a programming terminal to the RS-232 port labeled "Programmer/Port B" on the leftmost processor in the AutoMax rack, follow the steps outlined below.

1. Determine whether your programming terminal contains a 9- or 25-pin male connector.
2. Cut a suitable length (not to exceed 10 feet) of 22- gauge, multi-conductor cable.
3. Follow the connector manufacturer's instructions and make cable connections using figure 1 or 2, whichever is applicable.
4. Check for grounds, shorts, and continuity using an Ohm meter.


Programming Terminal End 25-Pin Female Connector			Reliance End 25-Pin Male Connector	
SIGNAL	PIN#		PIN#	SIGNAL
RECV	3	←	2	XMIT
XMIT	2	→	3	RECV
CTS	5	←	4	RTS
RTS	4	→	5	CTS
DTR	20	→	6	DSR
DSR	6	←	20	DTR
COM	7	←	7	COM

Figure 1

Programming Terminal End 9-Pin Female Connector			Reliance End 25-Pin Male Connector	
SIGNAL	PIN#		PIN#	SIGNAL
RECV	2	←	2	XMIT
XMIT	3	→	3	RECV
CTS	8	←	4	RTS
RTS	7	→	5	CTS
DTR	4	→	6	DSR
DSR	6	←	20	DTR
COM	5	←	7	COM

Figure 2

Processor Module Faceplate

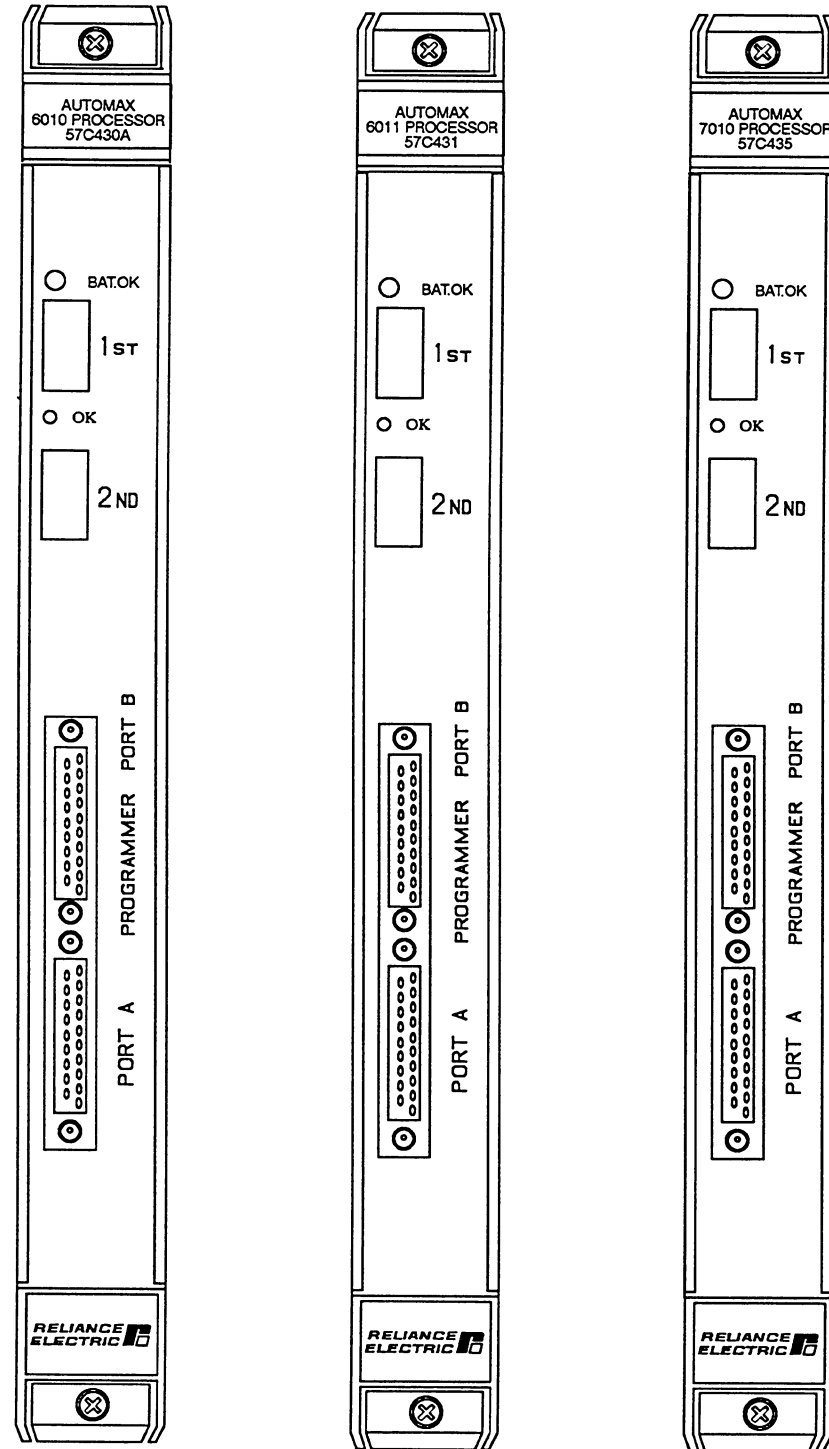

Connection Information

Programmer/Port B

If the personal computer that will be used as a programming terminal for the Processor module was purchased from Reliance, you will receive with the computer the proper cable to connect the computer and the Processor module through the port labeled "Programmer/Port B."

WARNING

THE FOLLOWING INSTRUCTIONS ARE INTENDED ONLY TO ALLOW FABRICATION OF PROPER CONNECTIONS BETWEEN RELIANCE EQUIPMENT AND USER-PROVIDED PROGRAMMING DEVICES. THE USER MUST READ AND UNDERSTAND ALL APPLICABLE INSTRUCTION MANUALS PRIOR TO OPERATING THE EQUIPMENT. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.

If it is necessary to prepare a cable to connect a programming terminal to the RS-232 port labeled "Programmer/Port B" on the leftmost processor in the AutoMax rack, follow the steps outlined below.

1. Determine whether your programming terminal contains a 9- or 25-pin male connector.
2. Cut a suitable length (not to exceed 10 feet) of 22- gauge, multi-conductor cable.
3. Follow the connector manufacturer's instructions and make cable connections using figure 1 or 2, whichever is applicable.
4. Check for grounds, shorts, and continuity using an Ohm meter.

Programming Terminal End 25-Pin Female Connector			Reliance End 25-Pin Male Connector	
SIGNAL	PIN#		PIN#	SIGNAL
RECV	3	←	2	XMIT
XMIT	2	→	3	RECV
CTS	5	←	4	RTS
RTS	4	→	5	CTS
DTR	20	→	6	DSR
DSR	6	←	20	DTR
COM	7	←	7	COM

Figure 1

Programming Terminal End 9-Pin Female Connector			Reliance End 25-Pin Male Connector	
SIGNAL	PIN#		PIN#	SIGNAL
RECV	2	←	2	XMIT
XMIT	3	→	3	RECV
CTS	8	←	4	RTS
RTS	7	→	5	CTS
DTR	4	→	6	DSR
DSR	6	←	20	DTR
COM	5	←	7	COM

Figure 2

Connection Information

User Serial Ports

All Processor module ports except for the port labeled "PROGRAMMER/PORT B" on the leftmost Processor in the rack are available to the user to connect to an external device which will be controlled by application tasks running on the Processor. Refer to the Enhanced BASIC Language Instruction Manual (J-3675) for more information. Note that with AutoMax Processor modules, you can use the statements OPEN "PORTA" or OPEN "PORTB".

Note: If you do not enable bit 15 (hardware handshaking) in the SETUP parameter of the OPEN statement, only pins 2, 3, and 7 of the port you OPEN will be meaningful.

Pin#/I/O	Function
2 O	This signal contains transmitted data.
3 I	This signal contains received data.
4 O	Transmit status. This signal is true whenever the transmitter is sending characters. It is used to "bracket" a character transmission. It can be used to enable/disable any type of external equipment, such as a tri-state transmit modem, which requires an enable signal to output characters. This signal is meaningful only if hardware handshaking has been enabled.
5 I	This signal enables the transmitter. It must be true for the transmitter to send a character. This signal is typically used for hardware flow control. It is meaningful only if hardware handshaking has been enabled.
6 I	This signal enables the receiver. It must be true in order for the receiver to accept characters. If the signal becomes false while a message is being received, any characters being received will be deleted and an error will be reported to the application software. This signal is meaningful only if hardware handshaking has been enabled.
7	Signal ground.
10 O	This signal is an isolated + 12 Volt which can be used as an enable or equipment ready indicator. The signal is always on whenever power is applied to the Processor.
20 O	This signal indicates receiver status. The signal is true whenever the receiver can accept characters, i.e., when the receive buffer is not full. When the receive buffer fills to within a specified limit, the signal is turned off. The signal can be used to disable another transmitter. It is meaningful only when hardware handshaking has been enabled.

For additional information

1 Allen-Bradley Drive, Mayfield Heights, Ohio 44124 USA

Tel: (800) 241-2886 or (440) 646-3599, <http://www.reliance.com/automax>

www.rockwellautomation.com

Corporate Headquarters

Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 18 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products

Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433

Europe/Middle East/Africa: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 17741

Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 6356-9077, Fax: (65) 6356-9011

AutoMax Processor
(M/N 57C430A)
(M/N 57C431)
(M/N 57C435)

Module Specifications

Module Number 57C430A Contains: One (1) AutoMax Processor Module (256K)

Module Number 57C431 Contains: One (1) AutoMax Processor Module (512K)

Module Number 57C435 Contains: One (1) AutoMax Processor Module (512K)

Ambient Conditions

- Storage temperature: -40°C – 85°C
- Operating temperature: 0°C – 60°C
- Humidity: 5-90% non-condensing

Maximum Module Power Dissipation

- 15 Watts average

Dimensions

- Height: 11.75 inches
- Width: 1.25 inches
- Depth: 7.375 inches

System Power Requirements

- 5 Volts: 3000 ma average
- -12 Volts: 100 ma average
- +12 Volts: 100 ma average

Battery Specifications

- Type: Lithium
- Size: AA
- Voltage: 3.6 Volts
- Amp. Hrs.: 2.0

Memory Retention

	57C430A/57C431	57C435
• Minimum hold-up with battery:	42 days	186 days
• Typical hold-up with battery:	333 days	8.2 years
• Minimum hold-up without battery:	10 minutes	10 minutes
• Typical hold-up without battery:	10 hours	10 hours
• Maximum charge-up time:	15 minutes	15 minutes

Serial Port Specifications

- Type: RS-232C



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com