


# SF1-A SERIES

## 20mm Beam Pitch Safety Standard Conforming Area Sensor

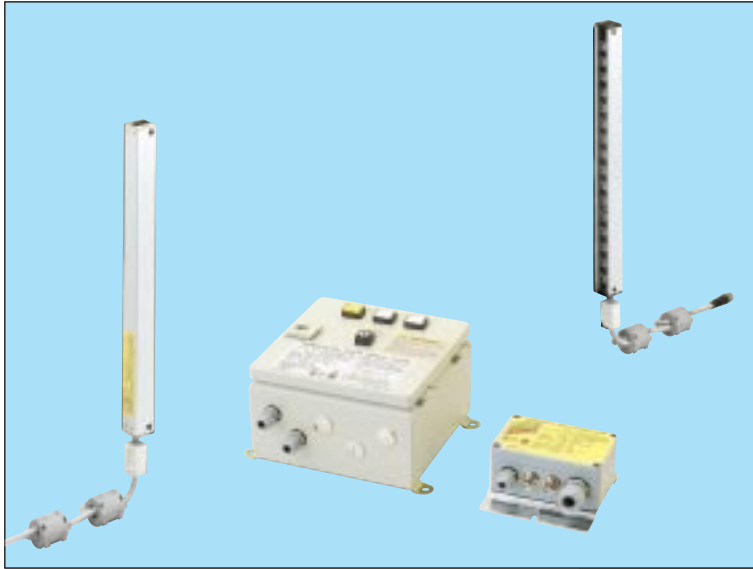

Meets International Safety Requirements

**CE Marked**  
Conforming to Machinery Directive and EMC Directive (Except SF1-AC1)

### Conforms to International Safety Standards

The **SF1-A** series is UL listed (UL 491) as safety equipment in addition to complying with OSHA 1910.212 and OSHA 1910.217 safety requirements for press machinery in the U.S.


It also conforms to Europe's Machinery Directive as Category 4 safety component (except **SF1-AC1**). (Category 4 is the most severe category.) Further, it conforms to the CSA (Canadian Standards Association) standards.

	SF1-AC1	SF1-AC2
UL	<input type="radio"/> Approved	<input type="radio"/> Approved
OSHA	<input type="radio"/> Complies	<input type="radio"/> Complies
CSA	<input type="radio"/> Conforms	<input type="radio"/> Conforms
CE mark Machinery Directive	—	Conforms (Safety Category 4)

### 20mm Beam Pitch/ $\phi$ 30mm Minimum Sensing Object


The narrow 20mm beam pitch, half of conventional type, offers the highest performance. It is able to detect a minimum  $\phi$ 30mm opaque object.

Minimum sensing object:  $\phi$ 30mm

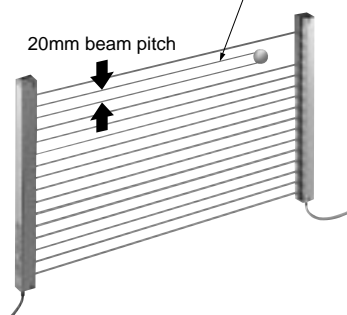

### Supreme Fail-safe Design

**SF1-A** self-checks for any internal circuit failure, cable breakage, or abnormal incident ambient light. If any error occurs, **SF1-A** outputs the same signal as when the beam is interrupted (OFF signal), so that the machine is stopped and safety is maintained.

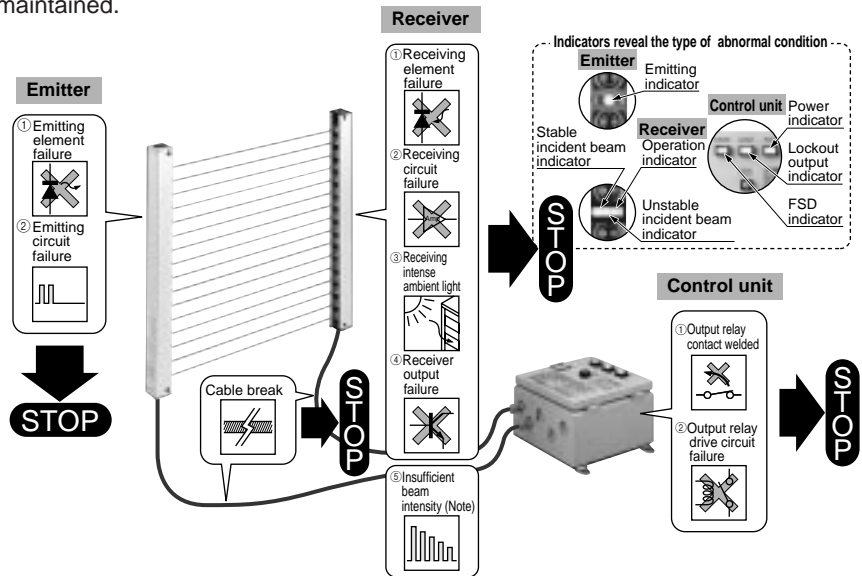

Note: The sensing output operates normally due to the automatic sensitivity compensation function.

### Automatic Sensitivity Compensation

**SF1-A** series constantly maintains the optimum sensitivity according to the setting distance and the sensing conditions. The sensitivity is automatically increased if the incident beam intensity decreases due to dirt, dust, mist or oil on the sensing face. It also makes the sensor insusceptible to another sensor's beam, or the glare of welding.


### Wide Variation

There are eight types of sensor units having a sensing height ranging from 140mm (8 beam channels) to 1,260mm (64 beam channels). A hood attached spatter-protection model is also available that protects the sensing face against welding spatters. Two types of control units are available, for AC power and DC power.




## APPLICATIONS

### Safeguard on press machines

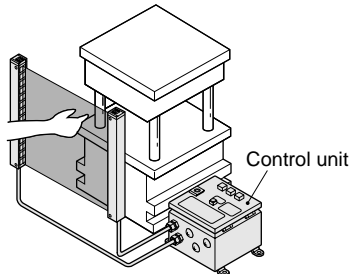


Note: **SF1-AC2** can be used in the U.S.A. and Europe (EU), whereas **SF1-AC1** can be used in the U.S.A. only.

### Safeguard on miniature special-purpose machine

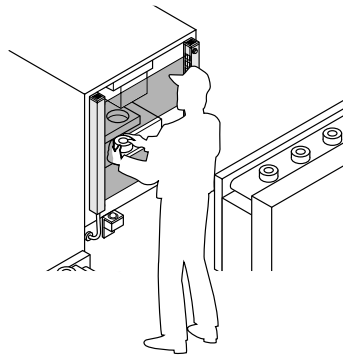

### Detecting access to chip moulder

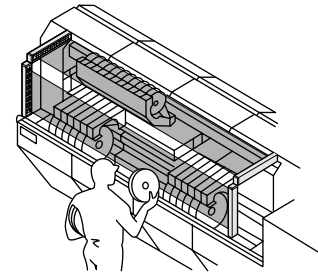

## ORDER GUIDE

### Sensor units

Type	Appearance	Sensing range	Model No.	Number of beam channels	Sensing height (mm)	
Area sensor		5m	SF1-A8	8	140	
			SF1-A16	16	300	
			SF1-A24	24	460	
			SF1-A32	32	620	
			SF1-A40	40	780	
			SF1-A48	48	940	
			SF1-A56	56	1,100	
			SF1-A64	64	1,260	
	With spatter protection hood		5m	SF1-A8-H	8	140
				SF1-A16-H	16	300
				SF1-A24-H	24	460
				SF1-A32-H	32	620
				SF1-A40-H	40	780
				SF1-A48-H	48	940
				SF1-A56-H	56	1,100
				SF1-A64-H	64	1,260

Use the sensor unit and the control unit together as a set.

Mating cable is not supplied with the sensor unit. Please order it separately.

### Control units

Type	Appearance	Model No.	Supply voltage
For AC supply		<b>NEW</b> SF1-AC1	100 to 240V AC
For DC supply		SF1-AC2	24V DC ± 15%

With the launching of Europe's EN standard approved control unit for DC power, **SF1-AC2**, the previous control unit for AC power, **SF1-AC1**, has been discontinued with effect from March, 1998. Please use the control unit for DC power, **SF1-AC2**, if Europe's EN standard requirements must be met.

Global Conformance to Safety Standards

SF2-EH

SF1-A

General Use

SF1-N

NA40

Individual Beam Outputs

SF1-F

Slim Body

NA2



NA1-11

NA1-5

# SF1-A

## ORDER GUIDE

### Mating cables

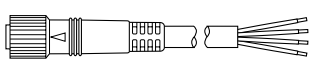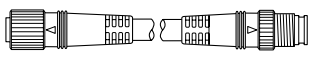Type	Appearance	Model No.	Description	
For SF1-AC1		<b>SF1-CC3A</b>	Length: 3m Weight: 600g approx.	Use either set of cables to connect the sensor units to <b>SF1-AC1</b> . • 0.5mm <sup>2</sup> 4-core cabtyre cable, with connector on one end, two cables per set • Cable outer diameter: $\phi$ 7mm • Connector outer diameter: $\phi$ 14mm max.
		<b>SF1-CC7A</b>	Length: 7m Weight: 950g approx.	
For SF1-AC2		<b>SF1-CCJ3</b>	Length: 3m Weight: 600g approx.	Use any of these sets of cables to connect the sensor units to <b>SF1-AC2</b> . Each set can also be used as extension cables between the sensor units and <b>SF1-CC□A</b> . • 0.5mm <sup>2</sup> 4-core cabtyre cable, with connector on both ends, two cables per set • Cable outer diameter: $\phi$ 7mm • Connector outer diameter: $\phi$ 14mm max.
		<b>SF1-CCJ7</b>	Length: 7m Weight: 950g approx.	
		<b>SF1-CCJ10 (Note)</b>	Length: 10m Weight: 1,200g approx.	


Note: Connection cable **SF1-CCJ10** cannot be used if EN standards are to be met.

### Spare parts


#### • For sensor unit

Designation	Model No.	Description	
Front cover	<b>FC-SF1-8</b>	For 8 beam channels	Protects front lens
	<b>FC-SF1-16</b>	For 16 beam channels	
	<b>FC-SF1-24</b>	For 24 beam channels	
	<b>FC-SF1-32</b>	For 32 beam channels	
	<b>FC-SF1-40</b>	For 40 beam channels	
	<b>FC-SF1-48</b>	For 48 beam channels	
	<b>FC-SF1-56</b>	For 56 beam channels	
	<b>FC-SF1-64</b>	For 64 beam channels	
Sensor unit mounting bracket	<b>MS-SF1-1</b>	A set of brackets for both the emitter and the receiver	

#### • FC-SF1-□

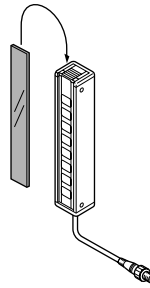

#### • MS-SF1-1



Four bracket set  
4 Nos. each of M6 (length 40mm) truss head screws, nuts and spring washers are attached.

Note: The model Nos. given above (except **MS-SF1-1**) denote a single unit, not a pair of units.

#### • For control unit

Designation	Model No.	Description
Lockout release key (For <b>SF1-AC1</b> )	<b>NA-BC-K3</b>	Two-key set
Front cover open key (For <b>SF1-AC1</b> )	<b>NA-BC-K2</b>	_____
Test rod	<b>SF1-AC-TL</b>	Beam alignment test object
System information plate (Attached to <b>SF1-AC1</b> )	<b>MEHS-SF1A</b>	'The overall system response time', 'The minimum separation distance', and 'The appropriate test piece diameter' are shown.
Relay circuit board (For <b>SF1-AC1</b> )	<b>SF1-AC-RU</b>	<b>SF1-AC1</b> relay replacement circuit board
Relay circuit board (For <b>SF1-AC2</b> )	<b>SF1-AC2-RU</b>	<b>SF1-AC2</b> relay replacement circuit board
Fuse	<b>SF1-AC-F</b>	Control unit fuse

## OPTIONS


Designation	Model No.	Description
Large indicator	<b>SF-IND</b>	<p>With the large indicators put on the sensor units, the operation is easily observable from various directions.</p> <p><b>Specifications</b></p> <ul style="list-style-type: none"> <li>• Supply voltage: 12 to 24V DC <math>\pm</math> 10% Ripple P-P 10% or less</li> <li>• Current consumption: 30mA or less</li> <li>• Indicators: Three orange LEDs Either light up, blink, or light off as selected by the input wire</li> <li>• Ambient temperature: - 10 to + 55°C</li> <li>• Cable: 0.2mm<sup>2</sup> 3-core oil resistant cabtyre cable, 2m long</li> <li>• Cable extension: Extension up to total 100m is possible with 0.2mm<sup>2</sup>, or more, cable.</li> <li>• Material: Polycarbonate (Cover), POM (Mounting base)</li> </ul> <p><b>I/O circuit diagram</b></p> <ul style="list-style-type: none"> <li>• Input specifications Applied voltage: 24V DC or less (between COM. and input) ON voltage: 9.6V or more (between COM. and input) OFF voltage: 5V or less (between COM. and input) Input impedance: 1kΩ approx.</li> </ul>
Sensor unit mounting bracket	<b>MS-SF1-P</b>	It consists of one set of two brackets each for the emitter and the receiver.

Note: Two SF-INDs are required if they are to be mounted on, both, the emitter and the receiver.


Applicable beam channels		8 beam channels	16 beam channels	24 beam channels	32 beam channels	40 beam channels	48 beam channels	56 beam channels	64 beam channels
Designation	Model No.	<b>OS-SF1-8</b>	<b>OS-SF1-16</b>	<b>OS-SF1-24</b>	<b>OS-SF1-32</b>	<b>OS-SF1-40</b>	<b>OS-SF1-48</b>	<b>OS-SF1-56</b>	<b>OS-SF1-64</b>

Note: The model Nos. given above denote a single unit, not a pair of units.


### Large indicator

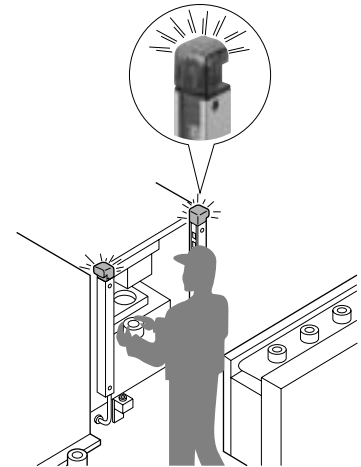

### Sensor unit mounting bracket



### Slit mask

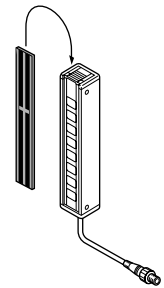

The slit mask restrains the amount of beam emitted or received and hence reduces the interference between neighbouring sensors. Replace the original front cover with the slit mask. However, the sensing range reduces when the slit mask is used.

### Sensing range

- Slit on emitter side: 3m
- Slit on receiver side: 2.6m
- Slit on both sides: 1.2m

# SF1-A

## SPECIFICATIONS

### Sensor units

Number of beam channels		8	16	24	32	40	48	56	64
Item	Model No.	SF1-A8	SF1-A16	SF1-A24	SF1-A32	SF1-A40	SF1-A48	SF1-A56	SF1-A64
	With spatter protection hood	SF1-A8-H	SF1-A16-H	SF1-A24-H	SF1-A32-H	SF1-A40-H	SF1-A48-H	SF1-A56-H	SF1-A64-H
Applicable control units		SF1-AC1, SF1-AC2							
Sensing height		140mm	300mm	460mm	620mm	780mm	940mm	1,100mm	1,260mm
Sensing range		5m							
Beam pitch		20mm							
Sensing object		φ30mm or more opaque object							
Indicators	Emitter	Emitting indicator: Green LED (lights up under normal emission, blinks under emitting circuit failure)							
	Receiver (Note)	Operation indicator: Red LED (lights up when one or more beams are interrupted, and blinks when extraneous light is received) Stable incident beam indicator: Green LED (lights up when all beams are received stably) Unstable incident beam indicator: Yellow LED (lights up when one or more beams are received unstably) ※The three color indicators blink in rotation when the receiving circuit fails. The operation indicator and the unstable incident beam indicator blink alternately when the emitting circuit fails or the synchronization wire breaks.							
Interference prevention function		Incorporated (Two units of sensors can be mounted closely.)							
Automatic sensitivity compensation function		Incorporated							
Environmental resistance	Pollution degree	3 (Industrial environment)							
	Protection	IP65 (IEC)							
	Ambient temperature	- 10 to + 55°C (No dew condensation or icing allowed), Storage: - 10 to + 60°C							
	Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH							
	Ambient illuminance	Sunlight: 20,000 lx at the light-receiving face, Incandescent light: 3,500 lx at the light-receiving face							
	EMC	Emission/Immunity: prEN50100-1							
	Voltage withstandability	1,000V AC for one min. between all supply terminals connected together and enclosure							
	Insulation resistance	20MΩ, or more, with 500V DC megger between all supply terminals connected together and enclosure							
	Vibration resistance	10 to 55Hz frequency, 1.5mm amplitude in X, Y and Z directions for two hours each							
	Shock resistance	100m/s <sup>2</sup> acceleration (10G approx.) in X, Y and Z directions for three times each							
Emitting element		Infrared LED (modulated)							
Material		Protection enclosure: Aluminum, Module case: ABS, Front cover: Acrylic, Lens: Acrylic							
Cable		0.5mm <sup>2</sup> 4-core cabtyre cable, 0.5m long, with a round connector at the end ※Use together with the optional mating cable							
Cable extension		Extension up to total 20m is possible, for both emitter and receiver, with 0.5mm <sup>2</sup> , or more, cable.							
Weight		500g approx.	840g approx.	1,170g approx.	1,500g approx.	1,830g approx.	2,170g approx.	2,500g approx.	2,830g approx.
With spatter protection hood		630g approx.	1,080g approx.	1,530g approx.	1,990g approx.	2,440g approx.	2,900g approx.	3,350g approx.	3,800g approx.
Accessory		MS-SF1-1 (Sensor unit mounting bracket): 1 set							

Note: The indicators on the receiver operate as follows depending on the incident light intensity.

Incident light intensity (%)	Output operation	Indicator operation		
		Stable incident beam indicator (Green)	Unstable incident beam indicator (Yellow)	Operation indicator (Red)
High ↑ 125%	Beam received operation (ON)	Lights up	Lights up	Lights up
100%				
Low ↓ 0%	Beam interrupted operation (OFF)			Lights up

## SPECIFICATIONS

### Control units

Item	Type	AC power operation	DC power operation	
	Model No.	SF1-AC1	SF1-AC2	
Applicable sensor units	SF1-A□, SF1-A□-H			
Supply voltage	100 to 240V AC 50 to 60Hz		24V DC ± 15% Ripple P-P 10% or less	
Power/Current consumption	24VA or less (including the sensor unit)		1A or less (including the sensor unit)	
Sensing outputs (FSD1, FSD2)	Relay contact 1a (Two outputs) • Switching capacity: 250V 1.5A AC (resistive load) 30V 3A DC (resistive load) • Electrical life: 100,000 operations or more (rated load, switching frequency 20 cycles/min.) • Mechanical life: 10,000,000 operations or more (switching frequency 180 cycles/min.)		Relay contact 1a (Two outputs) • Switching capacity: 30V 3A DC (resistive load) • Electrical life: 100,000 operations or more (rated load, switching frequency 20 cycles/min.) • Mechanical life: 10,000,000 operations or more (switching frequency 180 cycles/min.)	
	Utilization category	DC-12 or DC-13		
	Output operation	ON (closed) when all beams are received/OFF (open) when one or more beams are interrupted In case of any failure of the sensor unit or if the system goes into the lockout condition, the output relays are turned off. (Note 1)		
	Response time	20ms or less (including sensor unit's response time)		
Lockout output (SSD)	Relay contact 1a • Switching capacity: 250V 1.5A AC (resistive load) 30V 3A DC (resistive load) • Electrical life: 100,000 operations or more (rated load, switching frequency 20 cycles/min.) • Mechanical life: 10,000,000 operations or more (switching frequency 180 cycles/min.)		_____	
	Output operation	ON (closed) in the normal condition/OFF (open) in the lockout condition (Note 2)		
	Response time	500ms or less		
Monitor output	_____		Relay contact 1b • Switching capacity: 30V 3A DC (resistive load) • Electrical life: 100,000 operations or more (rated load, switching frequency 20 cycles/min.) • Mechanical life: 10,000,000 operations or more (switching frequency 180 cycles/min.)	
	Output operation	ON (open) when all beams are received/OFF (closed) when one or more beams are interrupted In case of any failure of the sensor unit or if the system goes into the lockout condition, the output relay is turned off (Note 3).		
	Response time	20ms or less		
Input	Non-voltage contact • Lockout release input: Lockout is released by a short-circuit between terminals • External lockout input: System goes into the lockout condition by an open between terminals • External FSD-OFF input: FSDs are turned off by a short-circuit between terminals • Muting input: System is muted by a short-circuit between terminals of both the muting inputs • Monitor input: The system goes into the lockout condition when the MPCE and the FSD status do not match (dual circuits)		Non-voltage contact • Test input: Emission is stopped by an open between terminals • Restart input: Open between the terminals maintains FSDs in OFF state. • Monitor input: The system goes into the lockout condition when the MPCE and the FSD status do not match (dual circuits)	
	Indicators	Power indicator: White (lights up when the power is ON) Lockout output indicator: White (lights up in the lockout condition) FSD operation indicator: Yellow (lights up when FSDs are OFF)	Power indicator: Yellow LED (lights up when the power is ON) Incident beam indicator: Green LED (lights up when FSDs are ON) FSD operation indicator: Red LED (lights up when FSDs are OFF) ※All indicators light up in the lockout condition	
Environmental resistance	Pollution degree	_____		
	Protection	IP65 (IEC)		
	Ambient temperature	- 10 to + 55°C (No dew condensation or icing allowed), Storage: - 10 to + 60°C		
	Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH		
	EMC	Emission/Immunity: prEN50100-1		
	Voltage withstandability	1,500V AC for one min. between AC inputs and DC outputs	1,500V AC for one min. between all supply terminals connected together and enclosure	
	Insulation resistance	20MΩ, or more, with 500V DC megger between AC inputs and DC outputs	20MΩ, or more, with 500V DC megger between all supply terminals connected together and enclosure	
	Vibration resistance	10 to 55Hz frequency, 2G constant in X, Y and Z directions for one hour each		
Shock resistance	100m/s <sup>2</sup> acceleration (10G approx.) in X, Y and Z directions for three times each			
Material	Mild steel plate		Diecast aluminum	
Weight	3.5kg approx.		2kg approx.	
Accessories	SF1-AC-TL (Test rod): 1 No., NA-BC-K2 (Front cover key): 1 No. NA-BC-K3 (Lockout release key): 1 No., MEHS-SF1A (System information plate): 1 No.		SF1-AC-TL (Test rod): 1 No., Cable gland (for φ4 to φ8mm cable dia.): 1 No.	

Notes: 1) Under the following conditions, the FSDs (sensing output) are turned off.

- ① When one or more beams are interrupted [unless the sensor unit is muted (SF1-AC1 only)].
  - ② When the sensor unit falls into an abnormal condition (sensor failure)[unless the sensor unit is muted. (SF1-AC1 only)].
  - ③ When the sensor unit receives intense ambient light [unless the sensor unit is muted (SF1-AC1 only)].
  - ④ When the sensor unit cable or the mating cable is broken or short-circuited [unless the sensor unit is muted (SF1-AC1 only)].
  - ⑤ When the external FSD-OFF input is short-circuited (SF1-AC1 only).
  - ⑥ When the test input terminals are open (SF1-AC2 only).
- 2) Under the following conditions, the SSD (lockout output) incorporated in SF1-AC1 is turned off.
- ① When commencing operation or when supplying power again after power disconnection.
  - ② When one of the FSD relay contacts gets welded.
  - ③ When one of the MPCE relay contacts gets welded.
  - ④ When the results of the dual circuits incorporated in the control unit are different.

- ⑤ When the external lockout input is open.
  - ⑥ When the MPCE operation (NO/NC) is different from the setting of the MPCE operation mode selection switch in the control unit.
- 3) Under the following conditions, the monitor output incorporated in SF1-AC2 is turned off.
- ① When one or more beams are interrupted.
  - ② When the sensor unit falls into an abnormal condition.
  - ③ When the sensor unit receives an intense extraneous light.
  - ④ When the sensor unit cable or the mating cable is broken or short-circuited.
  - ⑤ When the test input is opened (emission stopped).
- 4) The muting input (SF1-AC1 only) cancels the sensor operation so that any beam interruption cannot make the FSD output relays open. This function is used to make the sensor temporarily inoperable for feeding a workpiece into a machine or removing it. This input must be carefully handled.




# SF1-A

## I/O CIRCUIT AND WIRING DIAGRAMS

### SF1-AC1

#### Block diagram

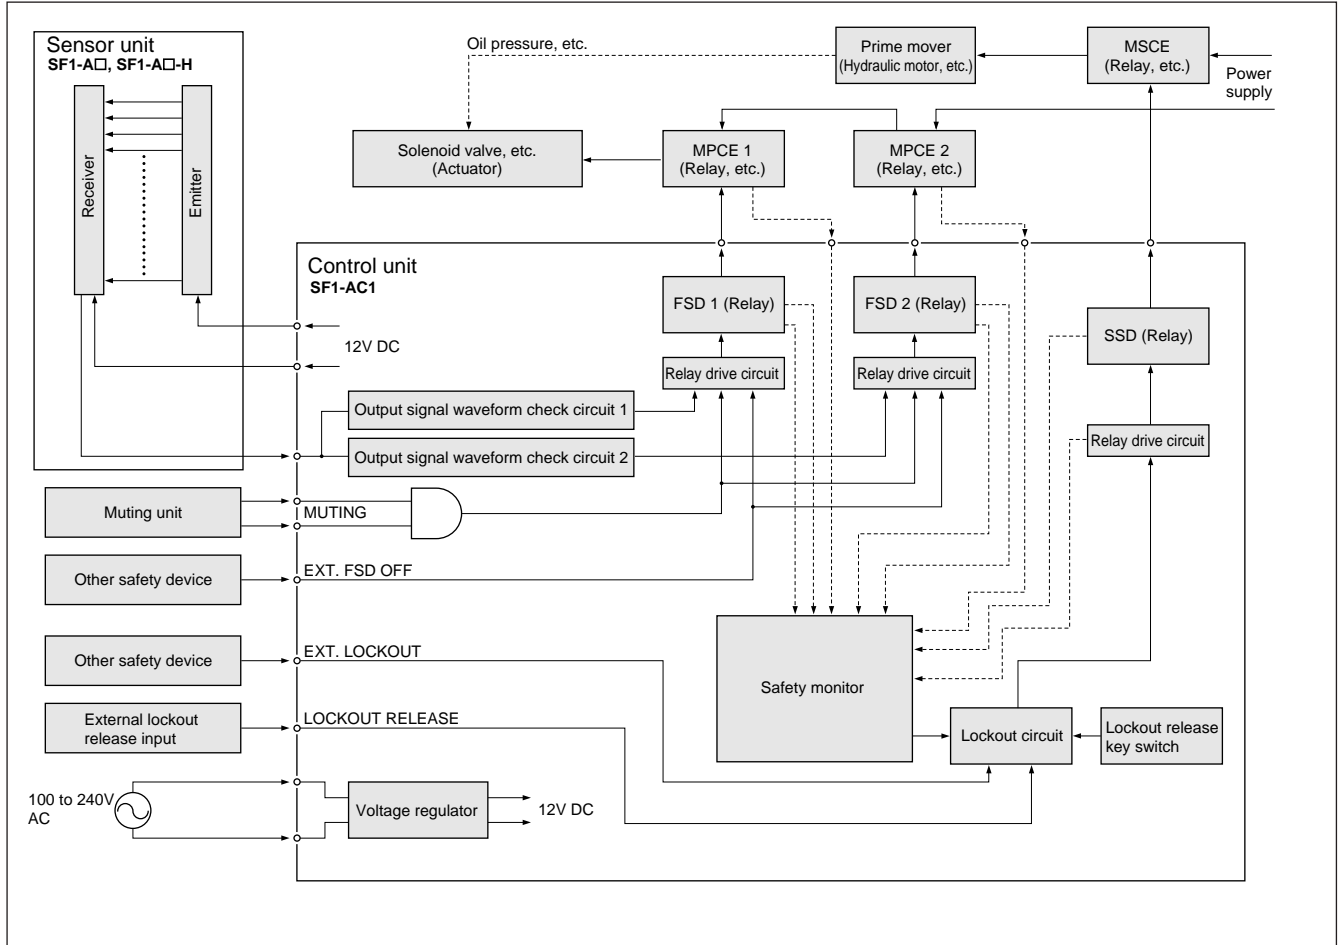

#### Glossary of terms

Term	Description
MPCE (Machine Primary Control Element)	The electrically powered element which directly controls the machine's normal operating motion in such a way that it is last (in time) to operate when motion is initiated or arrested. The SUNX control unit is designed for use of relays. Two safety relays are separately required as MPCEs.
MSCE (Machine Secondary Control Element)	A machine control element independent of the machine primary control element and capable of removing the source of power from the prime mover of the relevant dangerous parts in an emergency. The SUNX control unit is designed for use of a relay. One relay is separately required as MSCE.
FSD (Sensing output) (Final Switching) Device	The component of the photoelectric safety system which, when the beam curtain or safety monitoring means are actuated, responds by interrupting the circuit connecting it to an MPCE. Two relay units are contained in the control unit as FSDs. FSDs are turned OFF ('open' condition) in response to each of the following conditions: ① When one or more beams are interrupted, unless the sensor unit is muted. ② When the sensor unit falls into an abnormal condition (sensor failure), unless the sensor is muted. ③ When the sensor unit receives an intense extraneous light, unless the sensor unit is muted. ④ When the sensor unit cable or the mating cable is broken or short-circuited, unless the sensor unit is muted. ⑤ When the external FSD-OFF input is short-circuited.

Term	Description
SSD (Lockout output) (Secondary Switching) Device	The component of the photoelectric safety system which, in a lockout condition, interrupts the circuit connecting it to the MSCE. One relay is incorporated in the control unit. The lockout output becomes OFF ('open' condition) in response to each of the following conditions: ① When commencing operation or when supplying power again after power disconnection. ② When one of the FSD relay contacts gets welded. ③ When one of the MPCE relay contacts gets welded. ④ When the results of the dual circuits incorporated in the control unit are different. ⑤ When the external lockout input is open. ⑥ When the MPCE operation (NO/NC) is different from the setting of the MPCE operation mode selection switch in the control unit.
Safety monitor	The component of the photoelectric safety system which monitors any inconsistency of action among MPCEs, FSDs and SSD and generates an output to the lockout circuit.
Muting unit	A facility for automatically switching the safety system into a condition where FSDs (final switching devices), are not turned OFF ('open' condition) when light of the sensing unit is interrupted. The muting input terminals are incorporated in the control unit. Separate equipment will be required to prepare the facility.






# SF1-A

## I/O CIRCUIT AND WIRING DIAGRAMS

### SF1-AC2

#### Block diagram

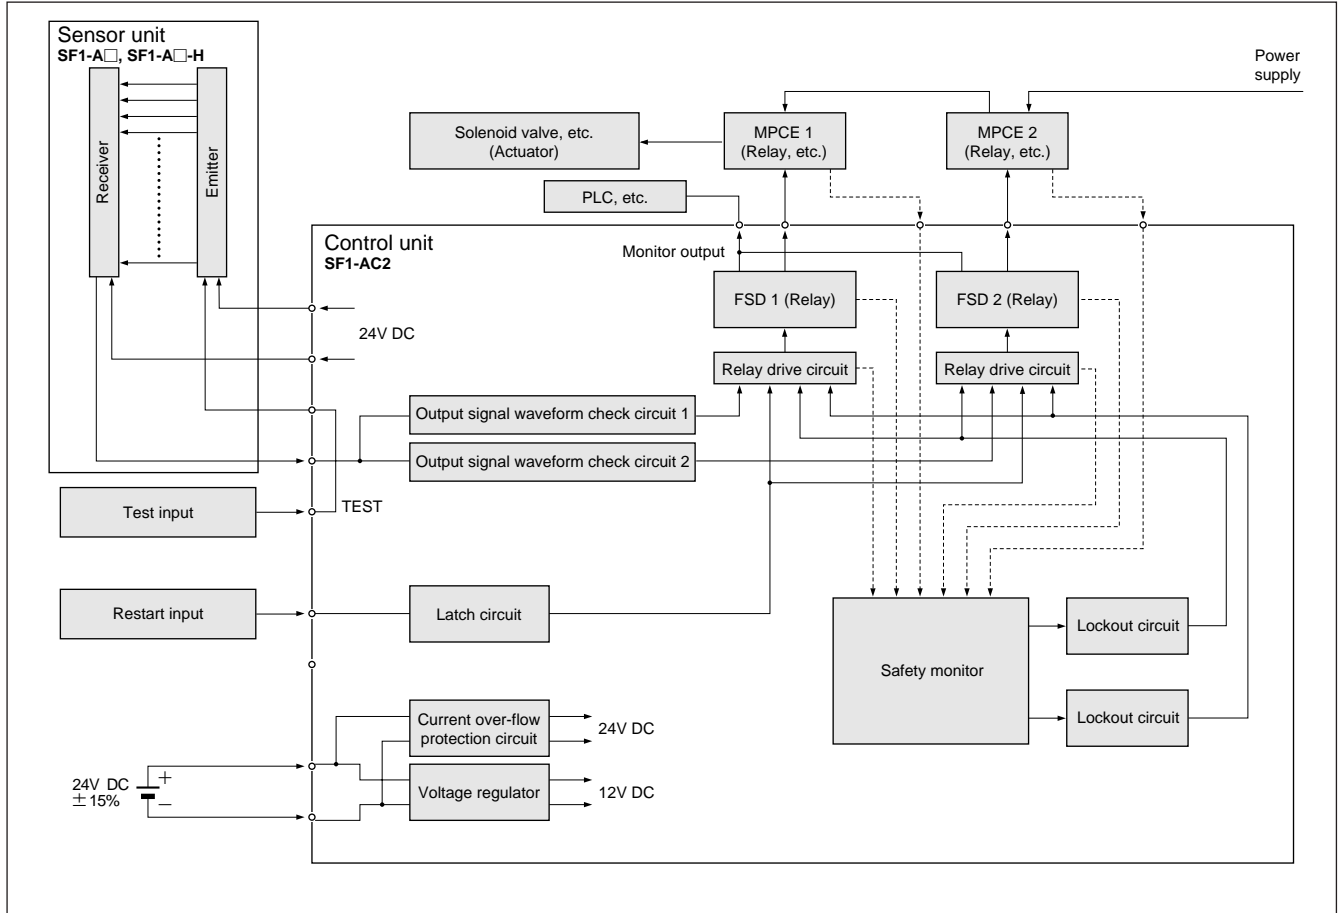

#### Glossary of terms


Term	Description
MPCE (Machine Primary Control Element)	The electrically powered element which directly controls the machine's normal operating motion in such a way that it is last (in time) to operate when motion is initiated or arrested. The SUNX control unit is designed for use of relays. Two safety relays are separately required as MPCEs.
FSD (Final Switching Device)	The component of the photoelectric safety system which, when the beam curtain or safety monitoring means are actuated, responds by interrupting the circuit connecting it to an MPCE. Two relay units are contained in the control unit as FSDs. FSDs are turned off ('open' condition) in response to each of the following conditions: ① When one or more beams are interrupted. ② When the sensor unit falls into an abnormal condition (sensor failure). ③ When the sensor unit receives an intense extraneous light. ④ When the sensor unit cable or the mating cable is broken or short-circuited. ⑤ When the test input terminals are opened (emission stopped).

Term	Description
Monitor output	It is used to convey the FSD (sensing output) condition to the PLC. Output is done by connecting the 1b contacts of the FSD relays in series. Its operation is opposite to that of the FSDs. The monitor output turns OFF (closed) under the following conditions: ① When one or more beams are interrupted. ② When the sensor unit falls into an abnormal condition (sensor failure). ③ When the sensor unit receives an intense extraneous light. ④ When the sensor unit cable or the mating cable is broken or short-circuited. ⑤ When the test input terminals are opened (emission stopped).
Safety monitor	The component of the photoelectric safety system which monitors any inconsistency of action among MPCEs and FSDs and generates an output to the lockout circuit.

## I/O CIRCUIT AND WIRING DIAGRAMS


### SF1-AC2

#### Wiring diagram

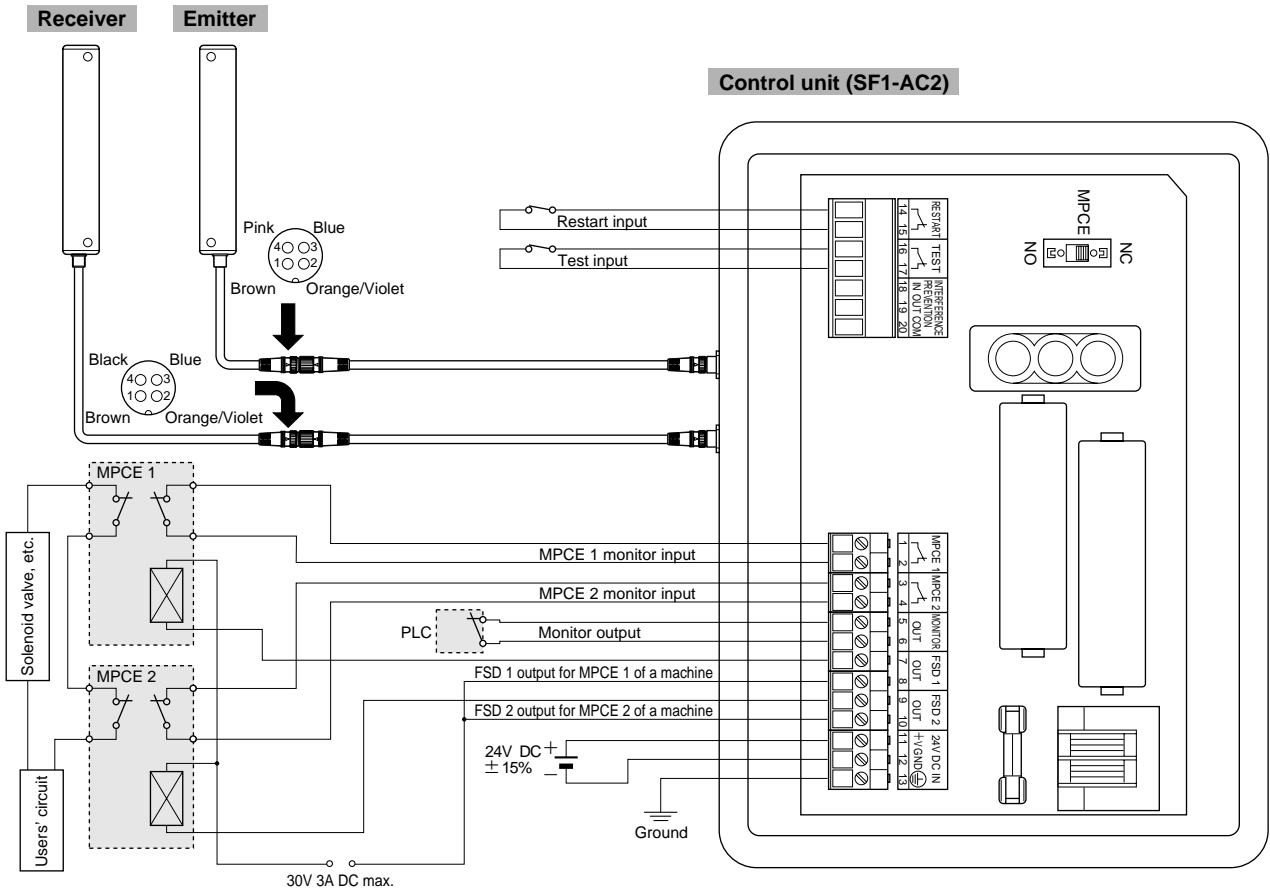


## SENSING CHARACTERISTICS (TYPICAL)


Correlation between setting distance and excess gain

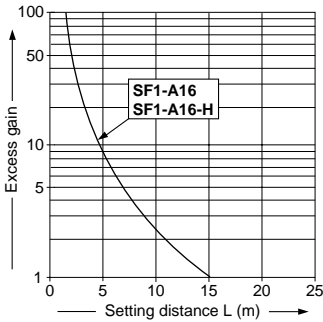

Parallel deviation (All models)

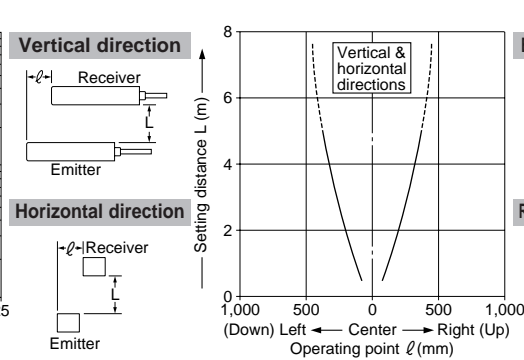

Angular deviation (All models)

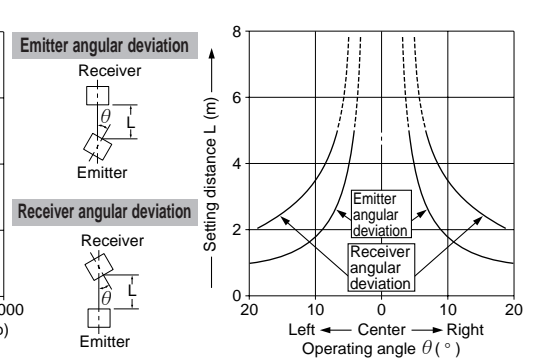

Global Conformance to Safety Standards  
SF2-EH  
SF1-A

General Use  
NA40  
SF1-N

Individual Beam Outputs  
SF1-F

NA2

Slim Body  
NA1-11

NA1-5

# SF1-A

## PRECAUTIONS FOR PROPER USE

Refer to P.820~ for general precautions.




• To use this product in the U.S.A., refer to OSHA 1910. 212 and OSHA 1910. 217 for installation, and in Europe, refer to prEN 999 as well. Observe your national and local requirements before installing this product.

- Make sure to use the sensor units with the exclusive control unit and carry out the test run before operating.
- This safety system is for use only on machinery in which the dangerous parts can be stopped immediately, either by an emergency stop unit or by disconnecting the power supply. Do not use this system with machinery which cannot be stopped at any point in its operation cycle.
- Remove the cause of failure before releasing the lockout condition.
- Be sure to close the front cover on the control unit before operating. Also, the front cover key of **SF1-AC1**, as well as the lockout release key, should always be kept under the supervision of a responsible and authorized person.
- **SF1-AC1** is made active by the key switch. The key should always be kept under the supervision of a responsible and authorized person.


### Mounting

- Do not use the sensor units without the front cover or the enclosures. IP protection cannot be maintained and a contact failure may occur between modular units.
- When mounting the sensor unit, the tightening torque should be 2N·m or less. Tighten the control unit at four points (**SF1-AC2**: three points) as shown below.

SF1-AC1

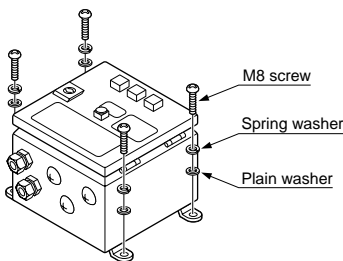

SF1-AC2

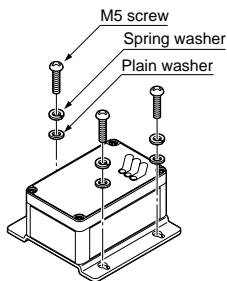

## MPCE



European standards oblige you to use approved safety relays as MPCEs.


- The MPCE response time has been assumed to be within 100ms after FSD is turned OFF/ON. Use relays for which the response time is 100ms or less.
- Set the MPCE mode switch on the circuit board in the control unit according to the MPCE operation.

## Wiring


- Use a separate power supply for devices other than the sensor units, such as, muting unit, stopping performance monitor, etc., connected to **SF1-AC1**. Do not use the internal power supply of the control unit for these devices.
- **SF1-AC1** incorporates an external lockout input for connection to another safety device.
- The lockout release input of **SF1-AC1** can be made to act upon several sensor systems at one time. Make sure, however, that this function is available only when these sensor systems are installed on one machine. Do not use this with several machines.
- When the external lockout input of **SF1-AC1** is not used, make sure to short-circuit the terminals with the attached short-circuit bar.
- **SF1-AC2** incorporates a test input which can be used to connect to another safety system. However, note that it cannot be used for connection to a stopping performance monitor.
- The suitable cable diameters for the cable glands are  $\phi 4$  to  $\phi 8$ mm and  $\phi 10$  to  $\phi 14$ mm.
- Protect cables with a duct (such as a flexible pipe, a wire duct, etc.). Further, put the sensor unit cables and the control unit cables in separate ducts.
- **SF1-AC2** incorporates two connectors for connection to the sensor units.

## Interference prevention function


- To install two sets of sensor units adjacently as shown in the illustration on the right, wire as given below. With the **SF1-AC1** control units, connect both INTERLOCK COM. terminals (No. 21) in common, and connect IN terminal (No. 19) of one control unit with OUT terminal (No. 20) of the other control unit. With the **SF1-AC2** control units, connect both INTERFERENCE PREVENTION COM. terminals (No. 20) in common, and connect IN terminal (No. 18) of one control unit with OUT terminal (No. 19) of the other control unit.

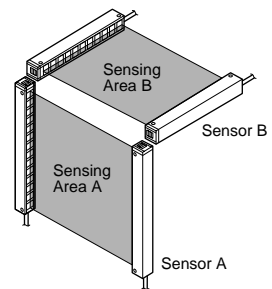

SF1-AC1

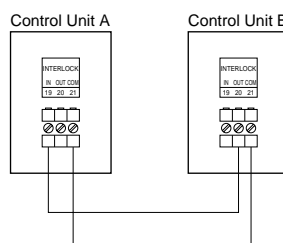

SF1-AC2

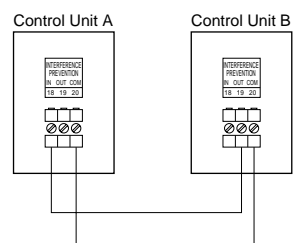

## PRECAUTIONS FOR PROPER USE

Refer to P.820~ for general precautions.

### Test input (SF1-AC2 only)


- Emission is halted when the test input terminals (No. 16 and No. 17) are opened. The test input is useful for a start-up check since the FSDs can be switched ON/OFF without the sensing object. Further, it can also be used to determine whether the sensor and control units are operating correctly by checking whether ON/OFF of the monitor output follows the application/withdrawal of the test input.

### Restart input (SF1-AC2 only)


- Short the restart input terminals (No. 14 and No. 15) for a normal FSD ON/OFF operation according to whether light on the sensor unit is incident/interrupted. When the terminals are open and the light of the sensor unit is interrupted, the FSDs are locked in the OFF state. In this case, they do not turn ON when light is again incident on the sensor unit. To turn them ON, short-circuit the restart input terminals. The restart input is useful when a person is to enter a guarded area for safety confirmation before beginning operation.

### From selection to installation of sensor unit

- Determine the height and length of the hazardous area.

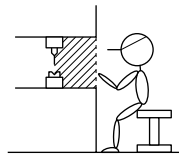


- Determine the protection area with the sensor unit.

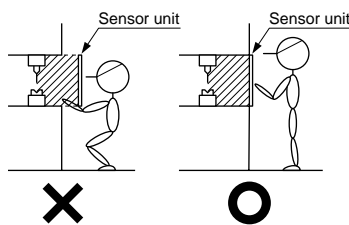


- Access to the hazardous area should be attainable only by interrupting the sensor's beams.

- Determine the safety distance (D). The safety distance (D) from the sensing position to the dangerous part is fully specified in OSHA 1910. 217 (U.S.) or prEN 999 (EU). In other countries, follow the regulation/standards enforced in that country.

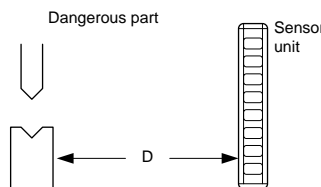


- Determine the sensing height of the sensor units, as well as, the number of beam channels.

- Access to the hazardous area of machinery from any direction not protected by the safeguard must be prevented by fixed or interlocking guards or equally effective measures such as a fixed screen, an access door with a captive fastener or other safeguard sensors.

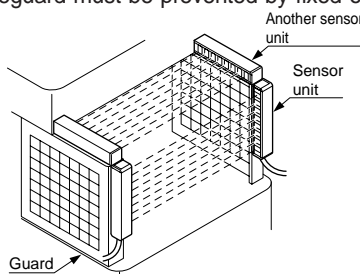


- Install the sensor unit where it cannot be affected by a beam reflected from a machinery frame or a workpiece.

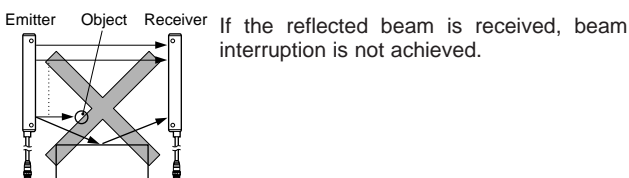


### Operation test

- Test the sensor's operation with the accessory test rod as shown below. Make sure that the operation indicator (red LED) on the receiver lights up by beam interruption.

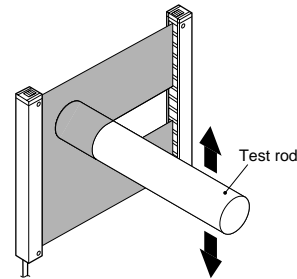

### Mounting of ferrite clamps (SF1-AC2 only)

- Ferrite clamps have been supplied along with SF1-AC2 for enhancing the noise characteristics. If the sensor is to be used in the EU countries, make sure to mount the ferrite clamps. Mount the ferrite clamps on the emitter, receiver and the connecting cables as shown in the right figure. Further, in case of changing the sensor unit during maintenance, etc., make sure to mount the ferrite clamps on the new sensor unit.

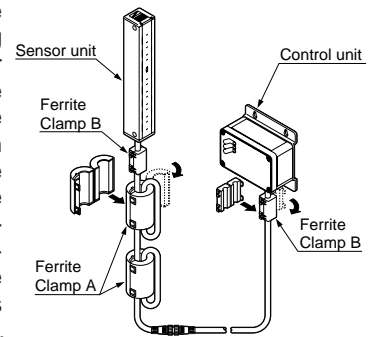

### Others

- A system delay time of 500ms is required for the system to go into the lockout condition. (This is the time required considering the delay time of the MPCE relays, etc.)
- Do not use during the initial transient time (1 sec.) after the power supply is switched on.
- Do not expose the receiver directly to the sun, a beacon, another sensor's emitter, or fluorescent light from a rapid starter lamp or high-frequency lighting device. These lights may affect the detectability.
- The sensor unit is incorporated with an automatic sensitivity compensation function. When the beam alignment is carried out, the operation of the indicator and the output may be delayed with respect to the movement of the sensor units.
- Fix the system information plate MEHS-SF1A (option for SF1-AC2) at a visible place on the machine after filling the columns \*1 and \*2 shown below by a die-stamp.

The overall photoelectric safety system	
1. The overall system response time	<input type="text" value="*1"/> ms
2. The minimum separation distance	<input type="text" value="*2"/> mm
3. The appropriate test piece diameter	<input type="text" value="30"/> mm

\*1: Stamp the overall system response time of the safety system with a die.

\*2: Stamp the minimum separation distance between the dangerous part and the sensor units with a die.


# SF1-A

## PRECAUTIONS FOR PROPER USE


Refer to P.820~ for general precautions.

### Functional description

Sensor unit

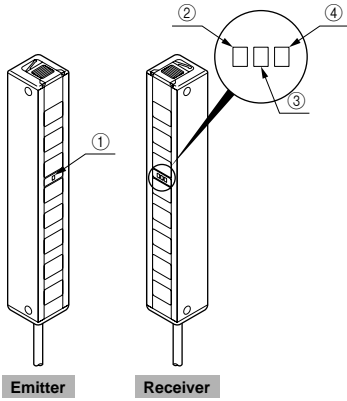

Control unit

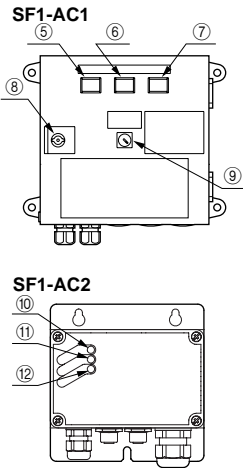

	Description	Function
Sensor unit	① Emitting indicator (Green LED)	Lights up under normal emission, blinks under emitting circuit failure.
	② Stable incident beam indicator (Green LED)	Lights up when all beams are received stably. ②, ③ and ④ blink in rotation when the receiving circuit fails.
	③ Unstable incident beam indicator (Yellow LED)	Lights up when one or more beams are received unstably. ③ and ④ blink alternately when the synchronization wire is broken or when the emitting circuit fails.
	④ Operation indicator (Red LED)	Lights up when one or more beams are interrupted and blinks when extraneous light is received.
Control unit	⑤ FSD operation indicator (Yellow)	Lights up when the FSDs are OFF (open condition).
	⑥ Lockout output indicator (White)	Lights up in the lockout condition.
	⑦ Power indicator (White)	Lights up when the power is ON.
	⑧ Front cover key	Opens or closes the front cover.
	⑨ Lockout release key	Releases the lockout condition.
	⑩ Power indicator (Yellow LED)	Lights up when the power is ON.
	⑪ Incident beam indicator (Green LED)	Lights up when the sensing output is ON (closed condition).
	⑫ FSD operation indicator (Red LED)	Lights up when the sensing output is OFF (open condition).

### Operation matrix

• The condition of the sensor unit and the control unit can be known from the operation indicators of the sensor unit, and the output operation and operation indicators of the control unit.

SF1-AC1

☀: Lights up    ●: Blinks    ●: Lights off    △: Uncertain (operation according to situation)    ×: Locked due to breakdown

Unit		Receiver				Control unit (SF1-AC1)					
		Indicators				Indicators			Output relays		
		Emitting indicator (Green LED)	Stable incident beam indicator (Green LED)	Unstable incident beam indicator (Yellow LED)	Operation indicator (Red LED)	FSD operation indicator (Yellow)	Lockout output indicator (White)	Power indicator (White)	FSD 1 sensing output relay 1	FSD 2 sensing output relay 2	SSD lockout output
Normal operation	Beams received stably (All beams)	☀	☀	●	●	●	●	☀			
	Beam interrupted (One or more beams are interrupted.)	☀	●	●	☀	☀	●	☀			
Abnormal conditions	Sensor unit	Emitting element failure	☀	●	●	☀	●	☀			
		Emitting circuit failure	●	●	●	☀	●	☀			
		Receiving element failure	☀	●	●	☀	●	☀			
		Receiving circuit failure	☀	●	●	☀	●	☀			
		Output circuit failure/Output wire broken	☀	△	△	△	●	☀			
	Power wire broken	Receiver	☀	●	●	☀	●	☀			
		Emitter	●	●	●	☀	●	☀			
	Synchronization wire broken	☀	●	●	☀	●	☀				
	Extraneous light check	Faint extraneous light	☀	△	△	●	△	●	△	△	
			Intense extraneous light	☀	●	●	☀	●	☀		
Insufficient beam intensity (Unstable beam received)		☀	●	☀	●	●	☀				
Control unit	Output relay contact welded	☀	△	△	△	●	☀	☀	× or	× or	
	Output relay driving circuit failure	☀	△	△	△	●	☀	☀			
	AC power wire broken	●	●	●	●	●	●	●			
External inputs	MPCE relay contact welded	△	△	△	△	☀	☀	☀			
	Muting	△	△	△	△	●	●	●			
	External FSD-OFF input short-circuited	△	△	△	△	☀	●	☀			
	External lockout input short-circuited	△	△	△	△	☀	☀	☀			
	Lockout release input	△	△	△	△	△	●	☀	△	△	








# SF1-A


## DIMENSIONS (Unit: mm)

### SF1-A□-H Sensor unit

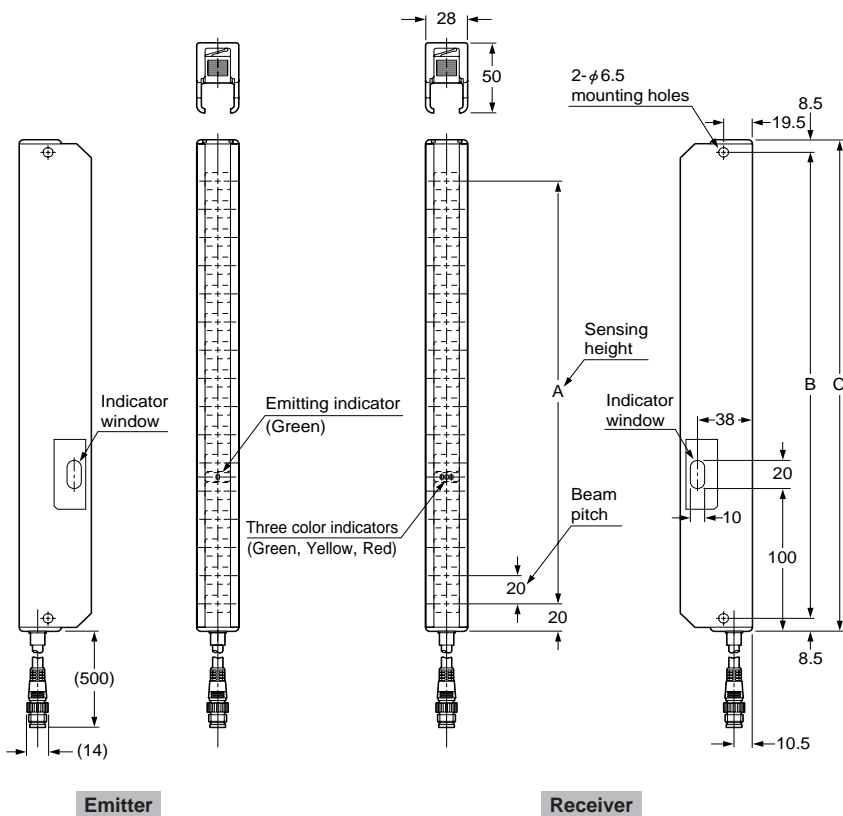

Model No.	A	B	C
SF1-A8-H	140	172	189
SF1-A16-H	300	332	349
SF1-A24-H	460	492	509
SF1-A32-H	620	652	669
SF1-A40-H	780	812	829
SF1-A48-H	940	972	989
SF1-A56-H	1,100	1,132	1,149
SF1-A64-H	1,260	1,292	1,309

### MS-SF1-1 Sensor unit mounting bracket (Accessory with sensor unit)

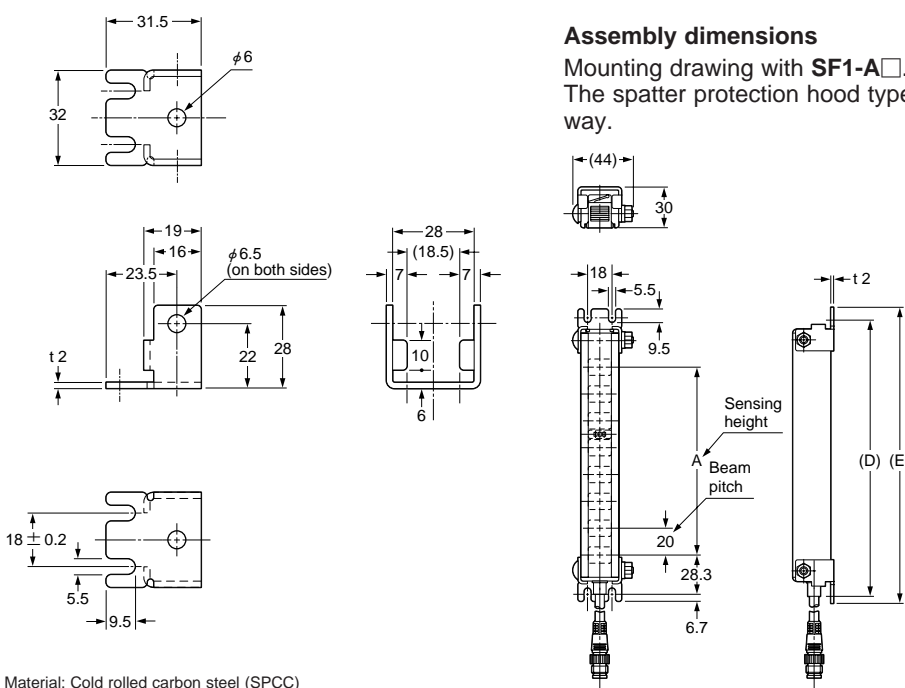


Model No.	A	D	E
SF1-A8(-H)	140	205	219
SF1-A16(-H)	300	365	379
SF1-A24(-H)	460	525	539
SF1-A32(-H)	620	685	699
SF1-A40(-H)	780	845	859
SF1-A48(-H)	940	1,005	1,019
SF1-A56(-H)	1,100	1,165	1,179
SF1-A64(-H)	1,260	1,325	1,339


Four bracket set  
 ( 4 Nos. each of M6 (length 40mm) truss head )  
 screws, nuts and spring washers are attached.

## DIMENSIONS (Unit: mm)


### SF1-AC1 Control unit

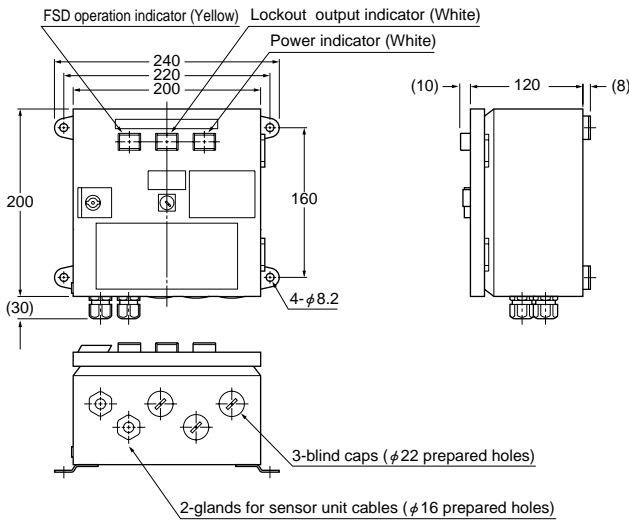


### SF1-AC2 Control unit

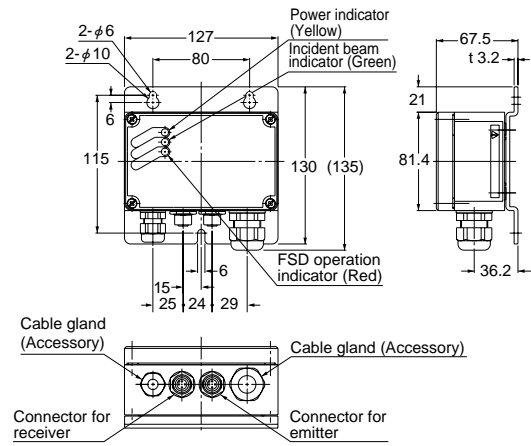

### SF-IND Large indicator (Optional)

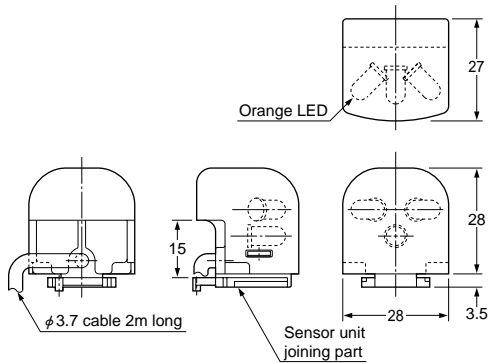


### MS-SF1-P Sensor unit mounting bracket (Optional)

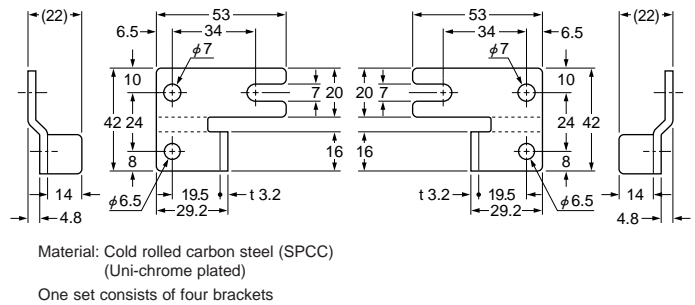

### Assembly dimensions


Mounting drawing with sensor unit mounting bracket attached SF1-A□. The spatter protection hood type (SF1-A□-H) is assembled in the same way.

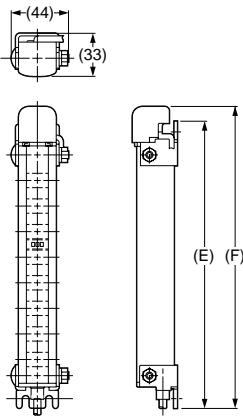

Model No.	E	F
SF1-A8(-H)	219	232
SF1-A16(-H)	379	392
SF1-A24(-H)	539	552
SF1-A32(-H)	699	712
SF1-A40(-H)	859	872
SF1-A48(-H)	1,019	1,032
SF1-A56(-H)	1,179	1,192
SF1-A64(-H)	1,339	1,352

### Assembly dimensions

Mounting drawing with SF1-A□. The spatter protection hood type (SF1-A□-H) is assembled in the same way.

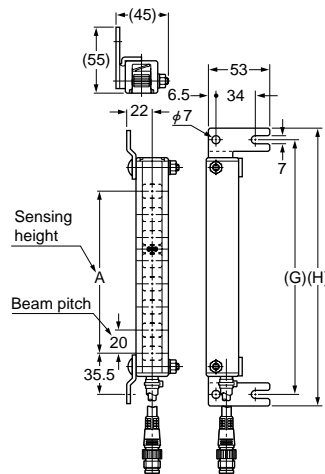

Model No.	A	G	H
SF1-A8(-H)	140	220	240
SF1-A16(-H)	300	380	400
SF1-A24(-H)	460	540	560
SF1-A32(-H)	620	700	720
SF1-A40(-H)	780	860	880
SF1-A48(-H)	940	1,020	1,040
SF1-A56(-H)	1,100	1,180	1,200
SF1-A64(-H)	1,260	1,325	1,360