



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)

**XVME-955**

**Hard and Floppy  
Disk Drive**

74955-001D

© 1993 XYCOM, INC.

Printed in the United States of America  
Part Number 74955-001D

**XYCOM**  
750 North Maple Road  
Saline, Michigan 48176  
(313) 429-4971



---

# ***XYCOM REVISION RECORD***

<i><b>Revision</b></i>	<i><b>Description</b></i>	<i><b>Date</b></i>
A	Manual Released	2/91
B	Manual Updated	8/91
C	Manual Updated	5/92
D	Manual Updated	8/93

### ***Copyright Information***

This document is copyrighted by Xycom Incorporated (Xycom) and shall not be reproduced or copied without expressed written permission from Xycom.

The information contained within this document is subject to change without notice.

Address comments concerning this manual to:



**xycom**

Technical Publications Department  
750 North Maple Road  
Saline, Michigan 48176

***Part Number: 74955-001D***

---

Faint header text at the top of the page, possibly containing a title or reference number.

Main body of faint, illegible text, likely the primary content of the document.

Lower section of faint, illegible text, possibly containing a conclusion or additional details.

## ***XYCOM MANUAL BUG REPORT***

We have provided this form to track errors that may exist in our manuals and to incorporate improvements. Please describe in the space below any errors found in this manual or any helpful suggestions to improve its usefulness. To return this form, fold it so the postage-paid\* side shows, and tape it closed. We appreciate your input and will incorporate the changes in future revisions.

### ***Current Information***

Page number(s): \_\_\_\_\_ Figure number(s): \_\_\_\_\_

Information as currently printed: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

### ***Proposed Change(s)***

Information as it should be printed: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Any additional information: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

### ***Address (optional)***

Name \_\_\_\_\_  
Title \_\_\_\_\_  
Company \_\_\_\_\_  
Address \_\_\_\_\_  
City \_\_\_\_\_ State \_\_\_\_\_ ZIP \_\_\_\_\_  
Telephone \_\_\_\_\_

<i><b>Xycom Use Only</b></i>		<b>Log Number</b>	
Date Received:			
Date Resolved:			
Manner Resolved:	PCN #:	Revision:	Void:


### ***Hard and Floppy Disk Drive, 74955-001D***

*\*If mailing this card from outside the United States, please use an envelope with appropriate postage.*

**XYCOM, INC.  
750 N. MAPLE ROAD  
SALINE, MICHIGAN 48176**

POSTAGE WILL BE PAID BY ADDRESSEE

First Class Permit No. 42 Saline, Michigan  
**BUSINESS REPLY MAIL**

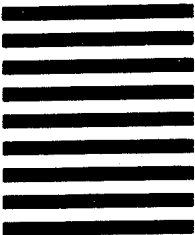

NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES



# Xycom Manual Bug Report

Thank you for returning this form. We appreciate your feedback.

---

## TABLE OF CONTENTS

CHAPTER	TITLE	PAGE
1	<b>INTRODUCTION</b>	
1.1	Overview	1-1
1.2	Manual Structure	1-1
1.3	Operational Block Diagram	1-1
1.4	XVME-955 Features	1-3
1.5	XVME-955 Module Specifications	1-4
2	<b>INSTALLATION</b>	
2.1	Introduction	2-1
2.2	Installing the XVME-955 into a VMEbus Cardcage	2-1
2.3	Configuring the XVME-955	2-2
2.3.1	Selecting the Floppy Drive	2-2
2.3.2	Selecting the Hard Drive	2-3
2.4	Connecting the Hard and Floppy Disk Cables	2-4
2.5	Running the PC/AT Processor Setup Program	2-6
2.6	Pinout Descriptions	2-7



**LIST OF FIGURES**

<b>FIGURE</b>	<b>TITLE</b>	<b>PAGE</b>
1-1	XVME-955 Operational Block Diagram	1-2
2-1	Connecting the XVME-955 to the PC/AT Processor Modules	2-5

**LIST OF TABLES**

<b>TABLE</b>	<b>TITLE</b>	<b>PAGE</b>
1-1	XVME-955 Module Specifications	1-4
2-1	XVME-955 Setup Information	2-3
2-2	PC/AT Processor Setup Information	2-6
2-3	XVME-955 Floppy Disk Connector	2-7
2-4	XVME-955 Hard Disk Connector	2-8

## 1.1 OVERVIEW

The XVME-955 Hard Disk/Floppy Disk Module provides a convenient way to integrate both hard and floppy disk drives into a VMEbus system. This module combines an 85, 127 or 240 Mbyte 3.5" hard disk drive and a high density 1.44 Mbyte 3.5" micro-floppy drive into a unit that occupies two double-high VMEbus slots. The Hard Disk/Floppy Disk Module is ideally suited for use with Xycom's VME PC/AT processors. The unit plugs into the VMEbus P1 backplane, which is used only for providing power and ground signals to the XVME-955. Floppy disk and hard disk signals are passed to and from the XVME-955 through ribbon cables on the module front panel.

## 1.2 MANUAL STRUCTURE

This manual is divided into two chapters, which contain the following information:

- Chapter 1 - **Introduction.** A general description of the Hard Disk/Floppy Disk Module, including complete functional and environmental specifications, as well as compatibility and VMEbus compliance information.
- Chapter 2 - **Installation.** Hard Disk/Floppy Disk installation information including procedures for connecting the XVME-955 cables to the Xycom PC/AT processor modules and connector pinouts.

## 1.3 OPERATIONAL BLOCK DIAGRAM

Figure 1-1 on the following page shows an operational block diagram of the XVME-955 Hard Disk/Floppy Disk Module.

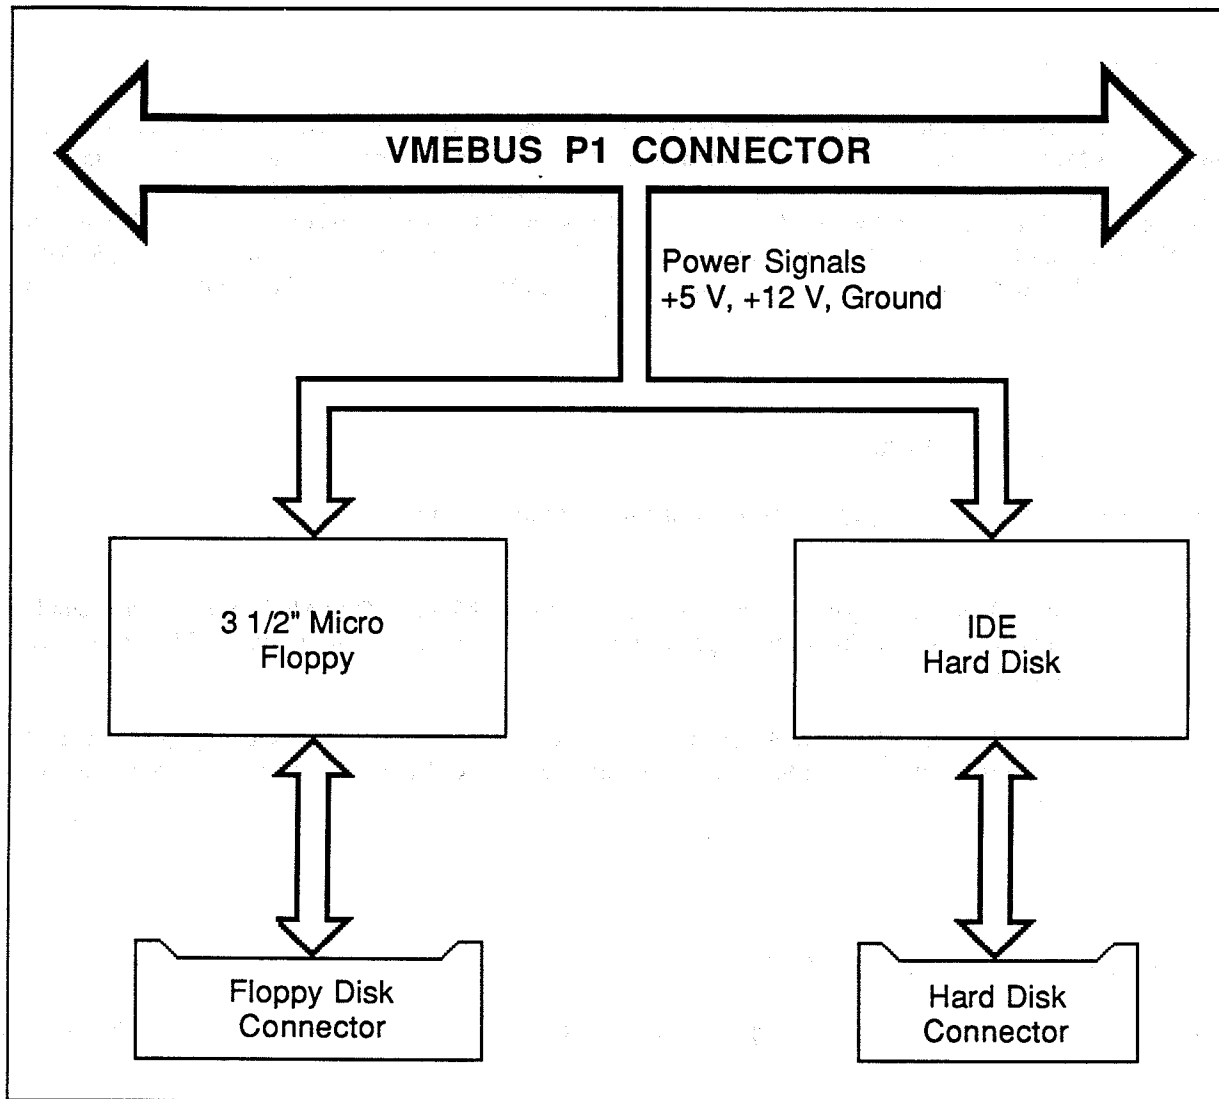


Figure 1-1. XVME-955 Operational Block Diagram

## 1.4 XVME-955 FEATURES

The XVME-955 Hard Disk/Floppy Disk Module provides the following features:

- One 85, 127 or 240 Mbyte 3.5" IDE self-parking hard disk drive
  - 32 Kbyte look-ahead cache, 256 Kbyte for 240 Mbyte drive
  - Reassignment of defective sectors discovered in the field without reformatting
- One 3.5" SA450 1.44 Mbyte floppy disk drive
- Ability to mount in a 6U VME cardcage using two slots
- IDE and floppy connectors available on module front panel

1.5 XVME-955 MODULE SPECIFICATIONS

Table 1-1. XVME-955 Module Specifications

CHARACTERISTIC	SPECIFICATION
<b>Hardware</b>	
<b>Hard Drive</b>	
85 Mbyte Unit	
Interface	IDE
Capacity (formatted)	85 Mbytes
Seek times	
Average access	17 msec
Track to track	5.5 msec
Maximum access	33 msec
127 Mbyte Unit	
Interface	IDE
Capacity (formatted)	127 Mbytes
Seek times	
Average access	17 msec
Track to track	5.5 msec
Maximum access	33 msec
240 Mbyte Unit	
Interface	IDE
Capacity (Formatted)	245 Mbytes
Seek Times	
Average access	16 msec
Track to track	4 msec
Maximum access	35 msec

XVME-955 Module Specifications (Continued)

CHARACTERISTIC	SPECIFICATION
Data Rate Transfer (Both hard drives)	
To/from media	2.5 Mbytes / sec
To/from buffer	4.0 Mbytes / sec
Floppy Interface	
Interface	SA-450
Compatibility	3.5" 1.44 Mbytes
<b>Environmental Specifications</b>	
Temperature	
Operating	5° to 50° C (41° to 122° F)
Non-operating	-40° to 60° C (-40° to 140° F)
Humidity	8% to 80% RH, non-condensing
Shock	
Operating	5 g peak acceleration, 11 msec duration
Non-operating	60 g peak acceleration, 11 msec duration
Vibration	
Operating	0.5 g peak acceleration, 5 to 300 Hz
Non-operating	2.0 g peak acceleration, 5 to 300 Hz
Altitude	
Operating	Sea level to 10,000 ft. (3048 m)
Non-operating	Sea level to 40,000 ft. (12192 m)
<b>Power Specifications</b>	
85, 127, or 240 Mbyte Hard Drive	+5 VDC @ 320 mA max. +12 VDC @ 1.0 A max.
Floppy Drive	+5 VDC @ 890 mA max.



## 2.1 INTRODUCTION

This chapter provides the information necessary to install the XVME-955 Hard Disk/Floppy Disk Module into the VMEbus backplane and to connect the XVME-955 to Xycom's VMEbus PC/AT Processor Modules.

## 2.2 INSTALLING THE XVME-955 INTO A VMEBUS CARDCAGE

The XVME-955 Hard Disk/Floppy Disk Module fits into any standard 6U VMEbus cardcage. Like all of Xycom's modules, the XVME-955 is designed to comply with all electrical VMEbus backplane specifications.

### NOTE

Because the IACKIN signal is not connected to IACKOUT signal, and the BUS GRANT IN (X) signals are not connected to BUS GRANT OUT (X) signals on the XVME-955, these signals must be jumpered via the backplane.

### CAUTION

- Never attempt to install or remove any boards before turning off power to the bus and to all related external power supplies.
- Before installing a module, determine and verify all connections to external devices or power supplies.



To install the XVME-955 into the VMEbus cardcage, perform the following steps:

1. Make sure three or four consecutive cardcage slots, depending on the PC/AT processor being used, are clear and accessible. The slots on the right will hold the XVME-955, and the left slot or slots will hold the PC/AT processor module.
2. Connect a 34-pin ribbon cable from the XVME-955 to the floppy drive connector on the PC/AT processor. Next, connect a 40-pin ribbon cable from the XVME-955 to the IDE hard drive connector on the PC/AT processor.
3. Center the XVME-955 on the plastic guides in the two slots on the right.
4. Push the unit slowly toward the rear of the chassis until the connectors engage. (The card should slide easily in the plastic guides.)
5. Apply straightforward pressure to the handles on the front of the panel until the connectors are fully engaged and properly seated.

**NOTE**

It should not be necessary to use excessive force or pressure to engage the connectors. If the board does not connect properly with the backplane, remove the module and inspect all connectors and guide slots for possible damage or obstructions.

6. Once the XVME-955 is properly seated, secure it to the chassis by tightening the machine screws at the top and bottom of the board.

### 2.3 CONFIGURING THE XVME-955

The PC/AT uses battery-backed CMOS RAM to store the configuration of the hard disk and the floppy drive. Once the unit has been inserted in a VMEbus rack, the setup program should be invoked after system power-up.

#### 2.3.1 Selecting the Floppy Drive

Select the floppy drive as drive A:, and the type as 3.5" - 1.44 Mbytes.

### 2.3.2 Selecting the Hard Drive

The hard drive configuration is dictated by the type of hard drive in the unit.

Set the specifications for your particular hard drive as shown in Table 2-1 below:

Table 2-1. XVME-955 Setup Information

Specification	85 Mbyte Drive	127 Mbyte Drive	240 Mbyte Drive
Cylinders	977	919	723
Heads	10	16	13
Sectors	17	17	51
Land Zone	977	919	723
Write Precomp	None	None	None

After the hard drive has been set up, the system can be rebooted and the operating system can be loaded.

Because the hard drive comes pre-formatted with a 1:1 interleave, low-level formatting is not required.

*The installation and configuration of the XVME-955 is now complete.*

## 2.4 CONNECTING THE HARD AND FLOPPY DISK CABLES

The hard and floppy disk cables on the XVME-955 are designed to be connected to one of the Xycom VME PC/AT modules. See Figure 2-1 on the following page for a diagram of the installation procedure.

1. The XVME-955 should already be installed in the cardcage according to the instructions in section 2.2. Make sure two slots to the left of the XVME-955 are clear and accessible.
2. With the processor module outside of the cardcage, connect one end of the 34-pin floppy disk control/data cable to P4 on the processor. Make sure that the red stripe of the cable faces downward, and that pins 1 line up.
3. The 40-conductor cable is the hard disk cable. Connect one of its ends to P5 on the module so that the red stripe is at the top of the cable. Make sure pins 1 line up.
4. Hold the other ends of the cables on the processor module out in front of the unit while sliding the module into the slot to the left of the XVME-955. When the processor is in place, the connectors should be accessible for attaching to the XVME-955.
5. With both boards in the VMEbus chassis, connect the cable from P4 on the processor (the upper connector) to the floppy drive connector on the XVME-955 (also the upper connector). Make sure pins 1 line up and the connector on the XVME-955 engages.
6. Connect the cable from P5 on the processor to the IDE connector on the XVME-955 module (both the lower connectors), ensuring that pins 1 line up. Make sure the connector engages on the XVME-955.

### NOTE

If using the XVME-686 module, the connectors are labeled as P8 and P9 instead of P4 and P5, as they are on the other PC/AT processors.

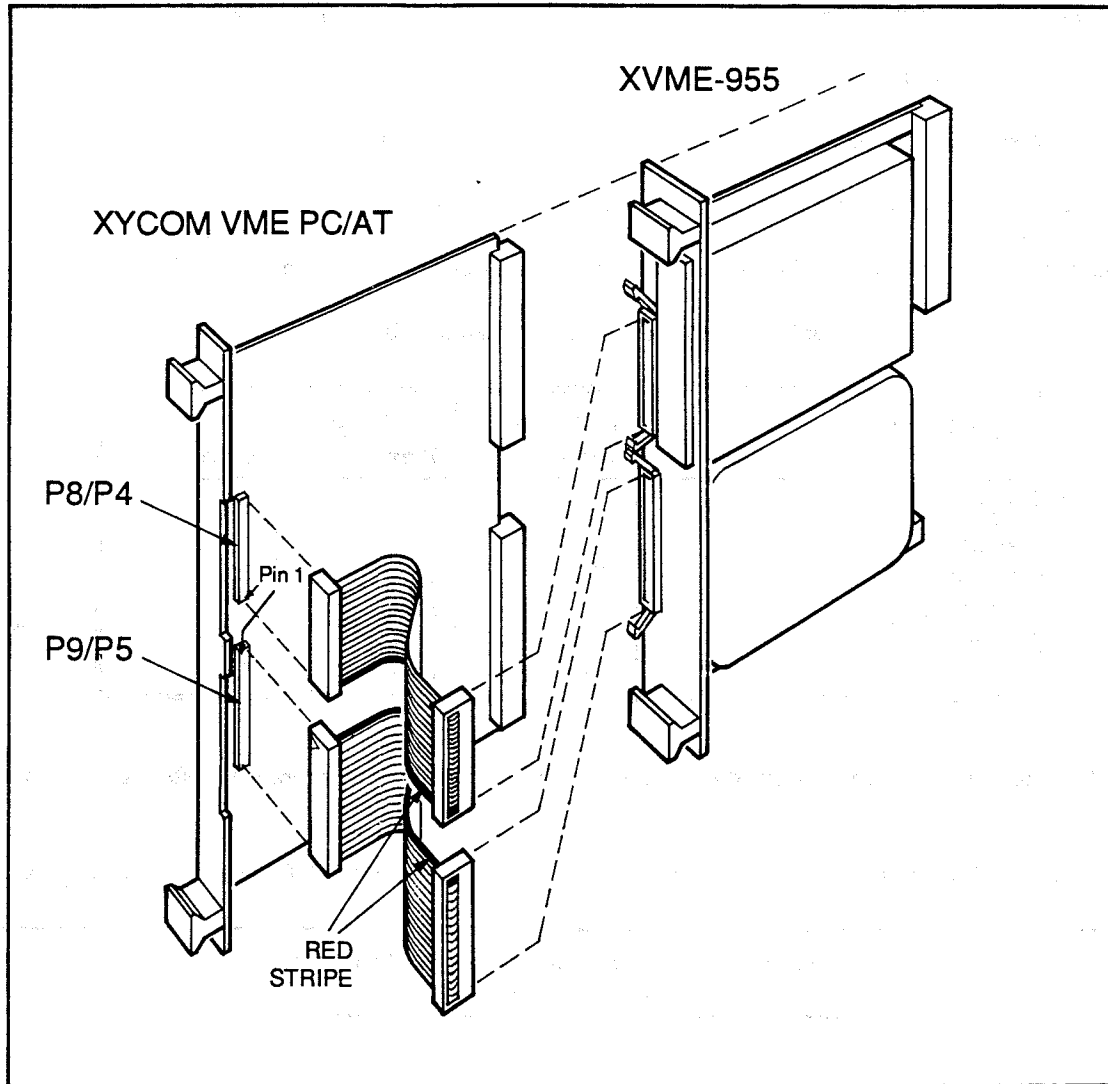


Figure 2-1. Connecting the XVME-955 to the PC/AT Processor Modules

## 2.5 RUNNING THE PC/AT PROCESSOR SETUP PROGRAM

The Xycom VMEbus PC/AT processors have a ROM resident SETUP program that allows altering various PC/AT parameters, such as disk type, memory size, etc. To enter the setup program, type:

**<CTRL><ALT>S**

You need to specify the floppy and hard drives using the setup program.

Select the floppy drive as drive A:, and the type as 3.5" - 1.44 Mbytes.

Set the hard drive configuration based on the settings shown below for your particular hard drive:

Table 2-2. PC/AT Processor Setup Information

Specification	85 Mbyte Drive	127 Mbyte Drive	240 Mbyte Drive
Cylinders	977	919	723
Heads	10	16	13
Sectors	17	17	51
Land Zone	977	919	723
Write Precomp	None	None	None
Type	User	User	User

After the hard drive has been set up, the system can be rebooted and the operating system can be loaded.

Because the hard drive comes pre-formatted with a 1:1 interleave, low-level formatting is not required.

*The installation and configuration of the XVME-955  
is now complete.*

## 2.6 PINOUT DESCRIPTIONS

The following tables show the pinouts for the hard and floppy drive connectors.

Table 2-3. XVME-955 Floppy Disk Connector

PIN	SIGNAL	PIN	SIGNAL
1	GND	18	FDIRC*
2	FRWC*	19	GND
3	GND	20	FSTEP*
4	N/C	21	GND
5	KEY	22	FWD*
6	N/C	23	GND
7	GND	24	FWE*
8	IDX*	25	GND
9	GND	26	FTK0*
10	MO1	27	GND
11	GND	28	FWP*
12	FDS2	29	GND
13	GND	30	FRDD*
14	FDS1	31	GND
15	GND	32	FSW*
16	MO2	33	GND
17	GND	34	DCHG*

Table 2-4. XVME-955 Hard Disk Connector

PIN	SIGNAL	PIN	SIGNAL
1	RESET*	21	N/C
2	GND	22	GND
3	ID87	23	IOW*
4	SD8	24	GND
5	SD6	25	IOR*
6	SD9	26	GND
7	SD5	27	N/C
8	SD10	28	ALE
9	SD4	29	N/C
10	SD11	30	GND
11	SD3	31	IDINT
12	SD12	32	N/C
13	SD2	33	SA1
14	SD13	34	N/C
15	SD1	35	SA0
16	SD14	36	SA2
17	SD0	37	HCS0
18	SD15	38	HCS1
19	GND	39	N/C
20	N/C	40	N/C



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)